R&S®FPL1000 Spectrum Analyzer User Manual





This manual applies to the following R&S®FPL1000 models with firmware version 1.20 and higher:

R&S®FPL1003 (1304.0004K03) - FPL1000 with maximum frequency 3 GHz

In addition to the base unit, the following options are described:

- R&S FPL1000-B4, OCXO (1323.1902.02)
- R&S FPL1000-B5, Additional Interfaces (1323.1883.02)
- R&S FPL1000-B10, GPIB interface (1323.1890.02)
- R&S FPL1000-B22, preamplifier (1323.1719.02)
- R&S FPL1000-B25, electronic attenuator (1323.1990.02)
- R&S FPL1000-B30, DC power supply (1323.1877.02)
- R&S FPL1000-B31, Li-lon battery pack and charger (1323.1725.02)
- R&S FPL1-K9 (1323.1754.02)

© 2018 Rohde & Schwarz GmbH & Co. KG Mühldorfstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0
Fax: +49 89 41 29 12 164
Email: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com

Subject to change – Data without tolerance limits is not binding. $R\&S^{@} \ is \ a \ registered \ trademark \ of \ Rohde \ \& \ Schwarz \ GmbH \ \& \ Co. \ KG.$

Trade names are trademarks of the owners.

1178.3370.02 | Version 04 | R&S®FPL1000

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol, e.g. R&S®FPL1000 is indicated as R&S FPL1000.

Safety Instructions Instrucciones de seguridad Sicherheitshinweise Consignes de sécurité

A WARNING

Risk of injury and instrument damage

The instrument must be used in an appropriate manner to prevent personal injury or instrument damage.

- Do not open the instrument casing.
- Read and observe the "Basic Safety Instructions" delivered as printed brochure with the instrument.
- Read and observe the safety instructions in the following sections.
 Note that the data sheet may specify additional operating conditions.
- Keep the "Basic Safety Instructions" and the product documentation in a safe place and pass them on to the subsequent users.

A ADVERTENCIA

Riesgo de lesiones y daños en el instrumento

El instrumento se debe usar de manera adecuada para prevenir descargas eléctricas, incendios, lesiones o daños materiales.

- No abrir la carcasa del instrumento.
- Lea y cumpla las "Instrucciones de seguridad elementales" suministradas con el instrumento como folleto impreso.
- Lea y cumpla las instrucciones de seguridad incluidas en las siguientes secciones. Se debe tener en cuenta que las especificaciones técnicas pueden contener condiciones adicionales para su uso.
- Guarde bien las instrucciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.

1171.1307.42 - 05

A WARNUNG

Gefahr von Verletzungen und Schäden am Gerät

Betreiben Sie das Gerät immer ordnungsgemäß, um elektrischen Schlag, Brand, Verletzungen von Personen oder Geräteschäden zu verhindern.

- Öffnen Sie das Gerätegehäuse nicht.
- Lesen und beachten Sie die "Grundlegenden Sicherheitshinweise", die als gedruckte Broschüre dem Gerät beiliegen.
- Lesen und beachten Sie die Sicherheitshinweise in den folgenden Abschnitten; möglicherweise enthält das Datenblatt weitere Hinweise zu speziellen Betriebsbedingungen.
- Bewahren Sie die "Grundlegenden Sicherheitshinweise" und die Produktdokumentation gut auf und geben Sie diese an weitere Benutzer des Produkts weiter.

A AVERTISSEMENT

Risque de blessures et d'endommagement de l'appareil

L'appareil doit être utilisé conformément aux prescriptions afin d'éviter les électrocutions, incendies, dommages corporels et matériels.

- N'ouvrez pas le boîtier de l'appareil.
- Lisez et respectez les "consignes de sécurité fondamentales" fournies avec l'appareil sous forme de brochure imprimée.
- Lisez et respectez les instructions de sécurité dans les sections suivantes. Il ne faut pas oublier que la fiche technique peut indiquer des conditions d'exploitation supplémentaires.
- Gardez les consignes de sécurité fondamentales et la documentation produit dans un lieu sûr et transmettez ces documents aux autres utilisateurs.

1171.1307.42 - 05

Contents

1	Preface	7
1.1	For Your Safety	7
1.2	Conventions Used in the Documentation	7
2	Documentation Overview	9
2.1	Getting Started Manual	9
2.2	User Manuals and Help	9
2.3	Service Manual	9
2.4	Instrument Security Procedures	10
2.5	Basic Safety Instructions	10
2.6	Data Sheets and Brochures	10
2.7	Release Notes and Open Source Acknowledgment (OSA)	10
2.8	Application Notes, Application Cards, White Papers, etc	10
3	Welcome to the R&S FPL1000	11
4	Getting Started	12
4.1	Preparing for Use	12
4.2	Instrument Tour	34
4.3	Trying Out the Instrument	46
4.4	Operating the Instrument	64
5	Applications, Measurement Channels, and Result Displays	83
5.1	Available Applications	83
5.2	R&S MultiView	84
5.3	Defining Channel Setups	85
5.4	Running a Sequence of Measurements	87
5.5	Channel Setup Overview	91
5.6	Configuring Result Displays	92
6	Common Instrument Functions	98
6.1	Toolbar Functions	98
6.2	Data Management	99
6.3	General Instrument Setup	128
6.4	Network and Remote Operation	164

7	The Spectrum Application (RF Measurements)232
7.1	Configuration Overview232
7.2	Measurements and Results234
7.3	Receiving Data Input and Providing Data Output
7.4	Frequency and Span Configuration
7.5	Amplitude and Vertical Axis Configuration383
7.6	Bandwidth, Filter and Sweep Configuration391
7.7	Trigger and Gate Configuration406
7.8	Adjusting Settings Automatically418
7.9	Marker Usage421
7.10	Trace Configuration460
7.11	Display and Limit Lines489
7.12	Zoomed Displays508
7.13	Importing and Exporting Measurement Results for Evaluation 514
7.14	Optimizing Measurements525
8	Remote Commands
8.1	Conventions Used in SCPI Command Descriptions527
8.2	Common Suffixes 528
8.3	Common Commands
8.4	Commands for Remote Instrument Operation
8.5	Selecting the Operating Mode and Application
8.6	Configuring and Performing Measurements541
8.7	Remote Commands for Result Displays639
8.8	Setting Basic Spectrum RF Measurement Parameters 647
8.9	Managing Settings and Results792
8.10	Configuring the R&S FPL1000820
8.11	Using the Status Register 843
8.12	Deprecated Commands855
9	Maintenance 857
9.1	Cleaning857
10	Troubleshooting859
10.1	Error Information859

R&S®FPL1000 Contents

10.2	Error Messages in Remote Control Mode	860
10.3	Troubleshooting Remote Operation	.861
10.4	Miscellaneous Troubleshooting Hints	. 862
10.5	Collecting Information for Technical Support	. 864
	List of Commands (Spectrum mode)	866
	Index	882

R&S®FPL1000 Contents

R&S®FPL1000 Preface

Conventions Used in the Documentation

1 Preface

This chapter provides safety-related information, an overview of the user documentation and the conventions used in the documentation.

1.1 For Your Safety

The R&S FPL1000 is designated for use in industrial, administrative, and laboratory environments. Use the R&S FPL1000 only for its designated purpose. Observe the safety and usage instructions documented in the user manual, as well as operating conditions and performance limits stated in the data sheet.

The product documentation helps you use the R&S FPL1000 safely and efficiently. Keep the product documentation in a safe place and pass it on to subsequent users.

Safety information is part of the product documentation. It warns you about potential dangers and gives instructions how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In the "Basic Safety Instructions", safety issues are grouped according to subjects.
 For example, one subject is electrical safety. The "Basic Safety Instructions" are delivered with the R&S FPL1000 in different languages in print.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation. Always read the safety instructions carefully.
 Make sure to comply fully with them. Do not take risks and do not underestimate the potential danger of small details such as a damaged power cable.

1.2 Conventions Used in the Documentation

1.2.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
[Keys]	Key and knob names are enclosed by square brackets.
File names, commands, program code	File names, commands, coding samples and screen output are distinguished by their font.
Input	Input to be entered by the user is displayed in italics.

R&S®FPL1000 Preface

Conventions Used in the Documentation

Convention	Description
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.2.2 Conventions for Procedure Descriptions

When operating the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

1.2.3 Notes on Screenshots

When describing the functions of the product, we use sample screenshots. These screenshots are meant to illustrate as much as possible of the provided functions and possible interdependencies between parameters. The shown values may not represent realistic usage scenarios.

The screenshots usually show a fully equipped product, that is: with all options installed. Thus, some functions shown in the screenshots may not be available in your particular product configuration.

Service Manual

2 Documentation Overview

This section provides an overview of the R&S FPL1000 user documentation. Unless specified otherwise, you find the documents on the R&S FPL1000 product page at:

www.rohde-schwarz.com/manual/FPL1000

2.1 Getting Started Manual

Introduces the R&S FPL1000 and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc.

A printed version is delivered with the instrument. A PDF version is available for download on the Internet.

2.2 User Manuals and Help

Separate user manuals are provided for the base unit and the firmware applications:

- Base unit manual
 Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.
- Firmware application manual
 Contains the description of the specific functions of a firmware application, including remote control commands. Basic information on operating the R&S FPL1000 is not included.

The contents of the user manuals are available as help in the R&S FPL1000. The help offers quick, context-sensitive access to the complete information for the base unit and the firmware applications.

All user manuals are also available for download or for immediate display on the Internet.

2.3 Service Manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):

Application Notes, Application Cards, White Papers, etc.

https://gloris.rohde-schwarz.com

2.4 Instrument Security Procedures

Deals with security issues when working with the R&S FPL1000 in secure areas. It is available for download on the Internet.

2.5 Basic Safety Instructions

Contains safety instructions, operating conditions and further important information. The printed document is delivered with the instrument.

2.6 Data Sheets and Brochures

The data sheet contains the technical specifications of the R&S FPL1000. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/FPL1000

2.7 Release Notes and Open Source Acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The open source acknowledgment document provides verbatim license texts of the used open source software.

See www.rohde-schwarz.com/firmware/FPL1000

2.8 Application Notes, Application Cards, White Papers, etc.

These documents deal with special applications or background information on particular topics.

See www.rohde-schwarz.com/application/FPL1000

3 Welcome to the R&S FPL1000

The R&S FPL1000 is a new Rohde & Schwarz signal and spectrum analyzer developed to meet demanding customer requirements. Offering low phase noise, wide analysis bandwidth and straightforward and intuitive operation, the analyzer makes measurements fast and easy.

This user manual contains a description of the functionality that the instrument provides, including remote control operation. The latest version is available for download at the product homepage (http://www.rohde-schwarz.com/product/FPL1000).

Preparing for Use

4 Getting Started

4.1 Preparing for Use

•	Putting into Operation	12
	Windows Operating System	
	Connecting USB Devices	
	Connecting an External Monitor	
	Setting Up a Network (LAN) Connection	
	Configuring the Initial Instrument Settings	

4.1.1 Putting into Operation

This section describes the basic steps to be taken when setting up the R&S FPL1000 for the first time.

A WARNING

Risk of injury due to disregarding safety information

Observe the information on appropriate operating conditions provided in the data sheet to prevent personal injury or damage to the instrument. Read and observe the basic safety instructions provided with the instrument, in addition to the safety instructions in the following sections. In particular:

Do not open the instrument casing.

NOTICE

Risk of instrument damage due to inappropriate operating conditions

Specific operating conditions are required to ensure accurate measurements and to avoid damage to the instrument. Observe the information on appropriate operating conditions provided in the basic safety instructions and the instrument's data sheet.

NOTICE

Instrument damage caused by electrostatic discharge

Electrostatic discharge (ESD) can damage the electronic components of the instrument and the device under test (DUT). Electrostatic discharge is most likely to occur when you connect or disconnect a DUT or test fixture to the instrument's test ports. To prevent electrostatic discharge, use a wrist strap and cord and connect yourself to the ground, or use a conductive floor mat and heel strap combination.

Preparing for Use

NOTICE

Risk of instrument damage due to inappropriate operating conditions

An unsuitable operating site or test setup can damage the instrument and connected devices. Before switching on the instrument, observe the information on appropriate operating conditions provided in the data sheet. In particular, ensure the following:

- All fan openings are unobstructed and the airflow perforations are unimpeded. The minimum distance from the wall is 10 cm.
- The instrument is dry and shows no sign of condensation.
- The instrument is positioned as described in the following sections.
- The ambient temperature does not exceed the range specified in the data sheet.
- Signal levels at the input connectors are all within the specified ranges.
- Signal outputs are connected correctly and are not overloaded.



EMI impact on measurement results

Electromagnetic interference (EMI) may affect the measurement results.

To suppress generated electromagnetic interference (EMI):

- Use suitable shielded cables of high quality. For example, use double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Note the EMC classification in the data sheet.

Unpacking and Checking the Instrument	13
Accessory List	
Placing or Mounting the Instrument	
Connecting the AC Power	
Changing the AC Supply Fuse	
 Connecting an Optional DC Power Supply (R&S FPL1-B30) 	
Connecting an Optional Battery Pack (R&S FPL1-B31)	18
Switching the Instrument On and Off	
Performing a Self-Alignment	
Checking the Supplied Options	

4.1.1.1 Unpacking and Checking the Instrument

Check the equipment for completeness using the delivery note and the accessory lists for the various items. Check the instrument for any damage. If there is damage, immediately contact the carrier who delivered the instrument. Make sure not to discard the box and packing material.



Packing material

Retain the original packing material. If the instrument needs to be transported or shipped later, you can use the material to protect the control elements and connectors.

Preparing for Use

NOTICE

Risk of instrument damage during transportation and shipment

Insufficient protection against mechanical and electrostatic effects during transportation and shipment can damage the instrument.

- Always make sure that sufficient mechanical and electrostatic protection is provided.
- When shipping an instrument, use the original packaging. If it is not available, allow for sufficient padding to prevent the instrument from moving around inside the box.
 Pack the instrument in antistatic wrap to protect it from electrostatic charging.
- Secure the instrument to prevent any movement and other mechanical effects during transportation.

The **carrying handles** are designed to lift or carry the instrument. Do not apply excessive external force to the handles.

4.1.1.2 Accessory List

The instrument comes with the following accessories:

- Power cable
- Printed Getting Started manual

4.1.1.3 Placing or Mounting the Instrument

The R&S FPL1000 is designed for use either on a bench top or in a rack, or as a portable instrument (with optional battery operation) in a transport bag in the field.

Bench Top Operation

If the R&S FPL1000 is operated on a bench top, the surface should be flat. The instrument can be used in horizontal position, standing on its feet, or with the support feet on the bottom extended.

Preparing for Use

A CAUTION

Risk of injury if feet are folded out

The feet can fold in if they are not folded out completely or if the instrument is shifted. This can cause damage or injury.

- Fold the feet completely in or out to ensure stability of the instrument. Never shift the instrument when the feet are folded out.
- When the feet are folded out, do not work under the instrument or place anything underneath.
- The feet can break if they are overloaded. The overall load on the folded-out feet must not exceed 200 N.




▲ CAUTION

Risk of injury when stacking instruments insecurely

Never stack instruments on top of each other. The instrument's top surface area is too small to stack multiple instruments. Stacked instruments can tilt over and cause injury or damage the instrument.

If you need to stack instruments, install them in a rack.

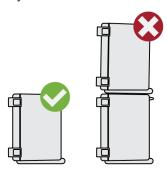

Rackmounting

The R&S FPL1000 can be installed in a rack using a rack adapter kit (order no. see data sheet). The installation instructions are part of the adapter kit.

Preparing for Use

NOTICE

Risk of instrument damage due to insufficient airflow in a rack

If the instrument is run with insufficient airflow for a longer period, the instrument overheats, which can disturb the operation and even cause damage.

Make sure that all fan openings are unobstructed, that the airflow perforations are unimpeded, and that the minimum distance from the wall is 10 cm.

Portable operation

An optional carrying bag designed specifically for the R&S FPL1000 allows you to protect the instrument while working in the field. The bag includes ventilation areas at the position of the ventilation outlets in the casing to ensure air circulation. The transparent cover allows you to operate the instrument without removing it from the bag. With the help of the optional vest holster you can carry the R&S FPL1000 in its bag and keep your hands free. Together with the optional battery pack (see Chapter 4.1.1.7, "Connecting an Optional Battery Pack (R&S FPL1-B31)", on page 18), and packed in the dedicated carrying bag, the R&S FPL1000 is ideally suited for operation directly in the field, even in rough environments.



For details on optional accessories see the R&S FPL1000 data sheet.

4.1.1.4 Connecting the AC Power

The R&S FPL1000 is equipped with an AC power supply connector. The R&S FPL1000 can be used with different AC power voltages and adapts itself automat-

Preparing for Use

ically to it. Refer to the datasheet for the requirements of voltage and frequency. The AC power connector is located on the rear panel of the instrument.

For details on the connector, refer to Chapter 4.2.2.2, "AC Power Supply Connection and Main Power Switch", on page 42.



Connect the R&S FPL1000 to the AC power supply using the supplied power cable.

Since the instrument is assembled in line with the specifications for safety class EN61010, it must only be connected to an outlet that has a ground contact.

4.1.1.5 Changing the AC Supply Fuse

If the battery option R&S FPL1-B31 is installed, an AC supply fuse is built into the AC power supply connector. Only use fuses of the type 5A T IEC60127-2/V (order no. 0099.6735.00). Such fuses are used for all of the specified nominal AC supply voltages.

To change the AC supply fuses

- 1. Disconnect the power cable.
- 2. Open the flap covering the fuse holder using a small screwdriver (or similar).
- 3. Remove the fuse holder.
- 4. Remove the fuse and install the new one.
- 5. Reinsert the fuse holder.
- 6. Close the flap.

4.1.1.6 Connecting an Optional DC Power Supply (R&S FPL1-B30)

The R&S FPL1000 can also be equipped with an optional (internal) DC power supply (R&S FPL1-B30). If installed, the R&S FPL1000 can be operated by a DC voltage of 10.4 V to 28 V.

Preparing for Use

A WARNING

Risk of electric shock

Insufficient insulation and exceeding the current limitation of external power supplies for safety extra-low DC voltage (SELV) can lead to electric shock.

Be sure to meet the requirements for reinforced/double insulation in accordance with DIN/EN/IEC 61010 (UL 3111, CSA C22.2 No. 1010.1) orDIN/EN/IEC 60950 (UL 1950, CSA C22.2 No. 950). Provide current limitation in accordance with DIN EN 61010-1 Appendix F2.1.



DC Connection

Connect the DC power supply on the rear panel of the R&S FPL1000 to the power source using the supplied power cable.

4.1.1.7 Connecting an Optional Battery Pack (R&S FPL1-B31)

As an alternative to the fixed AC or DC power supply, the R&S FPL1000 can be operated by a battery pack if the option R&S FPL1-B31 is installed. If the battery pack is installed and neither DC nor AC power is supplied, the R&S FPL1000 automatically switches to battery operation (during operation).

The R&S FPL1000 comes with the battery pack already installed if the battery option was ordered together with the instrument. Otherwise, insert the battery packs in the slots at the top of the rear panel.



The battery pack is charged directly in the R&S FPL1000 via the common AC or DC power supply. The battery pack can be charged at an ambient temperature between +0 °C and +45 °C. If the temperature is above or below these values, charging is interrupted. If the battery temperature rises above +53 °C, charging is stopped.



When the battery is being charged in standby mode, the [Power] LED blinks. During operation, the status bar indicates that the battery is being charged.

Remote command to determine the battery charge state:

DIAGnostic:SERVice:BATTery:LEVel? on page 837

Preparing for Use



The battery pack is not charged in the factory. The battery pack must be charged before it is used the first time. A new battery pack or a battery pack which has not been used for a longer time attains full capacity after several charge/ discharge cycles.

Charging should be performed at a constant ambient temperature as temperature variations may cause the charger to be switched off too early.

Additional battery packs (R&S FPL1-Z4)

In addition to the internal battery pack option (R&S FPL1-B30), spare battery packs are available for the R&S FPL1000 (R&S FPL1-Z4). You can exchange the batteries while the R&S FPL1000 is running, as long as one battery remains in the instrument. However, it is not recommended that you operate the R&S FPL1000 with only one battery for a longer period. Additional battery packs can also be charged using the external battery charger option R&S FSV-B34.

4.1.1.8 Switching the Instrument On and Off

Switching on the instrument

- 1. Press the AC power switch on the rear panel to position "I".
- 2. Press the [Power] key on the front panel of the instrument.

The instrument operates on DC or AC power, whichever is supplied. After booting, the instrument is ready for operation. The green [POWER] LED indicates this. A steady orange LED indicates the instrument is in standby mode.



Warm-up time for OCXO (option R&S FPL1-B4)

When the instrument is switched on, the OCXO requires an extended warm-up time (see data sheet).

Switching off the instrument

- Press the [Power] key on the front panel.
 - The R&S FPL1000 switches to standby mode (not in battery operation).
- 2. For AC power operation, set the AC power switch on the rear panel to position "O". For DC power operation, disconnect the DC power supply cable.
 - The R&S FPL1000 changes into off mode.

Preparing for Use

NOTICE

Risk of losing data

If you switch off the running instrument using the rear panel switch or by disconnecting the power cord, and no (charged) battery is available, the instrument loses its current settings. Furthermore, program data may be lost.

Press the Power key first to shut down the application properly.

4.1.1.9 Performing a Self-Alignment



During instrument start, the installed hardware is checked against the current firmware version to ensure the hardware is supported. If not, an error message is displayed ("Wrong Firmware Version") and you are asked to update the firmware. Until the firmware version is updated, self-alignment fails.

(For details refer to the R&S FPL1000 User Manual).

When strong temperature changes occur, you may have to perform a self-alignment to align the data to a reference source.



Operating temperature

Before performing this functional test, make sure that the instrument has reached its operating temperature (for details, refer to the data sheet).

A message in the status bar ("Instrument warming up...") indicates that the operating temperature has not yet been reached.

Depending on the installation settings, an automatic self-alignment is performed each time the instrument is switched on, and a dialog is displayed indicating how much warm-up time is still required before self-alignment can be performed.

Performing a self-alignment

- 1. Press the [SETUP] key.
- 2. Press the "Alignment" softkey.
- 3. Select the "Start Self Alignment" button in the "Alignment" dialog box.

Once the system correction values have been calculated successfully, a message is displayed.



To display the alignment results again later

- Press the [SETUP] key.
- Press the "Alignment" softkey.

Preparing for Use

4.1.1.10 Checking the Supplied Options

The instrument may be equipped with both hardware and firmware options. To check whether the installed options correspond to the options indicated on the delivery note, proceed as follows.

- 1. Press the [SETUP] key.
- 2. Press the "System Config" softkey.
- Switch to the "Versions + Options" tab in the "System Configuration" dialog.A list with hardware and firmware information is displayed.
- 4. Check the availability of the hardware options as indicated in the delivery note.

4.1.2 Windows Operating System

The instrument contains the Windows operating system which has been configured according to the instrument's features and needs. Changes in the system setup are only required when peripherals like keyboard or a printer are installed or if the network configuration does not comply with the default settings. After the R&S FPL1000 is started, the operating system boots and the instrument firmware is started automatically.

To ensure that the instrument software functions properly, certain rules must be adhered to concerning the operating system.

NOTICE

Risk of rendering instrument unusable

The instrument is equipped with the Windows operating system. You can install additional software on the instrument, however, additional software can impair instrument function. Thus, run only programs that Rohde & Schwarz has tested for compatibility with the instrument software.

The drivers and programs used on the instrument under Windows are adapted to the instrument. Only install update software released by Rohde & Schwarz to modify existing instrument software.

The following program packages have been tested:

- R&S Power Viewer Plus virtual power meter for displaying results of the power sensor R&S NRP-Zxx (install only this component!)
- Symantec Endpoint Security virus-protection software
- FileShredder for reliable deletion of files on the hard disk

4.1.2.1 Virus Protection

Take appropriate steps to protect your instruments from infection. Use strong firewall settings and scan any removable storage device used with a Rohde & Schwarz instru-

Preparing for Use

ment regularly. It is also recommended that you install anti-virus software on the instrument. Rohde & Schwarz does NOT recommend running anti-virus software in the background ("on-access" mode) on Windows-based instruments, due to potentially degrading instrument performance. However, Rohde & Schwarz does recommend running it during non-critical hours.

For details and recommendations, see the following Rohde & Schwarz white paper:

• 1EF96: Malware Protection Windows 10

4.1.2.2 Service Packs and Updates

Microsoft regularly creates security updates and other patches to protect Windowsbased operating systems. These are released through the Microsoft Update website and associated update server. Instruments using Windows, especially those that connect to a network, should be updated regularly.

For details and recommendations, see the Rohde & Schwarz White Paper 1EF96: Malware Protection Windows 10.

4.1.2.3 Login

Windows requires that users identify themselves by entering a user name and password in a login window. By default, the R&S FPL1000 provides two user accounts:

- "Instrument": a standard user account with limited access
- "Administrator": an administrator account with unrestricted access to the computer/domain

Some administrative tasks require administrator rights (e.g. the configuration of a LAN network). Refer to the description of the basic instrument setup ([SETUP] menu) to find out which functions are affected.

Automatic login

For the standard instrument account, an automatic login function is active by default. If activated, login is carried out automatically in the background when the R&S FPL1000 is started, without having to enter a password. This function is active until an administrator explicitly deactivates it or changes the password.

For information on how to deactivate or reactivate the automatic login, refer to "Automatic Login Function" on page 23.

Passwords

For all default user accounts, the initial password is *894129*. Note that this password is very weak, and it is recommended that you change the password for both users after initial login. An administrator can change the password in Windows for any user at any time via "Start > Settings > Account > SignIn Options > Password > Change".

Preparing for Use



Changing the password and use of auto-login function

Note that when you change the default passwords, the default auto-login function no longer works! Reactivate it manually as described in "Reactivating the automatic login function" on page 24.

Automatic Login Function

When shipped, the instrument automatically logs on the default "Instrument" user to Windows using the default password.

Switching users when using the automatic login function

Which user account is used is defined during login. If automatic login is active, the login window is not displayed. However, you can also switch the user account to be used when the automatic login function is active.



- Select the "Windows" icon in the toolbar to access the operating system of the R&S FPL1000 (see also Chapter 4.1.2.4, "Accessing the Start Menu", on page 24).
- Press [CTRL + ALT + DEL], then select "Sign out".
 The "Login" dialog box is displayed, in which you can enter the different user account name and password.

Deactivating the automatic login function

To deactivate the automatic login function, perform the following steps:

1. Log in to the R&S FPL1000 operating system using an administrator account (see "Switching users when using the automatic login function" on page 23).



- Select the "Windows" icon in the toolbar to access the operating system of the R&S FPL1000 (see also Chapter 4.1.2.4, "Accessing the Start Menu", on page 24).
- In the "Start" menu, select "All applications > Windows System > Run".
 The "Run" dialog box is displayed.
- 4. Enter the command

C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\
NO AUTOLOGIN.REG.

5. Press the [ENTER] key to confirm.

This command deactivates the automatic login function. The next time you switch on the instrument, the operating system prompts you to enter your user name and password before it starts the firmware.

Preparing for Use

Adapting the automatic login function to a new password

If you change the "Instrument" user's password, which is used during automatic login, this function no longer works. Adapt the settings for the command that activates the auto login function first.

1. Open the

- C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\
 NO AUTOLOGIN.REG file in any text editor (e.g. Notepad).
- 2. In the line "DefaultPassword"="894129", replace the default password (894129) by the new password for automatic login.
- 3. Save the changes to the file.

Reactivating the automatic login function

1. Log in to the R&S FPL1000 operating system using an administrator account (see "Switching users when using the automatic login function" on page 23).



- Select the "Windows" icon in the toolbar to access the operating system of the R&S FPL1000 (see also Chapter 4.1.2.4, "Accessing the Start Menu", on page 24).
- In the "Start" menu, select "All applications > Windows System > Run".
 The "Run" dialog box is displayed.
- 4. Enter the command
 - C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\
 AUTOLOGIN.REG.
- Press the [ENTER] key to confirm.
 This command reactivates automatic login function. It is active the next time the instrument reboots.

4.1.2.4 Accessing the Start Menu

The Windows "Start" menu provides access to the Windows functionality and installed programs.

To open the "Start" menu:



In Windows 10: Press the "Windows" key or the [CTRL + ESC] key combination on your (external) keyboard.

All necessary system settings can be defined in the "Start > Settings" menu (for required settings refer to the Windows documentation and to the hardware description).

Preparing for Use

4.1.2.5 Accessing the Windows Taskbar

The Windows taskbar also provides quick access to commonly used programs, for example Paint or WordPad. IECWIN, the auxiliary remote control tool provided free of charge and installed by Rohde & Schwarz, is also available from the taskbar.



For details on the IECWIN tool, see the "Network and Remote Control" chapter of the R&S FPL1000 user manual.



4.1.3 Connecting USB Devices

The USB interfaces of the R&S FPL1000 allow you to connect USB devices directly to the instrument. Increase the number of possible connections using USB hubs. Due to the large number of available USB devices, there is almost no limit to the expansions that are possible with the R&S FPL1000.

The following list shows various USB devices that can be useful:

- Memory stick for easy transfer of data to/from a computer (e.g. firmware updates)
- CD-ROM drives for easy installation of firmware applications
- Keyboard or mouse to simplify the entry of data, comments, filenames, etc.
- Printer for printing measurement results
- Power sensors, e.g. of the NRP Zxy family

Installing USB devices is easy under Windows, because all USB devices are plug&play. After a device is connected to the USB interface, the operating system automatically searches for a suitable device driver.

If Windows does not find a suitable driver, it prompts you to specify a directory that contains the driver software. If the driver software is on a CD, connect a USB CD-ROM drive to the instrument before proceeding.

When a USB device is then disconnected from the R&S FPL1000, Windows immediately detects the change in hardware configuration and deactivates the corresponding driver.

All USB devices can be connected to or disconnected from the instrument during operation.

Connecting a memory stick or CD-ROM drive

If installation of a memory stick or CD-ROM drive is successful, Windows informs you that the device is ready to use. The device is made available as a new drive and is displayed in Windows Explorer. The name of the drive depends on the manufacturer.

Preparing for Use

Connecting a keyboard

The keyboard is detected automatically when it is connected. The default input language is English – US.

However, you can also connect foreign language keyboards; currently the following languages are supported for the R&S FPL1000:

- German
- Swiss
- French
- Russian

Select "Start > Settings > Time & language > Region & language > Add a language" to configure the keyboard language. To access the Windows operating system, press the Windows key on the external keyboard.

Connecting a mouse

The mouse is detected automatically when it is connected.

Select "Start > Settings > Devices > Mouse & touchpad" to configure the mouse properties. To access the Windows operating system, press the Windows key on the external keyboard.

Connecting a printer

When printing a file, the instrument checks whether a printer is connected and turned on and whether the appropriate printer driver is installed. If necessary, printer driver installation is initiated. You only have to install a printer driver once.

To install a printer, select "Start > Settings > Devices > Add a printer or scanner". To access the Windows operating system, press the Windows key on the external keyboard.

You can load updated and improved driver versions or new drivers from an installation disk, USB memory stick or another external storage medium. If the instrument is integrated in a network, you can also install driver data stored in a network directory.

Select "Start > Settings > Devices > Device Manager > Update Device drivers" to install the driver.

4.1.4 Connecting an External Monitor

You can connect an external monitor (or projector) to the "DVI" connector on the rear panel of the R&S FPL1000 (see also Chapter 4.2.2.6, "DVI", on page 43).

Preparing for Use




Screen resolution and format

The touchscreen of the R&S FPL1000 is calibrated for a 16:10 format. If you connect a monitor or projector using a different format (e.g. 4:3), the calibration will not be correct and the screen will not react to your touch actions properly.

The touchscreen has a screen resolution of 1280x800 pixels. Most external monitors have a higher screen resolution. If the screen resolution of the monitor is set higher than the instrument's resolution, the application window uses an area of 1280x800 pixels on the monitor display. For full screen display, adjust the monitor's screen resolution.

The R&S FPL1000 supports a minimum resolution of 1280x768 pixels.

- 1. Connect the external monitor to the R&S FPL1000.
- 2. Press the [SETUP] key.
- 3. Press the "Display" softkey.
- Select the "Configure Monitor" tab in the "Display" dialog box.
 The standard Windows "Screen Resolution" dialog box is displayed.

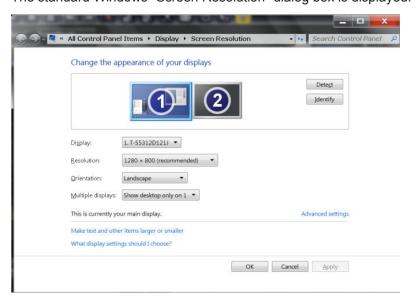

- 5. If necessary, change the screen resolution to be used. Consider the information in the note above.
- 6. Select the instrument to be used for display:
 - "Display 1" : internal monitor only
 - "Display 2" : external monitor only
 - "Duplicate" : both internal and external monitor
- 7. Tap "Apply" to try out the settings before they are accepted permanently, then you can easily return to the previous settings, if necessary.
- 8. Select "OK" if the settings are suitable.

Preparing for Use

4.1.5 Setting Up a Network (LAN) Connection

A LAN connection is the prerequisite for all network operations. The LAN connection settings can be configured directly in the Windows operating system, or with LXI (LAN eXtension for Instruments).

The R&S FPL1000 is equipped with a network interface and can be connected to an Ethernet LAN (local area network). Provided the network administrator has assigned you the appropriate rights and adapted the Windows firewall configuration, you can use the interface, for example:

- To transfer data between a controlling device and the test device, e.g. to run a remote control program.
 See chapter "Remote Control".
- To access or control the measurement from a remote computer using the "Remote Desktop" application (or a similar tool)
- To connect external network devices (e.g. printers)
- To transfer data from a remote computer and back, e.g. using network folders

This section describes how to configure the LAN interface. It includes the following topics:

- Chapter 4.1.5.1, "Connecting the Instrument to the Network", on page 28
- Chapter 4.1.5.2, "Assigning the IP Address", on page 29

Note that only user accounts with administrator rights can configure LAN networks.



LXI

The R&S FPL1000 supports the LXI core features. LXI gives you direct access to the LAN settings described below.

For further information on the LXI interface, refer to Chapter 6.4.2.4, "LXI Settings", on page 208.

4.1.5.1 Connecting the Instrument to the Network

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network made with an ordinary RJ-45 network cable. The instrument is assigned an IP address and can coexist with a computer and with other hosts on the same network.
- A dedicated network connection (Point-to-point connection) between the instrument and a single computer made with a (crossover) RJ-45 network cable. The computer must be equipped with a network adapter and is directly connected to the instrument. The use of hubs, switches, or gateways is not required, however, data transfer is still performed using the TCP/IP protocol. You must assign an IP address to the instrument and the computer, see Chapter 4.1.5.2, "Assigning the IP Address", on page 29.

Preparing for Use

Note: As the R&S FPL1000 uses a 1 GBit LAN, a crossover cable is not necessary (due to Auto-MDI(X) functionality).

NOTICE

Risk of network failure

Consult your network administrator before performing the following tasks:

- · Connecting the instrument to the network
- Configuring the network
- Changing IP addresses

Errors can affect the entire network.

► To establish a non-dedicated network connection, connect a commercial RJ-45 cable to one of the LAN ports.

To establish a dedicated connection, connect a (crossover) RJ-45 cable between the instrument and a single PC.

If the instrument is connected to the LAN, Windows automatically detects the network connection and activates the required drivers.

The network card can be operated with a 1 GBit Ethernet IEEE 802.3u interface.

4.1.5.2 Assigning the IP Address

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports dynamic TCP/IP configuration using the Dynamic Host Configuration Protocol (DHCP), all address information can be assigned automatically.
- If the network does not support DHCP, or if the instrument is set to use alternate TCP/IP configuration, the addresses must be set manually.

By default, the instrument is configured to use dynamic TCP/IP configuration and obtain all address information automatically. This means that it is safe to establish a physical connection to the LAN without any previous instrument configuration.

NOTICE

Risk of network errors

Connection errors can affect the entire network. If your network does not support DHCP, or if you choose to disable dynamic TCP/IP configuration, you must assign valid address information before connecting the instrument to the LAN. Contact your network administrator to obtain a valid IP address.

Preparing for Use

Assigning the IP address on the instrument

- 1. Press the [SETUP] key.
- 2. Press the "Network + Remote" softkey.
- 3. Select the "Network" tab.
- 4. In the "Network + Remote" dialog, toggle the "DHCP On/Off" setting to the required mode

If DHCP is "Off", you must enter the IP address manually, as described in the following steps.

Note: When DHCP is changed from "On" to "Off", the previously set IP address and subnet mask are retrieved.

If DHCP is "On", the IP address of the DHCP server is obtained automatically. The configuration is saved, and you are prompted to restart the instrument. You can skip the remaining steps.

Note: When a DHCP server is used, a new IP address may be assigned each time the instrument is restarted. This address must first be determined on the instrument itself. Thus, when using a DHCP server, it is recommended that you use the permanent computer name, which determines the address via the DNS server (See "Using a DNS server to determine the IP address" on page 30 and Chapter 4.1.5.3, "Using Computer Names", on page 32).


- 5. Enter the "IP Address", for example 192.0.2.0. The IP address consists of four number blocks separated by dots. Every block contains a maximum of 3 numbers.
- Enter the "Subnet Mask", for example 255.255.25.0. The subnet mask consists of four number blocks separated by dots. Every block contains a maximum of 3 numbers.
- 7. Select "Configure Network".
 - If you have entered an invalid IP address or subnet mask, the message "out of range" is displayed in the status line. If the settings are correct, the configuration is saved, and you are prompted to restart the instrument.
- 8. Confirm the displayed message ("Yes" button) to restart the instrument.

Using a DNS server to determine the IP address

If a DNS server is configured on the R&S FPL1000, the server can determine the current IP address for the connection using the permanent computer name.

- 1. Obtain the name of your DNS domain and the IP addresses of the DNS and WINS servers on your network.
- 2. Press the "Windows" key on the external keyboard or the [CTRL + ESC] key combination on your keyboard to access the operating system.
- Select "Start > Settings > Network & Internet > Ethernet > Network and Sharing Center > Connections: Ethernet".


Preparing for Use

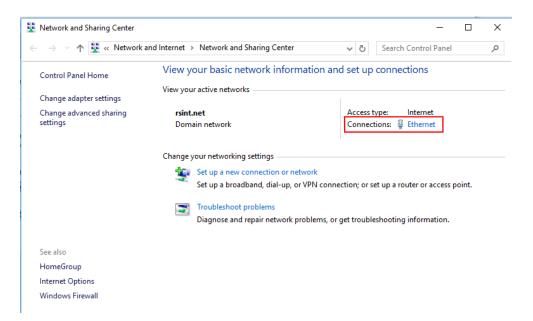

4. In the "Ethernet Status" dialog box, select the "Properties" button.

The items used by the LAN connection are displayed.

Preparing for Use

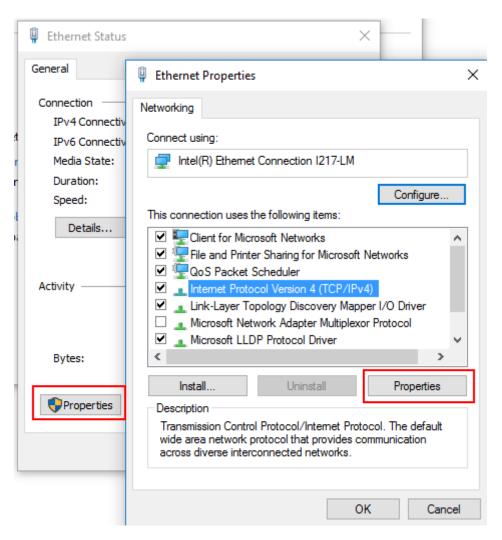

- 5. Tap the entry named "Internet Protocol Version 4 (TCP/IPv4)" to highlight it.
- 6. Select the "Properties" button.
- 7. On the "General" tab, select "Use the following DNS server addresses" and enter your own DNS addresses.

For more information, refer to the Windows operating system help.

4.1.5.3 Using Computer Names

In a LAN that uses a DNS server (Domain Name System server), each PC or instrument connected in the LAN can be accessed via an unambiguous computer name instead of the IP address. The DNS server translates the host name to the IP address. This is especially useful when a DHCP server is used, as a new IP address may be assigned each time the instrument is restarted.

Each instrument is delivered with an assigned computer name, but this name can be changed.

The default instrument name is a non-case-sensitive string with the following syntax:

Preparing for Use

<Type><variant>-<serial number>

The serial number can be found on the rear panel of the instrument. It is the third part of the device ID printed on the bar code sticker:



For example, FPL1003-123456

To change the computer name

- 1. Press the [Setup] key and then the "Network + Remote" softkey. The current "Computer Name" is displayed in the "Network" tab.
- 2. Enter the new computer name.
- Close the dialog box.

4.1.5.4 Changing the Windows Firewall Settings

A firewall protects an instrument by preventing unauthorized users from gaining access to it through a network. Rohde & Schwarz highly recommends the use of the firewall on your instrument. Rohde & Schwarz instruments are shipped with the Windows firewall enabled and preconfigured in such a way that all ports and connections for remote control are enabled.

For more details on firewall configuration, see the following Rohde & Schwarz White Paper:

• 1EF96: Malware Protection Windows 10

Note that changing firewall settings requires administrator rights.

4.1.6 Configuring the Initial Instrument Settings

This section describes how to set up the R&S FPL1000 initially. For further basic instrument settings, see the R&S FPL1000 User Manual.

4.1.6.1 Setting the User Interface Language

The user interface to the R&S FPL1000 is available in several languages.

Changing the user interface language

1. Press the [SETUP] key.

Instrument Tour

- 2. Press the "Language" softkey.
- 3. Select the required language.

All text elements of the R&S FPL1000 user interface are displayed in the selected language.



Texts in standard Windows dialog boxes are displayed in the language defined in the regional settings of the Windows operating system.

4.1.6.2 Setting the Date and Time

Users with administrator rights can set the date and time for the internal real time clock as follows:

Opening the Date and Time Properties dialog box

- 1. Press the [SETUP] key.
- 2. Press the "Display" softkey.
- 3. Select the "General" tab in the "Display" dialog box.
- 4. Press the "Set Date and Time" button to open the standard Windows "Date and Time Properties" dialog box.
- If necessary, toggle the "Date and Time Format" between German (DE) and US.
 After you have changed the setting and closed the dialog box, the instrument adopts the new date and time.

4.2 Instrument Tour

4.2.1 Front Panel View

This chapter describes the front panel, including all function keys and connectors.

Instrument Tour

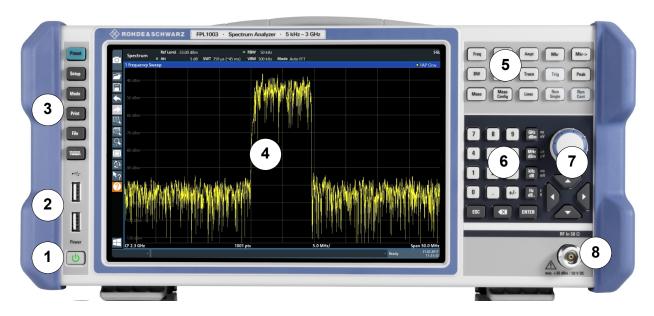


Figure 4-1: Front panel view of R&S FPL1000

- 1 = Power key
- 2 = USB (2.0) connectors
- 3 = System keys
- 4 = Touchscreen
- 5 = Function keys
- 6 = Keypad
- 7 = Navigation controls
- $8 = RF Input 50 \Omega connector$

NOTICE

Instrument damage caused by cleaning agents

Cleaning agents contain substances such as solvents (thinners, acetone, etc.), acids, bases, or other substances. Solvents can damage the front panel labeling, plastic parts, or screens, for example.

Never use cleaning agents to clean the outside of the instrument. Use a soft, dry, lintfree dust cloth instead.

4.2.1.1 Touchscreen

All measurement results are displayed on the screen on the front panel. Additionally, the screen display provides status and setting information and allows you to switch between various measurement tasks. The screen is touch-sensitive, offering an alternative means of user interaction for quick and easy handling of the instrument.

Instrument Tour

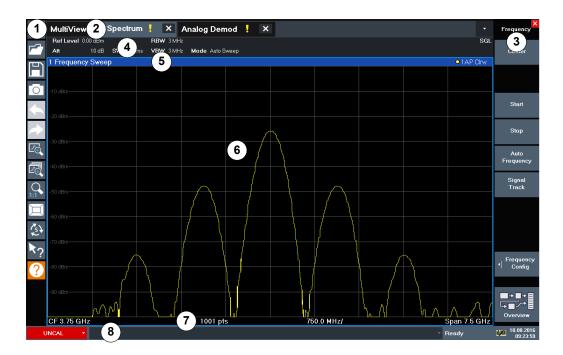


Figure 4-2: Touchscreen elements

- 1 = Toolbar with standard application functions, e.g. print, save/open file etc.
- 2 = Tabs for individual channel setups
- 3 = Softkeys for function access
- 4 = Channel Setup bar for firmware and measurement settings
- 5 = Window title bar with diagram-specific (trace) information
- 6 = Measurement results area
- 7 = Diagram footer with diagram-specific information, depending on application
- 8 = Instrument status bar with error messages and date/time display

A touchscreen is a screen that is touch-sensitive, that is: the firmware reacts in a specified way when you move your fingers on the screen. Using touchscreen gestures, you can perform the following tasks (among others).

(See Chapter 4.3, "Trying Out the Instrument", on page 46)

- Changing a setting
- Changing the display
- Changing the displayed result range in a diagram
- Moving a marker
- Zooming into a diagram
- Selecting a new evaluation method
- Scrolling through a result list or table
- Saving or printing results and settings

To imitate a right-click by mouse using the touchscreen, for example to open a contextsensitive menu for a specific item, press the screen for about 1 second.

Instrument Tour

For details on touchscreen gestures see Chapter 4.4.4, "Touchscreen Gestures", on page 76.

4.2.1.2 **Power Key**

The [Power] key is located on the lower left corner of the front panel. It starts up and shuts down the instrument.

See also Chapter 4.1.1.8, "Switching the Instrument On and Off", on page 19.

4.2.1.3 USB

The front panel provides two female USB connectors (USB-A, 2.0 standard) to connect devices like a keyboard or a mouse. A memory stick can be connected to store and reload instrument settings and measurement data.



The rear panel provides further USB connectors (standard 3.0), see Chapter 4.2.2.8, "USB", on page 43.

4.2.1.4 System Keys

[System] keys set the instrument to a predefined state, change basic settings, and provide print and display functions.

A detailed description of the corresponding functions is provided in the User Manual.

Table 4-1: System keys

System key	Assigned functions	
[Preset]	Resets the instrument to the default state.	
[Setup]	Provides basic instrument configuration functions, e.g.: Reference frequency (external/internal) Date, time, display configuration LAN interface Firmware update and enabling of options Information about instrument configuration incl. firmware version and system error messages Service support functions (self-test etc.) Self-alignment (with spectrum analysis option)	
[Mode]	Manages channel setups	
[Print]	Provides configuration settings for the print function	
[FILE]	Provides save/recall functions for instrument settings and measurement results	
*******	Switches between the on-screen keyboard display: At the top of the screen At the bottom of the screen Off	

Instrument Tour

4.2.1.5 Function Keys

Function keys provide access to the most common measurement settings and functions.

A detailed description of the corresponding functions is provided in the User Manual.

Table 4-2: Function keys

Function key	Assigned functions
[FREQ]	Sets the center frequency and the start and stop frequencies for the frequency range under consideration. This key is also used to set the frequency offset and the signal track function.
[SPAN]	Sets the frequency span to be analyzed
[AMPT]	Sets the reference level, the displayed dynamic range, the RF attenuation and the unit for the level display Sets the level offset and the input impedance Activates the (optional) preamplifier
[BW]	Sets the resolution bandwidth and the video bandwidth.
[SWEEP]	Sets the sweep time and the number of measurement points Selects continuous measurement or single measurement
[TRACE]	Configures the graphical analysis of the measurement data
[MEAS]	Provides the measurement functions: Measurement of multicarrier adjacent channel power (Ch Power ACLR) Carrier to noise spacing (C/N C/N ₀) Occupied bandwidth (OBW) Spectrum emission mask measurement (Spectrum Emission Mask) Spurious emissions (Spurious Emissions) Measurement of time domain power (Time Domain Power) Third-order intercept point (TOI) AM modulation depth (AM Mod Depth)
[MEAS CONFIG]	Used to configure measurements and data input and output
[LINES]	Configures display lines and limit lines
[MKR]	Sets and positions the absolute and relative measurement markers (markers and delta markers) Selects special marker functions
[MKR->]	Used for search functions of the measurement markers (maximum/minimum of the trace) Assigns the marker frequency to the center frequency, and the marker level to the reference level Restricts the search area (Search Limits) and characterizes the maximum points and minimum points (Peak Excursion)
[TRIG]	Sets the trigger mode, the trigger threshold, the trigger delay, and the gate configuration in the case of gated sweep
[PEAK]	Performs a peak search for active marker. If no marker is active, normal marker 1 is activated and the peak search is performed for it.

Instrument Tour

Function key	Assigned functions
[RUN SINGLE]	Starts and stops a single new measurement (Single Sweep Mode)
[RUN CONT]	Starts and stops a continuous measurement (Continuous Sweep Mode)

4.2.1.6 Keypad

The keypad is used to enter numeric parameters, including the corresponding units. It contains the following keys:

Table 4-3: Keys on the keypad

Type of key	Description	
Decimal point	Inserts a decimal point "." at the cursor position.	
Sign key	Changes the sign of a numeric parameter. In the case of an alphanumeric parameter, inserts a "-" at the cursor position.	
Unit keys (GHz/-dBm MHz/dBm, kHz/dB, Hz/dB etc.)	Adds the selected unit to the entered numeric value and complete the entry. In the case of level entries (e.g. in dB) or dimensionless values, all units have the value "1" as multiplying factor. Thus, they have the same function as an [ENTER] key.	
[ESC]	Closes all kinds of dialog boxes, if the edit mode is not active. Quits the edit mode, if the edit mode is active. In dialog boxes that contain a "Cancel" button it activates that button. For "Edit" dialog boxes the following mechanism is used: If data entry has been started, it retains the original value and closes the dialog box. If data entry has not been started or has been completed, it closes the dialog box.	
(BACKSPACE)	If an alphanumeric entry has already been started, this key deletes the character to the left of the cursor.	
[ENTER]	 Concludes the entry of dimensionless entries. The new value is accepted. With other entries, this key can be used instead of the "Hz/dB" unit key. In a dialog box, selects the default or focused element. 	

4.2.1.7 Navigation Controls

The navigation controls include a rotary knob and navigation keys. They allow you to navigate within the display or within dialog boxes.

Instrument Tour



Navigating in tables

The easiest way to navigate within tables (both in result tables and configuration tables) is to scroll through the entries with your finger on the touchscreen.

Rotary Knob



The rotary knob has several functions:

- For numeric entries: increments (clockwise direction) or decrements (counterclockwise direction) the instrument parameter at a defined step width
- In lists: toggles between entries
- For markers, limit lines, and other graphical elements on the screen: moves their position
- For active scroll bars: moves the scroll bar vertically
- For dialog boxes: Acts like the [ENTER] key when pressed

Navigation Keys

The navigation keys can be used alternatively to the rotary knob to navigate through dialog boxes, diagrams or tables.

Arrow Up/Arrow Down Keys

The <arrow up> or <arrow down> keys do the following:

- For numeric entries: increments (Arrow Up) or decrements (Arrow Down) the instrument parameter at a defined step width
- In a list: scrolls forward and backward through the list entries
- In a table: moves the selection bar vertically
- In windows or dialog boxes with a vertical scroll bar: moves the scroll bar

Arrow Left/Arrow Right Keys

The <arrow left> or <arrow right> keys do the following:

- In an alphanumeric edit dialog box, move the cursor.
- In a list, scroll forward and backward through the list entries.
- In a table, move the selection bar horizontally.
- In windows or dialog boxes with horizontal scroll bar, move the scroll bar.

4.2.1.8 RF INPUT 50 Ω

Connect a device under test (DUT) to the R&S FPL1000 to provide RF input which is then analyzed in an RF measurement. Connect the DUT to the "RF Input" on the R&S FPL1000 via a cable equipped with an appropriate connector.

Instrument Tour

NOTICE

Risk of instrument damage

Do not overload the input. For maximum allowed values, see the data sheet. A DC input voltage of 50 V must never be exceeded.

4.2.2 Rear Panel View

This figure shows the rear panel view of the R&S FPL1000. The individual elements are described in more detail in the subsequent sections.



Figure 4-3: Rear panel view

- 1+2 = Removable, rechargeable Li-Ion Battery Packs
- 3 = DC power supply
- 4 = AC Power Supply Connection and Main Power Switch with fuse
- 5 = GPIB (IEC 625) interface
- 6 = Reference clock connectors
- 7 = Trigger input connector
- 8 = "DVI" connector for external display
- 9 = "LAN" connector
- 10 = "USB" (3.0) connectors
- 11 = NRP Power Sensor connector *)
- 12 = Headphones connector *)
- 13 = Aux. Port *)
- 14 = "IF/VIDEO OUT" connector *)
- 15 = NOISE SOURCE CONTROL *)
- *) requires the "Additional Interfaces" option R&S FPL1-B5.

Instrument Tour

4.2.2.1 Li-lon Battery Packs and DC Power Connector

With the Li-Ion battery pack (option R&S FPL1-B31), the R&S FPL1000 can be operated independently of an AC or DC power supply. The instrument can house 2 Li-Ion battery packs which can be charged both via AC or DC power supply.

The DC power supply (option R&S FPL1-B30) can be connected alternatively to the AC power supply. DC power supplies from +12 V to +24 V and from 13 A to 6.5 A can be used. The connector is supplied with the accessories and is connected according to the following diagram:

Pin	Description
1	Plus
2	Ground
3	Not used
	1 2

WARNING

Risk of electric shock!

If external power supply units for supplying safety extra-low DC voltage (SELV) to the instrument are used, the requirements for reinforced/double insulation in accordance with DIN/EN/IEC 61010 (UL 3111, CSA C22.2 No. 1010.1) or DIN/EN/IEC 60950 (UL 1950, CSA C22.2 No. 950) must be met. Current limitation must be provided in accordance with DIN EN 61010-1 Appendix F2.1.

Otherwise there is a risk of electric shock.

4.2.2.2 AC Power Supply Connection and Main Power Switch

An AC power supply connector and main power switch are located in a unit on the rear panel of the instrument.

Main power switch function:

Position 1: The instrument is in operation.

Position O: The entire instrument is disconnected from the AC power supply.

For details, refer to Chapter 4.1.1.4, "Connecting the AC Power", on page 16.

4.2.2.3 **GPIB Interface**

The optional GPIB interface (R&S FPL1-B10) is in compliance with IEEE488 and SCPI. A computer for remote control can be connected via this interface. To set up the connection, a shielded cable is recommended.

For details see "GPIB Interface (IEC 625/IEEE 418 Bus Interface)" on page 171.

Instrument Tour

4.2.2.4 Ref. In / Ref. Out

The Ref. In connectors are used to provide an external reference signal to the R&S FPL1000.

The Ref. Out connectors can be used to provide a reference signal from the R&S FPL1000 to other devices that are connected to this instrument.

Various connectors are provided for different reference signals:

Connector	Reference signal	Usage
Ref. In	10 MHz 10 dBm	To provide an external reference signal on the R&S FPL1000.
Ref. Out	10 MHz 10 dBm	To provide the internal reference signal from the R&S FPL1000 to another device continuously. For the R&S FPL1000 this is also used to provide the optional OCXO reference signal to another device.

4.2.2.5 Trigger In

Use the female Trigger In connector to input an external trigger or gate data. Thus, you can control the measurement using an external signal. The voltage level is 1.4 V. The typical input impedance is 10 k Ω .

4.2.2.6 DVI

You can connect an external monitor or other display device to the R&S FPL1000 via the DVI (Digital visual interface) connector to provide an enlarged display.

For details, see Chapter 4.1.4, "Connecting an External Monitor", on page 26.

4.2.2.7 LAN

The "LAN" interface can be used to connect the R&S FPL1000 to a local network for remote control, printouts or data transfer. The assignment of the RJ-45 connector supports twisted-pair category 5 UTP/STP cables in a star configuration (UTP stands for unshielded twisted pair, and STP for shielded twisted pair).

For details, see Chapter 6.4, "Network and Remote Operation", on page 164.

4.2.2.8 USB

The rear panel provides two additional female USB (3.0 standard) connectors to connect devices like a keyboard, a mouse or a memory stick (see also Chapter 4.2.2.8, "USB", on page 43).

Instrument Tour

4.2.2.9 Sensor Connector

The LEMOSA female connector is used to connect power sensors of the R&S NRP-Zxy family. For a detailed list of supported sensors, see the data sheet.

For details on configuring and using power sensors, see Chapter 7.3.2, "Power Sensors", on page 368.



This connector is provided by the "Additional Interfaces" option R&S FPL1-B5.

4.2.2.10 Aux. Port

A 25-pole SUB-D male connector used as an input and output for low-voltage TTL control signals (max. 5 V). This connector is provided by the "Additional Interfaces" option R&S FPL1-B5.

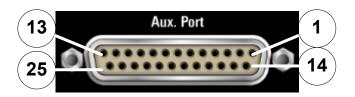


Table 4-4: Pin assignment for optional AUX port

Pin	Signal	Description
1	GND	Ground
2		not used for spectrum analysis
3	GND	Ground
4		not used for spectrum analysis
5	GND	Ground
6		not used for spectrum analysis
7	GND	Ground
8 to 11		not used for spectrum analysis
12	GND	Ground
13	+5 V / max. 250 mA	Supply voltage for external circuits
14 to 19	I/O_ <no.></no.>	Control lines for user ports (see User manual)
20	GND	Ground
21	READY FOR TRIG- GER	Signal indicating that the instrument is ready to receive a trigger signal.
		The signal polarity is configurable.
22 to 25		not used for spectrum analysis

Instrument Tour

Pin	Signal	Description
23	GND	Ground
24 to 25		not used for spectrum analysis

NOTICE

Short-circuit hazard

Always observe the designated pin assignment. A short-circuit can damage the port.

4.2.2.11 IF/Video Output

The female BNC connector can be used for various outputs in the Spectrum application:

- Intermediate frequency (IF) output of approximately 20 MHz
- Video output (1V)

Which output is provided is defined in the software ("Overview" > "Output").

This connector is only available if the R&S FPL1-B5 option is installed.

For details, see "Data Output" on page 375.

4.2.2.12 Headphones Connector

The R&S FPL1000 provides demodulators for AM, FM and PM signals, which can be routed to the headphone connector. With headphones or an external loudspeaker connected to the 3.5 mm headphone socket the displayed signal can be identified acoustically.

This connector is only available if the R&S FPL1-B5 option is installed.

For details, see "Data Output" on page 375.

4.2.2.13 Noise Source Control

The Noise Source Control female connector is used to provide the supply voltage for an external noise source. For example, use it to measure the noise figure and gain of amplifiers and frequency converting devices.

This connector is only available if the R&S FPL1-B5 option is installed.

Conventional noise sources require a voltage of +28 V to be switched on and 0 V to be switched off. The output supports a maximum load of 100 mA.

Trying Out the Instrument

4.3 Trying Out the Instrument

This chapter introduces the most important functions and settings of the R&S FPL1000 step by step. The complete description of the functionality and its usage is given in the R&S FPL1000 User Manual. Basic instrument operation is described in Chapter 4.4, "Operating the Instrument", on page 64.

Prerequisites

• The instrument is set up, connected to the mains system, and started up as described in Chapter 4.1, "Preparing for Use", on page 12.

For these first measurements, you use the internal calibration signal, so you do not need any additional signal source or instruments. Try out the following:

•	Measuring a Basic Signal	46
	Displaying a Spectrogram	
	Activating Additional Measurement Channels	
	Performing Sequential Measurements	
	Setting and Moving a Marker	
	Displaying a Marker Peak List	
	Zooming into the Display	
	Saving Settings	
	Printing and Saving Results.	

4.3.1 Measuring a Basic Signal

We will start out by measuring a simple sinus wave, using the internal calibration signal as the input.

To display the internal 50 MHz calibration signal

- 1. Press the [PRESET] key to start out in a defined instrument configuration.
- 2. Press the [Setup] key.
- 3. Tap the "Service + Support" softkey.
- 4. Tap the "Calibration Signal" tab.
- 5. Tap the "Calibration Frequency RF" option. Leave the frequency at the default 50 MHz.
- 6. Close the dialog box.

The calibration signal is now sent to the RF input of the R&S FPL1000. By default, a continuous frequency sweep is performed, so that the spectrum of the calibration signal is now displayed in the standard level versus frequency diagram.

Trying Out the Instrument

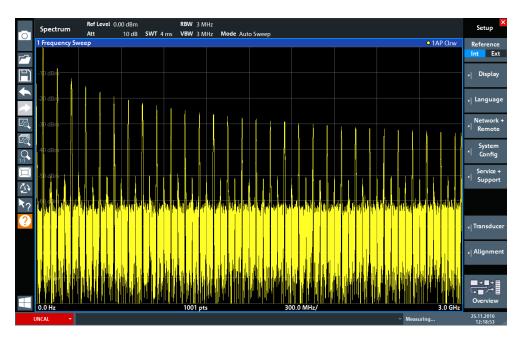


Figure 4-4: Calibration signal as RF input



Instrument warmup time

Note that the instrument requires an initial warmup time after switching it on. A message in the status bar ("Instrument warming up...") indicates that the operating temperature has not yet been reached. Wait until this message is no longer displayed before you start a measurement to ensure accurate results.

To optimize the display

To optimize the display for the calibration signal, we will adjust the main measurement settings.

- 1. Set the center frequency to the calibration frequency:
 - a) Tap the "Overview" softkey to display the configuration "Overview" .
 - b) Tap the "Frequency" button.
 - c) In the "Center" field, enter 50 on the number pad on the front panel.
 - d) Press the "MHz" key next to the number pad.
- 2. Reduce the span to 20 MHz:
 - a) In the "Span" field of the "Frequency" dialog box, enter 20 MHz.
 - b) Close the "Frequency" dialog box.
- 3. Average the trace to eliminate noise:
 - a) In the configuration "Overview", tap the "Analysis" button.
 - b) In the "Traces" tab, select the trace mode "Average" .
 - c) Enter the "Average Count": 100.

Trying Out the Instrument

d) Close the "Analysis" dialog box.

The display of the calibration signal is now improved. The maximum at the center frequency (=calibration frequency) of 50 MHz becomes visible.

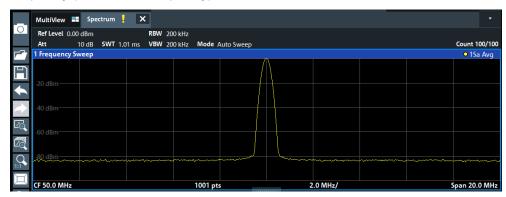


Figure 4-5: Calibration signal with optimized display settings

4.3.2 Displaying a Spectrogram

In addition to the standard "level versus frequency" spectrum display, the R&S FPL1000 also provides a spectrogram display of the measured data. A spectrogram shows how the spectral density of a signal varies over time. The x-axis shows the frequency, the y-axis shows the time. A third dimension, the power level, is indicated by different colors. Thus you can see how the strength of the signal varies over time for different frequencies.

- 1. Tap the "Overview" softkey to display the general configuration dialog box.
- 2. Tap the "Display Config" button.

The SmartGrid mode is activated, and the evaluation bar with the available evaluation methods is displayed.



Drag the "Spectrogram" icon from the evaluation bar to the diagram area. The blue area indicates that the new diagram would replace the previous spectrum display. Since we do not want to replace the spectrum, drag the icon to the lower half of the display to add an additional window instead.

Trying Out the Instrument

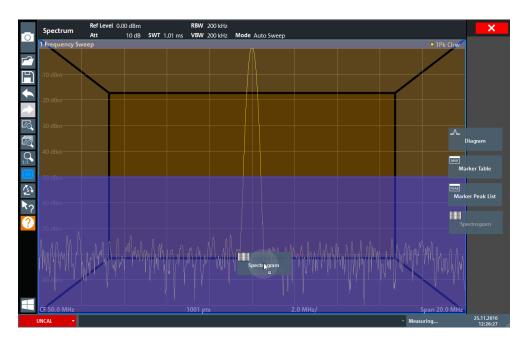


Figure 4-6: Adding a Spectrogram to the display

Drop the icon.



- 4. Close the SmartGrid mode by tapping the "Close" icon at the top right corner of the toolbar.
- 5. Close the "Overview".

You see the spectrogram compared to the standard spectrum display. Since the calibration signal does not change over time, the color of the frequency levels does not change over time, i.e. vertically. The legend at the top of the spectrogram window describes the power levels the colors represent.

Trying Out the Instrument

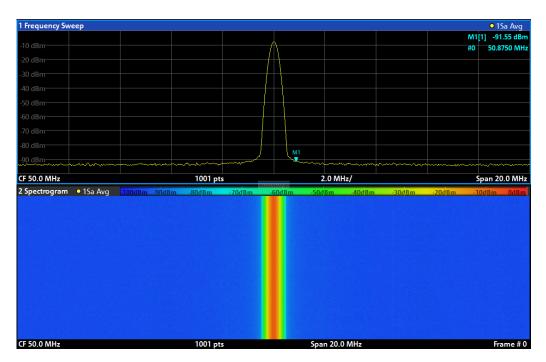


Figure 4-7: Spectrogram of the calibration signal

4.3.3 Activating Additional Measurement Channels

The R&S FPL1000 features multiple measurement channels, i.e. you can define several measurement configurations in parallel and then switch between the channel setups automatically to perform the measurements sequentially. We will demonstrate this feature by activating additional measurement channels for a different frequency range, a zero span measurement, and an I/Q analysis.

To activate additional measurement channels

- 1. Press the [Mode] key on the front panel.
- 2. On the "New Channel Setup" tab of the "Mode" dialog box, tap the "Spectrum" button.

Trying Out the Instrument

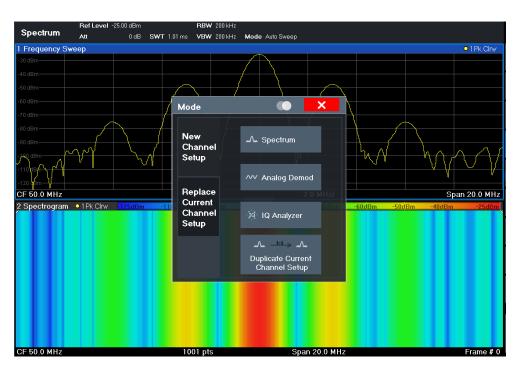


Figure 4-8: Adding a new measurement channel

Change the frequency range for this spectrum display:
 In the "Frequency" dialog box, set the center frequency to 500 MHz and the span to 1 GHz.



Figure 4-9: Frequency spectrum of the calibration signal with a larger span

- 4. Repeat the previous steps to activate a third Spectrum window.
- 5. Change the frequency range for this spectrum display:

Trying Out the Instrument

In the "Frequency" dialog box, set the **center frequency** to *50 MHz* and tap "Zero Span" .

- 6. Increase the reference level so you can see the level of the calibration signal at 1 dBm.
 - a) In the "Amplitude" dialog box, set the "Reference Level" value to +10 dBm. As the calibration signal does not vary over time, the level versus time diagram displays a straight line.

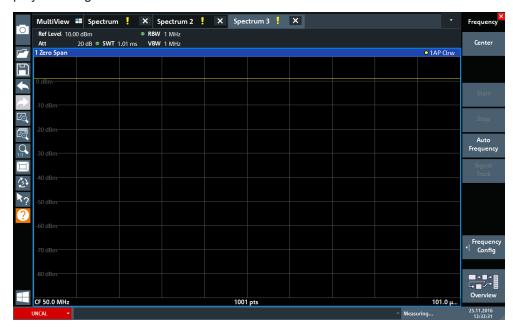


Figure 4-10: Time domain display of the calibration signal

- 7. Create a new measurement channel for I/Q analysis:
 - a) Press the [Mode] key.
 - b) Tap the "IQ Analyzer" button to activate a measurement channel for the I/Q Analyzer application.
 - c) Tap the "Display Config" softkey to activate the SmartGrid mode.

Trying Out the Instrument

d) Drag the "Real/Imag (I/Q)" icon from the evaluation bar to the SmartGrid to replace the default "Magnitude" display.

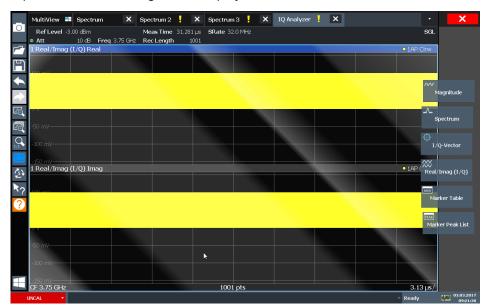


Figure 4-11: Inserting a Real/Imag diagram for I/Q analysis

e) Close the SmartGrid mode.

The "IQ Analyzer" measurement channel displays the real and imaginary signal parts in separate windows.

To display the MultiView tab

An overview of all active measurement channels is provided in the "MultiView" tab. This tab is always displayed if more than one measurement channel is active and cannot be closed.

Tap the "MultiView" tab.

Trying Out the Instrument



Figure 4-12: The "MultiView" tab

4.3.4 Performing Sequential Measurements

Although only one measurement can be performed at any one time, the measurements configured in the active channel setups can be performed sequentially, that means: one after the other, automatically, either once or continuously.



- 1. Tap the "Sequencer" icon in the toolbar.
- Toggle the "Sequencer" softkey in the "Sequencer" menu to "On".
 A continuous sequence is started, i.e. each channel setup measurement is performed one after the other until the Sequencer is stopped.

Trying Out the Instrument

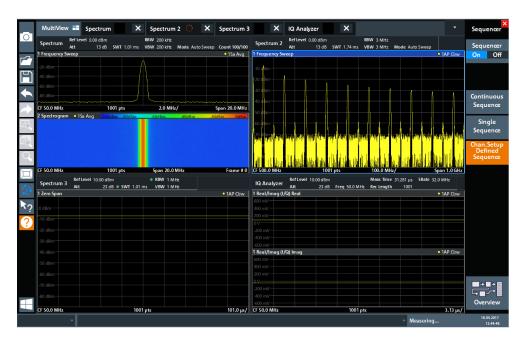


Figure 4-13: "MultiView" tab with active Sequencer



In Figure 4-13, the "Spectrum 2" measurement is currently active (indicated by the "channel active" icon in the tab label).


3. Stop the Sequencer by tapping the "Sequencer" softkey again.

4.3.5 Setting and Moving a Marker


Markers are useful to determine the position of particular effects in the trace. The most common use is to determine a peak, which is the default setting when you activate a marker. We will set a marker on the peak in our first Spectrum measurement.

- 1. In the "MultiView" tab, double-tap the "Spectrum" window (frequency sweep with spectrogram display) to return to the "Spectrum" measurement channel.
- 2. Tap the spectrum display to set the focus on that window.
- 3. Double-tap the spectrum window to maximize it, as we currently do not need the spectrogram display.
- 4. Press the [RUN SINGLE] key on the front panel to perform a single sweep so we have a fixed trace to set a marker on.
- Press the [MKR] key on the front panel to display the "Marker" menu.
 Marker 1 is activated and automatically set to the maximum of trace 1. The marker position and value is indicated in the diagram area as M1[1].

Trying Out the Instrument

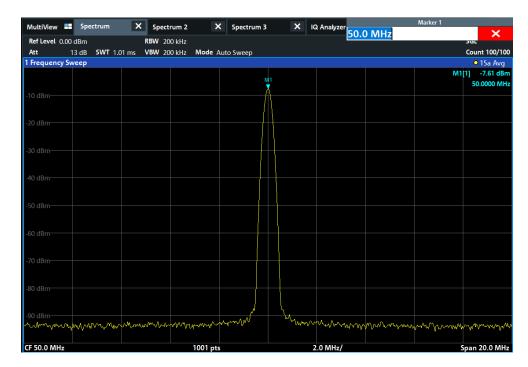

6. Now you can move the marker by tapping and dragging it to a different position. The current position is indicated by a dotted blue line. Notice how the position and value change in the marker area of the diagram.

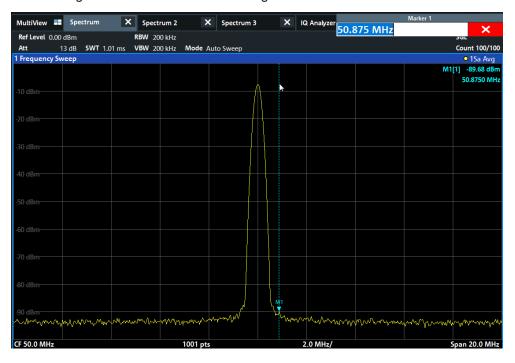

Trying Out the Instrument

4.3.6 Displaying a Marker Peak List

The marker peak list determines the frequencies and levels of peaks in the spectrum automatically. We will display a marker peak list for the "Spectrum 2" measurement channel.

- 1. Tap the "Spectrum 2" tab.
- 2. Press the [RUN SINGLE] key on the front panel to perform a single sweep for which we will determine the peaks.



- 3. Tap the "SmartGrid" icon in the toolbar to activate SmartGrid mode.
- 4. Drag the "Marker Peak List" icon from the evaluation bar to the lower half of the display to add a new window for the peak list.
- 5. Close the SmartGrid mode.
- 6. To obtain a more conclusive peak list that does not contain noise peaks, for example, define a threshold that is higher than the noise floor:
 - a) Press the [MKR] key on the front panel.
 - b) Tap the "Marker Config" softkey in the "Marker" menu.
 - c) Tap the "Search" tab in the "Marker" dialog box.
 - d) In the "Threshold" field, enter -68 dBm.
 - e) Tap the "State" box for "Threshold" to activate its use.Only peaks that are larger than -90 dBm will be included in the peak list.
 - f) Close the "Marker" dialog box.

The marker peak list displays the determined peaks that are above the defined threshold.

Trying Out the Instrument

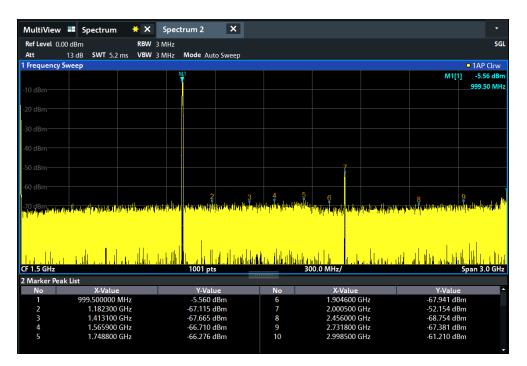


Figure 4-14: Marker Peak List

4.3.7 Zooming into the Display

To analyze the areas around the peak levels in more detail, we will zoom into the top 3 peaks.



- Tap the "Multiple Zoom" icon in the toolbar.
 The icon is highlighted to indicate that multiple zoom mode is active.
- 2. Tap the diagram near the first peak and drag your finger to the opposite corner of the zoom area. A white rectangle is displayed from the point where you tapped to the current position.

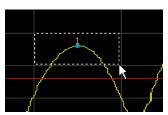


Figure 4-15: Defining the zoom area

When you remove your finger, the zoom area is enlarged in a second (sub-)window.

Trying Out the Instrument

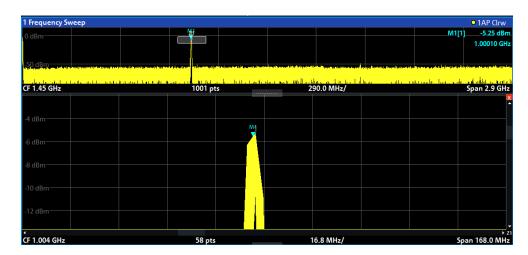


Figure 4-16: Zoomed display around a peak

- 3. In Figure 4-17, the enlarged peak is represented by a very thick trace. This is due to the insufficient number of sweep points. The missing sweep points for the zoomed display are interpolated, which provides poor results. To optimize the results, we will increase the number of sweep points from the default 1001 to 32001.
 - a) Press the [Sweep] key on the front panel.
 - b) Tap the "Sweep Config" softkey in the "Sweep" menu.
 - c) In the "Sweep Points" field, enter 32001.
 - d) Close the "Bandwidth" dialog box.
 - e) Press the [RUN SINGLE] key on the front panel to perform a new sweep with the increased number of sweep points.

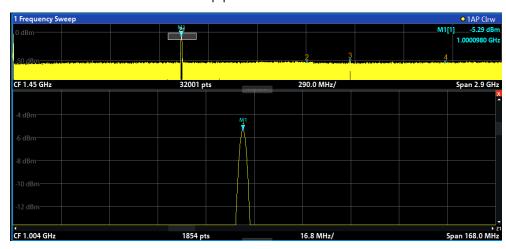


Figure 4-17: Zoomed peak with increased number of sweep points

Note that the trace becomes much more precise.

Trying Out the Instrument



4. Tap the "Multiple Zoom" icon in the toolbar again and define a zoom area around markers M2, M3 and M4.

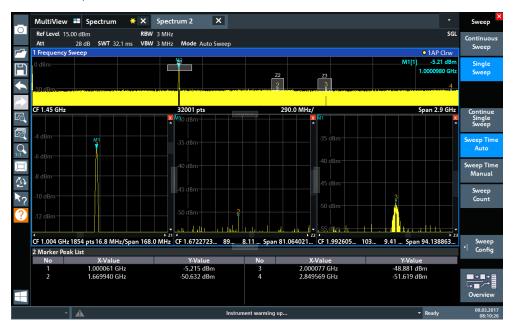


Figure 4-18: Multiple zoom windows



- 5. Tap the "Multiple Zoom" icon in the toolbar again and define a zoom area around marker M5.
- 6. To increase the size of the third zoom window, drag the "splitter" between the windows to the left or right or up or down.



Trying Out the Instrument



Figure 4-19: Enlarged zoom window

4.3.8 Saving Settings

To restore the results of our measurements later, we will store the instrument settings to a file.

To save the instrument settings to a file



1. Tap the "Save" icon in the toolbar.



- 2. Press the keyboard key on the front panel to display the online keyboard, as you will have to enter text in the next step.
- 3. In the "Save" dialog box, tap the "File Name" field and enter *MyMultiViewSetup* using the keyboard.
 - Keep the default "File Type" setting "Instrument with all Channel Setups" to store the configuration of all channel setups.

Trying Out the Instrument

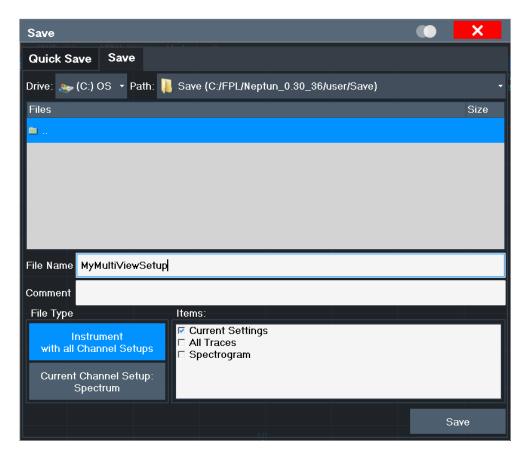


Figure 4-20: Saving the instrument settings to a file

4. Tap the "Save" button.

The file MyMultiViewSetup.dfl is stored in the default directory C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user.

To load stored instrument settings

You can restore the settings to the instrument at any time using the settings file.

1. Press the [PRESET] button to restore the default instrument settings so you can check that the stored user settings are actually restored afterwards.



- 2. Tap the "Load" icon in the toolbar.
- 3. In the "Load" dialog box, select the MyMultiViewSetup.dfl file in the default directory C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user.
- 4. Tap the "Load" button.

All instrument settings are restored and the display should resemble the instrument display right before the settings were stored.

Trying Out the Instrument

4.3.9 Printing and Saving Results

Finally, after a successful measurement, we will document our results. First we will export the numeric trace data, then we will create a screenshot of the graphical display.

To export the trace data

- 1. Press the [TRACE] key on the front panel.
- 2. Tap the "Trace Config" softkey.
- 3. Tap the "Trace / Data Export" tab.
- 4. Tap the "Export Trace to ASCII File" button.
- 5. Enter the file name MyMultiViewResults.

The trace data is stored to MyMultiViewResults.DAT

To create a screenshot of the display




1. Tap the "Print immediately" icon in the toolbar.

A screenshot of the current display is created. Note that the colors on the screen are inverted in the screenshot to improve printout results.

2. In the "Save Hardcopy as" > "Portable Network Graphics (PNG)" dialog box, enter a file name, e.g. *MyMultiViewDisplay*.

The screenshot is stored to MyMultiViewDisplay.png.

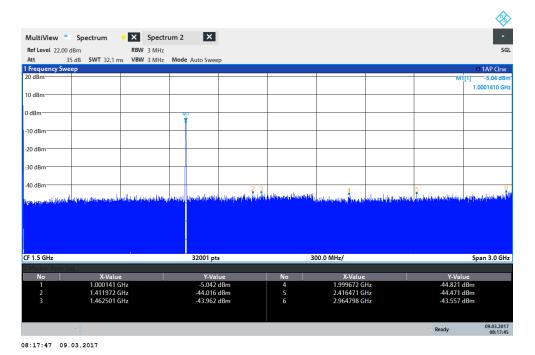

Operating the Instrument

4.4 Operating the Instrument

This chapter provides an overview on how to work with the R&S FPL1000.

NOTICE

Risk of touchscreen damage

Inappropriate tools or excessive force can damage the touchscreen.

Observe the following instructions when operating the touchscreen:

 Never touch the screen with ball point pens or other sharp objects, use your fingers instead.

As an alternative, you can use a stylus pen with a smooth soft tip.


- Never apply excessive force to the screen. Touch it gently.
- Never scratch the screen surface, for example with a finger nail.
- Never rub the screen surface strongly, for example with a dust cloth.
 For instructions on cleaning the screen, see Chapter 9.1, "Cleaning", on page 857.

•	Understanding the Display Information - Spectrum Mode	64
•	Accessing the Functionality	72
•	Entering Data	75
	Touchscreen Gestures	
•	Getting Help	79
•	Remote Control	81

4.4.1 Understanding the Display Information - Spectrum Mode

The following figure shows a measurement diagram in Spectrum mode. All different information areas are labeled. They are explained in more detail in the following sections.

Operating the Instrument

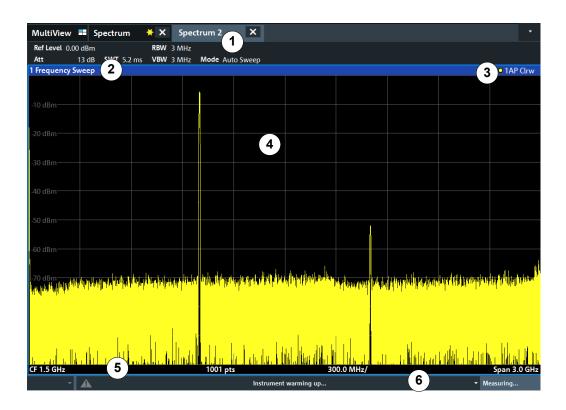

- 1 = Channel bar for firmware and measurement settings
- 2+3 = Window title bar with diagram-specific (trace) information
- 4 = Diagram area with marker information
- 5 = Diagram footer with diagram-specific information, depending on measurement application
- = Instrument status bar with error messages and date/time display



Hiding elements in the display

You can hide some of the elements in the display, for example the status bar or channel bar, to enlarge the display area for the measurement results. ("Setup" > "Display" > "Displayed Items")

For details, see Chapter 6.3.2, "Display Settings", on page 129.


•	Channel Setup Bar	65
	Window Title Bar	
	Marker Information	
•	Frequency and Span Information in Diagram Footer	70
	Instrument and Status Information	
•	Error Information	71

4.4.1.1 Channel Setup Bar

Using the R&S FPL1000 you can handle several different measurement tasks (channels) at the same time (although they can only be performed asynchronously). For

Operating the Instrument

each channel, a separate tab is displayed on the screen. To switch from one channel display to another, simply select the corresponding tab.

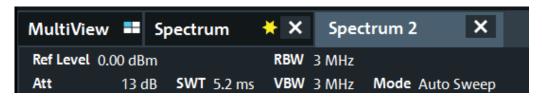

If many tabs are displayed, select the tab selection list icon at the right end of the channel bar. Select the channel you want to switch to from the list.



MultiView tab

An additional tab labeled "MultiView" provides an overview of all active channels at a glance. In the "MultiView" tab, each individual window contains its own channel bar with an additional button. Tap this button, or double-tap in any window, to switch to the corresponding channel display quickly.



Icons in the channel bar

The yellow star icon on the tab label (sometimes referred to as a "dirty flag") indicates that invalid or inconsistent data is displayed, that is: the trace no longer matches the displayed instrument settings. This can happen, for example, when you change the measurement bandwidth, but the displayed trace is still based on the old bandwidth. As soon as a new measurement is performed or the display is updated, the icon disappears.

The licon indicates that an error or warning is available for that channel setup. This is particularly useful if the MultiView tab is displayed.

The sicon indicates the currently active channel during an automatic measurement sequence (**Sequencer** functionality).

Operating the Instrument

Channel-specific settings

Beneath the channel name, information on channel-specific settings for the measurement is displayed in the **channel bar**. Channel information varies depending on the active application.

In the Spectrum application, the R&S FPL1000 shows the following settings:

Table 4-5: Channel settings displayed in the channel bar in the Spectrum application


Ref Level	Reference level	
Att	RF attenuation applied to input	
Ref Offset	Reference level offset	
SWT	Sweep time that has been set.	
	If the sweep time does not correspond to the value for automatic coupling, a bullet is displayed in front of the field. The color of the bullet turns red if the sweep time is set below the value for automatic coupling. In addition, the UNCAL flag is shown. In this case, the sweep time must be increased.	
	For FFT sweeps, an estimated duration for data capture <i>and processing</i> is indicated behind the sweep time in the channel bar.	
RBW	Resolution bandwidth that has been set.	
	If the bandwidth does not correspond to the value for automatic coupling, a green bullet appears in front of the field.	
VBW	Video bandwidth that has been set.	
	If the bandwidth does not correspond to the value for automatic coupling, a green bullet is displayed in front of the field.	
Compatible	Compatible device mode (FSL, FSV, default; default not displayed)	
Mode	Indicates which sweep mode type is used: • "Auto FFT" : automatically selected FFT sweep mode • "Auto sweep" : automatically selected swept sweep mode	

Icons for individual settings

A bullet next to the setting indicates that user-defined settings are used, not automatic settings. A green bullet indicates this setting is valid and the measurement is correct. A red bullet indicates an invalid setting that does not provide useful results.

Common settings

The channel bar above the diagram not only displays the channel-specific settings. It also displays information on instrument settings that affect the measurement results even though it is not immediately apparent from the display of the measured values. This information is displayed in gray font and only when applicable for the current measurement, as opposed to the channel-specific settings that are always displayed.

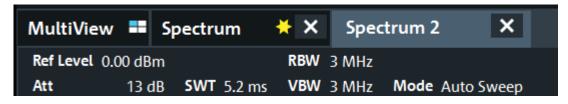

Operating the Instrument

The following types of information are displayed, if applicable.

Table 4-6: Common settings displayed in the channel bar

SGL	The sweep is set to single sweep mode.
Sweep Count	The current signal count for measurement tasks that involve a specific number of subsequent sweeps (see "Sweep Count" setting in "Sweep Settings" in the User Manual)
TRG	Trigger source (for details see "Trigger settings" in the User Manual) • EXT: External • IFP: IF power (+trigger bandwidth) • PSE: Power sensor • TIM: Time • VID: Video
PA	The preamplifier is activated.
GAT	The frequency sweep is controlled via the "TRIGGER INPUT" connector.
TDF	A transducer factor is activated.
75 Ω	The input impedance of the instrument is set to 75 Ω .
FRQ	A frequency offset ≠ 0 Hz is set.

Changing the Channel Setup Name

The channel setups are labeled with their default name. If that name already exists, a sequential number is added. You can change the name of the channel setup by double-tapping the name in the channel bar and entering a new name.

For an overview of default names, see INSTrument:LIST? on page 535.

Remote command:

INSTrument:REName on page 536

4.4.1.2 Window Title Bar

Each channel in the R&S FPL1000 display can contain several windows. Each window can display either a graph or a table as a result of the channel measurement. The window title bar indicates which type of evaluation is displayed.

Which type of result evaluation is displayed in which window is defined in the display configuration (see Chapter 7.2.2, "Basic Evaluation Methods", on page 255).

Trace Information in Window Title Bar

Information on the displayed traces is indicated in the window title bar.



Operating the Instrument

(1) Trace color		Color of trace display in diagram
(2) Trace no.		Trace number (1 to 6)
(3) Detector		Selected detector:
	AP	AUTOPEAK detector
	Pk	MAX PEAK detector
	Mi	MIN PEAK detector
	Sa	SAMPLE detector
	Av	AVERAGE detector
	Rm	RMS detector
(4) Trace Mode		Sweep mode:
	Clrw	CLEAR/WRITE
	Max	MAX HOLD
	Min	MIN HOLD
	Avg	AVERAGE (Lin/Log/Pwr)
	View	VIEW
(5) Smoothing factor	Smth	Smoothing factor, if enabled.
		(See " Smoothing " on page 469)

4.4.1.3 Marker Information

Marker information is provided either in the diagram grid or in a separate marker table, depending on the configuration.

Marker information in diagram grid

Within the diagram grid, the x-axis and y-axis positions of the last two markers or delta markers that were set are displayed, if available, as well as their index. The value in the square brackets after the index indicates the trace to which the marker is assigned. (Example: M2[1] defines marker 2 on trace 1.) For more than two markers, a separate marker table is displayed beneath the diagram by default.

Marker information in marker table

In addition to the marker information displayed within the diagram grid, a separate marker table may be displayed beneath the diagram. This table provides the following information for all active markers:

"Type"	Marker type: N (normal), D (delta), T (temporary, internal), PWR (power sensor)
"Ref"	Reference (for delta markers)
"Trc"	Trace to which the marker is assigned

Operating the Instrument

"X-value"	X-value of the marker
"Y-Value"	Y-value of the marker
"Function"	Activated marker or measurement function
"Function Result"	Result of the active marker or measurement function

The functions are indicated with the following abbreviations:

"FXD"	Fixed reference marker
"Phase Noise"	Phase noise measurement
"Signal Count"	Signal count
"TRK"	Signal tracking
"Noise Meas"	Noise measurement
"MDepth"	AM modulation depth
"ТОІ"	Third order intercept measurement

4.4.1.4 Frequency and Span Information in Diagram Footer

The information in the diagram footer (beneath the diagram) depends on the current application, measurement, and result display.

For a default measurement in the Spectrum mode, the Diagram result display contains the following information, for example:

Label	Information
CF	Center frequency
Span	Frequency span (frequency domain display)
ms/	Time per division (time domain display)
Pts	Number of sweep points or (rounded) number of currently displayed points in zoom mode

4.4.1.5 Instrument and Status Information

Global instrument settings and functions (such as LXI configuration mode), the instrument status and any irregularities are indicated in the status bar beneath the diagram.



In the MultiView tab, the status bar always displays the information for the currently selected measurement.

The following information is displayed:

Operating the Instrument

Instrument status

EXT REF	The instrument is configured for operation with an external reference.
	LAN connection established No LAN connection available
65 % 互	Battery loading status

Date and time

The date and time settings of the instrument are displayed in the status bar.



Error messages

If errors or irregularities are detected, a keyword and an error message, if available, are displayed in the status bar.

4.4.1.6 Error Information

If errors or irregularities are detected, a keyword and an error message, if available, are displayed in the status bar.



Depending on the type of message, the status message is indicated in varying colors.

Table 4-7: Status bar information - color coding

Color	Туре	Description	
Red	Error	An error occurred at the start or during a measurement, e.g. due to missing data or wrong settings, so that the measurement cannot be started or completed correctly.	
Orange	Warning	An irregular situation occurred during measurement, e.g. the settings no longer match the displayed results, or the connection to an external device was interrupted temporarily.	
Gray	Information	Information on the status of individual processing steps.	
No color	No errors	No message displayed - normal operation.	
Green Measurement Some applications visualize that the measure ing a message.		Some applications visualize that the measurement was successful by showing a message.	

Operating the Instrument



If any error information is available for a channel setup, an exclamation mark is displayed next to the channel setup name (1). This is particularly useful when the Multi-View tab is displayed, as the status bar in the Multi-View tab always displays the information for the currently selected channel setup only.

Furthermore, a status bit is set in the STATus:QUEStionable:EXTended:INFO register for the application concerned (see "STATus:QUEStionable:EXTended:INFO Register" on page 194). Messages of a specific type can be queried using the SYST:ERR:EXT? command, see SYSTem:ERRor:EXTended? on page 839.

The following keywords are used:

IF OVLD	Overload of the IF signal path in the A/D converter or in the digital IF. Increase the reference level.		
INPUT OVLD	The signal level at the RF input connector exceeds the maximum. The RF input is disconnected from the input mixer to protect the device. To re-enable		
	measurement, decrease the level at the RF input connector and reconnect the RF input to the mixer input.		
NO REF	Instrument was set to an external reference but no signal was detected on the reference input.		
OVEN	The optional OCXO reference frequency has not yet reached its operating temperature. The message usually disappears a few minutes after power has been switched on.		
RF OVLD	Overload of the input mixer or of the analog IF path. Increase the RF attenuation (for RF input). Reduce the input level (for digital input)		
UNCAL One of the following conditions applies: Correction data has been switched off. No correction values are available, for example after a firmware upon Record the correction data by performing a self alignment (For details refer to Chapter 4.1.1.9, "Performing a Self-Alignment",			
WRONG_FW	The firmware version is out-of-date and does not support the currently installed hardware. Until the firmware version is updated, this error message is displayed and self-alignment fails.		
	(For details refer to Chapter 6.3.4.4, "Firmware Updates", on page 142).		

4.4.2 Accessing the Functionality

All tasks necessary to operate the instrument can be performed using this user interface. Apart from instrument specific keys, all other keys that correspond to an external keyboard (e.g. arrow keys, ENTER key) operate as specified by Microsoft.

For most tasks, there are at least 2 alternative methods to perform them:

- Using the touchscreen
- Using other elements provided by the front panel, e.g. the keypad, rotary knob, or arrow and position keys.

The measurement and instrument functions and settings can be accessed by selecting one of the following elements:

Operating the Instrument

- System and function keys on the front panel of the instrument
- Softkeys on the touchscreen
- Context menus for specific elements on the touchscreen
- Icons on the tool bar in the touchscreen
- Displayed setting on the touchscreen

4.4.2.1 Toolbar

Standard functions can be performed via the icons in the toolbar on the left side of the screen.



You can hide the toolbar display, e.g. when using remote control, to enlarge the display area for the measurement results ("Setup" > "Display" > "Displayed Items").

See "Displayed Items" on page 130.

For details see Chapter 6.1, "Toolbar Functions", on page 98.

4.4.2.2 Softkeys

Softkeys are virtual keys provided by the software. Thus, more functions can be provided than those that can be accessed directly via the function keys on the instrument. Softkeys are dynamic, i.e. depending on the selected function key, a different list of softkeys is displayed on the right side of the screen.

A list of softkeys for a certain function key is also called a menu. Softkeys can either perform a specific function or open a dialog box.

The "More" softkey indicates that the menu contains more softkeys than can be displayed at once on the screen. When pressed, it displays the next set of softkeys.

Recognizing the softkey status by color

Color	Meaning	
Orange	Associated dialog box is open	
Blue	Associated function is active; for toggle keys: currently active state	
Gray	Instrument function is temporarily not available due to a specific setting or missing option	




You can hide the softkey display, e.g. when using remote control, to enlarge the display area for the measurement results ("Setup" > "Display" > "Displayed Items"). See the User Manual for details.

4.4.2.3 Context Menus

Several items in the diagram area have context menus (for example markers, traces or the channel bar). If you right-click on one of these items (or tap it for about 1 second), a

Operating the Instrument

menu is displayed which contains the same functions as the corresponding softkey. This is useful, for example, when the softkey display is hidden.

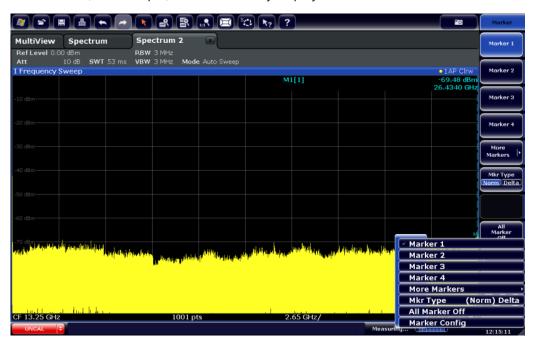

4.4.2.4 On-screen Keyboard

The on-screen keyboard is an additional means of interacting with the instrument without having to connect an external keyboard.



The on-screen keyboard display can be switched on and off as desired using the "On-Screen Keyboard" function key beneath the screen.



When you press this key, the display switches between the following options:

- Keyboard displayed at the top of the screen
- Keyboard displayed at the bottom of the screen
- No keyboard displayed

Operating the Instrument



You can use the TAB key on the on-screen keyboard to move the focus from one field to another in dialog boxes.

4.4.3 Entering Data

Data can be entered in dialog boxes using one of the following methods:


- Using the touchscreen, via the online keyboard
- Using other elements provided by the front panel, e.g. the keypad, rotary knob, or navigation keys
 - The rotary knob acts like the [ENTER] key when it is pressed.
- Using a connected external keyboard



Transparent dialog boxes

You can change the transparency of the dialog boxes to see the results in the windows behind the dialog box. Thus, you can see the effects that the changes you make to the settings have on the results immediately.

To change the transparency, select the transparency icon at the top of the dialog box. A slider is displayed. To hide the slider, select the transparency icon again.

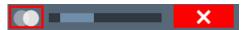

(The title bar of the dialog box is always slightly transparent and is not affected by the slider.)



Particularities in Windows dialog boxes

In some cases, e.g. if you want to install a printer, original Windows dialog boxes are used. In these dialog boxes, the rotary knob and function keys do not work. Use the touchscreen instead.

Entering Numeric Parameters

If a field requires numeric input, the keypad provides only numbers.

- Enter the parameter value using the keypad, or change the currently used parameter value by using the rotary knob (small steps) or the [UP] or [DOWN] keys (large steps).
- 2. After entering the numeric value via keypad, press the corresponding unit key. The unit is added to the entry.
- 3. If the parameter does not require a unit, confirm the entered value by pressing the [ENTER] key or any of the unit keys.

The editing line is highlighted to confirm the entry.

Operating the Instrument

Entering Alphanumeric Parameters

If a field requires alphanumeric input, you can use the on-screen keyboard to enter numbers and (special) characters (see Chapter 4.4.2.4, "On-screen Keyboard", on page 74).

Correcting an entry

- 1. Using the arrow keys, move the cursor to the right of the entry you want to delete.
- Press the [BACKSPACE] key.The entry to the left of the cursor is deleted.
- 3. Enter your correction.

Completing the entry

▶ Press the [ENTER] key or the rotary knob.

Aborting the entry

Press the [ESC] key.The dialog box is closed without changing the settings.

4.4.4 Touchscreen Gestures

A touchscreen allows you to interact with the software using various finger gestures on the screen. The basic gestures supported by the software and most applications are described here. Further actions using the same gestures may be possible.



Tapping

Touch the screen quickly, usually on a specific element.

You can tap most elements on the screen; in particular, any elements you can also click on with a mouse pointer.

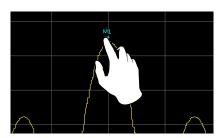


Figure 4-21: Tapping

Double-tapping

Tap the screen twice, in quick succession.

Double-tap the window title bar to maximize a window in the display, or to restore the original size.

Operating the Instrument

Double-tap a diagram to add a peak marker. The next available (delta) marker is set to the peak near the x-axis position you tapped. This function is not available in spectrograms.








Dragging

Move your finger from one position to another on the display, keeping your finger on the display the whole time.

By dragging your finger over a table or diagram you can pan the displayed area of the table or diagram to show results that were previously out of view.

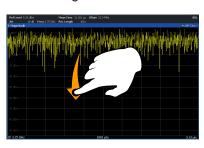

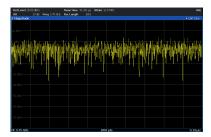


Figure 4-22: Dragging








Pinching and spreading two fingers

Move two fingers together on the display (pinch) or move two fingers apart on the display (spread).

When you pinch two fingers in the display, you decrease the size of the currently displayed area, showing the surrounding areas previously out of view.

When you spread two fingers in the display, you increase the size of the currently displayed area, showing more details.

You can pinch or spread your fingers vertically, horizontally, or diagonally. The direction in which you move your fingers determines which dimension of the display is changed.

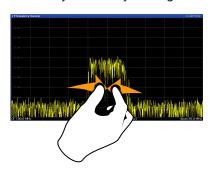

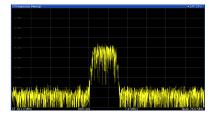
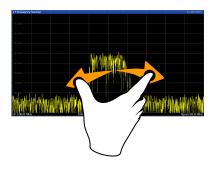


Figure 4-23: Pinching

Operating the Instrument



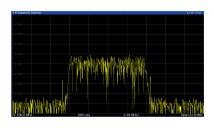


Figure 4-24: Spreading



Touch gestures in diagrams change measurement settings

When you change the display using touch gestures, the corresponding measurement settings are adapted. This is different to selecting an area on the screen in zoom mode, where merely the resolution of the displayed trace points is changed temporarily (graphical zoom).

For example:

- Dragging horizontally in a spectrum display changes the center frequency.
- Dragging vertically in a power vs frequency (spectrum) or power vs. time display changes the reference level (for absolute scaling) or the min and max power values (for relative scaling).
- Dragging horizontally in a time domain display changes the trigger offset value (if available, not in free run).
- Spreading or pinching a spectrum display changes the center frequency and span (horizontal) or reference level and range (vertical), or a combination of these settings (diagonal).
- Spreading or pinching a time domain display changes the sweep time and trigger offset (horizontal) or reference level position and range (vertical), or a combination of these settings (diagonal).

Mouse vs. touch actions

Any user interface elements that react to actions by a mouse pointer also react to finger gestures on the screen, and vice versa. The following touch actions correspond to mouse actions:

Table 4-8: Correlation of mouse and touch actions

Mouse operation	Touch operation	
Click	Тар	
Double-click	Double-tap	
Click and hold	Touch and hold	
Right-click	Touch, hold for 1 second and release	
Drag-&-drop (= click and hold, then drag and release)	Touch, then drag and release	

Operating the Instrument

Mouse operation	Touch operation
n.a. (Change hardware settings)	Spread and pinch two fingers
Mouse wheel to scroll up or down	Swipe
Dragging scrollbars to scroll up or down, left or right	Swipe

In (graphical) Zoom mode only: dragging the borders of the displayed rectangle to change its size	Touch, then drag and release
---	------------------------------

Example:

You can scroll through a long table in conventional mouse operation by clicking in the table's scrollbar repeatedly. In touch operation, you would scroll through the table by dragging the table up and down with your finger.

4.4.5 Getting Help

If any questions or problems concerning the R&S FPL1000 arise, an extensive online help system is provided on the instrument and can be consulted at any time. The help system is context-sensitive and provides information specifically for the current operation or setting to be performed. In addition, general topics provide an overview on complete tasks or function groups as well as background information.

4.4.5.1 Calling Up Help

The online help can be opened at any time by selecting one of the "Help" icons on the toolbar or by pressing the F1 key on an external or the online keyboard.

Calling context-sensitive help

➤ To display the "Help" dialog box for the currently focused screen element, e.g. a softkey or a setting in an opened dialog box, select the "Help" icon on the toolbar.



The "Help" dialog box "View" tab is displayed. A topic containing information about the focused screen element is displayed.

If no context-specific help topic is available, a more general topic or the "Content" tab is displayed.



For standard Windows dialog boxes (e.g. File Properties, Print dialog etc.), no context-sensitive help is available.

▶ To display a help topic for a screen element not currently focused:

Operating the Instrument

a) Select the "Help pointer" icon on the toolbar.



The pointer changes its shape to a "?" and an arrow.

b) Select the screen element to change the focus.

A topic containing information about the selected (now focused) screen element is displayed.

4.4.5.2 Using the Help Window

The Help window contains several tabs:

- "View" shows the selected help topic
- "Contents" contains a table of help contents
- "Index" contains index entries to search for help topics
- "Search" provides text search



The Help toolbar provides some buttons:

- To browse the topics in the order of the table of contents: Up arrow = previous topic, Down arrow = next topic
- To browse the topics visited before: Left arrow = back, Right arrow = forward
- To increase or decrease the font



To navigate the Help, use the touchscreen. Alternatively, you can also use the navigation keys on the front panel.

To search for a topic in the index

The index is sorted alphabetically. You can browse the list, or search for entries in the list.

- 1. Switch to the "Index" tab.
- 2. Select the "Keyboard" icon besides the entry field.
- 3. Enter the first characters of the keyword you are interested in.

The entries containing these characters are displayed.

4. Double-tap the suitable index entry.

The "View" tab with the corresponding help topic is displayed.

To search topics for a text string

1. Switch to the "Search" tab.

Operating the Instrument

- 2. Select the "Keyboard" icon besides the entry field.
- Enter the string you want to find.
 If you enter several strings with blanks between, topics containing all words are found (same as AND operator).

For advanced search, consider the following:

- To find a defined string of several words, enclose it in quotation marks. For
 example, a search for "trigger qualification" finds all topics with exactly "trigger
 qualification". A search for trigger qualification finds all topics that contain the
 words trigger and qualification.
- Use "Match whole word" and "Match case" to refine the search.
- Use operators AND, OR, and NOT.

To close the Help window

Select the "Close" icon in the upper right corner of the help window. Or: Press the [ESC] key.

4.4.6 Remote Control

In addition to working with the R&S FPL1000 interactively, located directly at the instrument, it is also possible to operate and control it from a remote PC. Various methods for remote control are supported:

- Connecting the instrument to a (LAN) network (see Chapter 4.1.5, "Setting Up a Network (LAN) Connection", on page 28)
- Using the LXI browser interface in a LAN network
- Using the Windows Remote Desktop application in a LAN network
- Connecting a PC via the GPIB interface

How to configure the remote control interfaces is described in the User Manual.



The R&S FPL1000 is delivered with *IECWIN* installed, the auxiliary remote control tool provided free of charge by R&S.

For details on the IECWIN tool, see the "Network and Remote Control" chapter of the R&S FPL1000 User Manual.

4.4.6.1 Using the LXI Browser Interface in a LAN

LAN eXtensions for Instrumentation (LXI) is an instrumentation platform for measuring instruments and test systems that is based on standard Ethernet technology. LXI is intended to be the LAN-based successor to GPIB, combining the advantages of Ethernet with the simplicity and familiarity of GPIB. The LXI browser interface allows for easy configuration of the LAN and remote control of the R&S FPL1000 without additional installation requirements.

Operating the Instrument



Restrictions

Only user accounts with administrator rights can make use of the LXI functionality. In order to access the R&S FPL1000 via the LXI web browser interface, you must restart the firmware with administrator rights. To do so, stop the firmware, then right-click the R&S FPL1000 icon on the instrument's desktop and select "Run as administrator".

For details see Chapter 4.1.2.3, "Login", on page 22

4.4.6.2 Remote Desktop Connection

Remote Desktop is a Windows application which can be used to access and control the instrument from a remote computer through a LAN connection. While the instrument is in operation, the instrument screen contents are displayed on the remote computer. Remote Desktop provides access to all of the applications, files, and network resources of the instrument. Thus, remote operation of the instrument is possible.

The Remote Desktop Client is part of the installed Windows operating system. For other versions of Windows, Microsoft offers the Remote Desktop Client as an add-on.

4.4.6.3 Connecting a PC via the GPIB Interface

You can connect a PC to the R&S FPL1000 via the GPIB interface to send remote commands to control and operate the instrument. You can configure the GPIB address and the ID response string. The GPIB language is set as SCPI by default but can be changed to emulate other instruments.

A GPIB interface is available on the rear panel of the R&S FPL1000 if the option R&S FPL1-B10 is installed.

5 Applications, Measurement Channels, and Result Displays

The R&S FPL1000 allows you to perform all sorts of different analysis tasks on different types of signals, e.g. Analog Demodulation, I/Q analysis or basic spectrum analysis. Depending on the task or type of signal, a different set of measurement functions and parameters are required. Therefore, the R&S FPL1000 provides various applications - some of which are included in the base unit, others are optional.

The default application when you start the R&S FPL1000 is "Spectrum", for basic spectrum analysis measurements on any type of signal.

Channel Setups

When you activate an application, a new channel setup is created which determines the measurement settings for that application. The same application can be activated with different measurement settings by creating several channel setups for the same application.

The number of channel setups that can be configured at the same time depends on the available memory on the instrument.

For more information on creating channel setups, see Chapter 5.3, "Defining Channel Setups", on page 85.

•	Available Applications	83
	R&S MultiView	
	Defining Channel Setups	
	Running a Sequence of Measurements	
	Channel Setup Overview	
	Configuring Result Displays.	

5.1 Available Applications

Access: [MODE]

The R&S FPL1000 provides some applications in the base unit while others are available only if the corresponding firmware options are installed.

Each application is described in a separate manual.



Spectrograms

Spectrogram measurements are not a separate application, but rather a trace evaluation method in the R&S FPL1000, thus they are available as an evaluation method in the "Display Config", not by creating a new channel setup. Spectrograms are configured and activated in the "Trace" settings.

See Chapter 7.10.2.1, "Working with Spectrograms", on page 472 for details.

R&S MultiView

Spectrum	84
I/Q Analyzer	
Analog Demod	84
Noise Figure	84

Spectrum

In the Spectrum application the provided functions correspond to those of a conventional spectrum analyzer. The analyzer measures the frequency spectrum of the RF input signal over the selected frequency range with the selected resolution and sweep time. Alternatively, it displays the waveform of the video signal for a fixed frequency.

This is the default application of the spectrum analyzer.

Remote command:

INST:SEL SAN, see INSTrument[:SELect] on page 536

I/Q Analyzer

The I/Q Analyzer application provides measurement and display functions for I/Q data.

Remote command:

INST:SEL IQ, see INSTrument[:SELect] on page 536

Analog Demod

The Analog Demodulation application provides measurement functions for demodulating AM, FM, or PM signals.

This application requires the optional firmware R&S FPL1-K7 to be installed.

For details see the Analog Demodulation Mode User Manual.

Remote command:

```
INST:SEL ADEM, see INSTrument[:SELect] on page 536
```

Noise Figure

The Noise Figure application provides noise figure measurements.

This application requires the optional firmware R&S FPL1-K30 to be installed.

For details see the Noise Figure Measurements User Manual.

Remote command:

```
INST:SEL NOISE, see INSTrument[:SELect] on page 536
```

5.2 R&S MultiView

Each application is displayed in a separate tab. If more than one application is active, an additional tab ("MultiView") provides an overview of all currently active channel setups at a glance. In the "MultiView" tab, each individual window contains its own channel setup bar. Select the channel setup bar to switch to an application quickly.


Defining Channel Setups



5.3 Defining Channel Setups

Access: [MODE]

The default channel setup uses the "Spectrum" application.

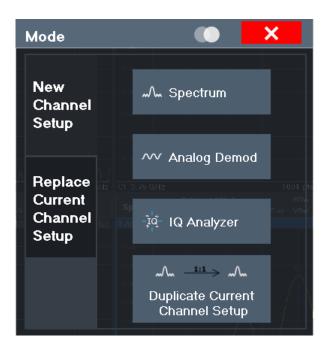

Switching between channel setups

When you switch to a new channel setup, a set of parameters is passed on from the current channel setup to the new one:

- Center frequency and frequency offset
- Reference level and reference level offset
- Attenuation

After initial setup, the parameters for the channel setup are stored upon exiting and restored upon re-entering the channel setup. Thus, you can switch between measurements quickly and easily.

Defining a channel setup	86
New Channel Setup	
L Replace Current Channel Setup	
L Duplicate Current Channel	
Closing a channel setup.	

Defining a channel setup

To start a new channel setup or replace an existing one, select the corresponding application in the "Mode" dialog box.

Note: The channel setups are labeled with the application name. If that name already exists, a sequential number is added. You can change the name of the channel setup by double-tapping the name in the channel setup bar and entering a new name. For an overview of default names see Table 8-2.

Remote command:

INSTrument[:SELect] on page 536

New Channel Setup ← Defining a channel setup

The application selected on this tab of the dialog box activates a new channel setup, i.e. a new tab in the display.

Note: The channel setups are labeled with the application name. If that name already exists, a sequential number is added. You can change the name of the channel setup by double-tapping the name in the channel setup bar and entering a new name. For an overview of default names see Table 8-2.

Remote command:

```
INSTrument:CREate[:NEW] on page 534
INSTrument[:SELect] on page 536
```

Replace Current Channel Setup Defining a channel setup

The application selected on this tab of the dialog box is started in the currently displayed channel setup, replacing the current measurement.

Remote command:

INSTrument:CREate:REPLace on page 535

Duplicate Current Channel ← Defining a channel setup

The currently active channel setup can be duplicated, i.e. a new channel setup of the same type and with the identical measurement settings is started. The name of the new channel setup is the same as the copied channel setup, extended by a consecutive number (e.g. "Spectrum" -> "Spectrum 2").

Remote command:

INSTrument:CREate:DUPLicate on page 534

Closing a channel setup

To close a channel setup, simply close the corresponding tab by selecting the "x" next to the channel setup name.

Remote command:

INSTrument: DELete on page 535

5.4 Running a Sequence of Measurements

Only one measurement can be performed at any time, namely the one in the currently active channel setup. However, in order to perform the configured measurements consecutively, a Sequencer function is provided.

•	The Sequencer Concept	.87
•	Sequencer Settings	90
•	How to Set Up the Sequencer	90

5.4.1 The Sequencer Concept

The instrument can only activate one specific channel setup at any time. Thus, only one measurement can be performed at any time, namely the one in the currently active channel setup. However, in order to perform the configured measurements consecu-

tively, a Sequencer function is provided, which changes the channel setup of the instrument as required. If activated, the measurements configured in the currently defined "Channel" s are performed one after the other in the order of the tabs.

For each individual measurement, the sweep count is considered. Thus, each measurement may consist of several sweeps. The currently active measurement is indicated by a \$\mathbb{Q}\$ symbol in the tab label.

The result displays of the individual channel setups are updated in the tabs as the measurements are performed. Sequential operation itself is independent of the currently *displayed* tab.

Sequencer modes

Three different Sequencer modes are available:

Single Sequence

Similar to single sweep mode; each measurement is performed once, until all measurements in all defined "Channel" s have been performed.

Continuous Sequence


Similar to continuous sweep mode; the measurements in each defined "Channel" are performed one after the other, repeatedly, in the same order, until sequential operation is stopped. This is the default Sequencer mode.

Channel-defined Sequence

First, a single sequence is performed. Then, only "Channel" s in continuous sweep mode are repeated continuously.

Example: Sequencer procedure

Assume the following active channel setup definition:

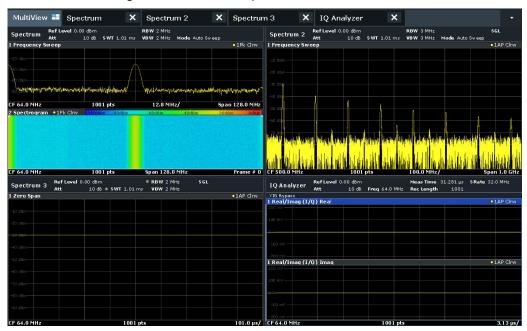

Tab name	Application	Sweep mode	Sweep count
Spectrum	Spectrum	Cont. Sweep	5
Spectrum 2	Spectrum	Single Sweep	6
Spectrum 3	Spectrum	Cont. Sweep	2
IQ Analyzer	IQ Analyzer	Single Sweep	7

For Single Sequence, the following sweeps will be performed:

5x Spectrum, 6x Spectrum 2, 2 x Spectrum 3, 7x IQ Analyzer

For **Continuous Sequence**, the following sweeps will be performed:

5x Spectrum, 6x Spectrum 2, 2 x Spectrum 3, 7x IQ Analyzer,

5x Spectrum, 6x Spectrum 2, 2 x Spectrum 3, 7x IQ Analyzer,

. . .

For **Channel-defined Sequence**, the following sweeps will be performed:

5x Spectrum, 6x Spectrum 2, 2 x Spectrum 3, 7x IQ Analyzer,

5x Spectrum, 2 x Spectrum 3,

5x Spectrum, 2 x Spectrum 3,

...

RUN SINGLE/RUN CONT and Single Sweep/Sweep Continuous keys

While the Sequencer is active, the [RUN SINGLE] and [RUN CONT] keys control the Sequencer, not individual sweeps. [RUN SINGLE] starts the Sequencer in single mode, while [RUN CONT] starts the Sequencer in continuous mode.

The "Single Sweep" and "Continuous Sweep" *softkeys* control the sweep mode for the currently selected channel setup only; the sweep mode only has an effect the next time the Sequencer activates that channel setup, and only for a channel-defined sequence. In this case, a channel setup in single sweep mode is swept only once by the Sequencer. A channel setup in continuous sweep mode is swept repeatedly.

5.4.2 Sequencer Settings



The "Sequencer" menu is available from the toolbar.

Sequencer State	. 90	C
Sequencer Mode	90	r

Sequencer State

Activates or deactivates the Sequencer. If activated, sequential operation according to the selected Sequencer mode is started immediately.

Remote command:

```
SYSTem:SEQuencer on page 538
INITiate<n>:SEQuencer:IMMediate on page 537
INITiate<n>:SEQuencer:ABORt on page 537
```

Sequencer Mode

Defines how often which measurements are performed. The currently selected mode softkey is highlighted blue. During an active Sequencer process, the selected mode softkey is highlighted orange.

"Single Sequence"

Each measurement is performed once, until all measurements in all active channel setups have been performed.

"Continuous Sequence"

The measurements in each active channel setup are performed one after the other, repeatedly, in the same order, until sequential operation is stopped.

This is the default Sequencer mode.

"Channel Defined Sequence"

First, a single sequence is performed. Then, only channel setups in continuous sweep mode are repeated.

Remote command:

```
INITiate<n>:SEQuencer:MODE on page 538
```

5.4.3 How to Set Up the Sequencer

In order to perform the configured measurements consecutively, a Sequencer function is provided.

1. Configure a channel setup for each measurement configuration as required, including the sweep mode.

Channel Setup Overview

2. In the toolbar, select the "Sequencer" icon.



The "Sequencer" menu is displayed.

- Toggle the "Sequencer" softkey to "On".
 A continuous sequence is started immediately.
- 4. To change the Sequencer mode and start a new sequence immediately, select the corresponding mode softkey, or press the [RUN SINGLE] or [RUN CONT] key.

The measurements configured in the currently active channel setups are performed one after the other in the order of the tabs until the Sequencer is stopped. The result displays in the individual channel setups are updated as the measurements are performed.


To stop the Sequencer

➤ To stop the Sequencer temporarily, press the highlighted [RUN SINGLE] or [RUN CONT] key (not for a channel-defined sequence). To continue the Sequencer, press the key again.

To stop the Sequencer permanently, select the "Sequencer" icon in the toolbar and toggle the "Sequencer" softkey to "Off".

5.5 Channel Setup Overview

Each channel setup provides an overview of the most important currently defined settings and access to the most important configuration dialog boxes for the particular measurement.

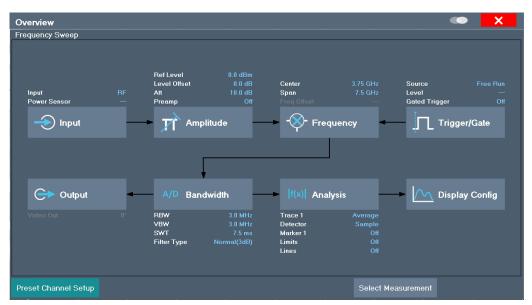

Using this overview, you can easily configure an entire channel setup from input over processing to output and analysis by stepping through the dialog boxes as indicated.

See Chapter 7, "The Spectrum Application (RF Measurements)", on page 232 for details on configuration.

5.6 Configuring Result Displays

Measurement results can be evaluated in many different ways, for example graphically, as summary tables, statistical evaluations etc. Thus, the result display is highly configurable to suit your specific requirements and optimize analysis. Here you can find out how to optimize the display for your measurement results.

General display settings that are usually configured during initial instrument setup, independently of the current measurement, e.g. which items or colors are displayed on the screen, are described in Chapter 6.3.2.1, "Display Settings", on page 129.

5.6.1 Laying out the Result Display with the SmartGrid

Measurement results can be evaluated in many different ways, for example graphically, as summary tables, statistical evaluations etc. Each type of evaluation is displayed in a separate window in the channel setup tab. Up to 16 individual windows can be displayed per channel setup (i.e. per tab). To arrange the diagrams and tables on the screen, the Rohde & Schwarz SmartGrid function helps you find the target position simply and quickly.

(For details on evaluation methods see Chapter 7.2.2, "Basic Evaluation Methods", on page 255.)

Principally, the layout of the windows on the screen is based on an underlying grid, the SmartGrid. However, the SmartGrid is dynamic and flexible, allowing for many different layout possibilities. The SmartGrid functionality provides the following basic features:

- Windows can be arranged in columns or in rows, or in a combination of both.
- Windows can be arranged in up to four rows and four columns.
- Windows are moved simply by dragging them to a new position on the screen, possibly changing the layout of the other windows, as well.
- All evaluation methods available for the currently selected measurement are displayed as icons in the evaluation bar. If the evaluation bar contains more icons than can be displayed at once on the screen, it can be scrolled vertically. The same evaluation method can be displayed in multiple windows simultaneously.
- New windows are added by dragging an evaluation icon from the evaluation bar to the screen. The position of each new window depends on where you drop the evaluation icon in relation to the existing windows.
- All display configuration actions are only possible in SmartGrid mode. When Smart-Grid mode is activated, the evaluation bar replaces the current softkey menu dis-

play. When the SmartGrid mode is deactivated again, the previous softkey menu display is restored.

•	Background Information: The SmartGrid Principle	.93
•	How to Activate SmartGrid Mode	.94
	How to Add a New Result Window	
	How to Close a Result Window.	
	How to Arrange the Result Windows	

5.6.1.1 Background Information: The SmartGrid Principle

SmartGrid display

During any positioning action, the underlying SmartGrid is displayed. Different colors and frames indicate the possible new positions. The position in the SmartGrid where you drop the window determines its position on the screen.

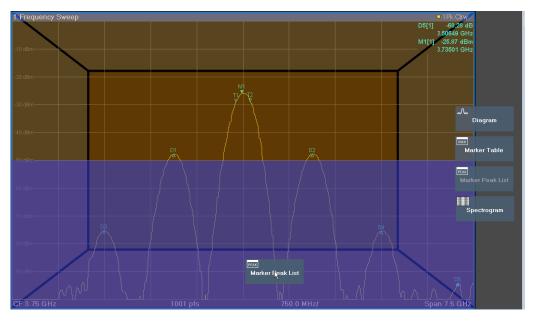


Figure 5-1: Moving a window in SmartGrid mode

The brown area indicates the possible "drop area" for the window, i.e. the area in which the window can be placed. A blue area indicates the (approximate) layout of the window as it would be if the icon were dropped at the current position. The frames indicate the possible destinations of the new window with respect to the existing windows: above/below, right/left or replacement (as illustrated in Figure 5-2). If an existing window would be replaced, the drop area is highlighted in a darker color shade.

Positioning the window

The screen can be divided into up to four rows. Each row can be split into up to four columns, where each row can have a different number of columns. However, rows always span the entire width of the screen and may not be interrupted by a column. A single row is available as the drop area for the window in the SmartGrid. The row can

be split into columns, or a new row can be inserted above or below the existing row (if the maximum of 4 has not yet been reached).

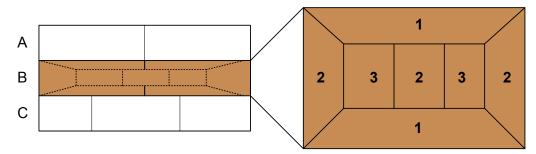


Figure 5-2: SmartGrid window positions

- 1 = Insert row above or below the existing row
- 2 = Create a new column in the existing row
- 3 = Replace a window in the existing row

SmartGrid functions

Once the evaluation icon has been dropped, icons in each window provide delete and move functions.



The "Move" icon allows you to move the position of the window, possibly changing the size and position of the other displayed windows.



The "Delete" icon allows you to close the window, enlarging the display of the remaining windows.

5.6.1.2 How to Activate SmartGrid Mode

All display configuration actions are only possible in SmartGrid mode. In SmartGrid mode the evaluation bar replaces the current softkey menu display. When the Smart-Grid mode is deactivated again, the previous softkey menu display is restored.

- ▶ To activate SmartGrid mode, do one of the following:
 - ·

Select the "SmartGrid" icon from the toolbar.

- Select the "Display Config" button in the configuration "Overview".
- Select the "Display Config" softkey from the [MEAS CONFIG] menu.

The SmartGrid functions and the evaluation bar are displayed.



To close the SmartGrid mode and restore the previous softkey menu select the "Close" icon in the right-hand corner of the toolbar, or press any key.

5.6.1.3 How to Add a New Result Window

Each type of evaluation is displayed in a separate window. Up to 16 individual windows can be displayed per channel setup (i.e. per tab).

- 1. Activate SmartGrid mode.
 - All evaluation methods available for the currently selected measurement are displayed as icons in the evaluation bar.
- Select the icon for the required evaluation method from the evaluation bar.
 If the evaluation bar contains more icons than can be displayed at once on the screen, it can be scrolled vertically. Touch the evaluation bar between the icons and move it up or down until the required icon appears.
- Drag the required icon from the evaluation bar to the SmartGrid, which is displayed in the diagram area, and drop it at the required position. (See Chapter 5.6.1.5, "How to Arrange the Result Windows", on page 95 for more information on positioning the window).

Remote command:

LAYout:ADD[:WINDow]? on page 639 / LAYout:WINDow<n>:ADD? on page 643

5.6.1.4 How to Close a Result Window

➤ To close a window, activate SmartGrid mode and select the "Delete" icon for the window.



Remote command:

LAYout:REMove[:WINDow] on page 641 / LAYout:WINDow<n>:REMove on page 644

5.6.1.5 How to Arrange the Result Windows

1. Select an icon from the evaluation bar or the "Move" icon for an existing evaluation window.



2. Drag the evaluation over the SmartGrid.

A blue area shows where the window will be placed.

- 3. Move the window until a suitable area is indicated in blue.
- Drop the window in the target area.
 The windows are rearranged to the selected layout, and "Delete" and "Move" icons
- 5. To close a window, select the corresponding "Delete" icon.




Remote command:

LAYout:REPLace[:WINDow] on page 642 / LAYout:WINDow<n>:REPLace on page 644

5.6.2 Changing the Size of Windows

are displayed in each window.

Each channel setup tab may contain several windows to evaluate the measurement results using different methods. A "splitter" allows you to change the size of neighboring windows.

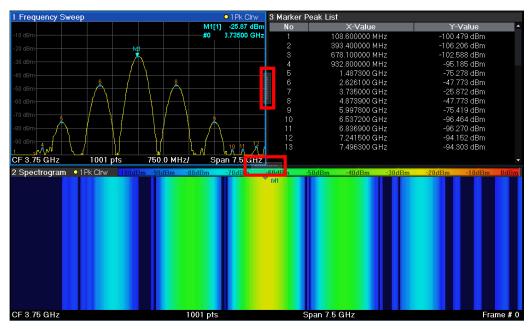



The splitters are not available in SmartGrid mode.

► To change the size of two neighboring windows, drag the splitter between the windows in either direction.

Toolbar Functions

6 Common Instrument Functions

Some settings and functions are available throughout the instrument, regardless of the currently active application. These settings and functions are described here, and are not repeated for each application.

•	Toolbar Functions	98
•	Data Management	99
	General Instrument Setup	
	Network and Remote Operation	

6.1 Toolbar Functions

Standard functions can be performed via the icons in the toolbar at the top of the screen.



You can hide the toolbar display, e.g. when using remote control, to enlarge the display area for the measurement results ("Setup" > "Display" > "Displayed Items"). See "Displayed Items" on page 130.

Windows	98
Open	
Store	98
Print immediately	98
Undo	
Redo	
Zoom mode	
Multiple zoom mode	
Zoom off	
SmartGrid	
Sequencer	
Help (+ Select)	
Help	
1 1 VI V	



Windows

Displays the Windows "Start" menu and task bar.

See Chapter 4.1.2.4, "Accessing the Start Menu", on page 24



Open

Opens a file from the instrument ("Save/Recall" menu)



Store

Stores data on the instrument ("Save/Recall" menu)



Print immediately

Prints the current display (screenshot) as configured



Undo

Reverts last operation, i.e. the status before the previous action is retrieved.

The undo function is useful, for example, if you are performing a zero span measurement with several markers and a limit line defined and accidentally select a different measurement. In this case, many settings would be lost. However, if you press [UNDO] immediately afterwards, the previous status is retrieved, i.e. the zero span measurement and all settings.

Note: The [UNDO] function is not available after a [PRESET] or "Recall" operation. When these functions are used, the history of previous actions is deleted.



Redo

Repeats previously reverted operation



Zoom mode

Displays a dotted rectangle in the diagram that can be expanded to define the zoom area



Multiple zoom mode

Multiple zoom areas can be defined for the same diagram



Zoom off

Displays the diagram in its original size



SmartGrid

Activates "SmartGrid" mode to configure the screen layout



Seauencer

Opens the "Sequencer" menu to perform consecutive measurements



Help (+ Select)

Allows you to select an object for which context-specific help is displayed See Chapter 4.4.5, "Getting Help", on page 79



Help

Displays context-sensitive help topic for the most recently selected element See Chapter 4.4.5, "Getting Help", on page 79

6.2 Data Management

The R&S FPL1000 allows you to save and recall measurement settings. Measurement data can be exported and imported for a later analysis, the graphical result display can be stored to a file or printed. In addition, various application-specific data can be saved and/or recalled.

General storage and import/export functions are available via the toolbar. Some special storage functions are (also) available via softkeys or dialog boxes in the corresponding menus, for example trace data export.

•	Restoring the Default Instrument Configuration (Preset)	100
•	Storing and Recalling Instrument Settings and Measurement Data	100
•	Import/Export Functions	111
•	Creating Screenshots of Current Measurement Results and Settings	113

6.2.1 Restoring the Default Instrument Configuration (Preset)

When delivered, the R&S FPL1000 has a default configuration. You can restore this defined initial state at any time as a known starting point for measurements. This is often recommendable as a first step in troubleshooting when unusual measurement results arise.



Factory default configuration

The factory default configuration is selected such that the RF input is always protected against overload, provided that the applied signal levels are in the allowed range for the instrument.

Alternatively to the factory default settings, you can define user-specific recall settings to be restored after a preset or reboot, see "To recall settings automatically after preset or reboot" on page 110.

To restore the default instrument configuration for all channel setups at once

► Press the [PRESET] key.



After you use the [PRESET] function, the history of previous actions is deleted, i.e. any actions performed previously cannot be undone or redone using the [UNDO/REDO] keys.

Remote command:

*RST or SYSTem: PRESet

To restore the default configuration for a single channel setup

The default measurement settings can also be reset for an individual channel setup only, rather than resetting the entire instrument.

▶ In the "Overview", select the "Preset Channel" button.

The factory default settings are restored to the current channel setup. Note that a user-defined recall settings file is **NOT** restored.

Remote command:

SYSTem: PRESet: CHANnel [: EXEC] on page 806

6.2.2 Storing and Recalling Instrument Settings and Measurement Data



Access: "Save" / "Open" icon in the toolbar



Or: [FILE]

Possibly you would like to restore or repeat a measurement you performed under specific conditions on the instrument. Or you want to evaluate imported data in another application on the R&S FPL1000 and would like to restore the measurement settings applied during measurement. In these cases, you can store and recall instrument and measurement settings, and possibly other related measurement data.

Two different methods are available for managing instrument settings:

- Quick Save/Quick Recall a defined set of instrument settings or channel setups are stored or recalled quickly in just one step
- Configurable Save/Recall a user-defined set of instrument settings or channel setups are stored to a definable storage location



Restrictions when recalling measurement settings

When recalling a saved configuration file, the following restrictions apply:

- The R&S FPL1000 must support the frequency range defined in the configuration file.
- Configuration files created on a R&S FPL1000 with certain options in use do not work on an R&S FPL1000 without these options.
- Files created with newer firmware versions may not work with a previous version.
- Files created on an instrument other than the R&S FPL1000 do not work on the R&S FPL1000.



Saving and recalling transducer and limit line settings

If a transducer file was in use when the save set was stored (with the save item "Current Settings" only) the R&S FPL1000 assumes that these transducer values should remain valid after every recall of that save set. Thus, even if the transducer file is changed and the original save set file is recalled later, the *originally stored* transducer values are recalled and applied to the measurement. In the "Edit" transducer dialog box, however, the *changed* transducer file values are displayed, as no updated transducer file was loaded.

The same applies to limit line settings.

The same applies to integrated measurements' weighting filter.

If you want to apply the changed transducer values after recalling the save set, you must force the application to reload the transducer file. To do so, simply open the "Edit Transducer" dialog box (see Chapter 6.3.6.2, "Transducer Settings", on page 151) and toggle the "X-Axis" option from "Lin" to "log" and back. Due to that change, the transducer file is automatically reloaded, and the changed transducer values are applied to the current measurement. Now you can create a new save set with the updated transducer values

Similarly, if you want to apply the changed limit values after recalling the save set, you must force the application to reload the limit file. To do so, simply open the "Edit Limit Line" dialog box (see Chapter 7.11.2.2, "Limit Line Settings and Functions", on page 496) and toggle the "Y-Axis" unit. Due to that change, the limit line file is automatically reloaded, and the changed limit values are applied to the current measurement. Now a new save set with the updated limit values can be created.

6.2.2.1 Quick Save/Quick Recall

The Quick Save and Quick Recall functions allow you to store instrument settings or channel setups very easily and quickly in one step. Up to ten different sets of settings can be stored to or recalled from "save sets". Each save set is identified by its storage date and type (instrument or specific "Channel") in the display. The save sets are stored in the

C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\QuickSave directory, in files named QuickSave1.dfl to QuickSave10.dfl. The storage filenames and locations cannot be changed. Only the current measurement settings are stored, not any additional data such as traces, limit line or transducer files (see "Stored Data Types" on page 104).

During recall, save sets of type "Instrument" replace the settings of the entire instrument. All other save sets start a new channel setup with the stored settings.




If a channel setup with the same name as the "Channel" to be restored is already active, the name for the new channel setup is extended by a consecutive number:



Quick Save / Quick Recall Settings



Access: "Save" / "Open" icon in the toolbar > "Quick Save" / "Quick Recall" Both dialog boxes are very similar and closely related.

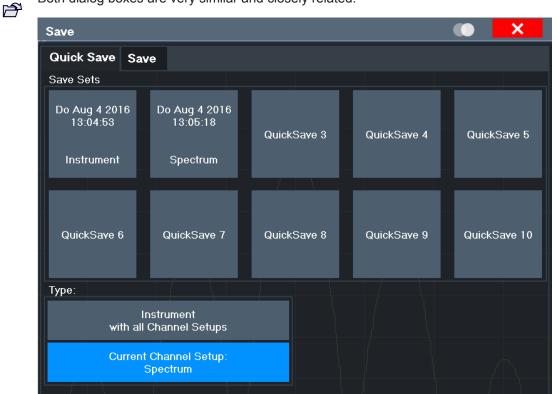

QuickSave 1 / / QuickSave 10	103
Storage Type (Save only)	103
Recall	104

QuickSave 1 / ... / QuickSave 10

Selects one of the save sets to store the current settings in or to be recalled. At the time of storage, the "QuickSave 1 / ... / QuickSave 10" placeholder is replaced by a label indicating the storage date and time and the storage type.

During recall, save sets of type "Instrument" replace the settings of the entire instrument. All other save sets start a new channel setup with the stored settings.

Storage Type (Save only)

Defines which type of settings are stored in the save set.

"Instrument The instrument settings for all currently active "Channel" s are stored. with all Channels"

"Current Chan- Only the instrument settings for the currently selected measurement nel" "Channel" s are stored.

Recall

Restores the instrument settings as saved in the selected settings file. If the settings file contains settings for a specific "Channel" only, a new channel setup with the stored settings is activated, otherwise all "Channel" s and instrument settings are overwritten with the stored settings.

Note: After you use the "Recall" function, the history of previous actions is deleted, i.e. any actions performed previously cannot be undone or redone using the [UNDO/ REDO] keys.

Note: If a channel setup with the same name as the "Channel" to be restored (in a new "Channel") is already active, the name for the new channel setup is extended by a consecutive number:



In remote commands, you must append this number to the channel setup name, as well.

Remote command:

MMEMory:LOAD:STATe on page 803

6.2.2.2 Configurable Storage and Recall

The more sophisticated storage and recall functions allow you to define which settings are stored, and where the settings file is stored to. Any settings file can be selected for recall.

	Stored Data Types	104
•	Storage Location and Filename	105
•	Save and Recall Dialog Boxes	105
•	Startup Recall Settings	108

Stored Data Types

The following types of data can be stored to and loaded from files via the "Save" dialog box on the R&S FPL1000:

Table 6-1: Items that can be stored to files

Item	Description
Current Settings	Current instrument and measurement settings.
All Transducers	All transducer factor files.
	(Note: Restoring a saveset overwrites transducer factor files on the hard disk that have the same name as those in the saveset. For more information, see "Saving and recalling transducer and limit line settings" on page 102.)

Item	Description
All Traces	All active traces.
All Limit Lines	All limit line files.
Spectrograms	Spectrogram trace data (only available if spectrogram display is currently active).

Storage Location and Filename

The data is stored on the internal flash disk or, if selected, on a memory stick or network drive. The operating system, firmware and stored instrument settings are located on drive C.

The storage location and filename are selected in a file selection dialog box which is displayed when you perform a storage function.

By default, the name of a settings file consists of a base name followed by an underscore and three numbers, e.g. $limit_lines_005$. In the example, the base name is $limit_lines$. The base name can contain characters, numbers and underscores. The file extension dfl is added automatically. The default folder for settings files is $C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user$.


Save and Recall Dialog Boxes



Access: "Save" / "Open" icon in the toolbar > "Save" / "Recall"



Both dialog boxes are very similar and closely related.

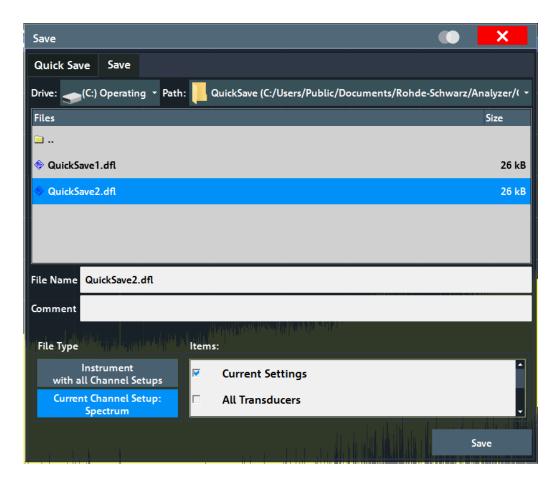

Selecting Storage Location - Drive/ Path/ Files	106
File Name	106
Comment	107
File Type	107
Items:	
Save File	107
Recall in New Channel / Recall in Current Channel	107

Selecting Storage Location - Drive/ Path/ Files

Select the storage location of the file on the instrument or an external drive.

The default storage location for the SEM settings files is:

 ${\tt C:\ProgramData\Rohde-Schwarz\ZNL-FPL\sem_std.}$

Remote command:

MMEMory: CATalog? on page 794

File Name

Contains the name of the data file without the path or extension.

By default, the name of a user file consists of a base name followed by an underscore. Multiple files with the same base name are extended by three numbers, e.g. limit_lines_005.

For details on the filename and location, see "Storage Location and Filename" on page 105.

Comment

An optional description for the data file. A maximum of 60 characters can be displayed.

Remote command:

MMEMory: COMMent on page 795

File Type

Determines whether the global instrument settings with all "Channel" s are stored or recalled, or the current "Channel" settings only.

Items:

Defines which data and settings are stored or are recalled. Depending on the "File Type", either channel setups only, or global settings are available. Which items are available also depends on the installed options (see also "Stored Data Types" on page 104).

Remote command:

```
MMEMory:Select[:ITEM]:All on page 800
MMEMory:Select[:ITEM]:Default on page 800
MMEMory:Select[:ITEM]:None on page 801
MMEMory:Select[:ITEM]:HWSettings on page 800
MMEMory:Select[:ITEM]:Lines:All on page 801
MMEMory:Select[:ITEM]:SGRam on page 801
MMEMory:Select[:ITEM]:TRACe[:ACTive] on page 802
MMEMory:Select[:ITEM]:TRANsducer:All on page 802
```

Save File

Saves the settings file with the defined filename.

Remote command:

```
MMEMory:STORe<n>:STATe on page 804
MMEMory:STORe<n>:STATe:NEXT on page 805
```

Recall in New Channel / Recall in Current Channel

Restores the instrument settings as saved in the selected settings file. If the settings file contains settings for a specific "Channel" only, select "Recall in New Channel" to activate a new channel setup with the stored settings. Select "Recall in Current Channel" to replace the current "Channel" settings.

Note: After you use the "Recall" function, the history of previous actions is deleted, i.e. any actions performed previously cannot be undone or redone using the [UNDO/ REDO] keys.

Note: If a channel setup with the same name as the "Channel" to be restored (in a new "Channel") is already active, the name for the new channel setup is extended by a consecutive number:



In remote commands, you must append this number to the channel setup name, as well.


Remote command:

MMEMory: LOAD: STATe on page 803

Startup Recall Settings



Access: "Open" icon in the toolbar > "Startup Recall"

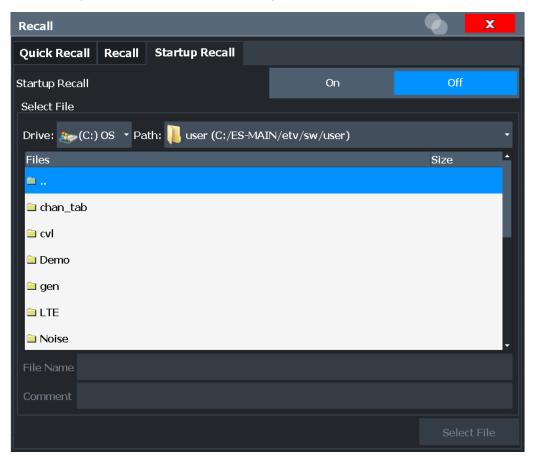

Startup Recall	108
Selecting Storage Location - Drive/ Path/ Files	108
File Name	109
Comment	109

Startup Recall

Activates or deactivates the startup recall function. If activated, the settings stored in the selected file are loaded each time the instrument is started or preset. If deactivated, the default settings are loaded.

Note that only *instrument* settings files can be selected for the startup recall function, not "Channel" files.

Remote command:

MMEMory: LOAD: AUTO on page 803

Selecting Storage Location - Drive/ Path/ Files

Select the storage location of the file on the instrument or an external drive.

The default storage location for the SEM settings files is:

C:\ProgramData\Rohde-Schwarz\ZNL-FPL\sem_std.

Remote command:

MMEMory: CATalog? on page 794

File Name

Contains the name of the data file without the path or extension.

By default, the name of a user file consists of a base name followed by an underscore. Multiple files with the same base name are extended by three numbers, e.g. limit lines 005.

For details on the filename and location, see "Storage Location and Filename" on page 105.

Comment

An optional description for the data file. A maximum of 60 characters can be displayed.

Remote command:

MMEMory: COMMent on page 795

6.2.2.3 How to Save and Load Instrument Settings

Instrument settings can be saved to a file and loaded again later, so that you can repeat the measurement with the same settings. Optionally, user-defined measurement settings can automatically be restored each time you start or preset the instrument.

To save and recall instrument settings using the Quick Save function



- 1. Select the "Save" icon from the toolbar.
- 2. Select whether the instrument settings for **all** "Channel" s are stored, or only those for the **current** "Channel".
- Select one of the save sets in which the settings are stored ("QuickSaveX").

The selected settings are stored to the file

C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\userQuickSave\
QuickSaveX.dfl.

Note: If you make any changes to the settings *after* storing the configuration file, remember to save the settings again. Otherwise those settings cannot be restored and will be overwritten by the stored values when the configuration file is recalled.



- 4. To restore the settings, select the "Open" icon from the toolbar.
- Select the save set in which the settings were stored ("QuickSaveX").The selected settings are restored to the instrument or channel setup.

To save configurable instrument settings



- 1. Select the "Save" icon from the toolbar.
- 2. In the "Save" dialog box, switch to the "Save" tab.

- 3. In the file selection dialog box, select a filename and storage location for the settings file.
- 4. Optionally, define a comment to describe the stored settings.
- Select whether the instrument settings for all "Channel" s are stored, or only those for the current "Channel".
- Select the items to be saved with the settings. Either the settings for the currently selected "Channel" only, or the settings for all "Channel" s can be stored. Various other items, such as lines or traces etc., can be stored as well (see "Stored Data Types" on page 104).
- 7. Select "Save".

A file with the defined name and path and the extension .dfl is created.



If you make any changes to the settings *after* storing the configuration file, remember to save the settings again. Otherwise those settings cannot be restored and will be overwritten by the stored values when the configuration file is recalled.

To recall configurable instrument settings



- 1. Select the "Open" icon from the toolbar.
- 2. In the "Recall" dialog box, switch to the "Recall" tab.
- 3. In the file selection dialog box, select the filename and storage location of the settings file.

Note: The "File Type" indicates whether the file contains instrument settings for **all** "Channel" s, or only those for the current "Channel".

- 4. If several items were saved, select which items are restored.
- If a "Channel" was saved, select whether the settings will replace the settings in the current "Channel", or whether a new channel setup with the saved settings will be opened.
- 6. Select "Recall".

The settings and selected items from the saved measurement are restored and you can repeat the measurement with the same settings.

Note that any changes made to the settings *after* storing the configuration file will be overwritten by the stored values when the configuration file is recalled.

To recall settings automatically after preset or reboot

You can define the settings that are restored when you preset or reboot the instrument.

- Configure the settings as required and save them as described in "To save configurable instrument settings" on page 109.
- In the "Save/Recall" menu, select "Startup Recall".

- 3. From the file selection dialog box, select the recall settings to restore.
- 4. Select "Select File".
- 5. Set "Startup Recall" to "On".

Now when you press the [PRESET] key or reboot the instrument, the defined settings will be restored.

6. To restore the factory preset settings, set "Startup Recall" to "Off" .

6.2.3 Import/Export Functions



Access: "Save" / "Open" icon in the toolbar > "Import" / "Export"



The R&S FPL1000 provides various evaluation methods for the results of the performed measurements. However, you may want to evaluate the data with further, external applications. In this case, you can export the measurement data to a standard format file (ASCII or XML). Some of the data stored in these formats can also be reimported to the R&S FPL1000 for further evaluation later, for example in other applications.

The following data types can be exported (depending on the application):

- Trace data
- Table results, such as result summaries, marker peak lists etc.



I/Q data can only be imported and exported in applications that process I/Q data, such as the I/Q Analyzer or optional applications.

See the corresponding user manuals for those applications for details.



These functions are only available if no measurement is running.

In particular, if Continuous Sweep / Run Cont is active, the import/export functions are not available.

Import	111
Export	112
L Export Trace to ASCII File	
L File Type	113
L Decimal Separator	
L Trace Export Configuration	
L I/Q Export	



Import

Access: "Save/Recall" > Import



Provides functions to import data.

See the R&S FPL1000 I/Q Analyzer User Manual for more information.



Export


Access: "Save/Recall" > Export



Opens a submenu to configure data export.

Export Trace to ASCII File ← Export

Saves the selected trace or all traces in the currently active result display to the specified file and directory in the selected ASCII format.

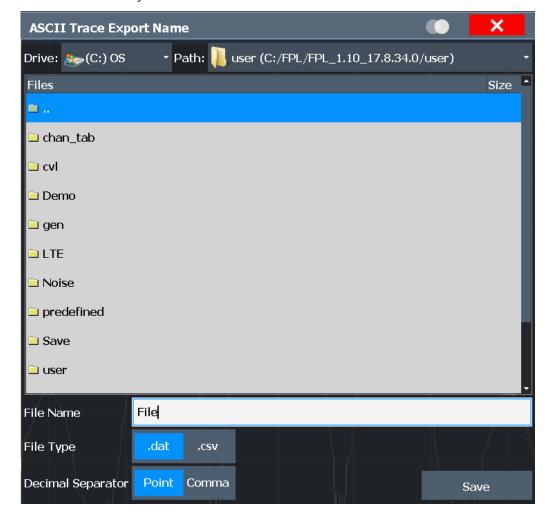

If the spectrogram display is selected when you perform this function, the entire histogram buffer with all frames is exported to a file. The data for a particular frame begins with information about the frame number and the time that frame was recorded. For large history buffers the export operation may take some time.

For details on the file format in the Spectrum application, see Chapter 7.13.6, "Reference: ASCII File Export Format", on page 522.

Note: Secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

Remote command:

MMEMory:STORe<n>:TRACe on page 712
MMEMory:STORe<n>:SPECtrogram on page 818

File Type ← Export Trace to ASCII File ← Export

Determines the format of the ASCII file to be imported or exported.

Depending on the external program in which the data file was created or will be evaluated, a comma-separated list (CSV) or a plain data format (DAT) file may be required.

Remote command:

FORMat: DEXPort: FORMat on page 711

Decimal Separator ← **Export Trace to ASCII File** ← **Export**

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.

Remote command:

FORMat: DEXPort: DSEParator on page 793

Trace Export Configuration ← Export

Opens the "Traces" dialog box to configure the trace and data export settings.

I/Q Export ← Export

Opens a file selection dialog box to define an export file name to which the I/Q data is stored. This function is only available in single sweep mode.

It is not available in the Spectrum application, only in applications that process I/Q data, such as the I/Q Analyzer or optional applications.

For details, see the description in the R&S FPL1000 I/Q Analyzer User Manual ("Importing and Exporting I/Q Data").

Note: Storing large amounts of I/Q data (several Gigabytes) can exceed the available (internal) storage space on the R&S FPL1000. In this case, it can be necessary to use an external storage medium.

6.2.4 Creating Screenshots of Current Measurement Results and Settings

To document the graphical results and the most important settings for the currently performed measurement, you can create a screenshot of the current display. Screenshots can either be printed or stored to a file.

•	Print and Screenshot Settings	. 114
•	How to Store or Print Screenshots of the Display	123
•	Example for Storing Multiple Measurement Results to a PDF File	126

6.2.4.1 Print and Screenshot Settings

Access: [Print]

For step-by-step instructions, see Chapter 6.2.4.2, "How to Store or Print Screenshots of the Display", on page 123.

Remote commands for these settings are described in Chapter 8.9.4, "Storing or Printing Screenshots", on page 806.





To print a screenshot of the current display with the current settings immediately, without switching to the "Print" menu, use the "Print immediately" icon in the toolbar.


•	Print Content Settings	114
•	Print Preview Functions.	117
•	Printer Settings	118
	Page Setup.	
	Print Color Settings	

Print Content Settings



Access: "Print" > "Print Config" > "Content" tab

The content settings determine which data is included in the printout.

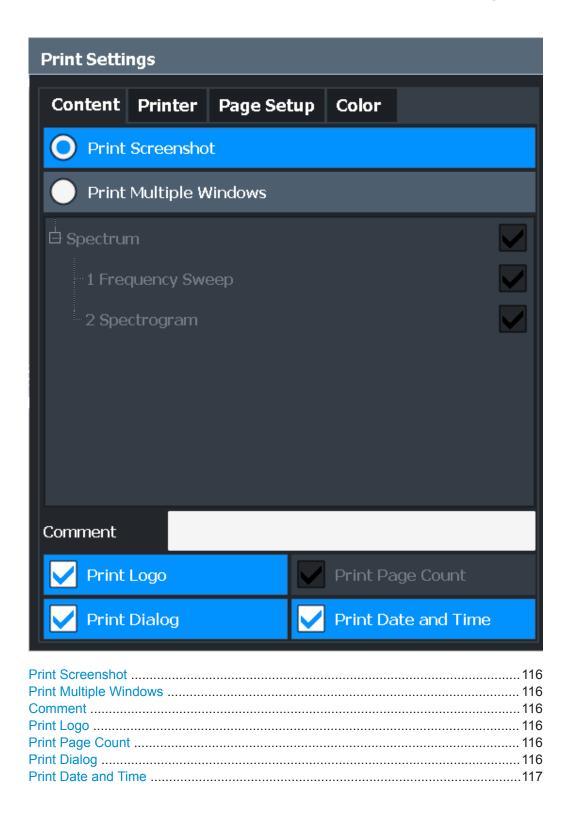

Print Screenshot

Selects all measurement results displayed on the screen for the current channel setup (or "MultiView"): diagrams, traces, markers, marker lists, limit lines, etc., including the channel bar and status bar, for printout on a single page. Displayed items belonging to the software user interface (e.g. softkeys) are not included. The position and size of the elements in the printout is identical to the display.

Remote command:

HCOP: CONT HCOP

Print Multiple Windows

Includes only the selected windows in the printout. All currently active windows for the current channel setup (or "MultiView") are available for selection. How many windows are printed on a single page of the printout is user-definable (see " Windows Per Page " on page 121).

This option is only available when printing on a printer or to a PDF file (see " Destination " on page 119). If the Destination is currently set to an image file or the clipboard, it is automatically changed to be a PDF file.

Remote command:

```
HCOP: CONT WIND
```

HCOPy:PAGE:WINDow<device>:STATe on page 814

HCOPy:PAGE:WINDow<device>:CHANnel:STATe on page 813

Comment

Defines an optional comment to be included in the printout of the display. Maximum 120 characters are allowed. Up to 60 characters fit in one line. In the first line, a manual line-feed can be forced at any point by entering "@".

The comment is printed in the top left corner of each printout page. If a comment should not be printed, it must be deleted.

Tip: The current date and time can be inserted automatically, see " Print Date and Time " on page 117.

Remote command:

HCOPy: ITEM: WINDow: TEXT on page 810

Print Logo

Activates/deactivates the printout of the Rohde & Schwarz company logo in the upper right corner.

Remote command:

DISPlay: LOGO on page 807

Print Page Count

Includes the page number for printouts consisting of multiple windows (" Print Multiple Windows " on page 116).

Remote command:

HCOPy:PAGE:COUNt:STATe on page 811

Print Dialog

Includes any currently displayed dialog in the screenshot printout.

This setting is only available if Print Screenshot is selected.

Print Date and Time

Includes or removes the current date and time at the bottom of the printout.

Remote command:

HCOPy:TDSTamp:STATe<device> on page 815

Print Preview Functions



Access: "Print"

The "Print Preview" of the printout according to the current configuration is available in all "Print Settings" dialog tabs.



Zoom In / Zoom Out	118
Fit Page	118
Zoom 1:1	118
Page Up / Page Down	118
Print	118

Zoom In / Zoom Out

Zooms into (enlarges) or zooms out of (decreases) the preview display. Note that the zoom functions affect only the preview, not the printout itself.

Fit Page

Adapts the preview display zoom factor so that one complete page is visible as large as possible in the available display space. Note that the zoom functions affect only the preview, not the printout itself.

Zoom 1:1

Displays the printout in its original size, as it will be printed.

Page Up / Page Down

Depending on the selected contents (see "Print Content Settings" on page 114), the printout can consist of multiple pages. Use these functions to scroll within the preview to see the individual pages.

Print

Starts to print or store the selected screen contents to a file (see "Print Content Settings" on page 114).

Whether the output is sent to the printer or stored in a file or the clipboard depends on the selected print settings (see "Printer Settings" on page 118).

If the output is stored to a file, a file selection dialog box is opened to select the filename and location. The default path is C:\Users\Public\Documents\Rohde-Schwarz \Analyzer\user.


Remote command:

```
HCOPy[:IMMediate<device>] on page 810
HCOPy[:IMMediate<device>]:NEXT on page 810
```

Printer Settings



Access: "Print" > "Print Config" > "Printer" tab

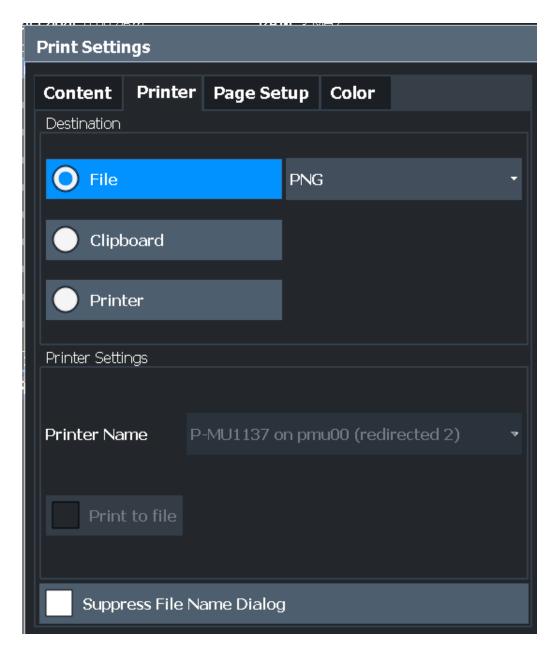

Destination	119
Suppress File Name Dialog	120
Printer Name	120
Print to file	120
Install Printer	120

Destination

Defines the medium to which the printout is output.

"File" Stores the printout to a file in the selected format. The filename is

queried at the time of storage, or a default name is used (see Sup-

press File Name Dialog).

Multiple windows can only be printed to a file in PDF format. If you select an image file format, the content setting is automatically set to Print Screenshot . Page settings are not available for image files; however, you can configure the colors used for the screenshot (see

"Print Color Settings" on page 122).

"Clipboard" Copies the printout to the clipboard. Since only single pages can be

copied, only screenshots can be copied to this destination, not multiple windows (see "Print Content Settings" on page 114). Page settings are not available; however, you can configure the colors used for the screenshot (see "Print Color Settings" on page 122).

If you select the clipboard as the printing destination, the content set-

ting is automatically set to Print Screenshot.

"Printer" Sends the printout to the printer selected from the Printer Name list.

Remote command:

```
HCOPy: DESTination < device > on page 809
HCOPy: DEVice: LANGuage < device > on page 809
```

Suppress File Name Dialog

If the Destination is a file, the file selection dialog box is not displayed. Instead, the default storage location and filename are used.

(C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user

```
\FPL_ScreenShot_<date and time>).
```

Printer Name

Defines the printer to print to if a printer is selected as the Destination .

Any printers detected in the network are listed for selection.

Tip: the printout can also be stored in a print file using the selected printer driver, see " Print to file " on page 120.

Remote command:

```
SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]? on page 816
SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt? on page 815
SYSTem:COMMunicate:PRINter:SELect<device> on page 816
```

Print to file

If a printer is selected as the $\frac{Destination}{Destination}$, use this option to store the data in a .prn file using the selected printer driver.

Install Printer

This softkey opens the standard Windows dialog box to install a new printer. All printers that are already installed are displayed.


Only user accounts with administrator rights can install a printer.

For further information, refer to the Microsoft Windows documentation.

Page Setup



Access: "Print" > "Print Config" > "Page Setup" tab

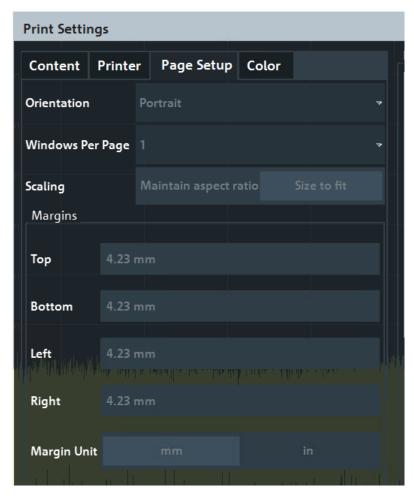

Page settings are only available when printing on a printer or to a PDF file (see "Destination" on page 119).

Orientation	121
Windows Per Page	121
Scaling	122
Margins	

Orientation

Selects the page orientation of the printout: portrait or landscape.

Remote command:

HCOPy:PAGE:ORIentation<device> on page 813

Windows Per Page

Defines how many windows are displayed on a single page of the printout. This setting is only available if Print Multiple Windows is active (see "Print Content Settings" on page 114).

If more than one window is printed on one page, each window is printed in equal size.

Remote command:

HCOPy:PAGE:WINDow<device>:COUNt on page 814

Scaling

Determines the scaling of the windows in the printout if Print Multiple Windows is active (see "Print Content Settings" on page 114).

If more than one window is printed on one page (see Windows Per Page), each window is printed in equal size.

"Maintain Each window is printed as large as possible while maintaining the

aspect ratio" aspect ratio of the original display.

"Size to fit" Each window is scaled to fit the page size optimally, not regarding the

aspect ratio of the original display.

Remote command:

HCOPy:PAGE:WINDow<device>:SCALe on page 814

Margins

Defines margins for the printout page on which no elements are printed. The margins are defined according to the selected unit.


Remote command:

```
HCOPy: PAGE: MARGin < device >: BOTTom on page 811
HCOPy: PAGE: MARGin < device >: LEFT on page 811
HCOPy: PAGE: MARGin < device >: RIGHt on page 812
HCOPy: PAGE: MARGin < device >: TOP on page 812
HCOPy: PAGE: MARGin < device >: UNIT on page 812
```

Print Color Settings



Access: "Print" > "Print Config" > "Color" tab

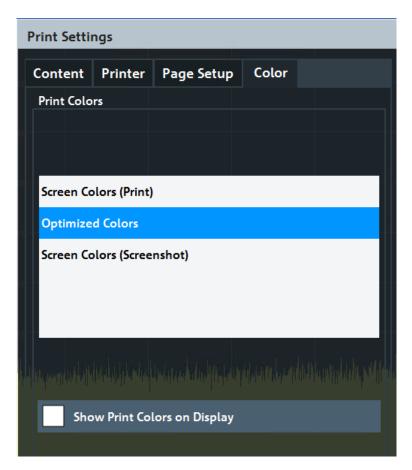

The settings provided here are identical to those in the "Print Colors" section of the "Display" > "Theme + Color" dialog box.

See "Print Colors" on page 135.

6.2.4.2 How to Store or Print Screenshots of the Display

The measurement results displayed on the screen can be printed or stored to a file very easily.

To start printing or storing results to a file



► If the R&S FPL1000 has already been set up according to your current requirements, simply press the "Print immediate" icon at the far right end of the toolbar.

The current measurement display is printed or stored to a file, as configured.

To print a screenshot

This configuration assumes a printer has already been installed. To install a new printer, use the Install Printer function (common Microsoft Windows procedure).



1. Select the "Printer" tool in the toolbar.

The "Print Settings" dialog box is displayed.

- 2. In the "Content" tab, define the elements of the screen and additional information to be included in the printout.
 - Select "Print Screenshot" to include all elements displayed on the screen in a single-page printout.
 - b) Optionally, add a comment to be printed at the top of the printout.
 - Optionally, activate the date and time or the logo so they are added to the printout
 - d) Optionally, activate "Print Dialog" to include any dialog boxes currently displayed on the screen in the printout. This is useful, for example, to document the used settings for a particular result.
 - e) Check the "Print Preview" to make sure all relevant elements of the display are visible.
- 3. In the "Printer" tab, select "Printer" as the "Destination".
- 4. Select the "Printer Name" to print to from the list of installed printers.
- 5. In the "Page Setup" tab, configure the layout of the printout page.
 - a) Select the page orientation.
 - b) Define the page margins.
 - c) Check the "Print Preview" to make sure all relevant elements of the display are visible.
- 6. In the "Color" tab, define the colors to be used for the printout.
 - a) By default, "Optimized Colors" are used to improve the visibility of the colors.
 The background is always printed in white and the grid in black.
 For a printout that reflects exactly what you see on the screen, select "Screen Colors (Screenshot)".
 - b) Check the "Print Preview" to find out if the setting is appropriate.
- 7. Select "Print" to execute the print function.

The screenshot is printed on the printer as configured.



8. To print another screenshot using the same configuration any other time, simply press the "Print immediate" icon at the far right end of the toolbar.

To store a printout containing multiple windows



- 1. Select the "Printer" tool in the toolbar.
 - The "Print Settings" dialog box is displayed.
- 2. In the "Content" tab, define the elements of the screen and additional information to be included in the printout.
 - Select "Print Selected Windows" to include the selected windows in the printout, possibly on multiple pages.

- b) Select the result displays in the currently selected channel setup to be included in the printout.
 - **Tip**: Select the "MultiView" before configuring the printout to include result displays from any active channel setup.
- c) Optionally, add a comment to be printed at the top of each page of the printout.
- d) Optionally, activate the date and time or the logo so they are added to the printout pages.
- 3. Check the "Print Preview" to make sure all required result displays are included.
 - a) Scroll through the individual pages of the printout using "Page Up" and "Page Down" .
 - b) Use the zoom functions to make sure all relevant parts of the result display are visible.
- 4. In the "Printer" tab, select "File" as the "Destination".
- 5. Select the file format from the selection list.
- 6. By default, you define the filename individually for each print operation. To avoid having the "File Selection" dialog box being displayed for each print operation, select "Suppress File Name Dialog". In this case, the previously used or default storage location and filename are used.

```
(C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\FPL_ScreenShot_<date and time>).
```

- 7. In the "Page Setup" tab, configure the layout of the printout page.
 - a) Select the page orientation.
 - b) Define the page margins.
 - c) Check the "Print Preview" to make sure all relevant elements of the display are visible.
- 8. In the "Color" tab, define the colors to be used for the printout.
 - a) By default, "Optimized Colors" are used to improve the visibility of the colors.
 The background is always printed in white and the grid in black.

 For a printout that reflects the colors you see on the screen, but with a white background, select "Screen Colors (Print)".
 - b) Check the "Print Preview" to find out if the setting is appropriate.
- 9. Select "Print" to execute the print function.
- 10. If you did not select the option to suppress the dialog, enter a filename in the file selection dialog box.

The selected data elements are stored to the file as configured.




11. To store another file using the same configuration any other time, simply press the "Print immediate" icon at the far right end of the toolbar.

6.2.4.3 Example for Storing Multiple Measurement Results to a PDF File

The following example describes the procedure to store results from measurements in the Spectrum application and the I/Q Analyzer to a single PDF file.

- Configure and perform the measurements in the Spectrum application and I/Q Analyzer as required. Configure at least the following result displays:
 - Frequency Sweep, Spectrogram (Spectrum)
 - Magnitude, Spectrum (I/Q Analyzer)
- 2. Switch to the "MultiView" tab to display an overview of the result displays in all active channel setups.

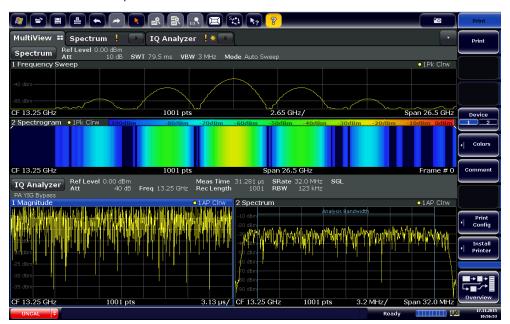




- Select the "Printer" tool in the toolbar.
 The "Print Settings" dialog box is displayed.
- 4. In the "Content" tab, select "Print Selected Windows".
- 5. Select the result displays listed in step 1.
- 6. Enter the comment *Measurement Test Report* to be inserted at the top of each page.
- 7. Select "Print Page Count" and "Print Date and Time".
- 8. In the "Content" tab, select "Print Selected Windows".
- 9. In the "Printer" tab, select "File" as the "Destination".
- 10. Select "PDF" from the file format selection list.
- 11. Select "Suppress File Name Dialog" .
- 12. In the "Page Setup" tab, select "Landscape" as the "Orientation".

- 13. Select "Windows Per Page": 1 to print a single result display on each page.
- 14. Select the "Scaling" option "Size to fit" to maximize the result display on each page.
- 15. In the "Color" tab, select "Screen Colors (Print)" for a printout that reflects the colors you see on the screen, but with a white background.
- 16. Check the "Print Preview" to make sure all required result displays are included and all relevant data elements are visible.
 - a) Scroll through the individual pages of the printout using "Page Up" and "Page Down".
 - b) Use the zoom functions to make sure all relevant parts of the result display are visible.
- 17. Select "Print" to execute the print function.

The selected data elements are stored to the file as configured.

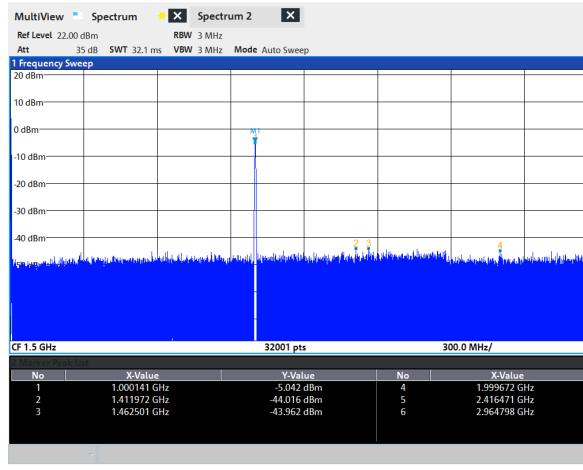

08:17:47 09.03.2017

6.3 General Instrument Setup

Access: [SETUP]

Some basic instrument settings can be configured independently of the selected operating mode or application. Usually, you configure most of these settings initially when you set up the instrument according to your personal preferences or requirements. Then you only adapt individual settings to special circumstances when necessary. Some special functions are provided for service and basic system configuration.



Network and remote settings

Settings for network and remote operation are described in Chapter 6.4.2, "Network and Remote Control Settings", on page 202.

Reference Frequency 1 Plantage Continues 1	29
Display Settings 1.	
Language Settings 1	38
System Configuration Settings 1	
Service Functions1	
• Transducers 1	49
• Alignment	

6.3.1 Reference Frequency

Access: [Setup] > "Reference Int/Ext"

The R&S FPL1000 can use the internal reference source or an external reference source as the frequency standard for all internal oscillators. A 10 MHz crystal oscillator is used as the internal reference source. In the external reference setting, all internal oscillators of the R&S FPL1000 are synchronized to the external reference frequency.

External references are connected to one of the [REF INPUT] connectors on the rear panel. For details see the R&S FPL1000 "Getting Started" manual.

The default setting is the internal reference. When an external reference is used, "EXT REF" is displayed in the status bar.



OCXO Option

The OCXO (R&S FPL1-B4) option generates a 10 MHz reference signal with a very precise frequency. If installed, and if no external signal is used, this signal is used as an internal reference. It can also be used to synchronize other connected devices via the Ref. Out 10 MHz connector.

When the instrument is switched on, the OCXO requires an extended warm-up time (see data sheet).

Remote command:

[SENSe:]ROSCillator:SOURce on page 821

6.3.2 Display Settings

6.3.2.1 Display Settings

Access: [Setup] > "Display"


Some general display settings are available regardless of the current application or operating mode. For information on optimizing your display for measurement results, see the application-specific result configuration descriptions.

General Display Settings.
Displayed Items.
Display Theme and Colors.
134

General Display Settings

Access: [Setup] > "Display" > "General"

This section includes general screen display behavior and date and time display.

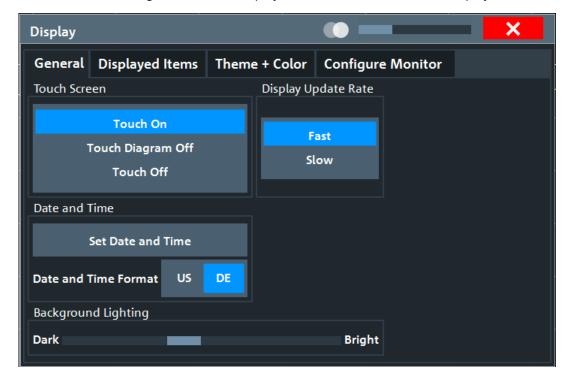

Deactivating and Activating the Touchscreen	129
Display Update Rate	130
Set Date and Time	130
Date and Time Format	130
Background Lighting	130
Buokground Lighting.	

Deactivating and Activating the Touchscreen

The touchscreen function can be deactivated, e.g. when the instrument is being used for demonstration purposes and tapping the screen must not provoke an action.

To reactivate the touchscreen, simply press the [Setup] key on the front panel. The "Display" dialog box is opened automatically and the "Touch Screen" option is set to "On" .

"Touch On" Touchscreen function is active for the entire screen.

"Touch Off" Touchscreen is deactivated for the entire screen.

" Touch Diagram Off"

Touchscreen is deactivated for the diagram area of the screen, but active for the surrounding softkeys, toolbars and menus.

Remote command:

DISPlay: TOUChscreen[:STATe] on page 830

Display Update Rate

By default, a fast update rate ensures the most recent measurement results on the display. However, when performance is poor due to slow data transfer (for example during remote control), it can be helpful to decrease the frequency with which the screen display is updated.

Set Date and Time

The current date and time on the instrument is set using the standard Windows "Date and Time Properties" dialog box. Select the "Set Date and Time" button in the "Display" dialog box, or select the date and time display in the status bar to open the Windows dialog box.

Date and Time Format

Switches the time and date display on the screen between US and German (DE) format.

Remote command:

DISPlay[:WINDow]:TIME:FORMat on page 830

Background Lighting

Changes the brightness of the display in eight steps.

Remote command:

DISPlay: BLIGhting on page 829

Displayed Items

Access: [Setup] > "Display" > "Displayed Items"

Several elements on the screen display can be hidden or shown as required, for example to enlarge the display area for the measurement results.



Toolbar	131
Status Bar	132
Softkey Bar	132
Channel Bar	
Diagram Footer (Annotation)	132
Date and Time	
Front Panel	
Mini Front Panel	

Toolbar

The toolbar provides access to frequently used functions via icons at the top of the screen. Some functions, such as zooming, finding help, printing screenshots or storing and loading files are not accessible at all without the toolbar.

Remote command:

DISPlay:TBAR[:STATe] on page 830

Status Bar

The status bar beneath the diagram indicates the global instrument settings, the instrument status and any irregularities during measurement or display.

Some of the information displayed in the status bar can be queried from the status registry via remote commands, see Chapter 8.11, "Using the Status Register", on page 843.

Remote command:

DISPlay:SBAR[:STATe] on page 829

Softkey Bar

Softkeys are virtual keys provided by the software. Thus, more functions can be provided than can be accessed directly via the function keys on the device.

The functions provided by the softkeys are often also available via dialog boxes. However, some functions are not accessible at all without the softkey bar.

Note: The softkey bar is hidden while the SmartGrid is displayed and restored automatically when the SmartGrid is closed.

Remote command:

DISPlay: SKEYs [:STATe] on page 829

Channel Bar

The channel setup bar provides information on firmware and measurement settings for a specific channel setup.

Remote command:

DISPlay: ANNotation: CBAR on page 828

Diagram Footer (Annotation)

The diagram footer beneath the diagram contains information on the x-axis of the diagram display, such as:

- The current center frequency and span settings
- The displayed span per division
- The number of sweep points

Remote command:

DISPlay: ANNotation: FREQuency on page 829

Date and Time

The date and time display can be switched off independently of the status bar.


You can set the current date and time and configure the display format in the "General" tab of the "Display" dialog box.

Remote command:

DISPlay[:WINDow]:TIME on page 830

Front Panel

The "Front Panel" display simulates the entire front panel of the device (except for the external connectors) on the screen. Thus, you can interact with the R&S FPL1000 without the keypad and keys on the front panel of the device. That is useful, for example, when working with an external monitor or operating via remote control from a computer.

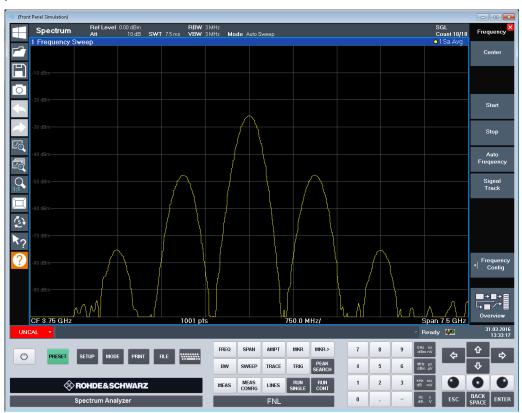

To activate or deactivate the front panel temporarily, press the [F6] key on the external keyboard (if available) or the remote computer.

For more information, see Chapter 6.3.2.4, "How to Work with the Soft Front Panels", on page 137.

Remote command:

SYSTem:DISPlay:FPANel[:STATe] on page 831

Mini Front Panel

If you require a front panel display but do not want to lose too much space for results in the display area, a mini front panel is available. The mini version displays only the main function keys in a separate window in the display area.



Note:

You can also activate the mini front panel using the key combination [ALT + m] (be aware of the keyboard language defined in the operating system!). That is useful when you are working from a remote PC and the front panel function is not active.

Remote command:


SYSTem:DISPlay:FPANel[:STATe] on page 831

Display Theme and Colors

Access: [Setup] > "Display" > "Theme + Color"

You can configure the used colors and styles of display elements on the screen.

For step-by-step instructions see Chapter 6.3.2.3, "How to Configure the Colors for Display and Printing", on page 136.

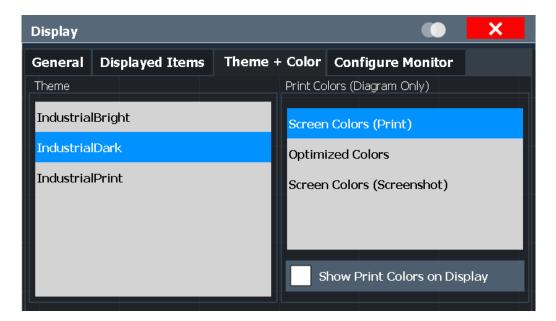

Theme	. 135
Print Colors	. 135
Showing Print Colors on Display	135

Theme

The theme defines the colors and style used to display softkeys and other screen objects.

The default theme is "IndustrialDark".

Remote command:

DISPlay: THEMe: SELect on page 832

Print Colors

Defines the color settings used for printout.

If "Show Print Colors on Display" is activated, the currently selected print colors are displayed as a preview for your selection.

Optimized Colors	Selects an optimized color setting for the printout to improve the visibility of the colors (default setting). Trace 1 is blue, trace 2 black, trace 3 green, and the markers are turquoise. The background is always printed in white and the grid in black.
Screen Colors (Print)	Selects the current screen colors for the printout. The background is always printed in white and the grid in black.
Screen Colors (Screenshot)	Selects the current screen colors without any changes for a screen-shot.

Remote command:

HCOPy:CMAP<item>:DEFault<colors> on page 808

Showing Print Colors on Display

Temporarily shows the currently selected print colors on the screen display. This function can be used as a preview for printing.

6.3.2.2 External Monitor Settings

Access: [Setup] > "Display" > "Configure Monitor"


You can connect an external monitor (or projector) to the [DVI] or [display port] connector on the instrument's rear panel (see the R&S FPL1000 getting started manual).



Screen resolution and format

The touchscreen of the R&S FPL1000 is calibrated for a 16:10 format. If you connect a monitor or projector using a different format (e.g. 4:3), the calibration will not be correct and the screen will not react to your touch actions properly.

The touchscreen has a screen resolution of 1280x800 pixels. Most external monitors have a higher screen resolution. If the screen resolution of the monitor is set higher than the instrument's resolution, the application window uses an area of 1280x800 pixels on the monitor display. For full screen display, adjust the monitor's screen resolution.

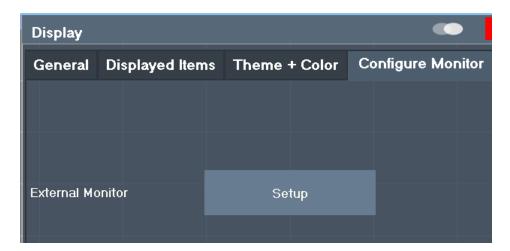

Setup 136

Setup

Opens the standard Windows configuration dialog box to configure the used display devices.

6.3.2.3 How to Configure the Colors for Display and Printing

You can configure the style and colors with which various screen objects are displayed or printed.

To select a color set

- 1. Press the [Setup] key and select the "Display" softkey.
- 2. Select the "Theme + Color" tab.
- 3. In the "Screen Colors" area, do one of the following:

- Select a predefined set of colors for screen display.
- Select "User Defined Colors" to configure the color set yourself.
- 4. In the "Print Colors" area, do one of the following:
 - Select a predefined set of colors for printing screenshots.
 - Select "User Defined Colors" to configure the color set yourself.
- Activate the "Show Print Colors on Display" option to see a preview of the print colors.

To configure a user-defined color set

- 1. In the "Theme + Color" tab of the "Display" dialog box, select "User Defined Colors" either for the screen or the print colors.
- 2. Select "Modify User Defined Colors" .

The "Screen Color Setup" dialog box is opened.

- 3. From the "Selected Object:" list, select the object to which you want to assign a color.
- 4. Do one of the following:
 - Select a color from the "Predefined Colors" .
 - Select the "Userdefined Colors ..." button to define a different color.

The "Preview" area indicates the currently selected color.

- 5. To assign a user-specific color to the selected object, do one of the following:
 - Select the color from the palette.
 - Enter values for the "Tint:", "Saturation:", and "Brightness:".
 Note: In the continuous color spectrum ("Tint:"), 0 % represents red and 100 % represents blue.
 - Enter an "ARGB:" value in hexadecimal format.
- 6. Select the next object to which you want to assign a color from the "Selected Object:" list.
- Repeat these steps until you have assigned a color to all objects you want to configure.
- 8. Select "OK" to close the dialog box.

The colors are applied to the assigned objects.

6.3.2.4 How to Work with the Soft Front Panels

Basic operation with the soft front panels is identical to normal operation, except for the following aspects:

To activate a key, select the key on the touchscreen.

To simulate the use of the rotary knob, use the additional keys displayed between the keypad and the arrow keys:

Icon	Function
•	Turn left
•	Enter
•	Turn right

Mini front panel

The mini front panel provides only the keys on the touchscreen, to operate the R&S FPL1000 via an external monitor or remote desktop.

By default, the "Auto close" option is activated and the mini front panel window closes automatically after you select a key. This is useful if you only require the mini front panel display occasionally to press a single function key.

If you want the window to remain open, deactivate the "Auto close" option. You can close the window manually by selecting "Close planel" or the key combination [ALT + M] (be aware of the keyboard language defined in the operating system!).

To display the soft front panel or mini front panel

- 1. Press the [Setup] key and select the "Display" softkey.
- 2. Select the "Displayed Items" tab.
- 3. Select "Front Panel": "On" or "Mini Front Panel": "On".



To activate or deactivate the front panel temporarily, press the [F6] key on the external keyboard (if available) or on the remote computer.

If the softkey menu is visible, you can display the "Mini Front Panel" quickly and easily by double-clicking the title of the softkey menu.

To close the mini front panel, click the □ "Close" icon at the top of the panel.

6.3.3 Language Settings

Access: [SETUP] > "Language"

The graphical user interface of the R&S FPL1000 can be displayed in various languages so you can operate the instrument in your most familiar language.

Select the language from the list of available languages.

The software-defined interface elements (such as softkeys, dialog boxes, diagram texts etc.) are displayed in the selected language.

Remote command:

SYSTem: DISPlay: LANGuage on page 832

6.3.4 System Configuration Settings

Access: [Setup] > "System Configuration"

•	Hardware Information	139
•	Information on Versions and Options	139
	System Messages	
	Firmware Updates	
	General Configuration Settings	
	Additional Interfaces.	


6.3.4.1 Hardware Information

Access: [Setup] > "System Configuration" > "Hardware Info"

An overview of the installed hardware in your R&S FPL1000 is provided.

Every listed component is described by its serial number, order number, model information, hardware code, and hardware revision.

This information can be useful when problems occur with the instrument and you require support from Rohde & Schwarz.

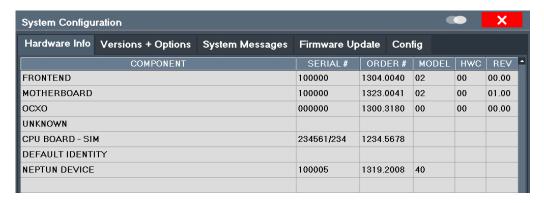

Remote command:

DIAGnostic: SERVice: HWINfo? on page 837

DIAGnostic:SERVice:BATTery:LEVel? on page 837

6.3.4.2 Information on Versions and Options

Access: [Setup] > "System Configuration" > "Versions + Options"

Information on the firmware version and options installed on your instrument is provided. The unique Rohde & Schwarz device ID is also indicated here, as it is required for license and option administration.

You can also install new firmware options in this dialog box.

The table also contains:


- The open source acknowledgements (PDF file) for the firmware and other software packages used by the R&S FPL1000
- The European License Agreement (EULA) for LucasFonts RSCorpid



Expired option licenses

If an option is about to expire, a message box is displayed to inform you. You can then use the "Install Option" function to enter a new license key.

If an option has already expired, a message box appears for you to confirm. In this case, all instrument functions are unavailable (including remote control) until the R&S FPL1000 is rebooted. You must then use the "Install Option" function to enter the new license key.

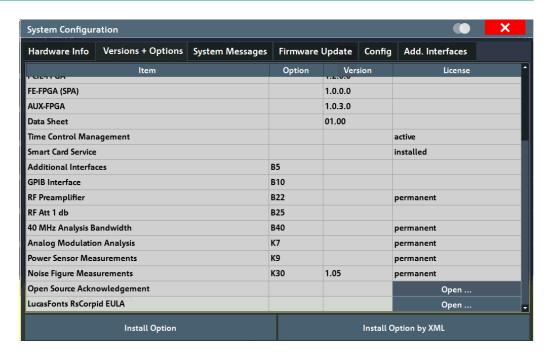

For details on options refer to the "Getting Started" manual, "Checking the Supplied Items".

Remote commands:

SYSTem: FORMat: IDENt on page 840

DIAGnostic:SERVice:BIOSinfo? on page 837
DIAGnostic:SERVice:VERSinfo? on page 838

Open Source Acknowledgment: Open

Displays a PDF file containing information on open source code used by the R&S FPL1000 firmware.

LucasFonts RsCorpid EULA: Open

Displays a PDF file containing copyright information on the RsCorpid font used by the R&S FPL1000 firmware.

IVI Shared Components EULA: Open

Displays a PDF file containing copyright information on the IVI shared components used by the R&S FPL1000 firmware.

Install Option

Opens an edit dialog box to enter the license key for the option that you want to install.

Install Option by XML


Opens a file selection dialog box to install an additional option to the R&S FPL1000 using an XML file. Enter or browse for the name of an XML file that contains the option key and select "Select".

6.3.4.3 System Messages

Access: [Setup] > "System Configuration" > "System Messages"

The system messages generated by the R&S FPL1000 are displayed.

The messages are displayed in the order of their occurrence; the most recent messages are placed at the top of the list. Messages that have occurred since you last visited the system messages tab are marked with an asterisk '*'.

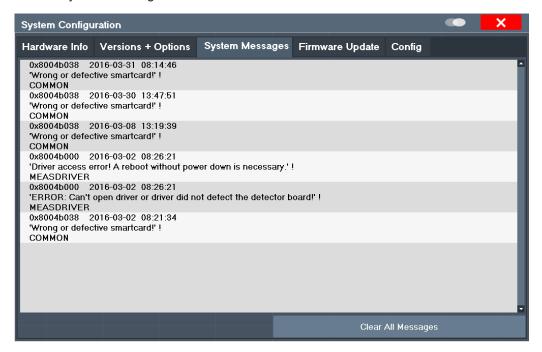

If the number of error messages exceeds the capacity of the error buffer, "Message Buffer Overflow" is displayed. To clear the message buffer use the "Clear All Messages" button.

The following information is available:

No	device-specific error code
Message	brief description of the message
Component	hardware messages: name of the affected module
	software messages: name of the affected software
Date/Time	date and time of the occurrence of the message

Remote command:

SYSTem: ERRor: LIST? on page 839

6.3.4.4 Firmware Updates


Access: [Setup] > "System Configuration" > "Firmware Update"

During instrument start, the installed hardware is checked against the current firmware version to ensure the hardware is supported. If not, an error message is displayed ("Wrong Firmware Version") and you are asked to update the firmware. Until the firmware version is updated, self-alignment fails. To see which components are not supported, see the System Messages.

The firmware on your R&S FPL1000 may also need to be updated in order to enable additional new features or if reasons for improvement come up. Ask your sales representative or check the Rohde&Schwarz website for availability of firmware updates. A firmware update package includes at least a setup file and release notes.



Before updating the firmware on your instrument, read the release notes delivered with the firmware version.

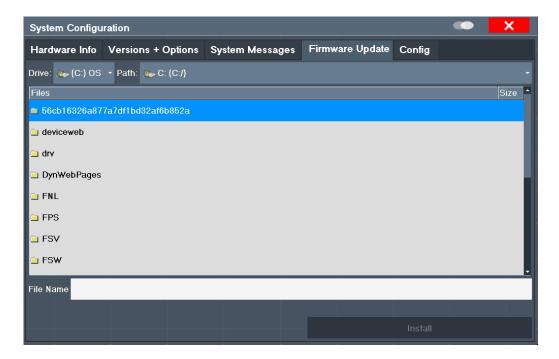

Enter the name or browse for the firmware installation file and press the "Install" button.

Remote command:

SYSTem:FIRMware:UPDate on page 840

How to Update the Instrument Firmware

- Download the update package from the Rohde&Schwarz website and store it on a memory stick, on the instrument, or on a server network drive that can be accessed by the instrument.
- NOTICE! Stop measurement. The firmware update must not be performed during a running measurement.
 - If a measurement is running, stop it by pressing the highlighted [Run Cont] or [Run Single] key.
- 3. Select the [Setup] key.
- 4. Select the "System Config" softkey.
- 5. Select the "Firmware Update" tab.
- 6. In the file selection dialog box select the FPLSetup*.exe file.
- 7. Select "Install" to start the update.
- 8. After the firmware update, the R&S FPL1000 reboots automatically.
- 9. Depending on the previous firmware version, a reconfiguration of the hardware might be required during the first startup of the firmware. The reconfiguration starts automatically, and a message box informs you about the process. When the reconfiguration has finished, the instrument again reboots automatically.

Note: Do not switch off the instrument during the reconfiguration process!


Now the firmware update is complete.

It is recommended that you perform a self-alignment after the update (see Chapter 6.3.7.4, "How to Align the Instrument", on page 163).

6.3.4.5 General Configuration Settings

Access: [Setup] > "System Configuration" > "Config"

General system settings, for example concerning the initial behaviour of the R&S FPL1000 after booting, can also be configured.

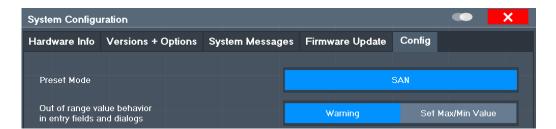

Preset Mode

The presettings can be defined in the "Config" tab of the "System Configuration" dialog box.

"SAN" Signal and Spectrum Analyzer mode

Remote command:


SYSTem: PRESet: COMPatible on page 841

Out-of-range value behavior

By default, if you enter a value that is outside the valid range in an input field for a setting, a warning is displayed and the value is not accepted. Alternatively, entries below the minimum value can automatically be set to the minimum possible entry, and entries above the maximum value set to the maximum possible entry. This behavior avoids errors and facilitates setting correct values.

6.3.4.6 Additional Interfaces

The following settings are only available if the "Additional interfaces" option R&S FPL1-B5 is installed.

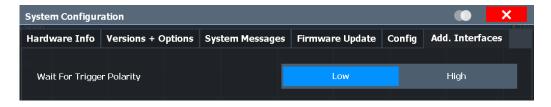

Wait for Trigger Polarity

The optional [AUX PORT] connector of the R&S FPL1000 can provide a signal that indicates the instrument is ready to receive a trigger signal.

(For details on the connector see the R&S FPL1000 Getting Started manual).

The signal polarity that indicates the trigger availability is configurable.

"Low" A low signal (= 0 V) indicates the instrument is ready to receive a trig-

ger.

"High" A high signal (= 5 V) indicates the instrument is ready to receive a

trigger.

Remote command:

OUTPut: UPORt: WTRigger: POLarity LOW | HIGH (see the R&S FPL1000 user manual)

6.3.5 Service Functions

Access: [Setup] > "Service"


When unexpected problems arise with the R&S FPL1000 some service functions may help you solve them.

•	R&S Support Information	145
•	Self-test Settings and Results	146
•	Calibration Signal Display	147
•	Service Functions	148

6.3.5.1 R&S Support Information

Access: [Setup] > "Service" > "R&S Support"

In case of errors you can store useful information for troubleshooting and send it to your Rohde & Schwarz support center.

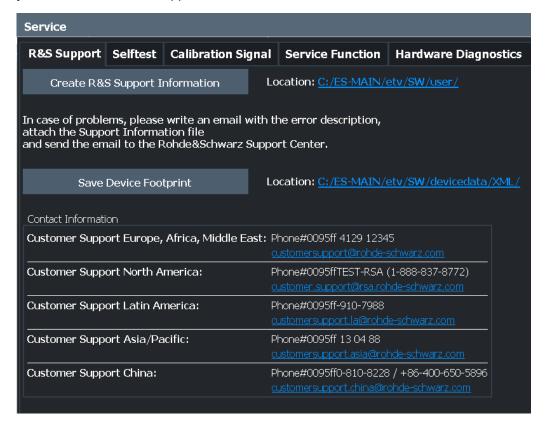

Create R&S Support Information

Creates a *.zip file with important support information. The *.zip file contains the system configuration information ("Device Footprint"), the current eeprom data and a screenshot of the screen display.

This data is stored to the C:\Users\Public\Documents\Rohde-Schwarz\Analyzer directory on the instrument.

The file name consists of the unique device ID and the current date and time of the file creation.

If you contact the Rohde&Schwarz support to get help for a certain problem, send these files to the support in order to identify and solve the problem faster.

Remote command:

DIAGnostic: SERVice: SINFo? on page 842

Save Device Footprint

Creates an *.xml file with information on installed hardware, software, image and FPGA versions. The *.xml file is stored under

C:\ProgramData\Rohde-Schwarz\ZNL-FPL\devicedata\xml\ on the instrument. It is also included in the service.zip file.

6.3.5.2 Self-test Settings and Results

Access: [Setup] > "Service" > "Selftest"

If the R&S FPL1000 fails you can perform a self-test of the instrument to identify any defective modules.



Once the self-test is started, all modules are checked consecutively and the test result is displayed. You can abort a running test.

In case of failure a short description of the failed test, the defective module, the associated value range and the corresponding test results are indicated.



A running Sequencer process is aborted when you start a self-test.

If you start a self-test remotely, then select the "Local" softkey while the test is still running, the instrument only returns to the manual operation state after the test is completed. In this case, the self-test cannot be aborted.

Remote command:


*TST? on page 532

DIAGnostic:SERVice:STESt:RESult? on page 823

6.3.5.3 Calibration Signal Display

Access: [Setup] > "Service" > "Calibration Signal"

Alternatively to the RF input signal from the front panel connector you can use the instrument's calibration signal as the input signal, for example to perform service functions on.

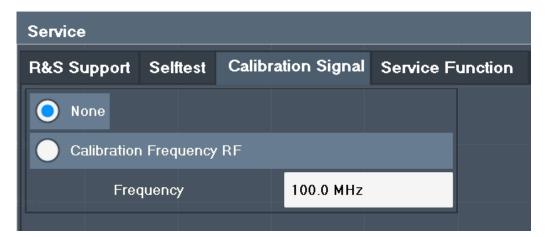

NONE	147
Calibration Frequency R	RF
L Frequency	148

NONE

Uses the current RF signal at the input, i.e. no calibration signal (default).

Remote command:

DIAGnostic:SERVice:INPut[:SELect] on page 823

Calibration Frequency RF

Uses the internal calibration signal as the RF input signal.

Remote command:

DIAGnostic:SERVice:INPut[:SELect] on page 823

DIAGnostic:SERVice:INPut:PULSed:CFRequency on page 822

Frequency ← Calibration Frequency RF

Defines the frequency of the internal broadband calibration signal to be used for IF filter calibration (max. 64 MHz).

6.3.5.4 Service Functions

Access: [Setup] > "Service" > "Service Function"

NOTICE

Using service functions

The service functions are not necessary for normal measurement operation. Incorrect use can affect correct operation and/or data integrity of the R&S FPL1000.

Therefore, only user accounts with administrator rights can use service functions and many of the functions can only be used after entering a password. These functions are described in the instrument service manual.



Service Function	. 148
Send	149
Clear History	
Password	. 149
Clear Results	149
Save Results	149
Result List	. 149

Service Function

Selects the service function by its numeric code or textual name.

The selection list includes all functions previously selected (since the last "Clear History" action).

Remote command:

DIAGnostic: SERVice: SFUNction on page 841

Send

Starts the selected service function.

Remote command:

DIAGnostic: SERVice: SFUNction on page 841

Clear History

Deletes the list of previously selected service functions.

Password

Most service functions require a special password as they may disrupt normal operation of the R&S FPL1000. There are different levels of service functions, depending on how restrictive their use is handled. Each service level has a different password.

"Reset Password" clears any previously entered password and returns to the most restrictive service level.

Remote command:

```
SYSTem:PASSword[:CENable] on page 843
SYSTem:PASSword:RESet on page 843
```

Clear Results

Clears the result display for all previously performed service functions.

Remote command:

```
DIAGnostic:SERVice:SFUNction:RESults:DELete on page 842
```

Save Results

Opens a file selection dialog box to save the results of all previously performed service functions to a file.

Remote command:

```
DIAGnostic:SERVice:SFUNction:RESults:SAVE on page 842
```

Result List

The Results List indicates the status and results of the executed service functions.

6.3.6 Transducers

6.3.6.1 Basics on Transducer Factors

The transducer allows you to manipulate the trace at discrete trace points to correct the signal coming from an input device. Transducers are often used to correct the frequency response for antennas, for example. The transducer is configured by defining transducer factors for specific trace points. A set of transducer factors defines an interpolated transducer line and can be stored on the instrument.

In the Spectrum application, the correction factor from all active transducers is calculated for each displayed trace point once in advance and is added to the result of the level measurement during the sweep. If the sweep range changes, the correction values are calculated again. If several measured values are combined in one point, only

one value is taken into consideration. If the active transducer line is not defined for the entire sweep range, the missing values are replaced by zeroes.

When a transducer is used, the trace is shifted by a calculated factor. However, an upward shift reduces the dynamic range for the displayed values. Thus, the reference level can be adapted automatically to restore the original dynamic range. The reference level is shifted by the maximum transducer factor. By default, if transducers are active the reference level function is adapted automatically to obtain the best dynamic performance.

If a transducer factor is active, "TDF" is displayed in the channel bar.

Y-Axis Unit

The individual transducer factors can be defined as absolute values or relative (dB) values. However, all factors for one transducer line use the same unit. As soon as a transducer is activated, the unit of the transducer is automatically used for all the level settings and outputs. The unit cannot be changed in the amplitude settings since the R&S FPL1000 and the active transducer are regarded as one measuring instrument. Only for relative transducer factors (unit dB), the unit originally set on the instrument is maintained and can be changed.

When all transducers have been switched off, the R&S FPL1000 returns to the unit that was used before a transducer was activated.

Configuration

The R&S FPL1000 supports transducer lines with a maximum of 1001 data points. Eight of the transducer lines stored in the instrument can be activated simultaneously. The number of transducer lines stored in the instrument is only limited by the capacity of the storage device used.

A transducer line consists of the following data:

- A maximum of 1001 data points with a position and value
- A unit for the values
- A name to distinguish the transducer lines

Validity

The transducer factors must comply with the following rules to ensure correct operation:

- The frequencies for the data points must always be defined in ascending order.
 Otherwise the entry will not be accepted and an error message is displayed.
- The frequencies of the data points may exceed the valid frequency range of the R&S FPL1000 since only the set frequency range is taken into account for measurements. The minimum frequency of a data point is 0 Hz, the maximum frequency 200 GHz.
- The value range for the transducer factor is ±200 dB.
- Gain has to be entered as a negative value, and attenuation as a positive value.

Storing transducer factors

Transducer factors can also be stored with the configuration settings so they can be recalled for other measurements at a later time. Note, however, that any changes made to the transducer factors *after* storing the configuration file cannot be restored and will be overwritten by the stored values when the configuration file is recalled. Always remember to store the settings again after changing the transducer factors.

(See Chapter 6.2.2, "Storing and Recalling Instrument Settings and Measurement Data", on page 100).



Recalling transducer factors stored with measurement settings

After recalling measurement settings, the transducer factors applied to the measurement may be different to those displayed in the "Transducer" dialog box; see "Saving and recalling transducer and limit line settings" on page 102.

6.3.6.2 Transducer Settings

Access: [Setup] > "Transducer"

Up to 8 transducer lines can be activated simultaneously in the R&S FPL1000. Many more can be stored on the instrument.




Stored transducer settings

When storing and recalling transducer settings, consider the information provided in "Saving and recalling transducer and limit line settings" on page 102.

Transducer Management

Access: [Setup] > "Transducer"

The settings required to manage all transducer lines on the instrument are described here.

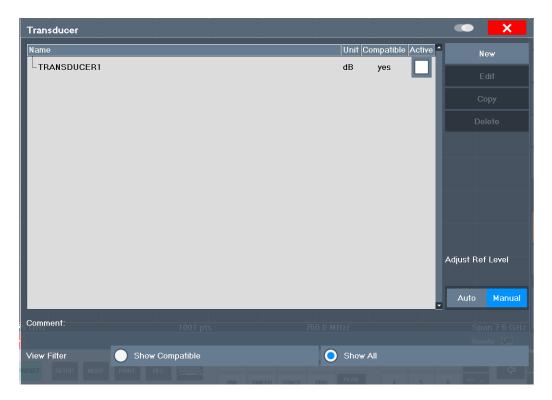

For the transducer line overview, the R&S FPL1000 searches for all stored transducer lines with the file extension . TDF in the

 ${\tt C:\ProgramData\Rohde-Schwarz\ZNL-FPL\trd\ directory.} \ The\ overview\ allows\ you\ to\ determine\ which\ transducer\ lines\ are\ available\ and\ can\ be\ used\ for\ the\ current\ measurement.}$

For details on settings for individual lines see "Transducer Factors" on page 154.

For instructions on configuring and working with transducers see Chapter 6.3.6.4, "How to Configure the Transducer", on page 157.

Name	152
Unit	152
Compatibility	153
Activating / Deactivating	153
Comment	
Included Transducer Lines in Overview (View Filter)	153
Adjust Ref Level	153
Create New Line	153
Edit Line	154
Copy Line	154
Delete Line	

Name

The name of the stored transducer line.

Unit

The unit in which the y-values of the data points of the transducer line are defined.

The following units are available:

- dB
- dBm
- dBmV
- dBµV
- dBµV/m
- dBµA
- dBµA/m
- dBpW
- dBpT

Compatibility

Indicates whether the transducer factors are compatible with the current measurement settings.

For more information on which conditions a transducer line must fulfill to be compatible, see Chapter 6.3.6.1, "Basics on Transducer Factors", on page 149.

Activating / Deactivating

Activates/deactivates the transducer line. Up to 8 transducer lines can be active at the same time.

Remote command:

```
[SENSe:]CORRection:TRANsducer:SELect on page 826
[SENSe:]CORRection:TRANsducer[:STATe] on page 826
```

Comment

An optional description of the transducer line.

Included Transducer Lines in Overview (View Filter)

Defines which of the stored transducer lines are included in the overview. The view can be restricted to compatible transducer lines only or include all transducer lines found. Whether a line is compatible or not is indicated in the Compatibility setting.

Adjust Ref Level

Activates or deactivates the automatic adjustment of the reference level to the selected transducer factor.

"Auto" Activates the automatic adjustment. The original dynamic range is

restored by shifting the reference level by the maximum transducer

factor.

"Manual" Deactivates the automatic adjustment. Adjust the reference level via

the "Amplitude" menu.

Remote command:

```
[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe] on page 824
```

Create New Line

Create a new transducer line.

Remote command:

[SENSe:]CORRection:TRANsducer:SELect on page 826

Edit Line

Edit an existing transducer line configuration.

Copy Line

Copy the selected transducer line configuration to create a new line.

Delete Line

Delete the selected transducer line.

Remote command:


[SENSe:]CORRection:TRANsducer:DELete on page 826

Transducer Factors

Access: [Setup] > "Transducer" > "Edit Line" / "Copy Line" / "New Line"

The settings and functions available for individual transducer lines are described here.

For instructions on creating and editing transducer lines see Chapter 6.3.6.4, "How to Configure the Transducer", on page 157.

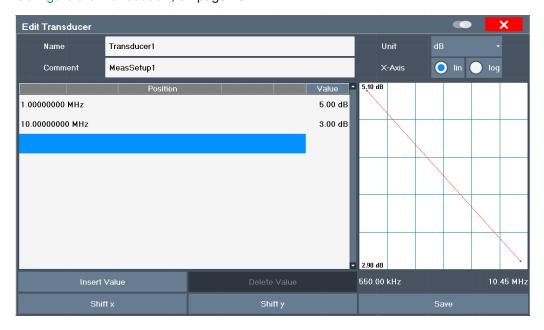

Name	155
Comment	155
Unit	155
X-Axis Scaling	155
Data Points	155
Insert Value	155
Delete Value	156
Shift x	156
Shift y	156
Save	156
Import	156
Export	156

Name

Defines the transducer line name. All names must be compatible with the Windows conventions for file names. The transducer data is stored under this name (with a .TDF extension) in the C:\ProgramData\Rohde-Schwarz\ZNL-FPL\trd directory.

Remote command:

[SENSe:]CORRection:TRANsducer:SELect on page 826

Comment

Defines an optional comment for the transducer line. The text may contain up to 40 characters.

Remote command:

[SENSe:]CORRection:TRANsducer:COMMent on page 825

Unit

The unit in which the y-values of the data points of the transducer line are defined.

As soon as a transducer is activated, the unit of the transducer is automatically used for all the level settings and outputs. The unit cannot be changed in the amplitude settings unless dB is used.

Remote command:

[SENSe:]CORRection:TRANsducer:UNIT on page 827

X-Axis Scaling

Describes the scaling of the horizontal axis on which the data points of the transducer line are defined. Scaling can be linear or logarithmic.

Remote command:

[SENSe:]CORRection:TRANsducer:SCALing on page 826

Data Points

Each transducer line is defined by a minimum of 2 and a maximum of 50 data points. Each data point is defined by its position (x-axis) and value (y-value).

The data points must comply with the following rules to ensure correct operation:

- The frequencies for the data points must always be defined in ascending order.
 Otherwise the entry will not be accepted and the an error message is displayed.
- The frequencies of the data points may exceed the valid frequency range of the R&S FPL1000 since only the set frequency range is taken into account for measurements. The minimum frequency of a data point is 0 Hz, the maximum frequency 200 GHz.
- The value range for the transducer factor is ±200 dB.
- Gain has to be entered as a negative value, and attenuation as a positive value.

Remote command:

[SENSe:]CORRection:TRANsducer:DATA on page 825

Insert Value

Inserts a data point in the transducer line above the selected one in the "Edit Transducer" dialog box.

Delete Value

Deletes the selected data point in the "Edit Transducer" dialog box.

Shift x

Shifts the x-value of each data point horizontally by the defined shift width.

Shift y

Shifts the y-value of each data point vertically by the defined shift width.

Save

Saves the currently edited transducer line under the name defined in the "Name" field.

Remote command:

```
MMEMory:SELect[:ITEM]:TRANsducer:ALL on page 802
MMEMory:STORe<n>:STATe on page 804
```

Import

Opens a file selection dialog box and loads the transducer factor from the selected file in .csv format.

Note that a valid import file must contain a minimum of required information for the R&S FPL1000. For details on the file format see Chapter 6.3.6.3, "Reference: Transducer Factor File Format", on page 156.

Remote command:

```
MMEMory:LOAD<n>:TFACtor on page 827
```

Export

Opens a file selection dialog box and stores the currently displayed transducer factor to the defined file in .CSV format.

For details on the file format see Chapter 6.3.6.3, "Reference: Transducer Factor File Format", on page 156.

The transducer factor can be imported again later by the R&S FPL1000 for use in other measurements.

Remote command:

```
MMEMory:STORe<n>:TFACtor on page 827
```

6.3.6.3 Reference: Transducer Factor File Format

Transducer factor data can be exported to a file in ASCII (CSV) format for further evaluation in other applications. Transducer factors stored in the specified ASCII (CSV) format can also be imported to the R&S FPL1000 for other measurements (see " Import " on page 156). This reference describes in detail the format of the export/import files for transducer factors. Note that the **bold** data is **mandatory**, all other data is optional.

Different language versions of evaluation programs may require a different handling of the decimal point. Thus, you can define the decimal separator to be used (see " Decimal Separator " on page 113).

Table 6-2: ASCII file format for transducer factor files

File contents	Description
Header data	
sep=;	Separator for individual values (required by Microsoft Excel, for example)
Type;RS_TransducerFactor;	Type of data
FileFormatVersion;1.00;	File format version
Date;01.Oct 2006;	Date of data set storage
OptionID;SpectrumAnalyzer	Application the transducer factor was created for
Name;TestTDF1	Transducer factor name
Comment;Transducer for device A	Description of transducer factor
XAxisScaling;LINEAR	Scaling of x-axis linear (LIN) or logarithmic (LOG)
YAxisUnit;LEVEL_DB	Unit of y values
YAxisScaleMode;ABSOLUTE	Scaling of y-axis (absolute or relative)
NoOfPoints;5	Number of points the line is defined by
Data section for individual data points	
100000000;-50.000000	x- and y-values of each data point defining the line
500000000;-30.000000	
100000000;0.000000	
1500000000;-30.000000	
2500000000;-50.000000	

6.3.6.4 How to Configure the Transducer

Configuring the transducer is very similar to configuring transducer factors.

The transducer settings are defined in the "Transducer" dialog box which is displayed when you press the [Setup] key and then select "Transducer".



Stored transducer settings

When storing and recalling transducer settings, consider the information provided in "Saving and recalling transducer and limit line settings" on page 102.

The following tasks are described:

- "How to find compatible transducer lines" on page 158
- "How to activate and deactivate a transducer" on page 158
- "How to edit existing transducer lines" on page 158
- "How to copy an existing transducer line" on page 158
- "How to delete an existing transducer line" on page 159

- "How to configure a new transducer line" on page 159
- "How to move the transducer line vertically or horizontally" on page 160

How to find compatible transducer lines

▶ In the "Transducer" dialog box, select the "View Filter" option: "Show Compatible".
All transducer lines stored on the instrument that are compatible to the current measurement settings are displayed in the overview.

How to activate and deactivate a transducer

1. To activate a transducer select a transducer line in the overview and select the "Active" setting for it.

The trace is automatically recalculated for the next sweep after a transducer line is activated.

To deactivate a transducer line, deactivate the "Active" setting for it. After the next sweep, the originally measured values are displayed.

How to edit existing transducer lines

Existing transducer line configurations can be edited.

- 1. In the "Transducer" dialog box, select the transducer line.
- 2. Select the "Edit" button.
- Edit the line configuration as described in "How to configure a new transducer line" on page 159.
- 4. Save the new configuration by selecting the "Save" button.

The trace is automatically recalculated for the next sweep if the transducer line is active.



In order to store the changes to the transducer lines in a settings file, select the save" icon in the toolbar.

(See Chapter 6.2.2, "Storing and Recalling Instrument Settings and Measurement Data", on page 100).

How to copy an existing transducer line

- 1. In the "Transducer" dialog box, select the transducer line.
- 2. Select the "Copy" button.

The "Edit Transducer" dialog box is opened with the configuration of the selected transducer.

3. Define a new name to create a new transducer with the same configuration as the source line.

- 4. Edit the line configuration as described in "How to configure a new transducer line" on page 159.
- 5. Save the new configuration by selecting the "Save" button.

The new transducer line is displayed in the overview and can be activated.

How to delete an existing transducer line

- 1. In the "Transducer" dialog box, select the transducer line.
- 2. Select the "Delete" button.
- 3. Confirm the message.

The transducer line is deleted. After the next sweep, the originally measured values are displayed.

How to configure a new transducer line

1. In the "Transducer" dialog box, select the "New" button.

The "Edit Transducer" dialog box is displayed. The current line configuration is displayed in the preview area of the dialog box. The preview is updated after each change to the configuration.

- 2. Define a "Name" and, optionally, a "Comment" for the new transducer line.
- 3. Define the scaling for the x-axis.
- 4. Define the data points: minimum 2, maximum 1000:
 - a) Select "Insert Value".
 - b) Define the x-value ("Position") and y-value ("Value") of the first data point.
 - c) Select "Insert Value" again and define the second data point.
 - d) Repeat this to insert all other data points.

"Shift y" button and defining the shift width.

- To insert a data point before an existing one, select the data point and then "Insert Value" .
- To insert a new data point at the end of the list, move the focus to the line after the last entry and then select "Insert Value".
- To delete a data point, select the entry and then "Delete Value".
- Check the current line configuration in the preview area of the dialog box. If necessary, correct individual data points or add or delete some.
 If necessary, shift the entire line vertically or horizontally by selecting the "Shift x" or
- 6. Save the new configuration by selecting the "Save" button.

The new transducer line is displayed in the overview and can be activated.

How to move the transducer line vertically or horizontally

A configured transducer line can easily be moved vertically or horizontally. Thus, a new transducer line can be easily generated based upon an existing transducer line which has been shifted.

- 1. In the "Line Config" dialog box, select the transducer line.
- 2. Select the "Edit" button.
- 3. In the "Edit Transducer Line" dialog box, select the "Shift x" or "Shift y" button and define the shift width.
- Save the shifted data points by selecting the "Save" button.
 If activated, the trace is recalculated after the next sweep.

6.3.7 Alignment

6.3.7.1 Basics on Alignment

When you put the instrument into operation for the first time or when strong temperature changes occur, align the data to a reference source (see "Temperature check" on page 161).

The correction data and characteristics required for the alignment are determined by the firmware. It compares the results at different settings with the known characteristics of the high-precision calibration signal source at 64 MHz.



During instrument start, the firmware checks whether the installed hardware is supported. If not, an error message is displayed ("Wrong Firmware Version") and you are asked to update the firmware. Until the firmware version is updated, self-alignment fails.



If you start a self-alignment remotely and then select the "Local" softkey while the alignment is still running, the instrument only returns to the manual operation state after the alignment is completed.

Alignment results

The alignment results are displayed and contain the following information:

- Date and time of last correction data record.
- Overall results of correction data record
- List of found correction values according to function/module

The results are classified as follows:

PASSED	Calibration successful without any restrictions
CHECK	Deviation of correction value larger than expected, correction could however be performed
FAILED	Deviations of correction value too large, no correction was possible. The found correction data is not applicable.

The results are available until the next self-alignment process is started or the instrument is switched off.

Temperature check

During self-alignment, the instrument's (frontend) temperature is also measured (as soon as the instrument has warmed up completely). This temperature is used as a reference for a continuous temperature check during operation. If the current temperature deviates from the stored self-alignment temperature by a certain degree, a warning is displayed in the status bar. The warning indicates the resulting deviation in the measured power levels. A status bit in the STATUs:QUEStionable:TEMPerature register indicates a possible deviation. The current temperature of the RF frontend can be queried using a remote command (see SOURCe:TEMPerature:FRONtend? on page 823).

Touchscreen alignment

When the device is delivered, the touchscreen is initially calibrated. However, to ensure that the touchscreen responds to the finger contact correctly, a touchscreen alignment is required.


Alignment of the touchscreen is useful:

- At first use
- After an image update or after exchanging a hard disk
- If you notice that touching a specific point on the screen does not achieve the correct response
- If the position of the instrument has been changed and you cannot look straight on the screen
- If another person operates the instrument

6.3.7.2 Alignment Settings

Access: [Setup] > "Alignment"

Both the instrument and the touchscreen can be aligned when necessary (see Chapter 6.3.7.1, "Basics on Alignment", on page 160).

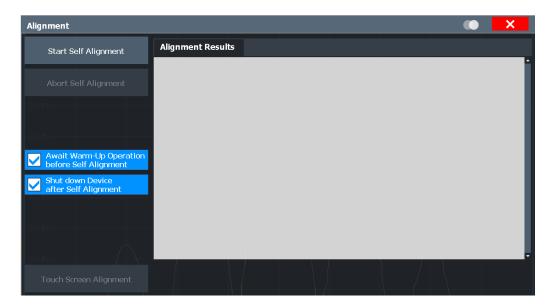

Start Self Alignment	162
Abort Self Alignment	
Await Warm-Up Operation before Self Alignment	
Shut down Device after Self Alignment	
Starting Touch Screen Alignment	
Alignment Results:	

Start Self Alignment

Starts recording correction data for the instrument. If the correction data acquisition fails or if the correction values are deactivated, a corresponding message is displayed in the status field.

For details, see Chapter 6.3.7.1, "Basics on Alignment", on page 160.

Note:

A running Sequencer operation is aborted when you start a self-alignment.

Remote command:

*CAL? on page 529, see also CALibration[:ALL]? on page 821

Abort Self Alignment

As long as the self-alignment data is being collected, the procedure can be canceled using the "Abort Self Alignment" button.

Note: If you start a self-alignment remotely, then select the "Local" softkey while the alignment is still running, the instrument only returns to the manual operation state after the alignment is completed. In this case, you cannot abort a self-alignment manually.

Await Warm-Up Operation before Self Alignment

Displays a message indicating the remaining warmup time required before self-alignment is performed. After the warmup operation has completed, self-alignment is started automatically.

Shut down Device after Self Alignment

If activated, the R&S FPL1000 is automatically shut down after self-alignment is completed. Note that the instrument cannot be restarted via remote control.

Starting Touch Screen Alignment

Starts the touchscreen alignment.

Tap the 4 markers on the screen as you are asked to do. The touchscreen is aligned according to the executed pointing operations.

Alignment Results:

Information on whether the alignment was performed successfully and on the applied correction data is displayed. The results are available until the next self-alignment process is started or the instrument is switched off.

Remote command:

CALibration: RESult? on page 822

6.3.7.3 How to Perform a Self-Test

You do not have to repeat the self-test every time you switch on the instrument. It is only necessary when instrument malfunction is suspected.



Operating temperature

Before performing this functional test, make sure that the instrument has reached its operating temperature (for details, refer to the data sheet).

- 1. Press the [SETUP] key.
- 2. Press the "Service" softkey.
- 3. Press the "Selftest" softkey.

Once the instrument modules have been checked successfully, a message is displayed.

6.3.7.4 How to Align the Instrument



Operating temperature

Before performing this functional test, make sure that the instrument has reached its operating temperature (for details, refer to the data sheet).

To perform a self-alignment

- 1. Press the [SETUP] key.
- 2. Select the "Alignment" softkey.
- 3. Select the "Start Self Alignment" button.

4. To abort the self-alignment process, select the "Abort Self Alignment" button.

Once the system correction values have been calculated successfully, a message is displayed.



To display the alignment results again later

- Press the [SETUP] key.
- Press the "Alignment" softkey.

6.3.7.5 How to Align the Touchscreen

To align the touchscreen

- 1. Press the [Setup] key.
- 2. Select the "Alignment" softkey.
- 3. Select "Touch Screen Alignment" .

A blinking cross appears in the lower left corner of the screen.

4. Touch and hold the blinking cross until it stops blinking. Repeat this action for the crosses in the other corners.

6.4 Network and Remote Operation

In addition to working with the R&S FPL1000 interactively, located directly at the instrument, it is also possible to operate and control it from a remote PC. Various methods for remote control are supported:

- Connecting the instrument to a (LAN) network
- Using the LXI browser interface in a LAN network
- Using the Windows Remote Desktop application in a LAN network
- Connecting a PC via the GPIB interface

How to configure the remote control interfaces is described in Chapter 6.4.3, "How to Set Up a Network and Remote Control", on page 212.

•	Remote Control Basics	164
•	Network and Remote Control Settings	202
	How to Set Up a Network and Remote Control	

6.4.1 Remote Control Basics

Basic information on operating an instrument via remote control is provided here. This information applies to all applications and operating modes on the R&S FPL1000.



For additional information on remote control of spectrum analyzers see the following application notes available from the Rohde & Schwarz website:

1EF62: Hints and Tricks for Remote Control of Spectrum and Network Analyzers

1MA171: How to use Rohde & Schwarz Instruments in MATLAB

1MA208: Fast Remote Instrument Control with HiSLIP

•	Remote Control Interfaces and Protocols	165
•	SCPI (Standard Commands for Programmable Instruments)	173
	VISA Libraries	
•	Messages	174
•	SCPI Command Structure	175
•	Command Sequence and Synchronization	183
•	Status Reporting System	185
•	General Programming Recommendations	201

6.4.1.1 Remote Control Interfaces and Protocols

The instrument supports different interfaces and protocols for remote control. The following table gives an overview.

Table 6-3: Remote control interfaces and protocols

Interface	Protocols, VISA*) address string	Remarks
Local Area Network (LAN)	HiSLIP High-Speed LAN Instrument Protocol (IVI-6.1) TCPIP::host address::hislip0[::INSTR] VXI-11 TCPIP::host address::inst0[::INSTR] Library: VISA socket communication (Raw Ethernet, simple Telnet) TCPIP::host address[::LAN device name]:: <port>:: SOCKET Library: VISA or socket controller</port>	A LAN connector is located on the rear panel of the instrument. The interface is based on TCP/IP and supports various protocols. For a description of the protocols refer to: VXI-11 Protocol HiSLIP Protocol Socket Communication
GPIB (IEC/ IEEE Bus Interface)	VISA*) address string: GPIB::primary address[::INSTR] (no secondary address)	An optional GPIB bus interface according to the IEC 625.1/IEEE 488.1 standard is located on the rear panel of the instrument. For a description of the interface refer to GPIB Interface (IEC 625/IEEE 418 Bus Interface).

^{*)} VISA is a standardized software interface library providing input and output functions to communicate with instruments. A VISA installation on the controller is a prerequisite for remote control using the indicated interfaces.

(See also Chapter 6.4.1.3, "VISA Libraries", on page 174).



Within this interface description, the term GPIB is used as a synonym for the IEC/IEEE bus interface.

LAN Interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols. The network card can be operated with the following interfaces:

- 10 Mbit/s Ethernet IEEE 802.3
- 100 Mbit/s Ethernet IEEE 802.3u
- 1Gbit/s Ethernet IEEE 802.3ab

For remote control via a network, the PC and the instrument must be connected via the LAN interface to a common network with TCP/IP network protocol. They are connected using a commercial RJ45 cable (shielded or unshielded twisted pair category 5). The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and the VISA program library must be installed on the controller.

VISA library

Instrument access is usually achieved from high level programming platforms using VISA as an intermediate abstraction layer. VISA encapsulates the low level VXI, GPIB, LAN or USB function calls and thus makes the transport interface transparent for the user. See Chapter 6.4.1.3, "VISA Libraries", on page 174 for details.

The R&S FPL1000 supports various LAN protocols such as LXI, RSIB, raw socket or the newer HiSLIP protocol.

IP address

Only the IP address or a valid DNS host name is required to set up the connection. The host address is part of the "VISA resource string" used by the programs to identify and control the instrument.

The VISA resource string has the form:

```
TCPIP::host address[::LAN device name][::INSTR]
or
TCPIP::host address::port::SOCKET
```

where:

- TCPIP designates the network protocol used
- host address is the IP address or host name of the device
- LAN device name defines the protocol and the instance number of a sub-instrument;
 - inst0 selects the VXI-11 protocol (default)
 - hislip0 selects the newer HiSLIP protocol
- INSTR indicates the instrument resource class (optional)
- port determines the used port number
- SOCKET indicates the raw network socket resource class

Example:

• Instrument has the IP address 192.1.2.3; the valid resource string using VXI-11 protocol is:

TCPIP::192.1.2.3::INSTR

- The DNS host name is *FPL1003-123456*; the valid resource string using HiSLIP is: TCPIP::FPL1003-123456::hislip0
- A raw socket connection can be established using:

TCPIP::192.1.2.3::5025::SOCKET



Identifying instruments in a network

If several instruments are connected to the network, each instrument has its own IP address and associated resource string. The controller identifies these instruments by means of the resource string.

For details on configuring the LAN connection, see Chapter 6.4.3.1, "How to Configure a Network", on page 212.

•	VXI-11 Protocol	167
•	HiSLIP Protocol.	.167
•	Socket Communication.	168
•	LXI Web Browser Interface.	168

VXI-11 Protocol

The VXI-11 standard is based on the ONC RPC (Open Network Computing Remote Procedure Call) protocol which in turn relies on TCP/IP as the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured. TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

HiSLIP Protocol

The HiSLIP (**High Speed LAN Instrument Protocol**) is the successor protocol for VXI-11 for TCP-based instruments specified by the IVI foundation. The protocol uses two TCP sockets for a single connection - one for fast data transfer, the other for non-sequential control commands (e.g. Device Clear or SRQ).

HiSLIP has the following characteristics:

- High performance as with raw socket network connections
- Compatible IEEE 488.2 support for Message Exchange Protocol, Device Clear, Serial Poll, Remote/Local, Trigger, and Service Request
- Uses a single IANA registered port (4880), which simplifies the configuration of firewalls
- Supports simultaneous access of multiple users by providing versatile locking mechanisms
- Usable for IPv6 or IPv4 networks



Using VXI-11, each operation is blocked until a VXI-11 device handshake returns. However, using HiSLIP, data is sent to the device using the "fire and forget" method with immediate return. Thus, a successful return of a VISA operation such as <code>viWrite()</code> does not guarantee that the instrument has finished or started the requested command, but is delivered to the TCP/IP buffers.

For more information see also the application note:

1MA208: Fast Remote Instrument Control with HiSLIP

Socket Communication

An alternative way for remote control of the software is to establish a simple network communication using sockets. The socket communication, also referred to as "Raw Ethernet communication", does not necessarily require a VISA installation on the remote controller side. It is available by default on all operating systems.

The simplest way to establish socket communication is to use the built-in telnet program. The telnet program is part of every operating system and supports a communication with the software on a command-by-command basis. For more convenience and to enable automation by means of programs, user-defined sockets can be programmed.

Socket connections are established on a specially defined port. The socket address is a combination of the IP address or the host name of the instrument and the number of the port configured for remote-control. All R&S FPL1000 use port number 5025 for this purpose. The port is configured for communication on a command-to-command basis and for remote control from a program.

LXI Web Browser Interface

LAN eXtensions for Instrumentation (LXI) is an instrumentation platform for measuring instruments and test systems that is based on standard Ethernet technology. LXI is intended to be the LAN-based successor to GPIB, combining the advantages of Ethernet with the simplicity and familiarity of GPIB. The LXI browser interface allows for easy configuration of the LAN and remote control of the R&S FPL1000 without additional installation requirements.

The instrument's LXI web browser interface works correctly with all W3C compliant browsers.

Via the LXI browser interface to the R&S FPL1000 you can control the instrument remotely from another PC. Manual instrument controls are available via the front panel simulation. File upload and download between the instrument and the remote PC is also available. Using this feature, several users can access *and operate* the R&S FPL1000 simultaneously. This is useful for troubleshooting or training purposes.

For details, see "How to Configure the LAN Using the LXI Web Browser Interface" on page 216 and Chapter 6.4.3.5, "How to Control the R&S FPL1000 via the Web Browser Interface", on page 222.



If you do not want other users in the LAN to be able to access and operate the R&S FPL1000 you can deactivate this function.

See Chapter 6.4.3.6, "How to Deactivate the Web Browser Interface", on page 223.



Restrictions


The LXI functionality is only available if you start the R&S FPL1000 firmware with administrator rights.

To display the LXI web browser interface

- 1. Stop the running firmware.
- 2. On the Windows desktop, right-click the icon for the R&S FPL1000 firmware.
- 3. Select "Run as Administrator".
 - Wait until the firmware has started again.
- 4. In the address field of the browser on your PC, type the host name or IP address of the instrument, for example: http://10.113.10.203.

The instrument home page (welcome page) opens.

Note: If only a black screen is displayed in the browser, install the required driver (see "Restrictions" on page 169).

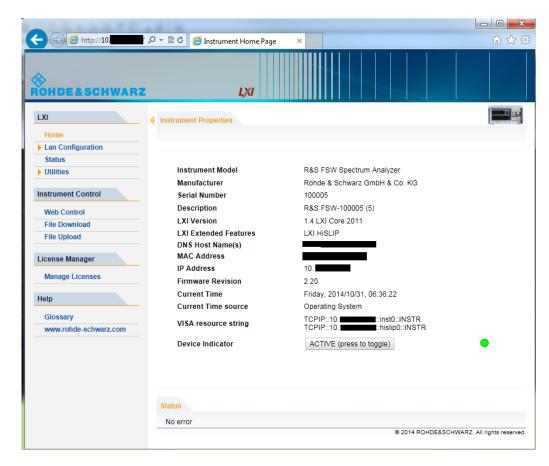

The navigation pane of the browser interface contains the following elements:

• "LXI"

- "Home" opens the instrument home page.
 - The home page displays the device information required by the LXI standard, including the VISA resource string in read-only format.
 - The "Device Indicator" button allows you to physically identify the instrument. This is useful if you have several instruments and want to know which instrument the LXI home page belongs to. To identify the instrument, activate the "Device Indicator". Then check the "LAN Status" indicator of the instruments.
- "LAN Configuration" allows you to configure LAN parameters and to initiate a ping.
 - (See "Ping Client" on page 218.) (See
- "Status Bar" displays information about the LXI status of the instrument.
- "Utilities" provides access to the LXI event log functionality required by the LXI standard.

"Instrument Control"

- "Web Control" provides remote access to the instrument via VNC (no installation required). Manual instrument controls are available via the front panel simulation.
- "File Download" downloads files from the instrument.

"File Upload" uploads files to the instrument.

(See Chapter 6.4.3.5, "How to Control the R&S FPL1000 via the Web Browser Interface", on page 222.)

- "License Manager"
 - "License Manager" allows you to install or uninstall license keys and to activate, register or unregister licenses.
- "Help"
 - "Glossary" explains terms related to the LXI standard.
 - "www.rohde-schwarz.com" opens the Rohde & Schwarz home page.

GPIB Interface (IEC 625/IEEE 418 Bus Interface)

An optional GPIB interface can be integrated on the rear panel of the instrument.

By connecting a PC to the R&S FPL1000 via the GPIB connection you can send remote commands to control and operate the instrument.

To be able to control the instrument via the GPIB bus, the instrument and the controller must be linked by a GPIB bus cable. A GPIB bus card, the card drivers and the program libraries for the programming language used must be provided in the controller. The controller must address the instrument with the GPIB bus address (see "How to Change the GPIB Instrument Address" on page 219). You can set the GPIB address and the ID response string. The GPIB language is set as SCPI by default and cannot be changed for the R&S FPL1000.

Notes and Conditions

In connection with the GPIB interface, note the following:

- Up to 15 instruments can be connected
- The total cable length is restricted to a maximum of 15 m or 2 m times the number of devices, whichever is less; the cable length between two instruments should not exceed 2 m.
- A wired "OR"-connection is used if several instruments are connected in parallel.
- Any connected IEC-bus cables should be terminated by an instrument or controller.

GPIB Interface Messages

Interface messages are transmitted to the instrument on the data lines, with the attention line (ATN) being active (LOW). They are used for communication between the controller and the instrument and can only be sent by a computer which has the function of a GPIB bus controller. GPIB interface messages can be further subdivided into:

- Universal commands: act on all instruments connected to the GPIB bus without previous addressing
- Addressed commands: only act on instruments previously addressed as listeners

The following figure provides an overview of the available communication lines used by the GPIB interface.

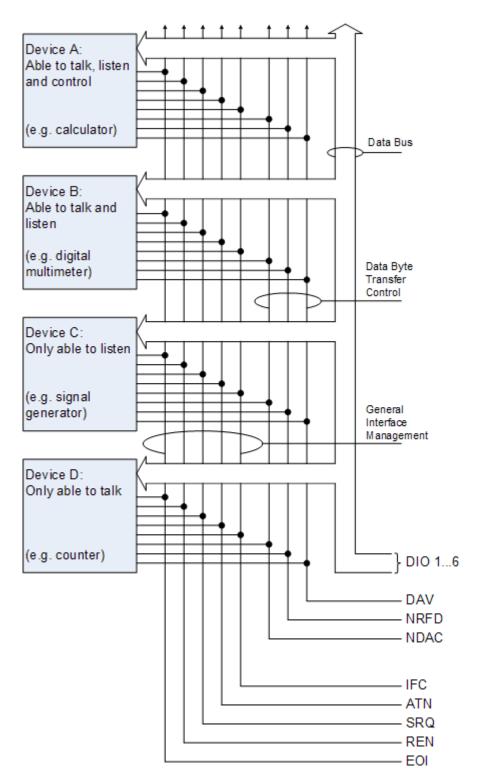


Figure 6-1: Communication lines used by the GPIB interface

Universal Commands

Universal commands are encoded in the range 10 through 1F hex. They affect all instruments connected to the bus and do not require addressing.

Command	Effect on the instrument
DCL (Device Clear)	Aborts the processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument settings.
IFC (Interface Clear) *)	Resets the interfaces to the default setting.
LLO (Local Lockout)	The "Local" softkey is disabled. Manual operation is no longer available until GTL is executed.
SPE (Serial Poll Enable)	Ready for serial poll.
SPD (Serial Poll Disable)	End of serial poll.
PPU (Parallel Poll Unconfigure)	End of the parallel-poll state.
*) IFC is not a real universal command, it is sent via a separate line; however, it also affects all instrume	

^{*)} IFC is not a real universal command, it is sent via a separate line; however, it also affects all instruments connected to the bus and does not require addressing

Addressed Commands

Addressed commands are encoded in the range 00 through 0F hex. They only affect instruments addressed as listeners.

Command	Effect on the instrument
GET (Group Execute Trigger)	Triggers a previously active instrument function (e.g. a sweep). The effect of the command is the same as with that of a pulse at the external trigger signal input.
GTL (Go to Local)	Transition to the "local" state (manual control).
GTR (Go to Remote)	Transition to the "remote" state (remote control).
PPC (Parallel Poll Configure)	Configures the instrument for parallel poll.
SDC (Selected Device Clear)	Aborts the processing of the commands just received and sets the command processing software to a defined initial state. Does not change the instrument setting.

6.4.1.2 SCPI (Standard Commands for Programmable Instruments)

SCPI commands - messages - are used for remote control. Commands that are not taken from the SCPI standard follow the SCPI syntax rules. The R&S FPL1000 supports the SCPI version 1999. The SCPI standard is based on standard IEEE 488.2 and aims at the standardization of device-specific commands, error handling and the status registers. The tutorial "Automatic Measurement Control - A tutorial on SCPI and IEEE 488.2" from John M. Pieper (R&S order number 0002.3536.00) offers detailed information on concepts and definitions of SCPI.

Tables provide a fast overview of the bit assignment in the status registers. The tables are supplemented by a comprehensive description of the status registers.

6.4.1.3 VISA Libraries

VISA is a standardized software interface library providing input and output functions to communicate with instruments. The I/O channel (LAN or TCP/IP, USB, ...) is selected at initialization time by one of the following:

- The channel–specific address string ("VISA resource string") indicated in Table 6-3
- An appropriately defined VISA alias (short name).

A VISA installation is a prerequisite for remote control using the following interfaces:

- "GPIB Interface (IEC 625/IEEE 418 Bus Interface)" on page 171
- "LAN Interface" on page 166

For more information about VISA, refer to the user documentation.

6.4.1.4 Messages

The messages transferred on the data lines are divided into the following categories:

- Interface messages Interface messages are transmitted to the instrument on the data lines, with the attention line being active (LOW). They are used to communicate between the controller and the instrument. Interface messages can only be sent by instruments that have GPIB bus functionality. For details see the sections for the required interface.
- Instrument messages
 Instrument messages are employed in the same way for all interfaces, if not indicated otherwise in the description. Structure and syntax of the instrument messages are described in Chapter 6.4.1.5, "SCPI Command Structure", on page 175. A

are described in Chapter 6.4.1.5, "SCPI Command Structure", on page 175. A detailed description of all messages available for the instrument is provided in the chapter "Remote Control Commands".

There are different types of instrument messages, depending on the direction they are sent:

- Commands
- Instrument responses

Commands

Commands (program messages) are messages the controller sends to the instrument. They operate the instrument functions and request information. The commands are subdivided according to two criteria:

- According to the effect they have on the instrument:
 - Setting commands cause instrument settings such as a reset of the instrument or setting the frequency.
 - Queries cause data to be provided for remote control, e.g. for identification of the instrument or polling a parameter value. Queries are formed by directly appending a question mark to the command header.

- According to their definition in standards:
 - Common commands: their function and syntax are precisely defined in standard IEEE 488.2. They are employed identically on all instruments (if implemented). They refer to functions such as management of the standardized status registers, reset and self-test.
 - Instrument control commands refer to functions depending on the features of the instrument such as frequency settings. Many of these commands have also been standardized by the SCPI committee. These commands are marked as "SCPI confirmed" in the command reference chapters. Commands without this SCPI label are device-specific; however, their syntax follows SCPI rules as permitted by the standard.

Instrument responses

Instrument responses (response messages and service requests) are messages the instrument sends to the controller after a query. They can contain measurement results, instrument settings and information on the instrument status.

6.4.1.5 SCPI Command Structure

SCPI commands consist of a header and, in most cases, one or more parameters. The header and the parameters are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). The headers may consist of several mnemonics (keywords). Queries are formed by appending a question mark directly to the header.

The commands can be either device-specific or device-independent (common commands). Common and device-specific commands differ in their syntax.

Syntax for Common Commands

Common (= device-independent) commands consist of a header preceded by an asterisk (*), and possibly one or more parameters.

Table 6-4: Examples of common commands

*RST	RESET	Resets the instrument.
*ESE	EVENT STATUS ENABLE	Sets the bits of the event status enable registers.
*ESR?	EVENT STATUS QUERY	Queries the contents of the event status register.
*10410	IDENTIFICATION OF IEDV	0
*IDN?	IDENTIFICATION QUERY	Queries the instrument identification string.

Syntax for Device-Specific Commands



Not all commands used in the following examples are necessarily implemented in the instrument. For demonstration purposes only, assume the existence of the following commands for this section:

- DISPlay[:WINDow<1...4>]:MAXimize <Boolean>
- FORMat:READings:DATA <type>[, <length>]
- HCOPy:DEVice:COLor <Boolean>
- HCOPy:DEVice:CMAP:COLor:RGB <red>, <green>, <blue>
- HCOPy[:IMMediate]
- HCOPy: ITEM: ALL
- HCOPy:ITEM:LABel <string>
- HCOPy:PAGE:DIMensions:QUADrant[<N>]
- HCOPy:PAGE:ORIentation LANDscape | PORTrait
- HCOPy:PAGE:SCALe <numeric value>
- MMEMory:COPY <file source>,<file destination>
- SENSE:BANDwidth|BWIDth[:RESolution] <numeric_value>
- SENSe:FREQuency:STOP < numeric value>
- SENSe:LIST:FREQuency <numeric value>{,<numeric value>}

•	Long and short form	176
•	Numeric Suffixes	176
•	Optional Mnemonics	177

Long and short form

The mnemonics feature a long form and a short form. The short form is marked by upper case letters, the long form corresponds to the complete word. Either the short form or the long form can be entered; other abbreviations are not permitted.

Example:

HCOPy: DEVice: COLor ON is equivalent to HCOP: DEV: COL ON.



Case-insensitivity

Upper case and lower case notation only serves to distinguish the two forms in the manual, the instrument itself is case-insensitive.

Numeric Suffixes

If a command can be applied to multiple instances of an object, e.g. specific channels or sources, the required instances can be specified by a suffix added to the command. Numeric suffixes are indicated by angular brackets (<1...4>, <n>, <i>) and are replaced by a single value in the command. Entries without a suffix are interpreted as having the suffix 1.

Example:

Definition: HCOPy: PAGE: DIMensions:QUADrant [<N>]

Command: HCOP: PAGE: DIM: QUAD2

This command refers to the quadrant 2.



Different numbering in remote control

For remote control, the suffix may differ from the number of the corresponding selection used in manual operation. SCPI prescribes that suffix counting starts with 1. Suffix 1 is the default state and used when no specific suffix is specified.

Some standards define a fixed numbering, starting with 0. If the numbering differs in manual operation and remote control, it is indicated for the corresponding command.

Optional Mnemonics

Some command systems permit certain mnemonics to be inserted into the header or omitted. These mnemonics are marked by square brackets in the description. The instrument must recognize the long command to comply with the SCPI standard. Some commands are considerably shortened by these optional mnemonics.

Example:

Definition: HCOPy[:IMMediate]

Command: HCOP: IMM is equivalent to HCOP



Optional mnemonics with numeric suffixes

Do not omit an optional mnemonic if it includes a numeric suffix that is relevant for the effect of the command.

Example:

Definition:DISPlay[:WINDow<1...4>]:MAXimize <Boolean>

Command: DISP: MAX ON refers to window 1.

In order to refer to a window other than 1, you must include the optional WINDow parameter with the suffix for the required window.

DISP: WIND2: MAX ON refers to window 2.

SCPI Parameters

Many commands are supplemented by a parameter or a list of parameters. The parameters must be separated from the header by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank).

The parameters required for each command and the allowed range of values are specified in the command description.

Allowed parameters are:

•	Numeric Values	178
•	Special Numeric Values	178
•	Boolean Parameters	179

•	Text Parameters	179
•	Character Strings	179
•	Block Data	180

Numeric Values

Numeric values can be entered in any form, i.e. with sign, decimal point and exponent. Values exceeding the resolution of the instrument are rounded up or down. The mantissa may comprise up to 255 characters, the exponent must lie inside the value range -32000 to 32000. The exponent is introduced by an "E" or "e". Entry of the exponent alone is not allowed.

Example:

SENS:FREQ:STOP 1500000 = SENS:FREQ:STOP 1.5E6

Units

For physical quantities, the unit can be entered. If the unit is missing, the basic unit is used. Allowed unit prefixes are:

- G (giga)
- MA (mega), MOHM, MHZ
- K (kilo)
- M (milli)
- U (micro)
- N (nano)

Example:

```
SENSe: FREQ: STOP 1.5GHz = SENSe: FREQ: STOP 1.5E9
```

Some settings allow relative values to be stated in percent. According to SCPI, this unit is represented by the PCT string.

Example:

HCOP:PAGE:SCAL 90PCT

Special Numeric Values

The following mnemonics are special numeric values. In the response to a query, the numeric value is provided.

- MIN and MAX: denote the minimum and maximum value.
- DEF: denotes a preset value which has been stored in the EPROM. This value conforms to the default setting, as it is called by the *RST command.
- UP and DOWN: increases or reduces the numeric value by one step. The step
 width can be specified via an allocated step command for each parameter which
 can be set via UP and DOWN.
- INF and NINF: INFinity and negative INFinity (NINF) represent the numeric values 9.9E37 or -9.9E37, respectively. INF and NINF are only sent as instrument responses.

NAN: Not A Number (NAN) represents the value 9.91E37. NAN is only sent as a
instrument response. This value is not defined. Possible causes are the division of
zero by zero, the subtraction of infinite from infinite and the representation of missing values.

Example:

Setting command: SENSe:LIST:FREQ MAXimum

Query: SENS:LIST:FREQ?

Response: 3.5E9



Queries for special numeric values

The numeric values associated to MAXimum/MINimum/DEFault can be queried by adding the corresponding mnemonic after the quotation mark.

Example: SENSe:LIST:FREQ? MAXimum

Returns the maximum numeric value as a result.

Boolean Parameters

Boolean parameters represent two states. The "ON" state (logically true) is represented by "ON" or a numeric value 1. The "OFF" state (logically untrue) is represented by "OFF" or the numeric value 0. The numeric values are provided as the response for a query.

Example:

Setting command: HCOPy: DEV: COL ON

Query: HCOPy: DEV: COL?

Response: 1

Text Parameters

Text parameters observe the syntactic rules for mnemonics, i.e. they can be entered using a short or long form. Like any parameter, they have to be separated from the header by a white space. In the response to a query, the short form of the text is provided.

Example:

Setting command: HCOPy: PAGE: ORIentation LANDscape

Query: HCOP:PAGE:ORI?

Response: LAND

Character Strings

Strings must always be entered in quotation marks (' or ").

Example:

```
HCOP:ITEM:LABel "Test1"
HCOP:ITEM:LABel 'Test1'
```

Block Data

Block data is a format which is suitable for the transmission of large amounts of data. For example, a command using a block data parameter has the following structure:

```
FORMat:READings:DATA #45168xxxxxxxx
```

The ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example the 4 following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all end or other control signs are ignored until all bytes are transmitted.

#0 specifies a data block of indefinite length. The use of the indefinite format requires a NL^END message to terminate the data block. This format is useful when the length of the transmission is not known or if speed or other considerations prevent segmentation of the data into blocks of definite length.

Overview of Syntax Elements

The following tables provide an overview of the syntax elements and special characters.

Table 6-5: Syntax elements

:	The colon separates the mnemonics of a command.
;	The semicolon separates two commands of a command line. It does not alter the path.
,	The comma separates several parameters of a command.
?	The question mark forms a query.
*	The asterisk marks a common command.
	Quotation marks introduce a string and terminate it (both single and double quotation marks are possible).
#	The hash symbol introduces binary, octal, hexadecimal and block data. • Binary: #B10110 • Octal: #O7612 • Hexa: #HF3A7 • Block: #21312
	A "white space" (ASCII-Code 0 to 9, 11 to 32 decimal, e.g. blank) separates the header from the parameters.

Table 6-6: Special characters

Parameters

A vertical stroke in parameter definitions indicates alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.

Example:

Definition: HCOPy: PAGE: ORIentation LANDscape | PORTrait

Command HCOP: PAGE: ORI LAND specifies landscape orientation

Command HCOP: PAGE: ORI PORT specifies portrait orientation

Mnemonics

A selection of mnemonics with an identical effect exists for several commands. These mnemonics are indicated in the same line; they are separated by a vertical stroke. Only one of these mnemonics needs to be included in the header of the command. The effect of the command is independent of which of the mnemonics is used.

Example:

DefinitionSENSE:BANDwidth|BWIDth[:RESolution] <numeric value>

The two following commands with identical meaning can be created:

```
SENS:BAND:RES 1
SENS:BWID:RES 1
```

[] Mnemonics in square brackets are optional and may be inserted into the header or omitted.

```
Example: HCOPy[:IMMediate]
HCOP: IMM is equivalent to HCOP
```

Parameters in curly brackets are optional and can be inserted once or several times, or omitted.

```
Example: SENSe:LIST:FREQuency <numeric value>{, <numeric value>}
```

The following are valid commands:

```
SENS:LIST:FREQ 10
SENS:LIST:FREQ 10,20
SENS:LIST:FREQ 10,20,30,40
```

Structure of a Command Line

A command line may consist of one or several commands. It is terminated by one of the following:

- <New Line>
- <New Line> with EOI
- EOI together with the last data byte

Several commands in a command line must be separated by a semicolon ";".

Example:

```
MMEM:COPY "Test1", "MeasurementXY";:HCOP:ITEM ALL
```

This command line contains two commands. The first command belongs to the MMEM system, the second command belongs to the HCOP system. If the next command belongs to a different command system, the semicolon is followed by a colon.

Example:

HCOP: ITEM ALL; : HCOP: IMM

This command line contains two commands. Both commands are part of the HCOP command system, i.e. they have one level in common.

If the successive commands belong to the same system, having one or several levels in common, the command line can be abbreviated. When abbreviating the command line, the second command begins with the level below HCOP. The colon after the semi-colon is omitted. The abbreviated form of the command line reads as follows:

HCOP: ITEM ALL; IMM

Example:

HCOP:ITEM ALL HCOP:IMM

A new command line always begins with the complete path.

Responses to Queries

A query is defined for each setting command unless explicitly specified otherwise. It is formed by adding a question mark to the associated setting command. According to SCPI, the responses to queries are partly subject to stricter rules than in standard IEEE 488.2.

The requested parameter is transmitted without a header.

Example: HCOP: PAGE: ORI?, Response: LAND

 Maximum values, minimum values and all other quantities that are requested via a special text parameter are returned as numeric values.

Example: SENSe: FREQuency: STOP? MAX, Response: 3.5E9

- Numeric values are output without a unit. Physical quantities are referred to the basic units or to the units set using the Unit command. The response 3.5E9 in the previous example stands for 3.5 GHz.
- Truth values (Boolean values) are returned as 0 (for OFF) and 1 (for ON).

Example:

Setting command: HCOPy: DEV: COL ON

Query: HCOPy: DEV: COL?

Response: 1

Text (character data) is returned in a short form.

Example:

Setting command: HCOPy: PAGE: ORIentation LANDscape

Query: HCOP: PAGE: ORI?

Response: LAND

Invalid numerical results

In some cases, particularly when a result consists of multiple numeric values, invalid values are returned as 9.91E37 (not a number).

6.4.1.6 Command Sequence and Synchronization

IEEE 488.2 defines a distinction between overlapped and sequential commands:

- A sequential command is one which finishes executing before the next command starts executing. Commands that are processed quickly are usually implemented as sequential commands.
- An overlapping command is one which does not automatically finish executing
 before the next command starts executing. Usually, overlapping commands take
 longer to process and allow the program to do other tasks while being executed. If
 overlapping commands do have to be executed in a defined order, e.g. in order to
 avoid wrong measurement results, they must be serviced sequentially. This is
 called synchronization between the controller and the instrument.

Setting commands within one command line, even though they may be implemented as sequential commands, are not necessarily serviced in the order in which they have been received. In order to make sure that commands are actually carried out in a certain order, each command must be sent in a separate command line.

Example: Commands and queries in one message

The response to a query combined in a program message with commands that affect the queried value is not predictable.

The following commands always return the specified result:

:FREQ:STAR 1GHZ; SPAN 100; :FREQ:STAR?

Result:

1000000000 (1 GHz)

Whereas the result for the following commands is not specified by SCPI:

```
:FREQ:STAR 1GHz;STAR?;SPAN 1000000
```

The result could be the value of STARt before the command was sent since the instrument might defer executing the individual commands until a program message terminator is received. The result could also be 1 GHz if the instrument executes commands as they are received.



As a general rule, send commands and queries in different program messages.

Example: Overlapping command with *OPC

The instrument implements <code>INITiate[:IMMediate]</code> as an overlapped command. Assuming that <code>INITiate[:IMMediate]</code> takes longer to execute than <code>*OPC</code>, sending the following command sequence results in initiating a sweep and, after some time, setting the <code>OPC</code> bit in the <code>ESR</code>:

INIT; *OPC.

Sending the following commands still initiates a sweep:

INIT; *OPC; *CLS

However, since the operation is still pending when the instrument executes *CLS, forcing it into the "Operation Complete Command Idle" State (OCIS), *OPC is effectively skipped. The OPC bit is not set until the instrument executes another *OPC command.

Preventing Overlapping Execution

To prevent an overlapping execution of commands, one of the commands $\star \texttt{OPC}$, $\star \texttt{OPC}$? or $\star \texttt{WAI}$ can be used. All three commands cause a certain action only to be carried out after the hardware has been set. The controller can be forced to wait for the corresponding action to occur.

Table 6-7: Synchronization using *OPC, *OPC? and *WAI

Com- mand	Action	Programming the controller
*OPC	Sets the Operation Complete bit in the ESR after all previous commands have been executed.	 Setting bit 0 in the ESE Setting bit 5 in the SRE Waiting for service request (SRQ)
*OPC?	Stops command processing until 1 is returned. This occurs when all pending operations are completed.	Send *OPC? directly after the command whose processing must be terminated before other commands can be executed.
*WAI	Stops further command processing until all commands sent before *WAI have been executed.	Send *WAI directly after the command whose processing must be terminated before other commands are executed.

Command synchronization using *WAI or *OPC? is a good choice if the overlapped command takes only little time to process. The two synchronization commands simply block overlapped execution of the command. Append the synchronization command to the overlapping command, for example:

SINGle; *OPC?

For time consuming overlapped commands, you can allow the controller or the instrument to do other useful work while waiting for command execution. Use one of the following methods:

*OPC with a service request

- 1. Set the OPC mask bit (bit no. 0) in the ESE: *ESE 1
- 2. Set bit no. 5 in the SRE: *SRE 32 to enable ESB service request.
- 3. Send the overlapped command with *OPC .

4. Wait for a service request.

The service request indicates that the overlapped command has finished.

*OPC? with a service request

- 1. Set bit no. 4 in the SRE: *SRE 16 to enable MAV service request.
- 2. Send the overlapped command with *OPC?.
- 3. Wait for a service request.

The service request indicates that the overlapped command has finished.

Event status register (ESE)

- 1. Set the OPC mask bit (bit no. 0) in the ESE: *ESE 1
- 2. Send the overlapped command without *OPC, *OPC? or *WAI.
- 3. Poll the operation complete state periodically (with a timer) using the sequence: *OPC; *ESR?

A return value (LSB) of 1 indicates that the overlapped command has finished.

6.4.1.7 Status Reporting System

The status reporting system stores all information on the current operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue. Both can be queried via GPIB bus or LAN interface (STATus... commands.

(See Chapter 8.11, "Using the Status Register", on page 843).

•	Hierarchy of Status Registers	185
	Structure of a SCPI Status Register	
	Contents of the Status Registers	
	Application of the Status Reporting System	
	Reset Values of the Status Reporting System	

Hierarchy of Status Registers

As shown in the following figure, the status information is of hierarchical structure.

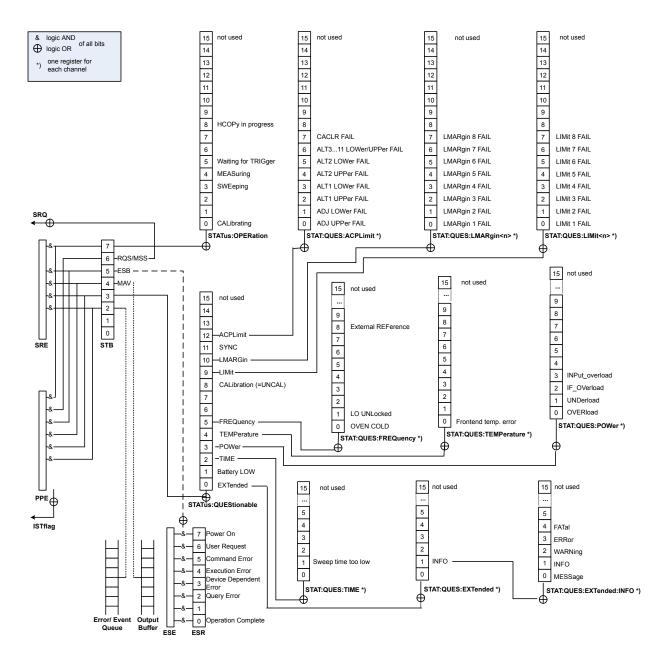


Figure 6-2: Graphical overview of the R&S FPL1000 status registers hierarchy

STB, SRE

The STatus Byte (STB) register and its associated mask register Service Request Enable (SRE) form the highest level of the status reporting system. The STB provides a rough overview of the instrument status, collecting the information of the lower-level registers.

ESR, SCPI registers

The STB receives its information from the following registers:

- The Event Status Register (ESR) with the associated mask register standard Event Status Enable (ESE).
- The STATus: OPERation and STATus: QUEStionable registers which are defined by SCPI and contain detailed information on the instrument.

• IST, PPE

The IST flag ("Individual STatus"), like the SRQ, combines the entire instrument status in a single bit. The PPE fulfills the same function for the IST flag as the SRE for the service request.

Output buffer

The output buffer contains the messages the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB and thus is represented in the overview.

All status registers have the same internal structure.



SRE, ESE

The service request enable register SRE can be used as ENABle part of the STB if the STB is structured according to SCPI. By analogy, the ESE can be used as the ENABle part of the ESR.

Structure of a SCPI Status Register

Each standard SCPI register consists of 5 parts. Each part has a width of 16 bits and has different functions. The individual bits are independent of each other, i.e. each hardware status is assigned a bit number which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus the contents of the register parts can be processed by the controller as positive integers.

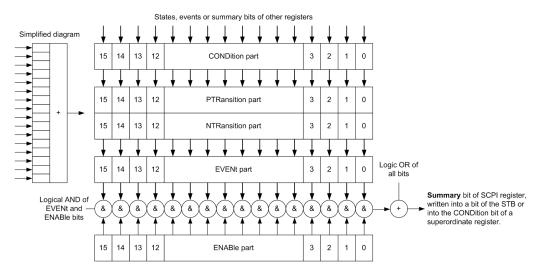


Figure 6-3: The status-register model

Description of the five status register parts

The five parts of a SCPI register have different properties and functions:

CONDition

The CONDition part is written into directly by the hardware or the sum bit of the next lower register. Its contents reflect the current instrument status. This register part can only be read, but not written into or cleared. Its contents are not affected by reading.

PTRansition / NTRansition

The two transition register parts define which state transition of the CONDition part (none, 0 to 1, 1 to 0 or both) is stored in the EVENt part.

The **Positive-TRansition** part acts as a transition filter. When a bit of the CONDition part is changed from 0 to 1, the associated PTR bit decides whether the EVENt bit is set to 1.

- PTR bit =1: the EVENt bit is set.
- PTR bit =0: the EVENt bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

The **Negative-TRansition** part also acts as a transition filter. When a bit of the CONDition part is changed from 1 to 0, the associated NTR bit decides whether the EVENt bit is set to 1.

- NTR bit =1: the EVENt bit is set.
- NTR bit =0: the EVENt bit is not set.

This part can be written into and read as required. Its contents are not affected by reading.

EVENt

The EVENt part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the transition filters. It is permanently updated by the instrument. This part can only be read by the user. Reading the register clears it. This part is often equated with the entire register.

ENABle

The ENABle part determines whether the associated EVENt bit contributes to the sum bit (see below). Each bit of the EVENt part is "ANDed" with the associated ENABle bit (symbol '&'). The results of all logical operations of this part are passed on to the sum bit via an "OR" function (symbol '+').

ENABle bit = 0: the associated EVENt bit does not contribute to the sum bit ENABle bit = 1: if the associated EVENt bit is "1", the sum bit is set to "1" as well. This part can be written into and read by the user as required. Its contents are not affected by reading.

Sum bit

The sum bit is obtained from the EVENt and ENABle part for each register. The result is then entered into a bit of the CONDition part of the higher-order register.

The instrument automatically generates the sum bit for each register. Thus an event can lead to a service request throughout all levels of the hierarchy.

Contents of the Status Registers

In the following sections, the contents of the status registers are described in more detail.



STATus:QUEStionable:SYNC register

The STATUS: QUEStionable: SYNC register is used by the R&S FPL1000 applications and is described in the individual sections (manuals) for each application.

•	Status Byte (STB) and Service Request Enable Register (SRE)	189
•	IST Flag and Parallel Poll Enable Register (PPE)	190
•	Event Status Register (ESR) and Event Status Enable Register (ESE)	190
•	STATus:OPERation Register	191
•	STATus:QUEStionable Register	192
•	STATus:QUEStionable:ACPLimit Register	193
•	STATus:QUEStionable:EXTended Register	194
•	STATus:QUEStionable:EXTended:INFO Register	194
	STATus:QUEStionable:FREQuency Register	
•	STATus:QUEStionable:LIMit Register	195
	STATus:QUEStionable:LMARgin Register	
•	STATus:QUEStionable:POWer Register	197
	STATus:QUEStionable:TIMe Register	

Status Byte (STB) and Service Request Enable Register (SRE)

The STatus Byte (STB) is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STB can thus be compared with the CONDition part of an SCPI register and assumes the highest level within the SCPI hierarchy.

The STB is read using the command *STB? or a serial poll.

The STatus Byte (STB) is linked to the Service Request Enable (SRE) register. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated. The SRE can be set using the command *SRE and read using the command *SRE?.

Table 6-8: Meaning of the bits used in the status byte

Bit No.	Meaning
01	Not used
2	Error Queue not empty
	The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUEStionable status register summary bit
	The bit is set if an EVENt bit is set in the QUEStionable status register and the associated ENABle bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by querying the STATUS: QUESTIONABLE status register.

Bit No.	Meaning
4	MAV bit (message available)
	The bit is set if a message is available in the output queue which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit
	Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (master status summary bit)
	The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.
7	STATus:OPERation status register summary bit
	The bit is set if an EVENt bit is set in the OPERation status register and the associated ENABle bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by querying the STATus:OPERation status register.

IST Flag and Parallel Poll Enable Register (PPE)

As with the SRQ, the IST flag combines the entire status information in a single bit. It can be read by means of a parallel poll (see "Parallel Poll" on page 199) or using the command *IST?.

The parallel poll enable register (PPE) determines which bits of the STB contribute to the IST flag. The bits of the STB are "ANDed" with the corresponding bits of the PPE, with bit 6 being used as well in contrast to the SRE. The IST flag results from the "ORing" of all results. The PPE can be set using commands *PRE and read using command *PRE?.

Event Status Register (ESR) and Event Status Enable Register (ESE)

The ESR is defined in IEEE 488.2. It can be compared with the EVENt part of a SCPI register. The event status register can be read out using command *ESR?.

The ESE corresponds to the ENABle part of a SCPI register. If a bit is set in the ESE and the associated bit in the ESR changes from 0 to 1, the ESB bit in the STB is set. The ESE register can be set using the command *ESE and read using the command *ESE?

Table 6-9: Meaning of the bits used in the event status register

Bit No.	Meaning
0	Operation Complete
	This bit is set on receipt of the command *OPC exactly when all previous commands have been executed.
1	Not used
2	Query Error This bit is set if either the controller wants to read data from the instrument without having sent a query, or if it does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.

Bit No.	Meaning
3	Device-dependent Error
	This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which denotes the error in greater detail, is entered into the error queue.
4	Execution Error
	This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.
5	Command Error
	This bit is set if a command is received, which is undefined or syntactically incorrect. An error message with a number between -100 and -200, which denotes the error in greater detail, is entered into the error queue.
6	User Request
	This bit is set when the instrument is switched over to manual control.
7	Power On (supply voltage on)
	This bit is set on switching on the instrument.

STATus:OPERation Register

The STATus: OPERation register contains information on current activities of the R&S FPL. It also contains information on activities that have been executed since the last read out.

You can read out the register with STATus:OPERation:CONDition? or STATus: OPERation[:EVENt]?.

Table 6-10: Meaning of the bits used in the STATus: OPERation register

Bit No.	Meaning
0	CALibrating
	This bit is set as long as the instrument is performing a self-alignment.
1-2	Not used
3	SWEeping Sweep is being performed in base unit (applications are not considered); identical to bit 4 In applications, this bit is not used.
4	MEASuring Measurement is being performed in base unit (applications are not considered); identical to bit 3 In applications, this bit is not used.
5	Waiting for TRIgger Instrument is ready to trigger and waiting for trigger signal.
6-7	Not used
8	HardCOPy in progress This bit is set while the instrument is printing a hardcopy.
9	not used

Bit No.	Meaning
10-14	Not used
15	This bit is always 0.

STATus: QUEStionable Register

The STATus:QUEStionable register contains information on instrument states that do not meet the specifications.



The STAT: QUES: SYNC register is used by the applications and is thus described in the individual applications' User Manuals.

You can read out the register with STAT: QUES: COND or STAT: QUES: EVEN.



The STATus:QUEStionable register "sums up" the information from all subregisters (e.g. bit 2 sums up the information for all STATus:QUEStionable:TIMe registers). For some subregisters, there may be separate registers for each active channel. Thus, if a status bit in the STATus:QUEStionable register indicates an error, the error may have occurred in any of the channel-specific subregisters. In this case, you must check the subregister of each channel to determine which channel caused the error. By default, querying the status of a subregister always returns the result for the currently selected channel.

Table 6-11: Meaning of the bits used in the STATus:QUEStionable register

Bit No.	Meaning
0	Unused
1	"Battery LOW" This bit is set if the battery needs to be charged or a fixed power supply must be connected to the R&S FPL1000 to continue operation.
2	"TIMe" This bit is set if a time error occurs in any of the active channels. The STATus:QUEStionable:TIMe Register provides more information on the error type.
3	"POWer" This bit is set if the measured power level in any of the active channels is questionable. The STATus:QUEStionable:POWer Register provides more information on the error type.
4	"TEMPerature" This bit is set if the temperature is questionable.
5	"FREQuency" This bit is set if there is anything wrong with the frequency of the local oscillator or the reference frequency in any of the active channels. The STATus:QUEStionable:FREQuency Register provides more information on the error type.
6 - 7	Unused

Bit No.	Meaning
8	"CALibration"
	This bit is set if the R&S FPL1000 is unaligned ("UNCAL" display)
9	"LIMit" (device-specific)
	This bit is set if a limit value is violated in any of the active channels in any window.
	The STATus:QUEStionable:LIMit Register provides more information on the error type.
10	"LMARgin" (device-specific)
	This bit is set if a margin is violated in any of the active channels in any window.
	The STATus:QUEStionable:LMARgin Register provides more information on the error type.
11	"SYNC" (device-specific)
	This bit is set if the R&S FPL1000 is not synchronized to the signal that is applied.
	The R&S FPL1000 is not synchronized if:
	it cannot synchronize to midamble during a measurement or premeasurement it cannot find a burst during a measurement or premeasurement
	the results deviate too much from the expected value during premeasurements
12	"ACPLimit" (device-specific)
	This bit is set if a limit during ACLR measurements is violated in any of the active channels.
	The STATus:QUEStionable:ACPLimit Register provides more information on the error type.
13-14	Unused
15	This bit is always 0.

STATus: QUEStionable: ACPLimit Register

Available for the Spectrum application.

The STATus:QUEStionable:ACPLimit register contains information about the results of a limit check during ACLR measurements. A separate ACPLimit register exists for each active channel.

You can read out the register with STATus: QUEStionable: ACPLimit: CONDition? or STATus: QUEStionable: ACPLimit[:EVENt]?

Table 6-12: Meaning of the bits used in the STATus:QUEStionable:ACPLimit register

Bit No.	Meaning
0	ADJ UPPer FAIL This bit is set if the limit is exceeded in the upper adjacent channel
1	ADJ LOWer FAIL This bit is set if the limit is exceeded in the lower adjacent channel.
2	ALT1 UPPer FAIL This bit is set if the limit is exceeded in the upper 1st alternate channel.
3	ALT1 LOWer FAIL This bit is set if the limit is exceeded in the lower 1st alternate channel.
4	ALT2 UPPer FAIL This bit is set if the limit is exceeded in the upper 2nd alternate channel.

Bit No.	Meaning
5	ALT2 LOWer FAIL This bit is set if the limit is exceeded in the lower 2nd alternate channel.
6	ALT3 11 LOWer/UPPer FAIL This bit is set if the limit is exceeded in one of the lower or upper alternate channels 3 11.
7	CACLR FAIL This bit is set if the CACLR limit is exceeded in one of the gap channels.
8-14	Unused
15	This bit is always 0.

STATus:QUEStionable:EXTended Register

The STATUS: QUEStionable: EXTended register contains further status information not covered by the other status registers of the R&S FPL. A separate EXTended register exists for each active channel.

You can read out the register with STATus:QUEStionable:EXTended:CONDition? or STATus:QUEStionable:EXTended[:EVENt]?

Table 6-13: Meaning of the bits used in the STATus:QUEStionable:EXTended register

Bit No.	Meaning
0	not used
1	INFO
	This bit is set if a status message is available for the application.
	Which type of message occurred is indicated in the STATus:QUEStionable:EXTended:INFO Register.
2 to 14	Unused
15	This bit is always 0.

STATus:QUEStionable:EXTended:INFO Register

The STATus:QUEStionable:EXTended:INFO register contains information on the type of messages that occur during operation of the R&S FPL. A separate INFO register exists for each active channel.

You can read out the register with STATus:QUEStionable:EXTended:INFO: CONDition? or STATus:QUEStionable:EXTended:INFO[:EVENt]?. You can query all messages that occur for a specific channel using the command SYSTem: ERRor:EXTended? on page 839.

Table 6-14: Meaning of the bits used in the STATus:QUEStionable:EXTended:INFO register

Bit No.	Meaning
0	MESSage
	This bit is set if event or state has occurred that may lead to an error during further operation.
1	INFO
	This bit is set if an informational status message is available for the application.

Bit No.	Meaning
2	WARNing
	This bit is set if an irregular situation occurs during measurement, e.g. the settings no longer match the displayed results, or the connection to an external device was interrupted temporarily.
3	ERRor
	This bit is set if an error occurs during a measurement, e.g. due to missing data or wrong settings, so that the measurement cannot be completed correctly.
4	FATal
	This bit is set if a serious error occurs in the application and regular operation is no longer possible.
5 to 14	Unused
15	This bit is always 0.

STATus:QUEStionable:FREQuency Register

The STATus:QUEStionable:FREQuency register contains information about the condition of the local oscillator and the reference frequency. A separate frequency register exists for each active channel.

You can read out the register with STATus:QUEStionable:FREQuency: CONDition? or STATus:QUEStionable:FREQuency[:EVENt]?.

Table 6-15: Meaning of the bits used in the STATus:QUEStionable:FREQuency register

Bit No.	Meaning
0	OVEN COLD
	This bit is set if the reference oscillator has not yet attained its operating temperature. "OCXO" is displayed.
1	LO UNLocked
	This bit is set if the local oscillator no longer locks. "LOUNL" is displayed.
2 to 7	Not used
8	EXTernalREFerence
	This bit is set if you have selected an external reference oscillator but did not connect a useable external reference source.
	In that case the synthesizer can not lock. The frequency in all probability is not accurate.
9 to 14	Not used
15	This bit is always 0.

STATus:QUEStionable:LIMit Register

The STATus:QUEStionable:LIMit register contains information about the results of a limit check when you are working with limit lines.

A separate LIMit register exists for each active channel and for each window.

You can read out the register with STATus:QUEStionable:LIMit<n>:CONDition? or STATus:QUEStionable:LIMit<n>[:EVENt]?.

Table 6-16: Meaning of the bits used in the STATus: QUEStionable: LIMit register

Bit No.	Meaning
0	LIMit 1 FAIL
	This bit is set if limit line 1 is violated.
1	LIMit 2 FAIL
	This bit is set if limit line 2 is violated.
2	LIMit 3 FAIL
	This bit is set if limit line 3 is violated.
3	LIMit 4 FAIL
	This bit is set if limit line 4 is violated.
4	LIMit 5 FAIL
	This bit is set if limit line 5 is violated.
5	LIMit 6 FAIL
	This bit is set if limit line 6 is violated.
6	LIMit 7 FAIL
	This bit is set if limit line 7 is violated.
7	LIMit 8 FAIL
	This bit is set if limit line 8 is violated.
8 to 14	Unused
15	This bit is always 0.

STATus:QUEStionable:LMARgin Register

This register contains information about the observance of limit margins.

A separate LMARgin register exists for each active channel and for each window.

It can be read using the commands

STATus:QUEStionable:LMARgin:CONDition? and STATus:QUEStionable:LMARgin[:EVENt]?.

Table 6-17: Meaning of the bits used in the STATus: QUEStionable: LMARgin register

Bit No.	Meaning
0	LMARgin 1 FAIL
	This bit is set if limit margin 1 is violated.
1	LMARgin 2 FAIL
	This bit is set if limit margin 2 is violated.
2	LMARgin 3 FAIL
	This bit is set if limit margin 3 is violated.
3	LMARgin 4 FAIL
	This bit is set if limit margin 4 is violated.
4	LMARgin 5 FAIL
	This bit is set if limit margin 5 is violated.

Bit No.	Meaning
5	LMARgin 6 FAIL This bit is set if limit margin 6 is violated.
6	LMARgin 7 FAIL This bit is set if limit margin 7 is violated.
7	LMARgin 8 FAIL This bit is set if limit margin 8 is violated.
8 to 14	Not used
15	This bit is always 0.

STATus:QUEStionable:POWer Register

The STATus:QUEStionable: POWer register contains information about possible overload situations that may occur during operation of the R&S FPL. A separate power register exists for each active channel.

You can read out the register with STATus:QUEStionable:POWer:CONDition? or STATus:QUEStionable:POWer[:EVENt]?

Table 6-18: Meaning of the bits used in the STATus:QUEStionable:POWer register

Bit No.	Meaning
0	OVERload
	This bit is set if an overload occurs at the RF input, causing signal distortion but not yet causing damage to the device.
	The R&S FPL1000 displays the keyword "RF OVLD".
1	Unused
2	IF_OVerload
	This bit is set if an overload occurs in the IF path.
	The R&S FPL1000 displays the keyword "IF OVLD".
3	Input Overload
	This bit is set if the signal level at the RF input connector exceeds the maximum.
	The RF input is disconnected from the input mixer to protect the device. In order to re-enable measurement, decrease the level at the RF input connector and reconnect the RF input to the mixer input.
	For details on the protection mechanism see "RF Input Protection" on page 368 or INPut <ip>:ATTenuation:PROTection:RESet on page 676.</ip>
	The R&S FPL1000 displays the keyword "INPUT OVLD".
4 to 14	Unused
15	This bit is always 0.

STATus:QUEStionable:TIMe Register

The STATus: QUEStionable: TIMe register contains information about possible time errors that may occur during operation of the R&S FPL. A separate time register exists for each active channel.

You can read out the register with STATus:QUEStionable:TIME:CONDition? or STATus:QUEStionable:TIME[:EVENt]?

Table 6-19: Meaning of the bits used in the STATus: QUEStionable: TIMe register

Bit No.	Meaning
0	not used
1	Sweep time too low This bit is set if the sweep time is too low.
2 to 14	Unused
15	This bit is always 0.

Application of the Status Reporting System

The purpose of the status reporting system is to monitor the status of one or several devices in a measuring system. To do this and react appropriately, the controller must receive and evaluate the information of all devices. The following standard methods are used:

- Service request (SRQ) initiated by the instrument
- **Serial poll** of all devices in the bus system, initiated by the controller in order to find out who sent a SRQ and why
- Parallel poll of all devices
- Query of a **specific instrument status** by means of commands
- Query of the error queue

Service Request

Under certain circumstances, the instrument can send a service request (SRQ) to the controller. A service request is a request from an instrument for information, advice or treatment by the controller. Usually this service request initiates an interrupt at the controller, to which the control program can react appropriately. As evident from Figure 6-2, an SRQ is always initiated if one or several of bits 2, 3, 4, 5 or 7 of the status byte are set and enabled in the SRE. Each of these bits combines the information of a further register, the error queue or the output buffer. The ENABle parts of the status registers can be set such that arbitrary bits in an arbitrary status register initiate an SRQ. In order to make use of the possibilities of the service request effectively, all bits should be set to "1" in enable registers SRE and ESE.

The service request is the only possibility for the instrument to become active on its own. Each controller program should cause the instrument to initiate a service request if errors occur. The program should react appropriately to the service request.

Use of the command *OPC to generate an SRQ at the end of a sweep

- CALL InstrWrite (analyzer, "*ESE 1") 'Set bit 0 in the ESE (Operation Complete)
- 2. CALL InstrWrite(analyzer, "*SRE 32") 'Set bit 5 in the SRE (ESB)

 CALL InstrWrite(analyzer, "*INIT; *OPC") 'Generate an SRQ after operation complete

After its settings have been completed, the instrument generates an SRQ.

A detailed example for a service request routine is provided in Chapter 8.11.7, "Service Request", on page 847.

Serial Poll

In a serial poll, just as with command *STB, the status byte of an instrument is queried. However, the query is realized via interface messages and is thus clearly faster.

The serial poll method is defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works for instruments which do not adhere to SCPI or IEEE 488.2.

The serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the controller.

Parallel Poll

In a parallel poll, up to eight instruments are simultaneously requested by the controller using a single command to transmit 1 bit of information each on the data lines, i.e., to set the data line allocated to each instrument to a logical "0" or "1".

In addition to the SRE register, which determines the conditions under which an SRQ is generated, there is a Parallel Poll Enable register (PPE) which is ANDed with the STB bit by bit, considering bit 6 as well. This register is ANDed with the STB bit by bit, considering bit 6 as well. The results are ORed, the result is possibly inverted and then sent as a response to the parallel poll of the controller. The result can also be queried without parallel poll using the command *IST?

The instrument first has to be set for the parallel poll using the command PPC. This command allocates a data line to the instrument and determines whether the response is to be inverted. The parallel poll itself is executed using PPE.

The parallel poll method is mainly used to find out quickly which one of the instruments connected to the controller has sent a service request. To this effect, SRE and PPE must be set to the same value.

Query of an instrument status

Each part of any status register can be read using queries. There are two types of commands:


- The common commands *ESR?, *IDN?, *IST?, *STB? query the higher-level registers.
- The commands of the STATus system query the SCPI registers (STATus:QUEStionable...)

The returned value is always a decimal number that represents the bit pattern of the queried register. This number is evaluated by the controller program.

Queries are usually used after an SRQ in order to obtain more detailed information on the cause of the SRQ.

Decimal representation of a bit pattern

The STB and ESR registers contain 8 bits, the SCPI registers 16 bits. The contents of a status register are specified and transferred as a single decimal number. To make this possible, each bit is assigned a weighted value. The decimal number is calculated as the sum of the weighted values of all bits in the register that are set to 1.

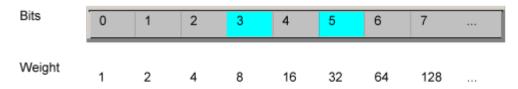

Example:

The decimal value 40 = 32 + 8 indicates that bits no. 3 and 5 in the status register (e.g. the QUEStionable status summary bit and the ESB bit in the STatus Byte) are set.

Error Queue

Each error state in the instrument leads to an entry in the error queue. The entries of the error queue are detailed plain text error messages that can be looked up in the Error Log or queried via remote control using SYSTem:ERROr[:NEXT]? Each call of SYSTem:ERROr[:NEXT]? provides one entry from the error queue. If no error messages are stored there any more, the instrument responds with 0, "No error".

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

Reset Values of the Status Reporting System

The following table contains the different commands and events causing the status reporting system to be reset. None of the commands, except *RST and SYSTem: PRESet, influence the functional instrument settings. In particular, DCL does not change the instrument settings.

Table 6-20: Resetting the status reporting system

Event	Switching on supply voltage Power-On-Status- Clear		DCL, SDC (Device Clear,	*RST or SYS- Tem:PRE Set	STA- Tus:PRE- Set	*CLS
Effect	0	1	Selected Device Clear)			
Clear STB, ESR	-	yes	-	-	-	yes
Clear SRE, ESE	-	yes	-	-	-	-
Clear PPE	-	yes	-	-	-	-
Clear EVENt parts of the registers	-	yes	-	-	-	yes
Clear ENABle parts of all OPERation and QUEStionable registers;	-	yes	-	-	yes	-
Fill ENABle parts of all other registers with "1".						
Fill PTRansition parts with "1"; Clear NTRansition parts	-	yes	-	-	yes	-
Clear error queue	yes	yes	-	-	-	yes
Clear output buffer	yes	yes	yes	1)	1)	1)
Clear command processing and input buffer	yes	yes	yes	-	-	-

¹⁾ The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.

6.4.1.8 General Programming Recommendations

Initial instrument status before changing settings

Manual operation is designed for maximum possible operating convenience. In contrast, the priority of remote control is the "predictability" of the instrument status. Thus, when a command attempts to define incompatible settings, the command is ignored and the instrument status remains unchanged, i.e. other settings are not automatically adapted. Therefore, control programs should always define an initial instrument status (e.g. using the *RST command) and then implement the required settings.

Command sequence

As a general rule, send commands and queries in different program messages. Otherwise, the result of the query may vary depending on which operation is performed first (see also "Preventing Overlapping Execution" on page 184).

Reacting to malfunctions

The service request is the only possibility for the instrument to become active on its own. Each controller program should instruct the instrument to initiate a service request in case of malfunction. The program should react appropriately to the service request.

Error queues

The error queue should be queried after every service request in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

6.4.2 Network and Remote Control Settings

Access: [SETUP] > "Network + Remote"

The remote commands required to define these settings are described in Chapter 8.10.6, "Configuring the Network and Remote Control", on page 833.

Step-by-step instructions are provided in Chapter 6.4.3, "How to Set Up a Network and Remote Control", on page 212.

•	General Network Settings	202
	Remote Settings	
	Compatibility Settings	
	LXI Settings	
	Remote Errors	
	Returning to Manual Mode ("Local")	

6.4.2.1 General Network Settings

Access: [SETUP] > "Network + Remote" > "Network" tab


The R&S FPL1000 can be operated in a local area network (LAN), for example to control the instrument from a remote PC or use a network printer.

NOTICE

Risk of network problems

All parameters can be edited here; however, beware that changing the computer name has major effects in a network.

For details, see Chapter 6.4.3, "How to Set Up a Network and Remote Control", on page 212.

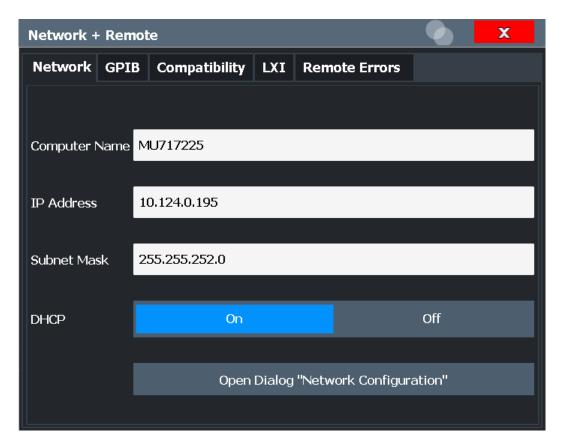

Computer Name	203
IP Address	204
Subnet Mask	204
DHCP	204
Network Configuration	

Computer Name

Each instrument is delivered with an assigned computer name, but this name can be changed. The naming conventions of Windows apply. If too many characters and/or numbers are entered, an error message is displayed in the status line.

The default instrument name is a non-case-sensitive string with the following syntax:

<Type><variant>-<serial_number>

For example FPL1003-123456

The serial number can be found on the rear panel of the instrument. It is the third part of the device ID printed on the bar code sticker:



IP Address

Defines the IP address. The TCP/IP protocol is preinstalled with the IP address 10.0.0.10. If the DHCP server is available ("DHCP On"), the setting is read-only.

The IP address consists of four number blocks separated by dots. Each block contains 3 numbers in maximum (e.g. 100.100.100.100), but also one or two numbers are allowed in a block (as an example see the preinstalled address).

Subnet Mask

Defines the subnet mask. The TCP/IP protocol is preinstalled with the subnet mask 255.255.255.0. If the DHCP server is available ("DHCP On"), this setting is read-only.

The subnet mask consists of four number blocks separated by dots. Each block contains 3 numbers in maximum (e.g. 100.100.100.100), but also one or two numbers are allowed in a block (as an example see the preinstalled address).

DHCP

Switches between DHCP server available (On) or not available (Off). If a DHCP server is available in the network, the IP address and subnet mask of the instrument are obtained automatically from the DHCP server.

Network Configuration


Opens the standard Windows "Network Configuration" dialog box for further configuration.

6.4.2.2 Remote Settings

Access: [Setup] > "Network + Remote" > "Remote" tab



GPIB-specific settings are only available if option R&S FPL1-B10 is installed on the R&S FPL1000.

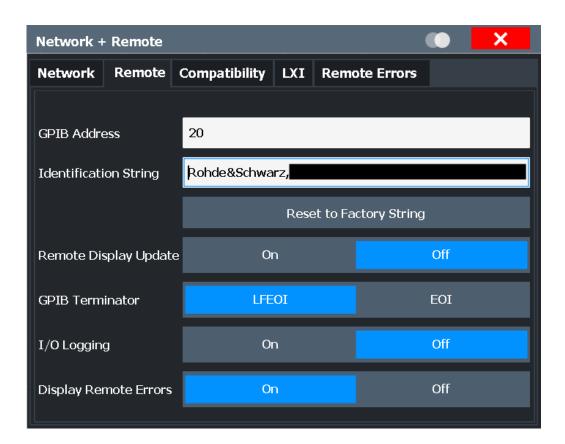

GPIB Address	205
Identification String	205
Reset to Factory String	
Remote Display Update	
GPIB Terminator	
I/O Logging	206
Display Remote Errors	

GPIB Address

Defines the GPIB address. Values from 0 to 30 are allowed. The default address is 20.

Remote command:

SYSTem:COMMunicate:GPIB[:SELF]:ADDRess on page 833

Identification String

Defines the identification string for the R&S FPL1000 which is provided as a response to the *IDN? query. Maximum 36 characters are allowed.

Remote command:

SYSTem: IDENtify[:STRing] on page 835

Reset to Factory String

Restores the default identification string. Each R&S FPL1000 has a unique ID according to the following syntax:

Rohde&Schwarz,FPL,<Unique number>

Remote command:

SYSTem: IDENtify: FACTory on page 834

Remote Display Update

Defines whether the display of the R&S FPL1000 is updated when changing from manual operation to remote control.

Turning off the display update function improves performance during remote control.

Remote command:

SYSTem: DISPlay: UPDate on page 834

GPIB Terminator

Changes the GPIB receive terminator.

"LFEOI" According to the standard, the terminator in ASCII is <LF> and/or

<EOI>.

"EOI" For binary data transfers (e.g. trace data) from the control computer

to the instrument, the binary code used for <LF> might be included in the binary data block, and therefore should not be interpreted as a terminator in this particular case. This can be avoided by using only

the receive terminator EOI.

Remote command:

SYSTem: COMMunicate: GPIB[:SELF]: RTERminator on page 833

I/O Logging

Activates or deactivates the SCPI error log function. All remote control commands received by the R&S FPL1000 are recorded in a log file. The files are named according to the following syntax:

C:

\Users\Public\Documents\Rohde-Schwarz\Analyzer\ScpiLogging\ScpiLog.<no.>

where <no.> is a sequential number

A new log file is started each time logging was stopped and is restarted.

Logging the commands may be extremely useful for debug purposes, e.g. in order to find misspelled keywords in control programs.

Remote command:

SYSTem: CLOGging on page 532

Display Remote Errors

Activates and deactivates the display of errors that occur during remote operation of the R&S FPL1000. If activated, the R&S FPL1000 displays a message box at the bottom of the screen that contains the type of error and the command that caused the error.



The error message remains in place when you switch to "Local" mode. To close the message box, select the \boxtimes "Close" icon.

Only the most recent error is displayed in remote mode. However, in local mode, all errors that occurred during remote operation are listed in a separate tab of the "Network + Remote" dialog box (see Chapter 6.4.2.5, "Remote Errors", on page 210).

Remote command:

SYSTem: ERROr: DISPlay on page 834
SYSTem: ERROr: CLEar: REMote on page 838

6.4.2.3 Compatibility Settings


Access: [SETUP] > "Network+Remote" > "Compatibility"

The R&S FPL1000 can emulate the GPIB interface of other signal and spectrum analyzers, e.g. in order to use existing control applications.



Compatibility with former R&S signal and spectrum analyzers

As a rule, the R&S FPL1000 supports most commands from previous R&S signal and spectrum analyzers such as the FSQ, FSP, FSU, or FSV. However, the default values, in particular the number of sweep points or particular bandwidths, may vary. Therefore, the R&S FPL1000 can emulate some other devices, including their default values, in order to repeat previous measurements or support existing control applications as in legacy systems.

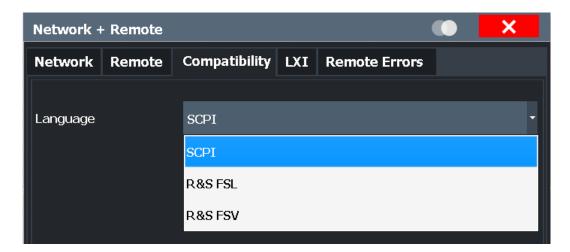

Language

Defines the system language used to control the instrument.

Note: Emulating previous R&S signal and spectrum analyzers. This function is also used to emulate previous R&S signal and spectrum analyzers.

As a rule, the R&S FPL1000 supports most commands from previous R&S signal and spectrum analyzers. However, the default values, in particular the number of sweep points or particular bandwidths, may vary. Therefore, the R&S FPL1000 can emulate some other devices, including their default values, in order to repeat previous measurements or support existing control applications as in legacy systems.

"SCPI" (Default) The default R&S FPL1000 commands are used.

"FSV" The commands and settings for the R&S FSV instrument are used.

"FSL" The commands and settings for the R&S FSL instrument are used.

Remote command:

SYSTem: LANGuage on page 835

6.4.2.4 LXI Settings

Access: [SETUP] > "Network + Remote" > "LXI" tab

On the R&S FPL1000 the LXI Class C functionality is already installed and enabled; thus, the instrument can be accessed via any web browser (e.g. the Microsoft Internet Explorer) to perform the following tasks:


- modifying network configurations
- modifying device configurations
- monitoring connections from the device to other devices

The "LXI" tab of the "Network + Remote" dialog box provides basic LXI functions and information for the R&S FPL1000.

Alternatively, you can change the LAN settings using the LXI Web browser interface.

For details see "How to Configure the LAN Using the LXI Web Browser Interface" on page 216.

Only user accounts with administrator rights are able to use LXI functionality.

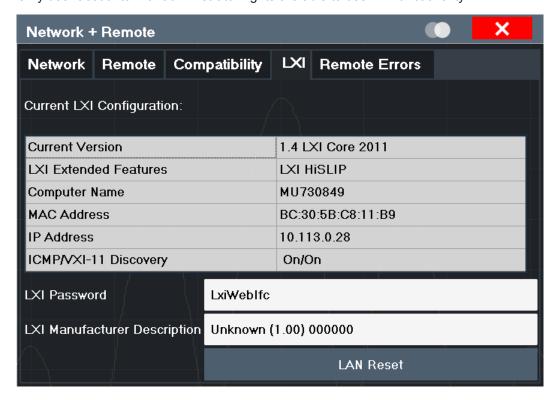

Current LXI Configuration	209
LXI Password	
LXI Manufacturer Description	.209
AN Reset	

Current LXI Configuration

Displays the current LXI information from the R&S FPL1000 (read-only).

"Current ver- Current LXI version

sion"

"LXI Extended Detected LXI features, such as HiSlip (see "HiSLIP Protocol"

Features" on page 167)

"Computer Name of the R&S FPL1000 as defined in the operating system (see

name" also "Computer Name" on page 203)

"MAC address" Media Access Control address (MAC address), a unique identifier for

the network card in the R&S FPL1000

"IP address" IP address of the R&S FPL1000 as defined in the operating system

(see also "IP Address" on page 204).

"ICMP" Indicates whether the ping responder is active or not

"VXI-11 Dis- If enabled, connected devices are detected automatically using the

covery" VXI-11 protocol (see "VXI-11 Protocol" on page 167)

Remote command:

SYSTem:LXI:INFO? on page 835

LXI Password

Password for LAN configuration. The default password is LxiWeblfc.

Remote command:

SYSTem:LXI:PASSword on page 836

LXI Manufacturer Description

Instrument description of the R&S FPL1000

Remote command:

SYSTem:LXI:MDEScription on page 836

LAN Reset

Resets the LAN configuration to its default settings (LCI function).

According to the LXI standard, an LCI must set the following parameters to a default state.

Parameter	Value
TCP/IP Mode	DHCP + Auto IP Address
Dynamic DNS	Enabled
ICMP Ping	Enabled
Password for LAN configuration	LxiWeblfc

The LAN settings are configured in the "Network" tab of the "Network + Remote" dialog box or using the instrument's LXI Browser interface.

Remote command:


SYSTem: LXI: LANReset on page 836

6.4.2.5 Remote Errors

Access: [SETUP] > "Network + Remote" > "Remote Errors " tab

The error messages generated by the R&S FPL1000 during remote operation are displayed here.

The messages are displayed in the order of their occurrence; the most recent messages are placed at the top of the list.

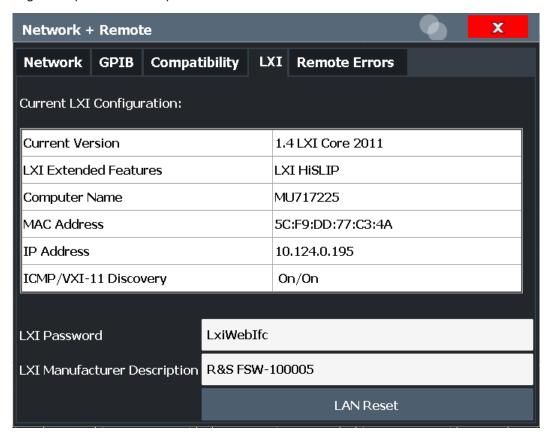



The most recent error message during remote operation can be displayed on the screen, see "Display Remote Errors" on page 206.

If the number of error messages exceeds the capacity of the error buffer, the oldest error message is removed before the newest one is inserted. To clear the message buffer use the "Clear Error List" button. It is automatically cleared when the R&S FPL1000 is shut down.

The following information is available:

No	Device-specific error code
Error	Brief description of the error
Date/Time	Time the message occurred

Remote command:

SYSTem: ERROr: LIST? on page 839

Clear Error List

Deletes the error message buffer for remote operation.

Note: The remote error list is automatically cleared when the R&S FPL1000 is shut down.

Remote command:

SYSTem: ERRor: CLEar: REMote on page 838

6.4.2.6 Returning to Manual Mode ("Local")

When switched on, the instrument is always in the manual measurement mode and can be operated via the front panel. As soon as the instrument receives a remote command, it is switched to the remote control mode.

In remote control mode, all keys of the instrument except the [PRESET] key are disabled. The "LOCAL" softkey and the Remote Display Update softkey are displayed.

Local

The instrument switches from remote to manual operation, but only if the local lockout function has not been activated in the remote control mode (see "GPIB Interface Messages" on page 171).

Furthermore, when you return to manual operation, the following happens:

- All front panel keys are enabled.
- The main softkey menu of the current mode is displayed.
- The measurement diagrams, traces and display fields are displayed again.
- If, at the time of pressing the "LOCAL" softkey, the synchronization mechanism via *OPC, *OPC? or *WAI is active, the currently running measurement procedure is aborted and synchronization is achieved by setting the corresponding bits in the registers of the status reporting system.
- Bit 6 (User Request) of the Event Status Register is set. If the status reporting system is configured accordingly, this bit immediately causes the generation of a service request (SRQ) to inform the control software that the user wishes to return to front panel control. For example, this can be used to interrupt the control program and to correct instrument settings manually. This bit is set each time the "LOCAL" softkey is pressed.

Note: Before you switch back to manual operation, all remote command processing must be completed. Otherwise, the instrument will switch back to remote control immediately.

If you select the "Local" softkey while a self-alignment or a self-test is still running (which was started remotely), the instrument only returns to the manual operation state when the alignment or test is completed.

Remote command:

SYSTem: KLOCk on page 835

6.4.3 How to Set Up a Network and Remote Control

NOTICE

Risk of network failure

Consult your network administrator before performing the following tasks:

- Connecting the instrument to the network
- Configuring the network
- Changing IP addresses

Errors can affect the entire network.

Remote operation

You can operate the instrument remotely from a connected computer using SCPI commands (see Chapter 6.4.1.2, "SCPI (Standard Commands for Programmable Instruments)", on page 173). Before you send remote commands you must configure the instrument in a LAN network or connect it to a PC via the GPIB interface as described in Chapter 6.4.3.1, "How to Configure a Network", on page 212.

Remote Desktop

In production test and measurement, a common requirement is central monitoring of the T&M instruments for remote maintenance and remote diagnostics. Equipped with the Remote Desktop software of Windows, the R&S FPL1000 ideally meets requirements for use in production. The computer that is used for remote operation is called "controller" here.

The following tasks can be performed using Remote Desktop:

- Access to the control functions via a virtual front panel (soft front panel)
- Printout of measurement results directly from the controller
- Storage of measured data on the controller's hard disk

This documentation provides basic instructions on setting up the Remote Desktop for the R&S FPL1000. For details refer to the Windows operating system documentation.

6.4.3.1 How to Configure a Network

A precondition for operating or monitoring the instrument remotely is that it is connected to a LAN network or a PC connected to the GPIB interface. This is described here.



Windows Firewall Settings

A firewall protects an instrument by preventing unauthorized users from gaining access to it through a network. Rohde & Schwarz highly recommends the use of the firewall on your instrument. R&S instruments are shipped with the Windows firewall enabled and preconfigured in such a way that all ports and connections for remote control are enabled. For more details on firewall configuration see the Windows help system and the R&S White Paper (available from the Rohde & Schwarz website):

How to Connect the Instrument to the Network

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network made with an ordinary RJ-45 network cable. The instrument is assigned an IP address and can coexist with a computer and with other hosts on the same network.
- A dedicated network connection (Point-to-point connection) between the instrument and a single computer made with a (crossover) RJ-45 network cable. The computer must be equipped with a network adapter and is directly connected to the instrument. The use of hubs, switches, or gateways is not required, however, data transfer is still performed using the TCP/IP protocol. An IP address has to be assigned to the instrument and the computer, see "How to Assign the IP Address" on page 213.

Note: As the R&S FPL1000 uses a 1 GBit LAN, a crossover cable is not necessary (due to Auto-MDI(X) functionality).

► To establish a non-dedicated network connection, connect a commercial RJ-45 cable to one of the LAN ports.

To establish a dedicated connection, connect a (crossover) RJ-45 cable between the instrument and a single PC.

If the instrument is connected to the LAN, Windows automatically detects the network connection and activates the required drivers.

The network card can be operated with a 1 GBit Ethernet IEEE 802.3u interface.

How to Assign the IP Address

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports dynamic TCP/IP configuration using the Dynamic Host Configuration Protocol (DHCP), all address information can be assigned automatically.
- If the network does not support DHCP, or if the instrument is set to use alternate TCP/IP configuration, the addresses must be set manually.

By default, the instrument is configured to use dynamic TCP/IP configuration and obtain all address information automatically. This means that it is safe to establish a physical connection to the LAN without any previous instrument configuration.



When a DHCP server is used, a new IP address may be assigned each time the PC is restarted. This address must first be determined on the PC itself. Thus, when using a DHCP server, it is recommended that you use the permanent computer name, which determines the address via the DNS server (see "Using a DNS server to determine the IP address" on page 215).


NOTICE

Risk of network errors

Connection errors can affect the entire network. If your network does not support DHCP, or if you choose to disable dynamic TCP/IP configuration, you must assign valid address information before connecting the instrument to the LAN. Contact your network administrator to obtain a valid IP address.

Assigning the IP address on the R&S FPL1000

- 1. Press the [SETUP] key.
- 2. Press the "Network + Remote" softkey.
- 3. Double-tap the "Local Area Connection" entry.
- In the "Local Area Connection Status" dialog box, select the "Properties" button.
 The items used by the LAN connection are displayed.
- 5. Tap the entry named "Internet Protocol Version 4 (TCP/IPv4)" to highlight it.

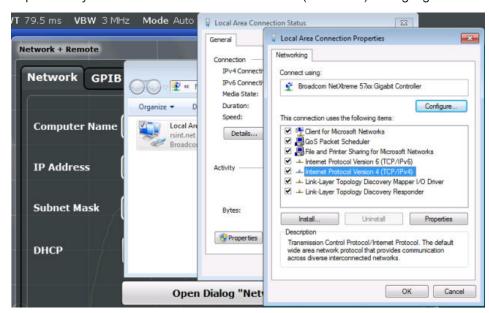

- 6. Select the "Properties" button.
- 7. In the "Network + Remote" dialog, toggle the "DHCP On/Off" setting to the required mode.

If DHCP is "Off", you must enter the IP address manually, as described in the following steps.

Note: When DHCP is changed from "On" to "Off", the previously set IP address and subnet mask are retrieved.

If DHCP is "On", the IP address of the DHCP server is obtained automatically. The configuration is saved, and you are prompted to restart the instrument. You can skip the remaining steps.

Note: When a DHCP server is used, a new IP address may be assigned each time the instrument is restarted. This address must first be determined on the instrument itself. Thus, when using a DHCP server, it is recommended that you use the permanent computer name, which determines the address via the DNS server.

- 8. Enter the "IP Address", for example 10.0.0.10. The IP address consists of four number blocks separated by dots. Every block contains 3 numbers in maximum.
- Enter the "Subnet Mask", for example 255.255.25.0. The subnet mask consists of four number blocks separated by dots. Every block contains 3 numbers in maximum.
- 10. Close the dialog box.


If you have entered an invalid IP address or subnet mask, the message "out of range" is displayed in the status line. If the settings are correct, the configuration is saved, and you are prompted to restart the instrument.

11. Confirm the displayed message ("Yes" button) to restart the instrument.

Using a DNS server to determine the IP address

If a DNS server is configured on the R&S FPL1000, the server can determine the current IP address for the connection using the permanent computer name.

- Obtain the name of your DNS domain and the IP addresses of the DNS and WINS servers on your network (see "How to Change the Instrument Name" on page 216).
- 2. Press the [Setup] key and then the "Network + Remote" softkey.
- 3. In the "Network" tab, select the "Open Dialog 'Network Connections" button.
- 4. Double-tap the "Local Area Network" entry.
- In the "Local Area Connection Status" dialog box, select the "Properties" button.The items used by the LAN connection are displayed.
- 6. Tap the entry named "Internet Protocol Version 4 (TCP/IPv4)" to highlight it.

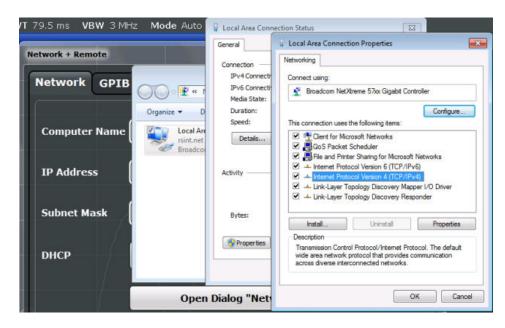

- 7. Select the "Properties" button.
- 8. On the "General" tab, select "Use the following DNS server addresses" and enter your own DNS addresses.

For more information refer to the Windows operating system Help.

How to Change the Instrument Name

In a LAN that uses a DNS server (Domain Name System server), each PC or instrument connected in the LAN can be accessed via an unambiguous computer name instead of the IP address. The DNS server translates the host name to the IP address. This is especially useful when a DHCP server is used, as a new IP address may be assigned each time the instrument is restarted.

Each instrument is delivered with an assigned computer name, but this name can be changed.

To change the instrument's computer name

- 1. Press the [Setup] key and then the "Network + Remote" softkey. The current "Computer Name" is displayed in the "Network" tab.
- Enter the new computer name and close the dialog box.The configuration is saved, and you are prompted to restart the instrument.
- 3. Confirm the displayed message ("Yes" button) to restart the instrument.


How to Configure the LAN Using the LXI Web Browser Interface

The instrument's LXI browser interface works correctly with all W3C compliant browsers.

▶ In the web browser, open the http://<instrument-hostname>or http://
<instrument-ip-address>page, e.g. http://10.113.10.203.

The default password to change LAN configurations is LxiWeblfc.

The "Instrument Home Page" (welcome page) opens.

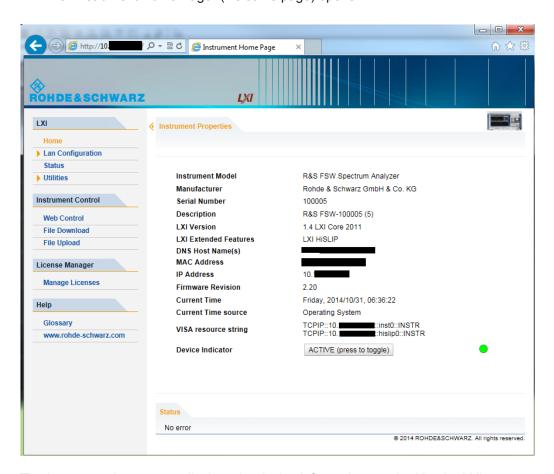

The instrument home page displays the device information required by the LXI standard including the VISA resource string in read-only format.



Press the "Device Indicator" button on the "Instrument Home Page" to activate or deactivate the LXI status icon on the status bar of the R&S FPL1000. A green LXI status symbol indicates that a LAN connection has been established; a red symbol indicates an error, for example, that no LAN cable is connected. When a device is connecting to the instrument, the LXI logo blinks. The "Device Indicator" setting is not password-protected.

The most important control elements in the navigation pane of the browser interface are the following:

- "LAN Configuration" opens the menu with configuration pages.
- "Status" displays information about the LXI status of the instrument.
- "Help > Glossary" opens a document with a glossary of terms related to the LXI standard.

LAN Configuration

The LAN configuration consists of three parts:

- "IP configuration" provides all mandatory LAN parameters.
- "Advanced LAN Configuration" provides LAN settings that are not declared mandatory by the LXI standard.
- "Ping Client" provides the ping utility to verify the connection between the instrument and other devices.

IP Configuration

The "LAN Configuration > IP configuration" web page displays all mandatory LAN parameters and allows their modification.

The "TCP/IP Mode" configuration field controls how the IP address for the instrument gets assigned (see also "How to Assign the IP Address" on page 213).

For the manual configuration mode, the static IP address, subnet mask, and default gateway are used to configure the LAN. The automatic configuration mode uses DHCP server or Dynamic Link Local Addressing (Automatic IP) to obtain the instrument IP address.



Changing the LAN configuration is password-protected. The default password is *Lxi-Weblfc* (notice upper and lower case characters).

You can change the LXI password in the "Network + Remote" dialog box, see .Chapter 6.4.2.4, "LXI Settings", on page 208

Advanced LAN Configuration

The "LAN Configuration > Advanced LAN Configuration" parameters are used as follows:

- The "Negotiation" configuration field provides different Ethernet speed and duplex mode settings. In general, the "Auto Detect" mode is sufficient.
- "ICMP Ping" must be enabled to use the ping utility.
- "VXI-11" is the protocol that is used to detect the instrument in the LAN. According
 to the standard, LXI devices must use VXI-11 to provide a detection mechanism;
 other additional detection mechanisms are permitted.
- mDNS and DNS-SD are two additional protocols: Multicast DNS and DNS Service Discovery. They are used for device communication in zero configuration networks working without DNS and DHCP

Ping Client

Ping is a utility that verifies the connection between the LXI-compliant instrument and another device. The ping command uses the ICMP echo request and echo reply packets to determine whether the LAN connection is functional. Ping is useful for diagnosing IP network or router failures. The ping utility is not password-protected.

To initiate a ping between the LXI-compliant instrument and a second connected device:

- 1. Enable "ICMP Ping" on the "Advanced LAN Configuration" page (enabled after an LCI).
- Enter the IP address of the second device without the ping command and without any further parameters into the "Destination Address" field (e.g. 10.113.10.203).
- 3. Select "Submit".

How to Change the GPIB Instrument Address

In order to operate the instrument via remote control, it must be addressed using the GPIB address. The remote control address is factory-set to 20, but it can be changed if it does not fit in the network environment. For remote control, addresses 0 through 30 are allowed. The GPIB address is maintained after a reset of the instrument settings.

Setting the GPIB address

- 1. On the R&S FPL1000, press the [SETUP] key.
- 2. Press the "Network + Remote" softkey.
- 3. In the "Network + Remote" dialog box, select the "GPIB" tab.
- 4. In the "GPIB Address" field, enter a value between 0 and 30.

Remote command:

SYST:COMM:GPIB:ADDR 18

6.4.3.2 How to Operate the Instrument Without a Network

To operate the instrument without a network connection either temporarily or permanently, no special measures are necessary. Windows automatically detects the interruption of the network connection and does not set up the connection when the instrument is switched on.

If you are not prompted to enter the user name and password, proceed as described in "How to Activate or Deactivate the Automatic Login Mechanism" on page 221.

6.4.3.3 How to Log on to the Network

Windows requires that users identify themselves by entering a user name and password in a login window. You can set up two types of user accounts, either an administrator account with unrestricted access to the computer/domain or a standard user account with limited access. The instrument provides an auto-login function for the administrator account, i.e. login with unrestricted access is carried out automatically in the background. By default, the user name for the administrator account is "Instrument", and the user name for the standard user account is "NormalUser". In both cases the initial password is "894129". You can change the password in Windows for any user at any time. Some administrative tasks require administrator rights (e.g. firmware updates or the configuration of a LAN network).

Refer to Chapter 6.3, "General Instrument Setup", on page 128 to find out which functions are affected.

At the same time you log on to the operating system, you are automatically logged on to the network. As a prerequisite, the user name and the password must be identical on the instrument and on the network.

How to Create Users

After the software for the network has been installed, the instrument issues an error message the next time it is switched on because there is no user named "instrument" (= default user ID for Windows automatic login) in the network. Thus, a matching user must be created in the R&S FPL1000 and in the network, the password must be adapted to the network password, and the automatic login mechanism must then be deactivated.

The network administrator is responsible for creating new users in the network.



Select the "Windows" icon in the toolbar to access the operating system.

- Select "Start > Settings > Accounts > Other users".
- 3. Select "Add someone else to this PC".
- In the "Microsoft account" dialog box, enter the new user name and password.
- 5. Select "OK".
- Select "Finish".The new user is created.

How to Change the User Password

After the new user has been created on the instrument, the password must be adapted to the network password.



Select the "Windows" icon in the toolbar to access the operating system.

- Press [Ctrl + Alt + Delete], then select "Change a password".
- 3. Enter the user account name.
- 4. Enter the old password.
- 5. Enter the new password in the upper text line and repeat it in the following line.
- Press [Enter].The new password is now active.

How to Activate or Deactivate the Automatic Login Mechanism

Deactivating the automatic login mechanism

When shipped, the instrument is already configured to automatically log on under Windows. To deactivate the automatic login mechanism, perform the following steps:

In the "Start" menu, select "All applications > Windows System > Run".
 The "Run" dialog box is displayed.

2. Enter the command

C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\
NO AUTOLOGIN.REG.

3. Press the [ENTER] key to confirm.

The automatic login mechanism is deactivated. The next time you switch on the instrument, you are prompted to enter your user name and password before the firmware is started.

Reactivating the automatic login mechanism

In the "Start" menu, select "All applications > Windows System > Run".
 The "Run" dialog box is displayed.

2. Enter the command

C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\
AUTOLOGIN.REG.

3. Press the [ENTER] key to confirm.

The automatic login mechanism is reactivated. It will be applied the next time the instrument is switched on.

6.4.3.4 How to Share Directories (only with Microsoft Networks)

Sharing directories makes data available for other users. This is only possible in Microsoft networks. Sharing is a property of a file or directory.

- 1. In the "Start" menu, select "Programs", "Accessories" and then select "Windows Explorer".
- 2. Select the desired folder with the right mouse button.
- In the context menu, select "Sharing with > Specific people".
 The dialog box for sharing a directory is displayed.
- 4. Select a user from the list or add a new name and select the "Add" button.
- 5. Select the "Share" button.
- Select "Done" to close the dialog box.The drive is shared and can be accessed by the selected users.

6.4.3.5 How to Control the R&S FPL1000 via the Web Browser Interface

Via the LXI browser interface to the R&S FPL1000 one or more users can control the instrument remotely from another PC without additional installation. Most instrument controls are available via the front panel simulation. File upload and download between the instrument and the remote PC is also available.

To access the R&S FPL1000 via the web browser interface

- 1. Start a web browser that supports html5 (W3C compliant).
- Enter the IP address of the R&S FPL1000 in the browser's address bar.The R&S FPL1000's Welcome page is displayed.
- In the navigation pane, select "Instrument Control > Web Control".
 The instrument's display is shown in a new browser window, with a software front panel displayed beside or below it.
- 4. Use the mouse cursor to access the functionality in the software front panel or in the display as you would directly on the instrument's front panel.

To exchange files with the R&S FPL1000

You can download files, for example stored measurement data, from the R&S FPL1000 to the remote PC, or upload files, for example limit line definitions, from the PC to the R&S FPL1000.

- 1. In the web browser, select the Welcome page window.
- In the navigation pane, select "Instrument Control" > "File Upload" or "File Download".



The most commonly used folders on the instrument are displayed, for example those that contain user data, as well as the top-most My Computer folder, from which you can access all other folders on the instrument.

- 3. To download a file from the R&S FPL1000, select the file from the displayed folders and then select "Download File".
- 4. To upload a file to the R&S FPL1000:
 - a) From the displayed folders in the web browser window, select the folder on the R&S FPL1000 to which you want to copy a file.
 - b) Under "File to Upload", select "Browse" to open a file selection dialog box and select the required file on the PC.
 - c) Select "Upload" to copy the file from the PC to the defined folder on the R&S FPL1000.

6.4.3.6 How to Deactivate the Web Browser Interface


If you want to prevent other users in the LAN from accessing or operating the R&S FPL1000 via its LXI web browser interface, you must deactivate this function. Note that **after a firmware update** the function is **automatically active** again until you deactivate it manually.

To deactivate the LXI web browser interface

1.

Select the "Windows" icon in the toolbar to access the operating system.

- 2. In the "Start" menu, select "Control Panel".
- 3. Select "System and Security" > "Administrative Tools".
- 4. From the list on the right, select "Services".
- 5. From the list of local services, select "R&S TightVNC Server".

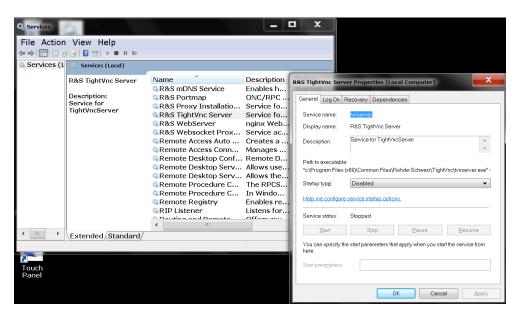

- 6. Set "Startup type" to "Disabled".
- 7. Select "Stop".
- 8. Select "Apply".

The next time a user enters the IP address of the instrument in a web browser, an error message is displayed:

Failed to connect to server (code. 1006)

6.4.3.7 How to Set Up Remote Desktop

Remote Desktop is a Windows application which can be used to access and control the instrument from a remote computer through a LAN connection. While the instrument is in operation, the instrument screen contents are displayed on the remote computer, and Remote Desktop provides access to all of the applications, files, and network resources of the instrument. Thus, remote operation of the R&S FPL1000 is possible.

With Windows, Remote Desktop Client is part of the operating system. For other versions of Windows, Microsoft offers the Remote Desktop Client as an add-on. For details refer to the Windows operating system documentation.

With the factory settings, the default "instrument" user can connect to the R&S FPL1000 with the Remote Desktop program of the controller immediately. No further configuration is required. However, if the connection fails or other users need to connect, this section provides basic instructions on setting up the Remote Desktop for the R&S FPL1000.

How to Configure the R&S FPL1000 for Remote Operation via Remote Desktop

1. Create a fixed IP address for the TCP/IP protocol as described in "How to Assign the IP Address" on page 213.

Note: To avoid problems, use a fixed IP address.


When a DHCP server is used, a new IP address is assigned each time the instrument is restarted. This address must first be determined on the instrument itself. Thus, using a DHCP server is not suitable for remote operation of the R&S FPL1000 via Remote Desktop.

2.

Select the "Windows" icon in the toolbar to access the operating system.

- 3. In the Windows "Start" menu, select "Settings > System".
- 4. Search for "remote access".
- 5. Select "Allow remote access to your computer".
- Define which users are to be given access to the R&S FPL1000 via Remote Desktop.

Note: The user account under which configuration is carried out is automatically enabled for Remote Desktop.

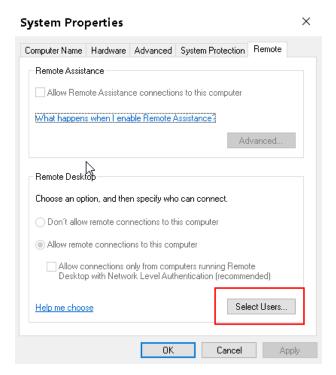

- a) Select the "Select Users" button.
- b) Select the users or create new user accounts as described in "How to Create Users" on page 220.
- c) Select "OK" to confirm the settings.
- 7. The R&S FPL1000 is now ready for connection setup with the Remote Desktop program of the controller.

How to Configure the Controller



Remote Desktop Client

With Windows, Remote Desktop Client is part of the operating system and can be accessed via "Start > Programs > Accessories > Remote Desktop Connection".

For other versions of Windows, Microsoft offers the Remote Desktop Client as an addon.


1.

Select the "Windows" icon in the toolbar to access the operating system.

From the "Start" menu, select "All Programs > Accessories > Remote Desktop Connection".

The "Remote Desktop Connection" dialog box is displayed.

Select the "Options >>" button.
 The dialog box is expanded to display the configuration data.

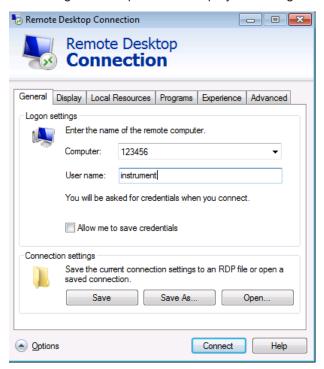


Open the "Experience" tab.
 The settings on this tab are used to select and optimize the connection speed.

5. In the list, select the appropriate connection (for example: LAN (10 Mbps or higher)).

Depending on your selection (and how powerful the connection is), the options are activated or deactivated.

- 6. To improve the performance, you can deactivate the "Desktop background", "Show contents of window while dragging" and "Menu and window animation" options.
- 7. Open the "Local Resources" tab for enabling printers, local drives and serial interfaces.
- 8. If you will need to access drives of the controller from the R&S FPL1000 (e.g. in order to store settings or to copy files from the controller to the R&S FPL1000), select "More", then enable the "Drives" option.

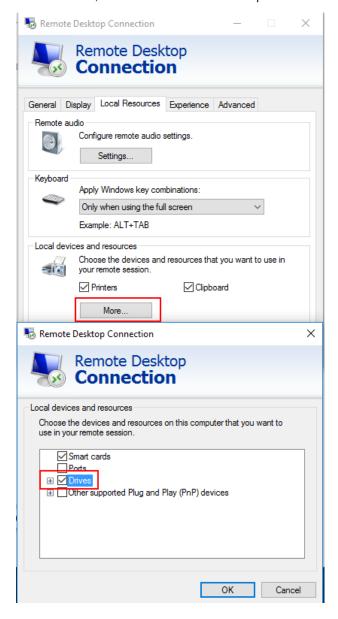

Windows will then map drives of the controller to the corresponding network drives.

To use printers connected to the controller while accessing them from the R&S FPL1000, activate the "Printers" option. Do not change the remaining settings.

- 10. Open the "Display" tab.
 - The options for configuring the R&S FPL1000 screen display are displayed.
- Under "Remote desktop size", you can set the size of the R&S FPL1000 window on the desktop of the controller.
- 12. Under "Colors", do not change the settings.
- 13. Set the "Display the connection bar when I use the full screen" option:
 - If activated, a bar showing the network address of the R&S FPL1000 will appear at the top edge of the screen. You can use this bar to reduce, minimize or close the window.
 - If deactivated, the only way you can return to the controller desktop from the R&S FPL1000 screen in full screen mode is to select "Disconnect" from the "Start" menu.

How to Start and Close the Remote Desktop

To set up a connection to the R&S FPL1000

- 1. In the "Remote Desktop Connection" dialog box (see "How to Configure the Controller" on page 226), open the "General" tab.
- In the "Computer" field, enter the IP address of the R&S FPL1000.
 In the "User name" field, enter *instrument* to log in as an administrator, or *Normal User* to log in as a standard user.
 In the "Password" field, enter 894129.
- 3. To save the connection configuration for later use:
 - a) Select the "Save As" button.The "Save As" dialog box is displayed.
 - b) Enter the name for the connection information (* . RDP).
- 4. To load an existing connection configuration:
 - a) Select the "Open" button.The "Open" dialog box is displayed.
 - b) Select the *.RDP file.
- 5. Select the "Connect" button. The connection is set up.
- If the "Disk drives" option is activated on the "Local Resources" tab, a warning is displayed indicating that the drives are enabled for access from the R&S FPL1000. Select "OK" to confirm the warning.
- After a few moments, the R&S FPL1000 screen is displayed.
 If a dark screen appears or a dark square appears in the upper left-hand corner of the screen, you must restart the R&S FPL1000 in order to see the modified screen resolution.




- Press the key combination [ALT] + [F4].
- The R&S FPL1000 firmware is shut down, which may take a few seconds.
- On the desktop, double-tap the "Analyzer" icon.

The firmware restarts and then automatically opens the "Soft Front Panel", i.e. the user interface on which all front panel controls and the rotary knob are mapped to buttons.

For more information see Chapter 6.3.2.4, "How to Work with the Soft Front Panels", on page 137.

To deactivate or activate the "Softfrontpanel", press the [F6] key.
 After the connection is established, the R&S FPL1000 screen is displayed in the "Remote Desktop" application window.

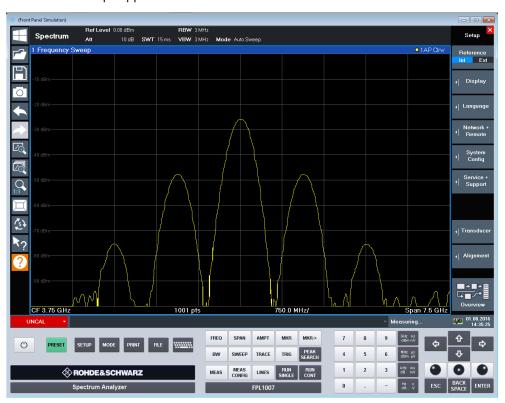

The Windows "Start" menu can be made available by expanding the "Remote Desktop" window to full size.

During the connection with the controller, the login entry is displayed on the R&S FPL1000 screen.

To terminate Remote Desktop control

The connection can be terminated by the controller or by a user at the R&S FPL1000:

1. On the controller, close the "Remote Desktop" window at any time. The connection to the R&S FPL1000 is terminated.

2. On the R&S FPL1000, a user logs on.

The connection to the controller is terminated as a result. A message is displayed on the controller display indicating that another user has assumed control of the instrument.

Restoring the connection to the R&S FPL1000

Follow the instructions above for setting up a connection to the R&S FPL1000. If the connection is terminated and then restored, the R&S FPL1000 remains in the same state.

How to Shut Down the R&S FPL1000 via Remote Operation

- 1. Select the R&S FPL1000 softfrontpanel and close the application with the key combination [ALT] + [F4].
- Select the desktop and press the key combination [ALT] + [F4].
 A safety query is displayed to warn you that the instrument cannot be reactivated via remote operation and asks you whether you want to continue the shutdown process.
- Respond to the safety query with "Yes".
 The connection with the controller is terminated and the R&S FPL1000 is shut down.

6.4.3.8 How to Start a Remote Control Session from a PC

When you switch on the R&S FPL1000, it is always in manual operation state ("local" state) and can be operated via the front panel.

To start remote control

- Send an addressed command (GTR Go to Remote) from a controller to the instrument
 - The instrument is switched to remote control ("remote" state). Operation via the front panel is disabled. Only the "Local" softkey is displayed to return to manual operation. The instrument remains in the remote state until it is reset to the manual state via the instrument or via remote control interfaces. Switching from manual operation to remote control and vice versa does not affect the other instrument settings.
- 2. During program execution, send the SYSTem:DISPlay:UPDate ON command to activate the display of results (see SYSTem:DISPlay:UPDate on page 834).
 - The changes in the device settings and the recorded measurement values are displayed on the instrument screen.

- 3. To obtain optimum performance during remote control, send the SYSTem: DISPlay: UPDate OFF command to hide the display of results and diagrams again (default setting in remote control).
- 4. To prevent unintentional return to manual operation, disable the keys of the instrument using the universal command LLO.
 - Switching to manual mode is only possible via remote control then. This function is only available for the GPIB interface.
- 5. To enable the keys of the R&S FPL1000 again, switch the instrument to local mode (GTL Go to Local), i.e. deactivate the REN line of the remote control interface.



If the instrument is operated exclusively in remote control, it is recommended that you switch off the display. For details see "Remote Display Update" on page 206.

6.4.3.9 How to Return to Manual Operation

Before you switch back to manual operation, all remote command processing must be completed. Otherwise, the instrument will switch back to remote control immediately.

► Select the "Local" softkey, or use the following GPIB command: status = viGpibControlREN(vi, VI GPIB REN ADDRESS GTL)



If you select the "Local" softkey while a self-alignment or a self-test is still running (which was started remotely), the instrument only returns to the manual operation state when the alignment or test is completed.

Configuration Overview

7 The Spectrum Application (RF Measurements)

The Spectrum application provides basic RF measurements in the frequency and time domain. The common settings for these measurements are described here.


Configuration Overview	232
Measurements and Results	
Receiving Data Input and Providing Data Output	367
Frequency and Span Configuration	376
Amplitude and Vertical Axis Configuration	383
Bandwidth, Filter and Sweep Configuration	
Trigger and Gate Configuration	406
Adjusting Settings Automatically	
Marker Usage	
Trace Configuration	
Display and Limit Lines	489
Zoomed Displays	
Importing and Exporting Measurement Results for Evaluation	
Optimizing Measurements	

7.1 Configuration Overview



Access: all menus

Each channel setup provides an overview of the most important currently defined settings and access to the most important configuration dialog boxes for the particular measurement. This overview is available via the "Overview" icon, which is displayed in all menus.

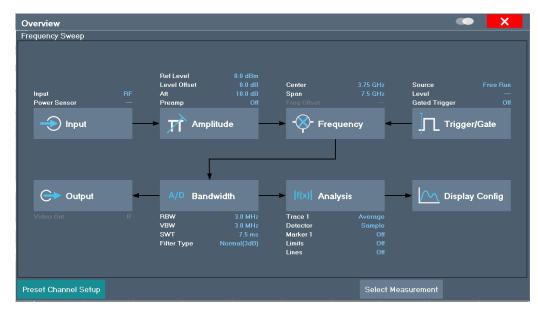

Configuration Overview

Using this overview, you can easily configure an entire channel setup from input over processing to output and analysis by stepping through the dialog boxes as indicated.

In particular, the "Overview" provides quick access to the following configuration dialog boxes (listed in the recommended order of processing):

- "Select Measurement"
 See Chapter 7.2, "Measurements and Results", on page 234
- 2. Input
 See Chapter 7.3.1, "Radio Frequency Input", on page 367
- Amplitude
 See Chapter 7.5, "Amplitude and Vertical Axis Configuration", on page 383
- 4. Frequency
 See Chapter 7.4, "Frequency and Span Configuration", on page 376
- 5. (Optionally:) Trigger/Gate

 See Chapter 7.7, "Trigger and Gate Configuration", on page 406
- See Chapter 7.7, "Trigger and Gate Configuration", on page 406

 6. Bandwidth

See Chapter 7.6.2, "Bandwidth, Filter and Sweep Settings", on page 396 (For SEM measurements: SEM Setup, see Chapter 7.2.6.5, "SEM Configuration", on page 304)

(For Spurious measurements: Spurious Setup, see Chapter 7.2.7.4, "Spurious Emissions Measurement Configuration", on page 334)

- (Optionally:) Outputs
 Requires option R&S FPL1-B5, see Chapter 7.3.3, "Output Settings", on page 375
- Analysis
 See Chapter 7.10, "Trace Configuration", on page 460 and Chapter 7.9, "Marker Usage", on page 421
- Display
 See Chapter 5.6, "Configuring Result Displays", on page 92

To configure settings

Select any button to open the corresponding dialog box.
Select a setting in the channel setup bar (at the top of the channel setup tab) to change a specific setting.

Preset Channel Setup

Select the "Preset Channel" button in the lower left-hand corner of the "Overview" to restore all measurement settings in the current channel setup to their default values.

Do not confuse the "Preset Channel" button with the [Preset] *key*, which restores the entire instrument to its default values and thus closes **all channel setups** on the R&S FPL1000 (except for the default channel setup)!

Remote command:

SYSTem: PRESet: CHANnel [: EXEC] on page 806

Access: "Overview" > "Select Measurement"

Or: [MEAS]

In the Spectrum application, the R&S FPL1000 provides a variety of different measurement functions.

- Basic measurements measure the spectrum of your signal or watch your signal in time domain
- Power measurements calculate the powers involved in modulated carrier signals
- Emission measurements detect unwanted signal emission
- Statistic measurements evaluate the spectral distribution of the signal
- Special measurements provide characteristic values of the signal

The individual functions are described in detail in the following chapters.

The measurement function determines which settings, functions and evaluation methods are available in the R&S FPL1000. The various measurement functions are described in detail here.

When you select a measurement function, the measurement is started with its default settings immediately and the corresponding measurement configuration menu is displayed. The measurement configuration menu can be displayed at any time by pressing the [MEAS CONFIG] key.

The easiest way to configure measurements is using the configuration "Overview", see Chapter 7.1, "Configuration Overview", on page 232.

In addition to the measurement-specific parameters, the general parameters can be configured as usual, see Chapter 7, "The Spectrum Application (RF Measurements)", on page 232. Many measurement functions provide special result displays or evaluation methods; however, in most cases the general evaluation methods are also available, see Chapter 7.2.2, "Basic Evaluation Methods", on page 255.

In addition to the measurement-specific parameters, the general parameters can be configured as usual, see Chapter 7.1, "Configuration Overview", on page 232. Many measurement functions provide special result displays or evaluation methods; however, in most cases the general evaluation methods are also available, see Chapter 7.2.2, "Basic Evaluation Methods", on page 255.

The remote commands required to retrieve measurement results are described in Chapter 8.8.7.4, "Retrieving Trace Results", on page 707.

5
5
7
9
3
0
0
3

•	Harmonic Distortion Measurement	.348
•	Third Order Intercept (TOI) Measurement	354
•	AM Modulation Depth Measurement	.364

7.2.1 Basic Measurements

Basic measurements are common sweeps in the time or frequency domain which provide an overview of the basic input signal characteristics.

If no other measurement function is selected, or if all measurement functions are switched off, the R&S FPL1000 performs a basic frequency or time sweep.

After a preset, a frequency sweep is performed.

Use the general measurement settings to configure the measurement, e.g. via the "Overview" (see Chapter 7.1, "Configuration Overview", on page 232).

7.2.1.1 Basic Measurement Types

Frequency Sweep	235
Zero Span	235
All Functions Off	.236

Frequency Sweep

A common frequency sweep of the input signal over a specified span. Can be used for general purposes to obtain basic measurement results such as peak levels and spectrum traces. The "Frequency" menu is displayed. This is the default measurement if no other function is selected.

Use the general measurement settings to configure the measurement, e.g. via the "Overview" (see Chapter 7.1, "Configuration Overview", on page 232).

Remote command:

```
[SENSe:]FREQuency:STARt on page 652, [SENSe:]FREQuency:STOP
on page 652
INITiate<n>[:IMMediate] on page 543
```

INITiate<n>:CONTinuous on page 543

Zero Span

A sweep in the time domain at the specified (center) frequency, i.e. the frequency span is set to zero. The display shows the time on the x-axis and the signal level on the y-axis, as on an oscilloscope. On the time axis, the grid lines correspond to 1/10 of the current sweep time.

Use the general measurement settings to configure the measurement, e.g. via the "Overview" (see Chapter 7.1, "Configuration Overview", on page 232).

Most result evaluations can also be used for zero span measurements, although some functions (e.g. markers) may work slightly differently and some may not be available. If so, this will be indicated in the function descriptions (see Chapter 7.2.2, "Basic Evaluation Methods", on page 255).

Remote command:

[SENSe:] FREQuency: SPAN on page 651 INITiate<n>[:IMMediate] on page 543 INITiate<n>:CONTinuous on page 543

All Functions Off

Switches off all measurement functions and returns to a basic frequency sweep. Selecting "Frequency Sweep" has the same effect.

7.2.1.2 How to Perform a Basic Sweep Measurement

The following step-by-step instructions demonstrate how to perform basic sweep measurements.



For remote operation, see Chapter 8.6.14, "Programming Example: Performing a Basic Frequency Sweep", on page 636.

To perform one or more single sweeps

- 1. Configure the frequency and span to be measured ("Frequency" dialog box, see Chapter 7.4, "Frequency and Span Configuration", on page 376).
- 2. Configure the number of sweeps to be performed in a single measurement ("Sweep Config" dialog box, see " Sweep/Average Count " on page 400).
- 3. If necessary, configure a trigger for the measurement ("Trigger/ Gate Config" dialog box, see Chapter 7.7, "Trigger and Gate Configuration", on page 406).
- 4. Define how the results are evaluated for display ("Trace" dialog box, see Chapter 7.10.1.2, "Trace Settings", on page 466).
- 5. If necessary, configure the vertical axis of the display ("Amplitude" dialog box, see Chapter 7.5, "Amplitude and Vertical Axis Configuration", on page 383).
- To start the measurement, select one of the following:
 - [RUN SINGLE] key
 - "Single Sweep" softkey in the "Sweep" menu

The defined number of sweeps are performed, then the measurement is stopped. While the measurement is running, the [RUN SINGLE] key is highlighted. To abort the measurement, press the [RUN SINGLE] key again. The key is no longer highlighted. The results are not deleted until a new measurement is started.

7. To repeat the same number of sweeps without deleting the last trace, select the "Continue Single Sweep" softkey in the "Sweep" menu.

To start continuous sweeping

- 1. If you want to average the trace or search for a maximum over more (or less) than 10 sweeps, configure the "Sweep/Average Count" ("Sweep Config" dialog box, see " Sweep/Average Count " on page 400).
- 2. To start the measurement, select one of the following:
 - [RUN CONT] key
 - "Continuous Sweep" softkey in the "Sweep" menu

After each sweep is completed, a new one is started automatically. While the measurement is running, the [RUN CONT] key is highlighted. To stop the measurement, press the [RUN CONT] key again. The key is no longer highlighted. The results are not deleted until a new measurement is started.

7.2.1.3 Measurement Examples - Measuring a Sinusoidal Signal

One of the most common measurement tasks that can be handled using a signal analyzer is determining the level and frequency of a signal. When measuring an unknown signal, you can usually start with the presettings.

NOTICE

High input values

If levels higher than +30 dBm (=1 W) are expected or are possible, a power attenuator must be inserted before the RF input of the analyzer. Otherwise, signal levels exceeding 30 dBm can damage the RF attenuator or the input mixer. The total power of all occurring signals must be taken into account.

Test setup

 Connect the RF output of the signal generator to the RF input of the R&S FPL1000.

Table 7-1: Signal generator settings (e.g. R&S SMW)

Frequency	128 MHz
Level	-30 dBm

Measuring the Level and Frequency Using Markers

The level and frequency of a sinusoidal signal can be measured easily using the marker function. The R&S FPL1000 always displays its amplitude and frequency at the marker position. The frequency measurement uncertainty is determined by the reference frequency of the R&S FPL1000, the resolution of the marker frequency display and the number of sweep points.

- 1. Select [PRESET] to reset the instrument.
- 2. Connect the signal to be measured to the [RF INPUT] connector on the R&S FPL1000.
- 3. Set the center frequency to 128 MHz.
- 4. Reduce the frequency span to 1 MHz.

Note: Coupled settings. When the frequency span is defined, the resolution bandwidth, the video bandwidth and the sweep time are automatically adjusted, because these functions are defined as coupled functions in the presettings.

5. Select [MKR] to activate marker 1 and automatically set it to the maximum of the trace.

The level and frequency values measured by the marker are displayed in the marker information at the top of the display.

Note: Performing a peak search. When a marker is initially activated, it automatically performs the peak search function (as shown in the example). If a marker was already active, select the [Peak Search] key or the "Peak" softkey in the [MKR >] menu in order to set the currently active marker to the maximum of the displayed signal.

Increasing the Frequency Resolution

The frequency resolution of the marker is determined by the resolution of the trace. A trace consists of 1001 trace points, i.e. if the frequency span is 1 MHz, each trace point represents a span of approximately 1 kHz. This corresponds to a maximum uncertainty of +/- 0.5 kHz.

You can increase the resolution of the trace by reducing the frequency span.

Reducing the frequency span to 10 kHz

► Reduce the frequency span to 10 kHz.

The resolution of the trace is now approximately 10 Hz (10 kHz span / 1001 trace points), thus, the precision of the marker frequency display increases to approximately ± 5 Hz.

Setting the Reference Level

The reference level is the level at the upper limit of the diagram. To achieve the widest dynamic range possible for a spectrum measurement, use the entire level span of the R&S FPL1000. In other words, the highest level that occurs in the signal should be located at the top edge of the diagram (= reference level) or immediately below it.



Low Reference Levels

If the selected reference level is lower than the highest signal that occurs in the spectrum, the signal path in the R&S FPL1000 is overloaded.

In this case, the message "IFOVL" is displayed in the error message field.

In the presettings, the value of the reference level is 0 dBm. If the input signal is -30 dBm, the reference level can be reduced by 30 dB without causing the signal path to be overloaded.

Reducing the reference level by 30 dB

➤ Set the reference level to -30 dBm.

The maximum of the trace is near the maximum of the measurement diagram. The increase in the displayed noise is not substantial. Thus, the distance between the signal maximum and the noise display (=dynamic range) has increased.

Setting the reference level with the help of a marker

You can also use a marker to shift the maximum value of the trace directly to the top edge of the diagram. If the marker is located at the maximum level of the trace (as in this example), the reference level can be moved to the marker level as follows:

- 1. Press the [MKR ->] key.
- 2. Select "Ref Lvl = Mkr Lvl".

The reference level is set to the current marker level.

Measuring the Signal Frequency Using the Signal Counter

The built-in signal counter allows you to measure the frequency more accurately than measuring it with the marker. The frequency sweep is stopped at the marker, and the R&S FPL1000 measures the frequency of the signal at the marker position (see also Chapter 7.9.4.1, "Precise Frequency (Signal Count) Marker", on page 438).

In the following example, the frequency of the generator at 128 MHz is shown using the marker.

Prerequisite

Precise frequency measurements require a precise reference frequency. Therefore, an external reference frequency from the signal generator is used. Connect the signal generator's [Ref OUT] connector to the analyzer's [Ref IN] connector.

- 1. Select [PRESET] to reset the instrument.
- 2. Set the center frequency to 128 MHz.
- 3. Set the frequency span to 1 MHz.
- Select "Setup" > "Reference" > "External Reference 10 MHz" to activate the external reference frequency.
- 5. Select [MKR] to activate marker 1 and automatically set it to the maximum of the trace.
 - The level and the frequency of the marker are displayed in the marker results in the diagram or the marker table.
- 6. Select [MKR FUNC] > "Signal Count" to activate the signal counter.

The result of the signal counter is displayed in the marker results.

7. If necessary, increase the resolution of the signal counter by selecting "Signal Count Resolution" (in the "Signal Count" menu).



Prerequisites for using the internal signal counter

In order to obtain a correct result when measuring the frequency with the internal signal counter, an RF sinusoidal signal or a spectral line must be available. The marker must be located more than 25 dB above the noise level to ensure that the specified measurement accuracy is adhered to.

7.2.1.4 Measurement Example – Measuring Levels at Low S/N Ratios

The minimum signal level a signal analyzer can measure is limited by its intrinsic noise. Small signals can be swamped by noise and therefore cannot be measured. For signals that are just above the intrinsic noise, the accuracy of the level measurement is influenced by the intrinsic noise of the R&S FPL1000.

The displayed noise level of a signal analyzer depends on its noise figure, the selected RF attenuation, the selected reference level, the selected resolution and video bandwidth and the detector.

For details see:

- Chapter 7.5.1.2, "RF Attenuation", on page 384
- Chapter 7.5.1.1, "Reference Level", on page 383
- Chapter 7.6.1.1, "Separating Signals by Selecting an Appropriate Resolution Bandwidth", on page 392
- Chapter 7.6.1.2, "Smoothing the Trace Using the Video Bandwidth", on page 392
- "Mapping Samples to sweep Points with the Trace Detector" on page 460

This measurement example shows the different factors influencing the S/N ratio.

Table 7-2: Signal generator settings (e.g. R&S SMW)

Frequency	128 MHz
Level	-95 dBm

- 1. Preset the R&S FPL1000.
- 2. Set the center frequency to 128 MHz.
- 3. Set the span to 100 MHz.
- 4. Set the reference level to-30 dBm.

The signal is measured with the auto peak detector and is completely hidden in the intrinsic noise of the R&S FPL1000.



Figure 7-1: Sine wave signal with low S/N ratio

5. To suppress noise spikes, average the trace. In the "Traces" configuration dialog, set the "Trace Mode" to "Average" (see " Trace Mode " on page 467).

The traces of consecutive sweeps are averaged. To perform averaging, the R&S FPL1000 automatically switches on the sample detector. The RF signal, therefore, can be more clearly distinguished from noise.


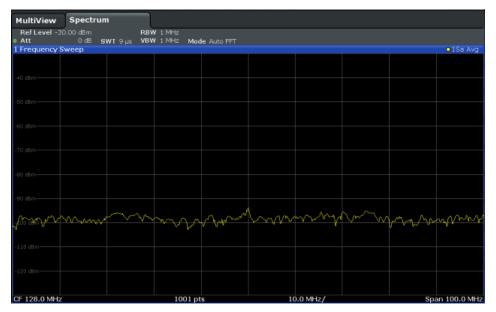


Figure 7-2: RF sine wave signal with low S/N ratio with an averaged trace

6. Instead of trace averaging, you can select a video filter that is narrower than the resolution bandwidth. Set the trace mode back to "Clear/ Write", then set the VBW to 10 kHz manually in the "Bandwidth" configuration dialog.

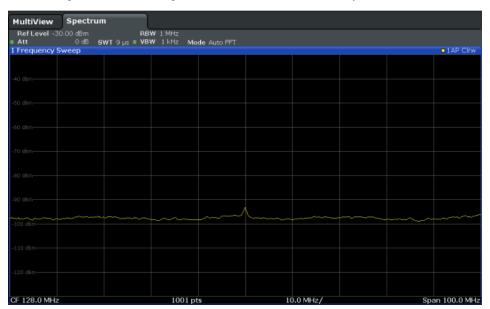

The RF signal can be distinguished from noise more clearly.

Figure 7-3: RF sine wave signal with low S/N ratio with a smaller video bandwidth

7. By reducing the resolution bandwidth by a factor of 10, the noise is reduced by 10 dB. Set the RBW to 100 kHz.

The displayed noise is reduced by approximately 10 dB. The signal, therefore, emerges from noise by about 10 dB. Compared to the previous setting, the video bandwidth has remained the same, i.e. it has increased relative to the smaller resolution bandwidth. The averaging effect of the video bandwidth is therefore reduced. The trace will be noisier.

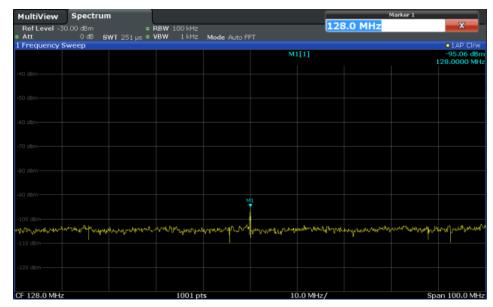


Figure 7-4: Reference signal at a smaller resolution bandwidth

7.2.1.5 Measurement Examples - Measuring Signal Spectra with Multiple Signals

	Separating Signals by Selecting the Resolution Bandwidth	243
•	Measuring the Modulation Depth of an AM-Modulated Carrier in the Frequency	
	Domain	.246
•	Measuring AM-Modulated Signals	247

Separating Signals by Selecting the Resolution Bandwidth

A basic feature of a Signal and Spectrum Analyzer is the ability to separate the spectral components of a mixture of signals. The resolution at which the individual components can be separated is determined by the resolution bandwidth. Selecting a resolution bandwidth that is too large may make it impossible to distinguish between spectral components, i.e. they are displayed as a single component (see also Chapter 7.6.1.1, "Separating Signals by Selecting an Appropriate Resolution Bandwidth", on page 392).

Two signals with the same amplitude can be resolved if the resolution bandwidth is smaller than or equal to the frequency spacing of the signal. If the resolution bandwidth is equal to the frequency spacing, the spectrum display shows a level drop of 3 dB precisely in the center of the two signals. Decreasing the resolution bandwidth makes the level drop larger, which thus makes the individual signals clearer.

In this measurement example we will analyze two signals with a level of -30 dBm each and a frequency spacing of 30 kHz.

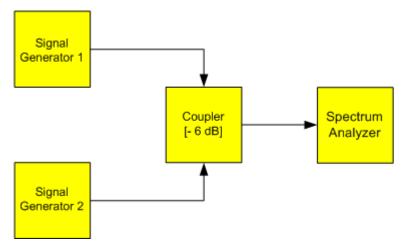


Figure 7-5: Test setup

Table 7-3: Signal generator settings (e.g. R&S SMW)

	Level	Frequency
Signal generator 1	-30 dBm	128,00 MHz
Signal generator 2	-30 dBm	128,03 MHz

- 1. Select [PRESET] to reset the instrument.
- 2. Set the center frequency to 128.015 MHz.

- 3. Set the frequency span to 300 kHz.
- 4. Set the resolution bandwidth to 30 kHz and the video bandwidth to 1 kHz.

Note: Larger video bandwidths. The video bandwidth is set to 1 kHz in order to make the level drop in the center of the two signals clearly visible. At larger video bandwidths, the video voltage that results from envelope detection is not sufficiently suppressed. This produces additional voltages, which are visible in the trace, in the transition area between the two signals.

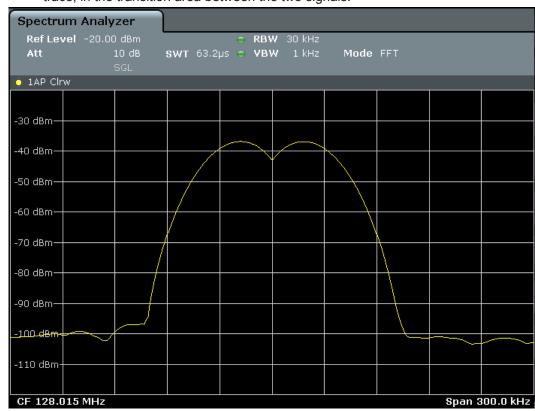


Figure 7-6: Measurement of two equally-leveled RF sinusoidal signals with the resolution bandwidth which corresponds to the frequency spacing of the signals

Matching generator and R&S FPL1000 frequencies

The level drop is located exactly in the center of the display only if the generator frequencies match the frequency display of the R&S FPL1000 exactly. To achieve exact matching, the frequencies of the generators and the R&S FPL1000 must be synchronized.

5. Set the resolution bandwidth to 100 kHz.

It is no longer possible to clearly distinguish the two generator signals.

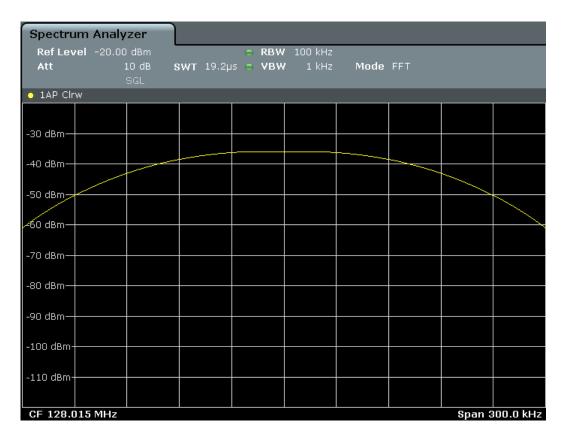


Figure 7-7: Measurement of two equally-leveled RF sinusoidal signals with a resolution bandwidth which is larger than their frequency spacing

6. Set the resolution bandwidth to 1 kHz.

The two generator signals are shown with high resolution. However, the sweep time becomes longer. At smaller bandwidths, the noise display decreases simultaneously (10 dB decrease in noise floor for a decrease in bandwidth by a factor of 10).

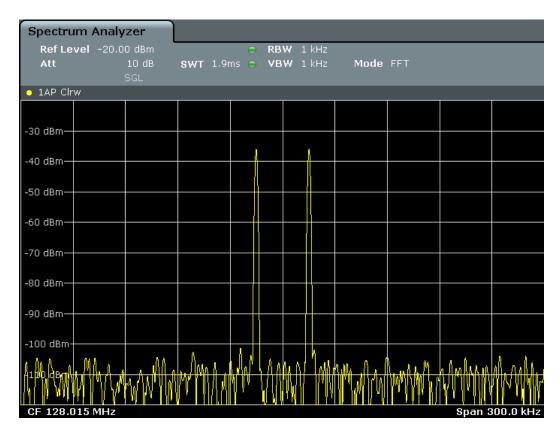


Figure 7-8: Measurement of two equally-leveled RF sinusoidal signals with a resolution bandwidth (1 kHz) which is significantly smaller than their frequency spacing

Measuring the Modulation Depth of an AM-Modulated Carrier in the Frequency Domain

In the frequency range display, the AM side bands can be resolved with a narrow bandwidth and measured separately. The modulation depth of a carrier modulated with a sinusoidal signal can then be measured. Since the dynamic range of a signal analyzer is very large, extremely small modulation depths can also be measured precisely. For this purpose, the R&S FPL1000 provides measurement routines that output the modulation depth numerically in percent directly.

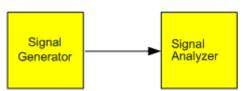


Figure 7-9: Test setup

Table 7-4: Signal generator settings (e.g. R&S SMW)

Frequency	128 MHz
Level	-30 dBm
Modulation	50 % AM, 10 kHz AF

- 1. Select [PRESET] to reset the instrument.
- 2. Set the center frequency to 128 MHz.
- 3. Set the frequency span to 50 kHz.
- 4. Select [MEAS] > "AM Modulation Depth" to activate the modulation depth measurement.

The R&S FPL1000 automatically sets a marker to the carrier signal in the center of the diagram and one delta marker each to the upper and lower AM sidebands. The R&S FPL1000 calculates the AM modulation depth from the level differences of the delta markers to the main marker and outputs the numeric value in the marker information.

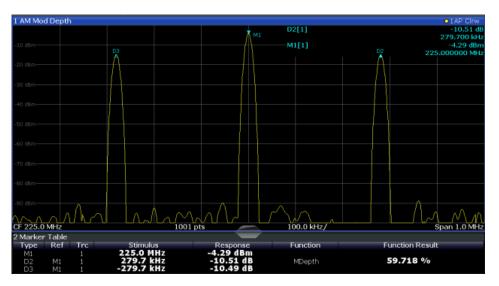


Figure 7-10: Measurement of the AM modulation depth

The modulation depth is displayed as "MDepth" . The frequency of the AF signal can be obtained from the frequency display of the delta marker.

Measuring AM-Modulated Signals

The R&S FPL1000 rectifies the RF input signal (that is, removes the negative parts) and displays it as a magnitude spectrum. The rectification also demodulates AM-modulated signals. The AF voltage can be displayed in zero span if the modulation sidebands fall within the resolution bandwidth.

Displaying the AF of an AM-modulated signal (Zero Span)

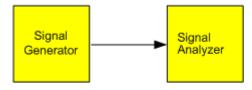


Figure 7-11: Test setup

Table 7-5: Signal generator settings (e.g. R&S SMW)

Frequency	128 MHz
Level	-30 dBm
Modulation	50 % AM, 1 kHz AF

- 1. Select [PRESET] to reset the instrument.
- 2. Set the center frequency to 128 MHz.
- 3. Set the frequency span to 0 Hz or select "Zero Span".
- 4. Set the sweep time to 2.5 ms.
- 5. Set the reference level to 6 dBm and the display range to linear ([AMPT] > "Scale Config" > "Scaling" : "Linear Percent").
- 6. Define triggering in response to the AF signal using the video trigger to produce a static image.
 - a) Press the [TRIG] key.
 - b) Select "Video".
 - c) Set the "Trg/Gate Level" to 50%.

The trigger level is displayed as a horizontal line across the entire measurement diagram. The R&S FPL1000 displays the 1 kHz AF signal as a static image in zero span.

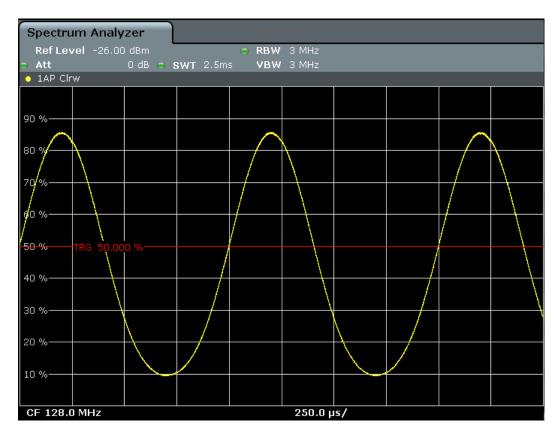


Figure 7-12: Measurement of the AF signal of a carrier that is AM-modulated with 1 kHz

- 7. Activate the internal AM demodulator to output the audio signal.
 - a) Press the [MKR FUNC] key.
 - b) Select "Marker Demodulation" .
 The R&S FPL1000 automatically switches on the AM audio demodulator. A
 1 kHz tone can be heard over headset (via the [PHONES] connector). If necessary, use the volume control to turn up the volume.

7.2.1.6 Measurement Examples in Zero Span

For radio transmission systems that use the TDMA method (for example, GSM), transmission quality is determined not only by spectral characteristics but also by characteristics in zero span. A timeslot is assigned to each user since several users share the same frequency. Smooth operation is ensured only if all users adhere exactly to their assigned timeslots.

Both the power during the send phase as well as the timing and duration of the TDMA burst, and rise and fall times of the burst, are important.

Measuring the Power Characteristic of Burst Signals

To measure power in zero span, the R&S FPL1000 offers easy-to-use functions that measure the power over a predefined time.

Measuring the Power of a GSM Burst During the Activation Phase

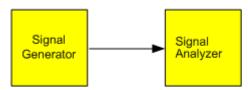


Figure 7-13: Test setup

Table 7-6: Signal generator settings (e.g. R&S SMW)

Frequency	890 MHz
Level	0 dBm
Modulation	GSM, one timeslot activated

- 1. Select [PRESET] to reset the instrument.
- 2. Set the center frequency to 890 MHz ([FREQ]).
- 3. Set the frequency span to 0 Hz ([SPAN] > "Zero Span").
- 4. Set the reference level to 10 dBm (= level of the signal generator +10 dB) (AMPT).
- 5. Set the attenuation to 20 dB ([AMPT] > "RF Atten Manual").
- 6. Set the resolution bandwidth to 1 MHz ([BW] > "Res BW").
- 7. Set the sweep time to 1 ms ([SWEEP] > "Sweep Time Manual").

 The R&S FPL1000 shows the GSM burst continuously across the display.
- 8. Using the video trigger, set triggering on the rising edge of the burst.
 - a) Press the [TRIG] key.
 - b) Set the "Trg Source" to "Video".
 - c) Set the "Trg/Gate Level" to 70%.

The R&S FPL1000 shows a static image with the GSM burst at the start of the trace. The trigger level is displayed as a horizontal line labeled with the absolute level for the trigger threshold in the measurement diagram.

- 9. Activate power measurement within the activation phase of the burst in zero span.
 - a) Press the [MEAS] key.
 - b) Select "Time Domain Power" .
 - c) Select "Time Dom Power Config" .
 - d) Set the "Limits" state to "On".
 - e) Select the "Left Limit" input field.
 - f) By turning the rotary knob clockwise, move the vertical line "S1" to the start of the burst.

- g) Select the "Right Limit" input field.
- h) By turning the rotary knob clockwise, move the vertical line "S2" to the end of the burst.

The R&S FPL1000 displays the average (mean) power during the activation phase of the burst.

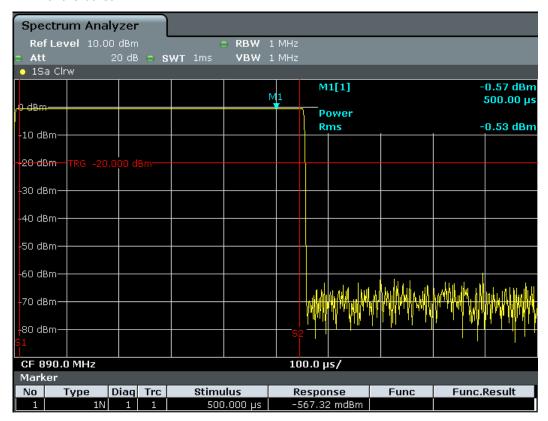


Figure 7-14: Measurement of the average power during the burst of a GSM signal

Measuring the Edges of a GSM Burst with High Time Resolution

Due to the high time resolution of the R&S FPL1000 at the 0 Hz display range, the edges of TDMA bursts can be measured precisely. The edges can be shifted to the display area using the trigger offset.

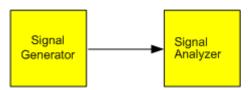


Figure 7-15: Test setup

Table 7-7: Signal generator settings (e.g. R&S SMW)

Frequency	890 MHz
Level	0 dBm
Modulation	GSM, one timeslot activated

The measurement is based on the example "Measuring the Power of a GSM Burst During the Activation Phase" on page 250.

- 1. Switch off the power measurement.
 - a) Press the [MEAS] key.
 - b) Select "All Functions Off" .
- 2. Increase the time resolution to $100 \mu s$ ([SWEEP] > "Sweep Time Manual").
- 3. Shift the rising edge of the GSM burst to the center of the display by defining a trigger offset.
 - a) Press the [TRIG] key.
 - b) Select "Trigger Offset" .
 - c) By turning the rotary knob counterclockwise, reduce the trigger offset until the burst edge is displayed in the center of the display, or enter -50 μ s. The R&S FPL1000 displays the rising edge of the GSM burst.

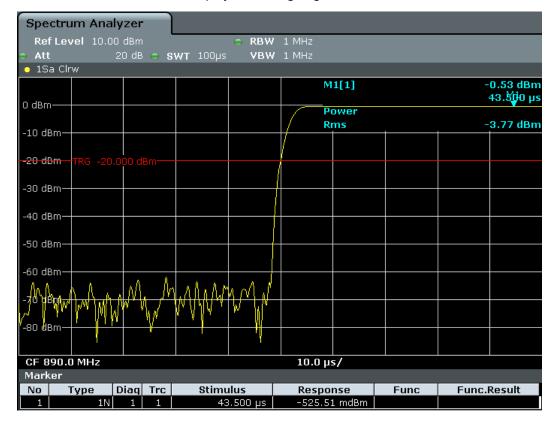


Figure 7-16: Rising edge of the GSM burst displayed with high time resolution

4. Move the falling edge of the burst to the center of the display. To do so, switch the trigger "Slope" to "Falling" ([TRIG] > "Trigger/ Gate Config").

The R&S FPL1000 displays the falling edge of the GSM burst.

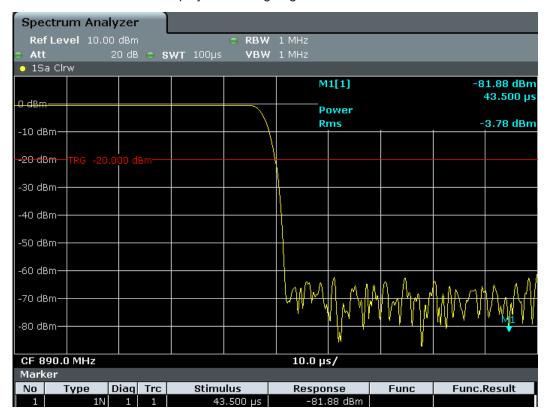


Figure 7-17: Falling edge of the GSM burst displayed with high time resolution

Measuring the Signal-to-Noise Ratio of Burst Signals

When TDMA transmission methods are used, the signal-to-noise ratio or the dynamic range for deactivation can be measured by comparing the power values during the activation phase and the deactivation phase of the transmission burst. Therefore, the R&S FPL1000 provides a measurement for absolute and relative power in zero span. In the following example, the measurement is performed using a GSM burst.

Signal-to-Noise Ratio of a GSM Signal

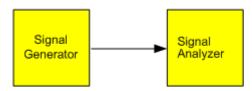


Figure 7-18: Test setup

Table 7-8: Signal generator settings (e.g. R&S SMW)

Frequency	890 MHz	
Level	0 dBm	
Modulation	GSM, one time slot is switched on	

- Select [PRESET] to reset the instrument.
- 2. Set the center frequency to 890 MHz.
- 3. Set the frequency span to 0 Hz.
- 4. Set the resolution bandwidth to 1 MHz.
- 5. Set the reference level to 0 dBm (= level of the signal generator).
- Set the sweep time to 2 ms ([SWEEP] > "Sweep Time Manual").
 The R&S FPL1000 shows the GSM burst continuously across the display.
- 7. Use the trigger source "Video" and the trigger slope "Rising" to trigger on the rising edge of the burst and shift the start of the burst to the center of the display (see step 3 in "Measuring the Edges of a GSM Burst with High Time Resolution" on page 251).
- 8. Activate power measurement within the activation phase of the burst in zero span.
 - a) Press the [MEAS] key.
 - b) Select "Time Domain Power" .
 - c) Select "Time Dom Power Config".
 - d) Set the "Limits" state to "On".
 - e) Select the "Left Limit" input field.
 - f) By turning the rotary knob clockwise, move the vertical line "S1" to the start of the burst.
 - g) Select the "Right Limit" input field.
 - h) By turning the rotary knob clockwise, move the vertical line "S2" to the end of the burst.
- 9. Measure the power during the deactivation phase of the burst by switching the trigger slope to "Falling" ([TRIG] > "Trigger/ Gate Config").

The R&S FPL1000 initiates triggering in response to the falling edge of the burst. This shifts the burst to the left-hand side of the measurement diagram. The power is measured in the deactivation phase.

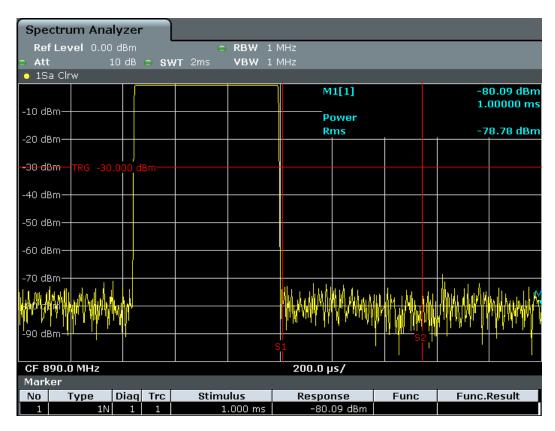


Figure 7-19: Measurement of the signal-to-noise ratio of a GSM burst signal in zero span

7.2.2 Basic Evaluation Methods


Measurement results can be displayed and evaluated using various different methods, also at the same time. Depending on the currently selected measurement, in particular when using optional firmware applications, not all evaluation methods are available.

The evaluation methods described here are available for most measurements in the Spectrum application.

Diagram	255
Marker Table	256
Marker Peak List	256
Result Summary	257
Spectrogram	

Diagram

Displays a basic level vs. frequency or level vs. time diagram of the measured data to evaluate the results graphically. This is the default evaluation method. Which data is displayed in the diagram depends on the "Trace" settings. Scaling for the y-axis can be configured.

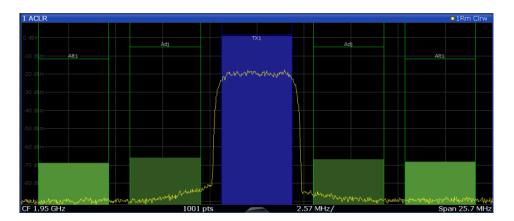

Remote command:

LAY: ADD? '1', RIGH, DIAG, see LAYout: ADD[:WINDow]? on page 639 Results:

TRACe<n>[:DATA] on page 708

Marker Table

Displays a table with the current marker values for the active markers.

This table is displayed automatically if configured accordingly (see " Marker Table Display " on page 428).

2 Marker						
Type	Ref	Trc	Stimulus	Response	Function	Function Result
N1		1	13.197 GHz	-25.87 dBm	Count	13.197052
D1	N1	1	-7.942 GHz	-49.41 dB		
D2	N1	2	-3.918 GHz	-21.90 dB		
D3	N1	3	4.024 GHz	-21.99 dB		

Tip: To navigate within long marker tables, simply scroll through the entries with your finger on the touchscreen.

Remote command:

LAY: ADD? '1', RIGH, MTAB, see LAYout: ADD[:WINDow]? on page 639 Results:

CALCulate<n>:MARKer<m>:X on page 721
CALCulate<n>:MARKer<m>:Y? on page 734

Marker Peak List

The marker peak list determines the frequencies and levels of peaks in the spectrum or time domain. How many peaks are displayed can be defined, as well as the sort order. In addition, the detected peaks can be indicated in the diagram. The peak list can also be exported to a file for analysis in an external application.

You can define search and sort criteria to influence the results of the analysis.

Remote command:

LAY: ADD? '1', RIGH, PEAK, see LAYout: ADD[:WINDow]? on page 639 Results:

CALCulate<n>:MARKer<m>:X on page 721
CALCulate<n>:MARKer<m>:Y? on page 734

Result Summary

Result summaries provide the results of specific measurement functions in a table for numerical evaluation. The contents of the result summary vary depending on the selected measurement function. See the description of the individual measurement functions for details.



Remote command:

LAY:ADD? '1', RIGH, RSUM, see LAYout:ADD[:WINDow]? on page 639

Spectrogram

A spectrogram shows how the spectral density of a signal varies over time. The x-axis shows the frequency or sweep time, the y-axis shows the measurement time. A third dimension, the power level, is indicated by different colors. Thus you can see how the strength of the signal varies over time for different frequencies.

The spectrogram display consists of two diagrams: the standard spectrum result display (upper diagram) and the spectrogram result display (lower diagram).

For details see Chapter 7.10.2.1, "Working with Spectrograms", on page 472.

Remote command:

LAY: ADD? '1', RIGH, SGR, see LAYout: ADD[:WINDow]? on page 639

7.2.3 Channel Power and Adjacent-Channel Power (ACLR) Measurement

Measuring the power in channels adjacent to the carrier or transmission channel is useful to detect interference. The results are displayed as a bar chart for the individual channels.

•	About Channel Power Measurements	. 257
•	Channel Power Results	.258
•	Channel Power Basics	.260
	Channel Power Configuration	
	How to Perform Channel Power Measurements	
•	Measurement Examples	275
	Optimizing and Troubleshooting the Measurement	
	Reference: Predefined CP/ACLR Standards	

7.2.3.1 About Channel Power Measurements

Measuring channel power and adjacent channel power is one of the most important tasks during signal analysis with the necessary test routines in the field of digital transmission. Theoretically, a power meter could be used to measure channel power at highest accuracy. However, its low selectivity means that it is not suitable for measuring adjacent channel power as an absolute value or relative to the transmit channel power. Only a selective power meter can measure the power in the adjacent channels.

A signal analyzer cannot be classified as a true power meter, because it displays the IF envelope voltage. However, it is calibrated such as to display the power of a pure sine wave signal correctly, irrespective of the selected detector. This calibration cannot be applied for non-sinusoidal signals. Assuming that the digitally modulated signal has a Gaussian amplitude distribution, the signal power within the selected resolution bandwidth can be obtained using correction factors. The internal power measurement routines in a signal analyzer normally use these correction factors to determine the signal power from IF envelope measurements. These factors apply if and only if the assumption of a Gaussian amplitude distribution is correct.


Apart from this common method, the R&S FPL also has a true power detector, i.e. an RMS detector. It displays the power of the test signal within the selected resolution bandwidth correctly, irrespective of the amplitude distribution, without additional correction factors being required.

The R&S FPL1000 software allows you to perform ACLR measurements on input containing multiple signals for different communication standards. A measurement standard is provided that allows you to define multiple discontiguous transmit channels at specified frequencies, independent from the selected center frequency. The ACLR measurement determines the power levels of the individual transmit, adjacent, and gap channels, as well as the total power for each sub block of transmit channels.

A detailed measurement example is provided in Chapter 7.2.3.6, "Measurement Examples", on page 275.

7.2.3.2 Channel Power Results

For channel or adjacent-channel power measurements, the individual channels are indicated by different colored bars in the diagram. The height of each bar corresponds to the measured power of that channel. In addition, the name of the channel ("Adj", "Alt %1", "Tx %1", etc., or a user-defined name) is indicated above the bar (separated by a line which has no further meaning).

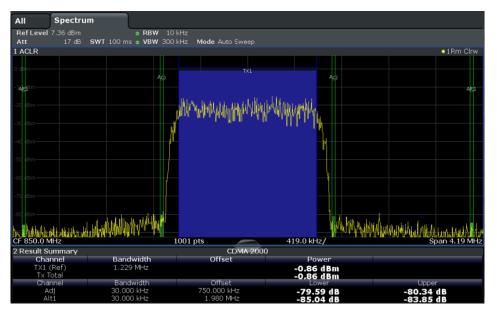

Results are provided for the TX channel and the number of defined adjacent channels above and below the TX channel. If more than one TX channel is defined, you must specify the channel to which the relative adjacent-channel power values refer. By default, it is the TX channel with the maximum power.

Table 7-9: Measurements performed depending on the number of adjacent channels

Number of adj. chan.	Measurement results	
0	Channel powers	
1	 Channel powers Power of the upper and lower adjacent channel 	
2	 Channel powers Power of the upper and lower adjacent channel Power of the next higher and lower channel (alternate channel 1) 	
3	 Channel powers Power of the upper and lower adjacent channel Power of the next higher and lower channel (alternate channel 1) Power of the second next higher and lower adjacent channel (alternate channel 2) 	
12	 Channel powers Power of the upper and lower adjacent channel Power of all the higher and lower channels (alternate channels 1 to 11) 	



In the R&S FPL1000 display, only the first neighboring channel of the carrier (TX) channel is labeled "Adj" (adjacent) channel; all others are labeled "Alt" (alternate) channels. In this manual, "Adjacent" refers to both adjacent and alternate channels.

The measured power values for the TX and adjacent channels are also output as a table in the Result Summary window. Which powers are measured depends on the number of configured channels.

For each channel, the following values are displayed:

Label	Description
Channel	Channel name as specified in the "Channel Settings" (see " Channel Names " on page 271).
Bandwidth	Configured channel bandwidth (see " Channel Bandwidth " on page 269)
Offset	Offset of the channel to the TX channel (configured channel spacing, see " Channel Bandwidth " on page 269)
Power (Lower/Upper)	The measured power values for the TX and lower and upper adjacent channels. The powers of the transmission channels are output in dBm or dBm/Hz, or in dBc, relative to the specified reference TX channel.

Retrieving Results via Remote Control

All or specific channel power measurement results can be retrieved using the CALC:MARK:FUNC:POW:RES? command from a remote computer (see CALCulate<n>:MARKer<m>:FUNCtion:POWer<sb>:RESult? on page 545).

Alternatively, the results can be output as channel power density, i.e. in reference to the measurement bandwidth.

Furthermore, the measured power values of the displayed trace can be retrieved as usual using the TRAC:DATA? commands (see TRACe < n > [:DATA] on page 708). In this case, the measured power value for each sweep point (by default 1001) is returned.

For a full list of remote commands for ACLR measurements, see Chapter 8.6.3.7, "Retrieving and Analyzing Measurement Results", on page 562.

7.2.3.3 Channel Power Basics

Some background knowledge on basic terms and principles used in channel power measurements is provided here for a better understanding of the required configuration settings.

Recommended Common Measurement Parameters

The following sections provide recommendations on the most important measurement parameters for channel power measurements.



All instrument settings for the selected channel setup (channel bandwidth, channel spacing) can be optimized automatically using the "Adjust Settings" function (see "Optimized Settings (Adjust Settings)" on page 268).

The easiest way to configure a measurement is using the configuration "Overview", see Chapter 7.1, "Configuration Overview", on page 232.

•	Sweep Time	260
	Frequency Span	
	Resolution Bandwidth (RBW)	
	Video Bandwidth (VBW)	
	Detector	
	Trace Averaging	
	Reference Level	

Sweep Time

The "Sweep Time" is selected depending on the desired reproducibility of results. Reproducibility increases with "Sweep Time" since power measurement is then performed over a longer time period. As a general approach, approximately 500 non-correlated measured values are required for a reproducibility of 0.5 dB. (That means: 95 % of the measurements are within 0.5 dB of the true measured value). Approximately 5000 measured values are required for a reproducibility of 0.1 dB (99 %). These values are valid for white noise. The measured values are considered as non-correlated if their time interval corresponds to the reciprocal of the measured bandwidth.

The number of A/D converter values, N, used to calculate the power, is defined by the "Sweep Time" . The time per trace pixel for power measurements is directly proportional to the selected "Sweep Time" .

If the sample detector is used, it is best to select the smallest "Sweep Time" possible for a given span and resolution bandwidth. The minimum time is obtained if the setting is coupled, that is: the time per measurement is minimal. Extending the measurement time does not have any advantages. The number of samples for calculating the power is defined by the number of trace points in the channel.

If the RMS detector is used, the selection of "Sweep Time" s can affect the repeatability of the measurement results. Repeatability is increased at longer "Sweep Time" s.

If the RMS detector is used, the number of samples can be estimated as follows:

Since only uncorrelated samples contribute to the RMS value, the number of samples can be calculated from the "Sweep Time" and the resolution bandwidth.

Samples can be assumed to be uncorrelated if sampling is performed at intervals of 1/RBW. The number of uncorrelated samples is calculated as follows:

N_{decorr} = SWT * RBW

(N_{decorr} means uncorrelated samples)

The number of uncorrelated samples per trace pixel is obtained by dividing N_{decorr} by 1001 (= pixels per trace).

The "Sweep Time" can be defined using the softkey in the "Ch Power" menu or in the "Sweep" configuration dialog box (see " Sweep Time " on page 268).

Frequency Span

The frequency span must cover at least the channels to be measured plus a measurement margin of approximately 10 %.

If the frequency span is large in comparison to the channel bandwidth (or the adjacent-channel bandwidths) being analyzed, only a few points on the trace are available per channel. The calculated waveform for the used channel filter is less accurate, which has a negative effect on the measurement accuracy. It is therefore strongly recommended that you consider the described formulas when you select the frequency span.

The frequency span for the defined channel settings can be optimized. Use the "Adjust Settings" function in the "Ch Power" menu or the "General Settings" tab of the "ACLR Setup" dialog box (see "Optimized Settings (Adjust Settings)" on page 268). You can set the frequency span manually in the "Frequency" configuration dialog box.

(See Chapter 7.4.4, "How To Define the Frequency Range", on page 382.)

For channel power measurements the "Adjust Settings" function sets the frequency span as follows:

"(No. of transmission channels -1) x transmission channel spacing +2 x transmission channel bandwidth + measurement margin"

For adjacent-channel power measurements, the "Adjust Settings" function sets the frequency span as a function of the following parameters:

- Number of transmission channels
- Transmission channel spacing
- Adjacent-channel spacing
- Bandwidth of one of adjacent-channels ADJ, ALT1 or ALT2, whichever is furthest away from the transmission channels

"(No. of transmission channels -1) * (transmission channel spacing +2) * (adjacent-channel spacing + adjacent-channel bandwidth) + measurement margin"

The measurement margin is approximately 10 % of the value obtained by adding the channel spacing and the channel bandwidth.

Resolution Bandwidth (RBW)

It is important to suppress spectral components outside the channel to be measured, especially of the adjacent channels. At the same time, you expect an acceptable measurement speed. To fulfill both these requirements, the appropriate resolution bandwidth is essential. As a general approach, set the resolution bandwidth to values between 1 % and 4 % of the channel bandwidth.

If the spectrum within the channel to be measured and the spectrum around the channel has a flat characteristic, you can select a larger resolution bandwidth. In the standard setting, e.g. for standard IS95A REV at an adjacent channel bandwidth of 30 kHz, a resolution bandwidth of 30 kHz is used. This yields correct results since the spectrum near the adjacent channels normally has a constant level.

You can optimize the resolution bandwidth for the defined channel settings. Use the "Adjust Settings" function in the "Ch Power" menu or the "General Settings" tab of the "ACLR Setup" dialog box (see "Optimized Settings (Adjust Settings)" on page 268). You can set the RBW manually in the "Bandwidth" configuration dialog box, see " RBW " on page 398.

Except for the IS95 CDMA standards, the "Adjust Settings" function sets the resolution bandwidth (RBW) as a function of the channel bandwidth:

"RBW" ≤ 1/40 of "Channel Bandwidth"

The maximum resolution bandwidth (concerning the requirement RBW \leq 1/40) resulting from the available RBW steps (1, 3) is selected.

Video Bandwidth (VBW)

For a correct power measurement, the video signal must not be limited in bandwidth. A restricted bandwidth of the logarithmic video signal causes signal averaging and thus results in a too low indication of the power (-2.51 dB at very low video bandwidths). Thus, select the video bandwidth at least three times the resolution bandwidth:

VBW ≥3 * RBW

For FFT sweeps, instead of increasing the VBW, you can also select the trace average mode "Power" to ensure correct power measurements (see " Average Mode " on page 469). Note that in power measurements this setting affects the VBW regardless of whether or not a trace is actually averaged.

The video bandwidth for the defined channel settings can be optimized. Use the "Adjust Settings" function in the "Ch Power" menu or the "General Settings" tab of the "ACLR Setup" dialog box (see "Optimized Settings (Adjust Settings)" on page 268). You can set the VBW manually in the "Bandwidth" configuration dialog box, see " VBW " on page 398.

The video bandwidth (VBW) is set as a function of the channel bandwidth (see formula above) and the smallest possible VBW with regard to the available step size is selected.

Detector

The RMS detector correctly indicates the power irrespective of the characteristics of the signal to be measured. The whole IF envelope is used to calculate the power for each measurement point. The IF envelope is digitized using a sampling frequency which is at least five times the resolution bandwidth which has been selected. Based on the sample values, the power is calculated for each measurement point using the following formula:

$$P_{RMS} = \sqrt{\frac{1}{N}} \cdot \sum_{i=1}^{N} s_i^2$$

Where:

 s_i = linear digitized video voltage at the output of the A/D converter

N = number of A/D converter values per measurement point

P_{RMS} = power represented by a measurement point

When the power has been calculated, the power units are converted into decibels and the value is displayed as a measurement point.

In principle, the sample detector would be possible as well. Due to the limited number of measurement points used to calculate the power in the channel, the sample detector would yield less stable results.

The RMS detector can be set for the defined channel settings automatically. Use the "Adjust Settings" function in the "Ch Power" menu or the "General Settings" tab of the "ACLR Setup" dialog box (see "Optimized Settings (Adjust Settings)" on page 268). You can set the detector manually in the "Traces" configuration dialog box, see " Detector " on page 468.

Trace Averaging

Avoid averaging, which is often performed to stabilize the measurement results but leads to a level indication that is too low. The reduction in the displayed power depends on the number of averages and the signal characteristics in the channel to be measured.

The "Adjust Settings" function switches off trace averaging. You can deactivate the trace averaging manually in the "Traces" configuration dialog box, see " Average Mode " on page 469.

Reference Level

To achieve an optimum dynamic range, set the reference level so that the signal is as close to the reference level as possible without forcing an overload message. However, if the signal-to-noise ratio becomes too small, the dynamic range is also limited. The measurement bandwidth for channel power measurements is significantly smaller than the signal bandwidth. Thus, the signal path can be overloaded although the trace is still significantly below the reference level.




Selecting a predefined standard or automatically adjusting settings does not affect the reference level. The reference level can be set automatically using the "Auto Level" function in the [Auto Set] menu, or manually in the "Amplitude" menu.

7.2.3.4 Channel Power Configuration

Access: "Overview" > "Select Measurement" > "Channel Power ACLR" > "CP / ACLR Config"

Both Channel Power (CP) and Adjacent-Channel Power (ACLR) measurements are available.

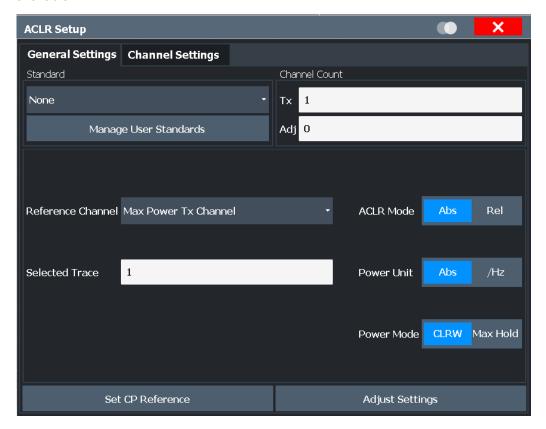

The remote commands required to perform these tasks are described in Chapter 8.6.3, "Measuring the Channel Power and ACLR", on page 549.

General CP/ACLR Measurement Settings

General measurement settings are defined in the "ACLR Setup" dialog, in the "General Settings" tab.

Standard	265
L Predefined Standards	265
L User Standards	
Number of channels: Tx , Adj	266
Reference Channel	
Selected Trace	267
Absolute and Relative Values (ACLR Mode)	267
Channel power level and density (Power Unit)	267
Power Mode	
Setting a fixed reference for Channel Power measurements (Set CP Reference).	268
Optimized Settings (Adjust Settings)	268
Sweep Time	

Standard

The main measurement settings can be stored as a standard file. When such a standard is loaded, the required channel and general measurement settings are automatically set on the R&S FPL1000. However, the settings can be changed. Predefined standards are available for standard measurements, but standard files with user-defined configurations can also be created.

Predefined Standards ← **Standard**

Predefined standards contain the main measurement settings for standard measurements. When such a standard is loaded, the required channel settings are automatically set on the R&S FPL1000. However, the settings can be changed.

The predefined standards contain the following settings:

- Channel bandwidths
- Channel spacings
- Detector
- Trace Average setting
- Resolution Bandwidth (RBW)
- Weighting Filter

Predefined standards can be selected via the "CP / ACLR Standard" softkey in the "Ch Power" menu or in the "General Settings" tab of the "CP / ACLR Config" dialog box.

For details on the available standards, see Chapter 7.2.3.8, "Reference: Predefined CP/ACLR Standards", on page 279.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:POWer:PRESet on page 549

User Standards ← **Standard**

Access: "CP / ACLR Config" > "General Settings" tab > "Manage User Standards"

In addition to the predefined standards, you can save your own standards with your specific measurement settings in an XML file so you can use them again later. User-defined standards are stored on the instrument in the

C:\ProgramData\Rohde-Schwarz\ZNL-FPL\acp std directory.

Note that ACLR user standards are not supported for multicarrier ACLR measurements.

Note: User standards created on an analyzer of the R&S FSP family are compatible to the R&S FPL1000. User standards created on an R&S FPL1000, however, are not necessarily compatible to the analyzers of the R&S FSP family and may not work there.

The following parameter definitions are saved in a user-defined standard:

- Number of adjacent channels
- Channel bandwidth of transmission (Tx), adjacent (Adj) and alternate (Alt) channels
- Channel spacings
- Weighting filters
- Resolution bandwidth
- Video bandwidth
- Detector
- ACLR limits and their state
- "Sweep Time" and "Sweep Time" coupling
- Trace and power mode

Save the current measurement settings as a user-defined standard, load a stored measurement configuration, or delete an existing configuration file.

For details see "How to Manage User-Defined Configurations" on page 274.

Remote command:

To query all available standards:

CALCulate<n>:MARKer<m>:FUNCtion:POWer:STANdard:CATalog?

on page 550

To load a standard:

CALCulate<n>:MARKer<m>:FUNCtion:POWer:PRESet on page 549

To save a standard:

CALCulate<n>:MARKer<m>:FUNCtion:POWer:STANdard:SAVE on page 550

To delete a standard:

CALCulate<n>:MARKer<m>:FUNCtion:POWer:STANdard:DELete on page 550

Number of channels: Tx , Adj

Up to 18 carrier channels and up to 12 adjacent channels can be defined.

Results are provided for the Tx channel and the number of defined adjacent channels above and below the Tx channel. If more than one Tx channel is defined, the carrier channel to which the relative adjacent-channel power values should be referenced must be defined (see "Reference Channel" on page 267).

Note: If several carriers (Tx channels) are activated for the measurement, the number of sweep points is increased to ensure that adjacent-channel powers are measured with adequate accuracy.

For more information on how the number of channels affects the measured powers, see Chapter 7.2.3.2, "Channel Power Results", on page 258.

Remote command:

Number of Tx channels:

[SENSe:] POWer: ACHannel: TXCHannel: COUNt on page 554

Number of Adjacent channels:

[SENSe:] POWer: ACHannel: ACPairs on page 551

Reference Channel

The measured power values in the adjacent channels can be displayed relative to the transmission channel. If more than one Tx channel is defined, define which one is used as a reference channel.

Tx Channel 1	Transmission channel 1 is used.
Min Power Tx Channel	The transmission channel with the lowest power is used as a reference channel.
Max Power Tx Chan- nel	The transmission channel with the highest power is used as a reference channel (Default).
Lowest & Highest Channel	The outer left-hand transmission channel is the reference channel for the lower adjacent channels, the outer right-hand transmission channel that for the upper adjacent channels.

Remote command:

```
[SENSe:] POWer: ACHannel: REFerence: TXCHannel: MANual on page 557 [SENSe:] POWer: ACHannel: REFerence: TXCHannel: AUTO on page 557
```

Selected Trace

The CP/ACLR measurement can be performed on any active trace.

Remote command:

```
[SENSe:] POWer: TRACe on page 548
```

Absolute and Relative Values (ACLR Mode)

The powers of the adjacent channels are output in dBm or dBm/Hz (absolute values), or in dBc, relative to the specified reference Tx channel.

"Abs" The absolute power in the adjacent channels is displayed in the unit

of the y-axis, e.g. in dBm, dBµV.

"Rel" The level of the adjacent channels is displayed relative to the level of

the transmission channel in dBc.

Remote command:

[SENSe:] POWer: ACHannel: MODE on page 563

Channel power level and density (Power Unit)

By default, the channel power is displayed in absolute values. If "/Hz" is activated, the channel power density is displayed instead. Thus, the absolute unit of the channel power is switched from dBm to dBm/Hz.

Note: The channel power density in dBm/Hz corresponds to the power inside a bandwidth of 1 Hz and is calculated as follows:

"channel power density = channel power – log₁₀(channel bandwidth)"

Thus you can measure the signal/noise power density, for example, or use the additional functions Absolute and Relative Values (ACLR Mode) and Reference Channel to obtain the signal to noise ratio.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:POWer:RESult:PHZ on page 563

Power Mode

The measured power values can be displayed directly for each trace ("Clear/ Write"), or only the maximum values over a series of measurements can be displayed ("Max Hold"). In the latter case, the power values are calculated from the current trace and compared with the previous power value using a maximum algorithm. The higher value is retained. If "Max Hold" mode is activated, "Pwr Max" is indicated in the table header. Note that the *trace* mode remains unaffected by this setting.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:POWer:MODE on page 544

Setting a fixed reference for Channel Power measurements (Set CP Reference)

If only one Tx channel and no adjacent channels are defined, the currently measured channel power can be used as a fixed reference value for subsequent channel power measurements.

When you select this button, the channel power currently measured on the Tx channel is stored as a fixed reference power. In the following channel power measurements, the power is indicated relative to the fixed reference power. The reference value is displayed in the "Reference" field (in relative ACLR mode); the default value is 0 dBm.

Note: In adjacent-channel power measurement, the power is always referenced to a transmission channel (see "Reference Channel" on page 267), thus, this function is not available.

Remote command:

[SENSe:] POWer: ACHannel: REFerence: AUTO ONCE on page 556

Optimized Settings (Adjust Settings)

All instrument settings for the selected channel setup (channel bandwidth, channel spacing) can be optimized automatically.

The adjustment is carried out only once. If necessary, the instrument settings can be changed later.

The following settings are optimized by "Adjust Settings":

- "Frequency Span" on page 261
- "Resolution Bandwidth (RBW)" on page 262
- "Video Bandwidth (VBW)" on page 262
- "Detector" on page 263
- "Trace Averaging" on page 263

Remote command:

[SENSe:] POWer: ACHannel: PRESet on page 548

Sweep Time

With the RMS detector, a longer "Sweep Time" increases the stability of the measurement results. For recommendations on setting this parameter, see " Sweep Time " on page 260.

The "Sweep Time" can be set via the softkey in the "Ch Power" menu and is identical to the general setting in the "Sweep" configuration dialog box.

Remote command:

[SENSe:] SWEep:TIME on page 663

Channel Setup

The "Channel Settings" tab in the "ACLR Setup" dialog box provides all the channel settings to configure the channel power or ACLR measurement. You can define the channel settings for all channels, independent of the defined number of *used* Tx or adjacent channels (see "Number of channels: Tx, Adj" on page 266).

For details on setting up channels, see "How to Set Up the Channels" on page 272.




In addition to the specific channel settings, the general settings " Standard " on page 265 and " Number of channels: Tx , Adj " on page 266 are also available in this tab.

The following settings are available in individual subtabs of the "Channel Settings" tab.

Channel Bandwidth	269
Channel Spacings	270
Limit Check	
Weighting Filters	271
Channel Names	

Channel Bandwidth

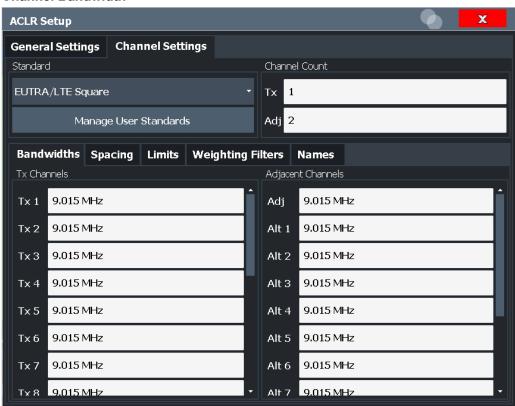

The Tx channel bandwidth is normally defined by the transmission standard.

The correct bandwidth is set automatically for the selected standard. The bandwidth for each channel is indicated by a colored bar in the display.

The value entered for any Tx channel is automatically also defined for all subsequent Tx channels. Thus, only enter one value if all Tx channels have the same bandwidth.

The value entered for any ADJ or ALT channel is automatically also defined for all alternate (ALT) channels. Thus, only enter one value if all adjacent channels have the same bandwidth.

Remote command:

```
[SENSe:]POWer:ACHannel:BANDwidth[:CHANnel<ch>] on page 552
[SENSe:]POWer:ACHannel:BANDwidth:ACHannel on page 551
[SENSe:]POWer:ACHannel:BANDwidth:ALTernate<ch> on page 551
```

Channel Spacings

Channel spacings are normally defined by the transmission standard but can be changed.

If the spacings are not equal, the channel distribution in relation to the center frequency is as follows:

Odd number of Tx channels	The middle Tx channel is centered to center frequency.
Even number of Tx channels	The two Tx channels in the middle are used to calculate the frequency between those two channels. This frequency is aligned to the center frequency.

The spacings between all Tx channels can be defined individually. When you change the spacing for one channel, the value is automatically also defined for all subsequent Tx channels. This allows you to set up a system with equal Tx channel spacing quickly. For different spacings, set up the channels from top to bottom.

Tx1-2	Spacing between the first and the second carrier
Tx2-3	Spacing between the second and the third carrier

If you change the adjacent-channel spacing (ADJ), all higher adjacent channel spacings (ALT1, ALT2, ...) are multiplied by the same factor (new spacing value/old spacing value). Again, only enter one value for equal channel spacing. For different spacing, configure the spacings from top to bottom.

For details, see "How to Set Up the Channels" on page 272

Remote command:

```
[SENSe:]POWer:ACHannel:SPACing:CHANnel<ch> on page 553
[SENSe:]POWer:ACHannel:SPACing[:ACHannel] on page 553
[SENSe:]POWer:ACHannel:SPACing:ALTernate<ch> on page 553
```

Limit Check

During an ACLR measurement, the power values can be checked whether they exceed user-defined or standard-defined limits. A relative or absolute limit can be defined, or both. Both limit types are considered, regardless whether the measured levels are absolute or relative values. The check of both limit values can be activated independently. If any active limit value is exceeded, the measured value is displayed in red and marked by a preceding asterisk in the result table.



The results of the power limit checks are also indicated in the STAT: QUES: ACPL status registry (see "STATus: QUEStionable: ACPL imit Register" on page 193).

Remote command:

```
CALCulate<n>:LIMit:ACPower:ACHannel:ABSolute:STATe on page 558
CALCulate<n>:LIMit:ACPower:ACHannel:ABSolute on page 558
CALCulate<n>:LIMit:ACPower:ACHannel:ABSolute on page 558
CALCulate<n>:LIMit:ACPower:ACHannel:RELative]:STATe
on page 559
CALCulate<n>:LIMit:ACPower:ACHannel[:RELative] on page 558
CALCulate<n>:LIMit:ACPower:ALTernate<ch>:ABSolute:STATe
on page 560
CALCulate<n>:LIMit:ACPower:ALTernate<ch>:ABSolute on page 560
CALCulate<n>:LIMit:ACPower:ALTernate<ch>:RELative]:STATe
on page 562
CALCulate<n>:LIMit:ACPower:ALTernate<ch>[:RELative]:STATe
on page 561
CALCulate<n>:LIMit:ACPower:ALTernate<ch>[:RELative]
on page 559
```

Weighting Filters

Weighting filters allow you to determine the influence of individual channels on the total measurement result. For each channel you can activate or deactivate the use of the weighting filter and define an individual weighting factor ("Alpha:" value).

Weighting filters are not available for all supported standards and cannot always be defined manually where they are available.

Remote command:

Activating/Deactivating:

```
[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<ch> on page 556
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel on page 555
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTernate<ch> on page 556
Alpha value:
[SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<ch> on page 555
[SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel on page 554
[SENSe:]POWer:ACHannel:FILTer:ALPHa:ALPHa:ALTernate<ch> on page 555
```

Channel Names

In the R&S FPL1000's display, carrier channels are labeled "Tx" by default; the first neighboring channel is labeled "Adj" (adjacent) channel; all others are labeled "Alt" (alternate) channels. You can define user-specific channel names for each channel which are displayed in the result diagram and result table.

Remote command:

[SENSe:]POWer:ACHannel:NAME:ACHannel on page 552
[SENSe:]POWer:ACHannel:NAME:ALTernate<ch> on page 552
[SENSe:]POWer:ACHannel:NAME:CHANnel<ch> on page 553

7.2.3.5 How to Perform Channel Power Measurements

The following step-by-step instructions demonstrate the most common tasks when performing channel power measurements.



For remote operation, see Chapter 8.6.3.8, "Programming Examples for Channel Power Measurements", on page 564.

How to Perform a Standard Channel Power Measurement.
 How to Set Up the Channels.
 How to Manage User-Defined Configurations.
 How to Compare the Tx Channel Power in Successive Measurements.

How to Perform a Standard Channel Power Measurement

Performing a channel power or ACLR measurement according to common standards is a very easy and straightforward task with the R&S FPL1000.

- 1. Press the [MEAS] key or select "Select Measurement" in the "Overview" .
- 2. Select "Channel Power ACLR".

The measurement is started immediately with the default settings.

- 3. Select the "CP / ACLR Standard" softkey.
- 4. Select a standard from the list.

The measurement is restarted with the predefined settings for the selected standard.

If necessary, edit the settings for your specific measurement as described in "How
to Set Up the Channels" on page 272, or load a user-defined configuration (see
"To load a user-defined configuration" on page 274).

How to Set Up the Channels

Channel definition is the basis for measuring power levels in certain frequency ranges. Usually, the power levels in one or more carrier (Tx) channels and possibly the adjacent channels are of interest. Up to 18 carrier channels and up to 12 adjacent channels can be defined.

When a measurement standard is selected, all settings including the channel bandwidths and channel spacings are set according to the selected standard. Select a standard in the "Ch Power" menu or the "ACLR Setup" dialog box. You can adjust the settings afterwards.

Channel setup consists of the following settings:

- The number of transmission (Tx) and adjacent channels
- The bandwidth of each channel
- For multicarrier ACLR measurements: which Tx channel is used as a reference
- The spacing between the individual channels
- Optionally: the names of the channels displayed in the diagram and result table
- Optionally: the influence of individual channels on the total measurement result ("Weighting Filter")
- Optionally: limits for a limit check on the measured power levels



Changes to an existing standard can be stored as a user-defined standard, see "How to Manage User-Defined Configurations" on page 274.

► To configure the channels in the "Ch Power" dialog box, select "Ch Power" > "CP / ACLR Config" > "Channel Settings" tab.



In the "Channel Setup" dialog box, you can define the channel settings for all channels, independent of the defined number of *used* Tx or adjacent channels.

To define channel spacings

Channel spacings are normally defined by the selected standard but can be changed.

▶ In the "Channel Settings" tab of the "ACLR Setup" dialog box, select the "Spacing" subtab.

The value entered for any Tx channel is automatically also defined for all subsequent Tx channels. Thus, only enter one value if all Tx channels have the same spacing.

If the channel spacing for the adjacent or an alternate channel is changed, all higher alternate channel spacings are multiplied by the same factor (new spacing value/old spacing value). The lower adjacent-channel spacings remain unchanged. Only enter one value for equal channel spacing.

Example: Defining channel spacing

In the default setting, the adjacent channels have the following spacing: 20 kHz ("ADJ"), 40 kHz ("ALT1"), 60 kHz ("ALT2"), 80 kHz ("ALT3"), 100 kHz ("ALT4"), ...

Set the spacing of the first adjacent channel ("ADJ") to 40 kHz. For all other adjacent channels, the spacing is multiplied by factor 2: 80 kHz ("ALT1"), 120 kHz ("ALT2"), 160 kHz ("ALT3"), ...

Starting from the default setting, set the spacing of the fifth adjacent channel ("ALT4") to 150 kHz. For all higher adjacent channels, the spacing is multiplied by factor 1.5: 180 kHz ("ALT5"), 210 kHz ("ALT6"), 240 kHz ("ALT7"), ...

How to Manage User-Defined Configurations

You can define measurement configurations independently of a predefined standard and save the current ACLR configuration as a "user standard" in an XML file. You can then load the file and thus the settings again later.

User-defined standards are not supported for multicarrier ACLR measurements.



Compatibility to R&S FSP

User standards created on an analyzer of the R&S FSP family are compatible to the R&S FPL1000. User standards created on an R&S FPL1000, however, are not necessarily compatible to the analyzers of the R&S FSP family and may not work there.

To store a user-defined configuration

- 1. In the "Ch Power" menu, select the "CP / ACLR Config" softkey to display the "ACLR Setup" dialog box.
- Configure the measurement as required (see also "How to Set Up the Channels" on page 272).
- 3. In the "General Settings" tab, select the "Manage User Standards" button to display the "Manage" dialog box.
- 4. Define a filename and storage location for the user standard. By default, the XML file is stored in C:\ProgramData\Rohde-Schwarz\ZNL-FPL\acp_std\. However, you can define any other storage location.
- 5. Select "Save".

To load a user-defined configuration

- 1. In the "General Settings" tab of the "ACLR Setup" dialog box, select the "Manage User Standards" button to display the "Manage" dialog box.
- 2. Select the user standard file.
- 3. Select "Load" .

The stored settings are automatically set on the R&S FPL1000 and the measurement is restarted with the new parameters.

How to Compare the Tx Channel Power in Successive Measurements

For power measurements with only one Tx channel and no adjacent channels, you can define a fixed reference power and compare subsequent measurement results to the stored reference power.

- 1. Configure a measurement with only one Tx channel and no adjacent channels (see also "How to Set Up the Channels" on page 272).
- 2. In the "ACLR Setup" dialog box, select the "Set CP Reference" button.

The channel power currently measured on the Tx channel is stored as a fixed reference power. The reference value is displayed in the "Reference" field of the result table (in relative ACLR mode).

3. Start a new measurement.

The resulting power is indicated relative to the fixed reference power.

- 4. Repeat this for any number of measurements.
- 5. To start a new measurement without the fixed reference, temporarily define a second channel or preset the instrument.

7.2.3.6 Measurement Examples


The R&S FPL1000 has test routines for simple channel and adjacent channel power measurements. These routines give quick results without any complex or tedious setting procedures.



A programming example demonstrating an ACLR measurement in a remote environment is provided in Chapter 8.6.3.8, "Programming Examples for Channel Power Measurements", on page 564.

Measurement Example 2 – Measuring Adjacent Channel Power of a W-CDMA Uplink Signal

Test setup:

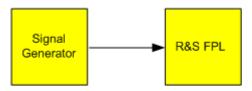

Signal generator settings (e.g. R&S SMW):

Frequency:	1950 MHz
Level:	4 dBm
Modulation:	3GPP W-CDMA Reverse Link

Procedure:

1. Preset the R&S FPL1000.

- 2. Set the center frequency to 1950 MHz.
- 3. Select the "Channel Power ACLR" measurement function from the "Select Measurement" dialog box.
- 4. Set the "W-CDMA 3GPP REV" standard for adjacent channel power measurement in the "ACLR Setup" dialog box.
 - The R&S FPL1000 sets the channel configuration to the W-CDMA standard for mobiles with two adjacent channels above and below the transmit channel. The frequency span, the resolution and video bandwidth and the detector are automatically set to the correct values. The spectrum is displayed in the upper window and the channel power, the level ratios of the adjacent channel powers and the channel configuration in the lower window. The individual channels are displayed as bars in the graph.
- 5. Set the optimal reference level and RF attenuation for the applied signal level using the "Auto Level" function.

The R&S FPL1000 sets the optimum RF attenuation and the reference level for the power in the transmission channel to obtain the maximum dynamic range. The following figure shows the result of the measurement.

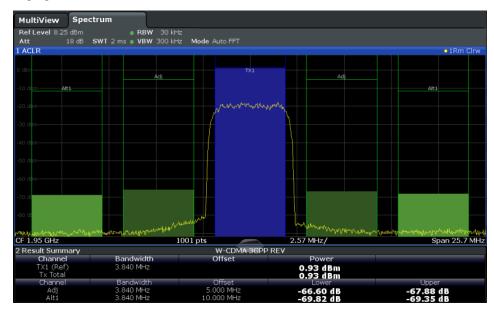


Figure 7-20: Measuring the relative adjacent channel power on a W-CDMA uplink signal

The R&S FPL1000 measures the power of the individual channels. A root raised cosine filter with the parameters α = 0.22 and chip rate 3.84 Mcps (= receive filter for W-CDMA) is used as channel filter.

Measurement Example 3 – Measuring the Intrinsic Noise of the R&S FPL with the Channel Power Function

Noise in any bandwidth can be measured with the channel power measurement functions. Thus the noise power in a communication channel can be determined, for example.

If the noise spectrum within the channel bandwidth is flat, the noise marker can be used to determine the noise power in the channel by considering the channel bandwidth. However, in the following cases, the channel power measurement method must be used to obtain correct measurement results:

- If phase noise and noise that normally increases towards the carrier is dominant in the channel to be measured
- If there are discrete spurious signals in the channel

Test setup:

 \blacktriangleright Leave the RF input of the R&S FPL open-circuited or terminate it with 50 Ω.

Procedure:

- 1. Preset the R&S FPL1000.
- 2. Set the center frequency to 1 GHz and the span to 1 MHz.
- 3. To obtain maximum sensitivity, set RF attenuation to 0 dB and the reference level to -40 dBm.
- 4. Select the "Channel Power ACLR" measurement function from the "Select Measurement" dialog box.
- 5. In the "ACLR Setup" dialog box, set up a single Tx channel with the channel bandwidth 1.23 MHz.
- Select the "Adjust Settings" softkey.
 The settings for the frequency span, the bandwidth (RBW and VBW) and the detector are automatically set to the optimum values required for the measurement.
- 7. Stabilize the measurement result by increasing the "Sweep Time" . Set the "Sweep Time" to 1 s.

The trace becomes much smoother because of the RMS detector and the channel power measurement display is much more stable.

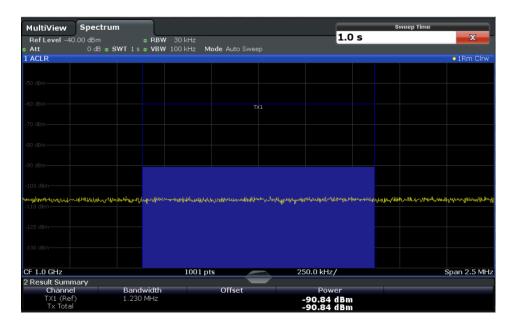


Figure 7-21: Measurement of the R&S FPL1000's intrinsic noise power in a 1.23 MHz channel bandwidth.

7.2.3.7 Optimizing and Troubleshooting the Measurement

If the results do not meet your expectations, or if you want to minimize the measurement duration, try the following methods to optimize the measurement:

- Only activate as many adjacent channels as necessary to minimize the required span and thus the required measurement time for the measurement.
- Increase the RBW to minimize the measurement time; however, consider the
 requirements of the standard if you need to measure according to standard! The
 automatic settings are always according to standard.
- Take advantage of the speed optimization mode in the "Sweep" settings if you do not require the larger dynamic range (see "Optimization" on page 401).
- Reduce the **"Sweep Time"** and thus the amount of data to be captured and calculated; however, consider the requirements regarding the standard deviation.
- To improve the **stability of the measured results**, increase the "Sweep Time", which also leads to more averaging steps.
- Instead of trace averaging, use an RMS detector with a higher "Sweep Time" to obtain better average power results in less time.
- To determine a channel power level quickly, use the Time Domain Power Measurement (TDP) rather than a Channel Power measurement. The TDP measurement is a zero span measurement where the sweep time determines the measurement time. Due to the FFT measurement, duplicate averaging is performed, providing very stable results very quickly.
 - Note, however, that for TDP measurements, channel filters are not available and a fixed RBW is used. Thus, the measurement may not be according to standard for some test cases.

7.2.3.8 Reference: Predefined CP/ACLR Standards

When using predefined standards for ACLR measurement, the test parameters for the channel and adjacent-channel measurements are configured automatically.

You can select a predefined standard via the "CP / ACLR Standard" softkey in the "Ch Power" menu or the selection list in the "General Settings" tab of the "ACLR Setup" dialog box (see " Standard " on page 265).

Table 7-10: Predefined CP / ACLR standards with remote command parameters

Standard	Remote parameter
None	NONE
EUTRA/LTE Square	EUTRa
EUTRA/LTE Square/RRC	REUTra
W-CDMA 3GPP FWD	FW3Gppcdma
W-CDMA 3GPP REV	RW3Gppcdma
WLAN 802.11A	AWLAN
WLAN 802.11B	BWLAN
RFID 14443	RFID14443
TETRA	TETRa

7.2.4 Carrier-to-Noise Measurements

Measures the carrier-to-noise ratio. C/No measurements normalize the ratio to a 1 Hz bandwidth.

7.2.4.1 About the Measurement

The largest signal in the frequency span is the carrier. It is searched when the C/N or C/N_0 function is activated and is marked using a fixed reference marker ("FXD").

To determine the noise power, a channel with a defined bandwidth at the defined center frequency is analyzed. The power within this channel is integrated to obtain the noise power level. (If the carrier is within this channel, an extra step is required to determine the correct noise power level, see below.)

The noise power of the channel is subtracted from the maximum carrier signal level, and in the case of a C/N_0 measurement, it is referred to a 1 Hz bandwidth.



For this measurement, the RMS detector is activated.

The carrier-to-noise measurements are only available in the frequency domain (span >0).

Measurement process

Depending on whether the carrier is inside or outside the analyzed channel, the measurement process for the carrier-to-noise ratio varies:


- The carrier is outside the analyzed channel: In this case, it is sufficient to switch on the desired measurement function and to set the channel bandwidth. The carrier/ noise ratio is displayed on the screen.
- The carrier is inside the analyzed channel: In this case, the measurement must be performed in two steps:
 - First, perform the reference measurement by switching on either the C/N or the C/N₀ measurement and waiting for the end of the next measurement run. The fixed reference marker is set to the maximum of the measured carrier signal.
 - Then, switch off the carrier so that only the noise of the test setup is active in the channel. The carrier-to-noise ratio is displayed after the subsequent measurement has been completed.

Frequency Span

The frequency span should be set to approximately twice the channel bandwidth in order to measure the carrier-to-noise ratio correctly. This setting is defined automatically by the "Adjust Settings" function.

7.2.4.2 Carrier-to-Noise Results

As a result of the carrier-to-noise measurement the evaluated bandwidth and the calculated C/N ratio are displayed in the result window. The fixed reference marker is indicated in the diagram.

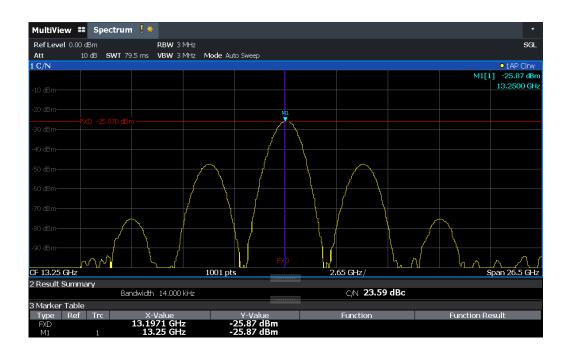


Remote command:

You can also query the determined carrier-to-noise ratio via the remote command CALC:MARK:FUNC:POW:RES? CN or CALC:MARK:FUNC:POW:RES? CN0, see CALCulate<n>:MARKer<m>:FUNCtion:POWer<sb>:RESult? on page 545.

7.2.4.3 Carrier-to-Noise Configuration

Access: "Overview" > "Select Measurement" > "C/N" / "C/N0" > "Carrier Noise Config" Both a carrier-to-noise ratio (C/N) and a carrier-to-noise ratio in relation to the bandwidth (C/N_0) measurement are available.

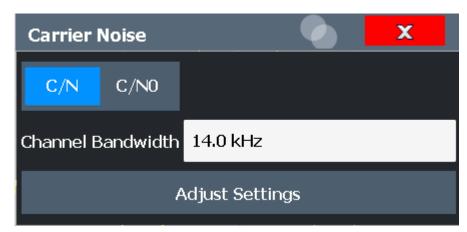

Carrier-to-noise measurements are not available in zero span mode.



The easiest way to configure a measurement is using the configuration "Overview", see Chapter 7.1, "Configuration Overview", on page 232.

The remote commands required to perform these tasks are described in Chapter 8.6.4, "Measuring the Carrier-to-Noise Ratio", on page 566.

C/N	282
C/N0	282
Channel Bandwidth	282
Adjust Settings	282

C/N

Switches the measurement of the carrier/noise ratio on or off. If no marker is active, marker 1 is activated.

The measurement is performed on the trace that marker 1 is assigned to. To shift marker 1 and measure another trace, use the "Marker To Trace" softkey in the "Marker" menu (see " Assigning the Marker to a Trace " on page 427).

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:POWer:SELect on page 547
CALCulate<n>:MARKer<m>:FUNCtion:POWer<sb>:RESult? on page 545
CALCulate<n>:MARKer<m>:FUNCtion:POWer[:STATe] on page 547
```

C/N0

Switches the measurement of the carrier/noise ratio with reference to a 1 Hz bandwidth on or off. If no marker is active, marker 1 is activated.

The measurement is performed on the trace that marker 1 is assigned to. To shift marker 1 and measure another trace, use the "Marker To Trace" softkey in the "Marker" menu (see " Assigning the Marker to a Trace " on page 427).

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:POWer:SELect on page 547
CALCulate<n>:MARKer<m>:FUNCtion:POWer<sb>:RESult? on page 545
CALCulate<n>:MARKer<m>:FUNCtion:POWer[:STATe] on page 547
```

Channel Bandwidth

Defines the channel bandwidth.

The default setting is 14 kHz.

Remote command:

```
[SENSe:] POWer: ACHannel: BANDwidth [: CHANnel < ch > ] on page 552
```

Adjust Settings

Enables the RMS detector and adjusts the span to the selected channel bandwidth according to:

"4 x channel bandwidth + measurement margin"

The adjustment is performed once; if necessary, the setting can be changed later on.

Remote command:

```
[SENSe:] POWer: ACHannel: PRESet on page 548
```

7.2.4.4 How to Determine the Carrier-to-Noise Ratio

The following step-by-step instructions demonstrate how to determine the carrier-tonoise ratio.



For remote operation, see "Programming example: Measuring the carrier-to-noise ratio" on page 566.

- Press the "C/N", "C/N0" softkey to configure the carrier-to-noise ratio measurement.
- 2. To change the channel bandwidth to be analyzed, press the "Channel Bandwidth" softkey.
- 3. To optimize the settings for the selected channel configuration, press the "Adjust Settings" softkey.
- To activate the measurements without reference to the bandwidth, press the "C/N" softkey.
 - To activate the measurements with reference to the bandwidth, press the ${\rm "C/N_0"}$ softkey .
- If the carrier signal is located within the analyzed channel bandwidth, switch off the carrier signal so that only the noise is displayed in the channel and perform a second measurement.

The carrier-to-noise ratio is displayed after the measurement has been completed.

7.2.5 Occupied Bandwidth Measurement (OBW)

An important characteristic of a modulated signal is its occupied bandwidth, that is: the bandwidth which must contain a defined percentage of the power. In a radio communications system, for instance, the occupied bandwidth must be limited to enable distortion-free transmission in adjacent channels.

OBW Results	3
	5
• ODV COIIIQUIALIOI	
How to Determine the Occupied Bandwidth	
Measurement Example	

7.2.5.1 About the Measurement

The occupied bandwidth is defined as the bandwidth containing a defined percentage of the total transmitted power. A percentage between 10 % and 99.9 % can be set.

Measurement principle

The bandwidth containing 99% of the signal power is to be determined, for example. The algorithm first calculates the total power of all displayed points of the trace. In the

next step, the points from the right edge of the trace are summed up until 0.5 % of the total power is reached. Auxiliary marker 1 is positioned at the corresponding frequency. Then the points from the left edge of the trace are summed up until 0.5 % of the power is reached. Auxiliary marker 2 is positioned at this point. 99 % of the power is now between the two markers. The distance between the two frequency markers is the occupied bandwidth which is displayed in the marker field.



OBW within defined search limits - multicarrier OBW measurement in one sweep

The occupied bandwidth of the signal can also be determined within defined search limits instead of for the entire signal. Thus, only a single sweep is required to determine the OBW for a multicarrier signal. To do so, search limits are defined for an individual carrier and the OBW measurement is restricted to the frequency range contained within those limits. Then the search limits are adapted for the next carrier and the OBW is automatically recalculated for the new range.



For step-by-step instructions, see "How to determine the OBW for a multicarrier signal using search limits" on page 289.

Prerequisites

To ensure correct power measurement, especially for noise signals, and to obtain the correct occupied bandwidth, the following prerequisites and settings are necessary:

- Only the signal to be measured is displayed in the window, or search limits are defined to include only one (carrier) signal. An additional signal would falsify the measurement.
- RBW << occupied bandwidth (approx. 1/20 of occupied bandwidth, for voice communication type: 300 Hz or 1 kHz)
- VBW ≥ 3 x RBW
- RMS detector

• Span ≥ 2 to 3 x occupied bandwidth

Some of the measurement specifications (e.g. PDC, RCR STD-27B) require measurement of the occupied bandwidth using a peak detector. The detector setting of the R&S FPL1000 has to be changed accordingly then.

7.2.5.2 OBW Results

As a result of the OBW measurement the occupied bandwidth ("Occ Bw") is indicated in the marker results. Furthermore, the marker at the center frequency and the temporary markers are indicated.

The measurement is performed on the trace with marker 1. In order to evaluate another trace, marker 1 must be placed on another trace (see Assigning the Marker to a Trace).




The OBW calculation is repeated if the Search Limits are changed, without performing a new sweep. Thus, the OBW for a multicarrier signal can be determined using only one sweep.

Centroid frequency

The centroid frequency is defined as the point in the center of the occupied bandwidth, calculated using the temporary OBW markers T1 and T2. This frequency is indicated as a function result ("Occ Bw Centroid") in the marker table.

Frequency offset

The offset of the calculated centroid frequency to the defined center frequency of the R&S FPL1000 is indicated as a function result ("Occ Bw Freq Offset") in the marker table.

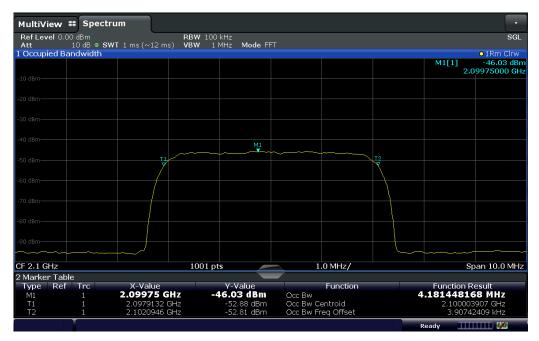

Remote command:

The determined occupied bandwidth can also be queried using the remote command CALC: MARK: FUNC: POW: RES? OBW or CALC: MARK: FUNC: POW: RES? AOBW. While the OBW parameter returns only the occupied bandwidth, the AOBW parameter also returns the position and level of the temporary markers T1 and T2 used to calculate the occupied bandwidth.

```
CALC:MARK:FUNC:POW:SEL OBW, see CALCulate<n>:MARKer<m>:FUNCtion:
POWer:SELect on page 547


CALCulate<n>:MARKer<m>:FUNCtion:POWer[:STATe] on page 547

CALC:MARK:FUNC:POW:RES? OBW, see CALCulate<n>:MARKer<m>:FUNCtion:
POWer<sb>:RESult? on page 545

CALC:MARK:FUNC:POW:RES? COBW, see CALCulate<n>:MARKer<m>:FUNCtion:
POWer<sb>:RESult? on page 545
```

7.2.5.3 **OBW Configuration**

Access: "Overview" > "Select Measurement" > "OBW" > "OBW Config"

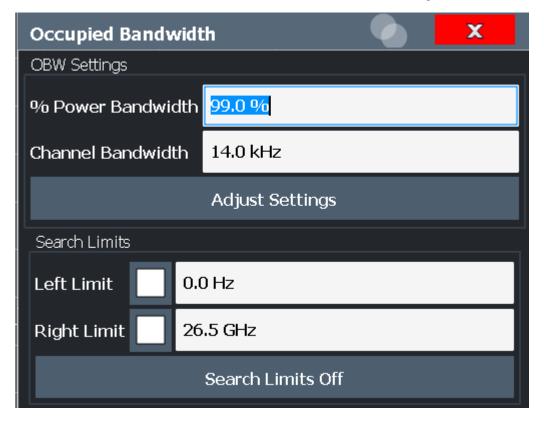

This measurement is not available in zero span.



Configuring search limits for OBW measurement

The OBW measurement uses the same search limits as defined for marker search (see " Search Limits " on page 432). However, only the left and right limits are considered.

The remote commands required to perform these tasks are described in Chapter 8.6.5, "Measuring the Occupied Bandwidth", on page 567.

% Power Bandwidth	287
Channel Bandwidth	
Adjust Settings	287
Search Limits (Left / Right)	
Deactivating All Search Limits	

% Power Bandwidth

Defines the percentage of total power in the displayed frequency range which defines the occupied bandwidth. Values from 10 % to 99.9 % are allowed.

Remote command:

[SENSe:] POWer:BANDwidth on page 568

Channel Bandwidth

Defines the channel bandwidth for the transmission channel in single-carrier measurements. This bandwidth is used to optimize the test parameters (for details see " Adjust Settings " on page 287). The default setting is 14 kHz.

For measurements according to a specific transmission standard, define the bandwidth specified by the standard for the transmission channel.

For multicarrier measurements, this setting is irrelevant.

Remote command:

[SENSe:]POWer:ACHannel:BANDwidth[:CHANnel<ch>] on page 552

Adjust Settings

Optimizes the instrument settings for the measurement of the occupied bandwidth according to the specified channel bandwidth.

This function is only useful for single carrier measurements.

All instrument settings relevant for power measurement within a specific frequency range are optimized:

- Frequency span: 3 × channel bandwidth
- RBW ≤ 1/40 of channel bandwidth
- VBW ≥ 3 × RBW
- Detector: RMS

The reference level is not affected by "Adjust Settings" . For an optimum dynamic range, select the reference level such that the signal maximum is close to the reference level

(See " Setting the Reference Level Automatically (Auto Level)" on page 387).

The adjustment is carried out only once. If necessary, the instrument settings can be changed later.

Remote command:

[SENSe:] POWer: ACHannel: PRESet on page 548

Search Limits (Left / Right)

If activated, limit lines are defined and displayed for the search. Only results within the limited search range are considered.

For details on limit lines for searches, see "Peak search limits" on page 454.

Remote command:

```
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] on page 724
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT on page 724
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHt on page 724
```

Deactivating All Search Limits

Deactivates the search range limits.

Remote command:

```
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] on page 724
CALCulate<n>:THReshold:STATe on page 726
```

7.2.5.4 How to Determine the Occupied Bandwidth

The following step-by-step instructions demonstrate how to determine the occupied bandwidth.



For remote operation, see Chapter 8.6.5.2, "Programming Example: OBW Measurement", on page 568.

How to determine the OBW for a single signal

- 1. Press the [MEAS] key or select "Select Measurement" in the "Overview" .
- 2. Select the "OBW" measurement function.

The measurement is started immediately with the default settings.

- Select the "OBW Config" softkey.
 The "Occupied Bandwidth" configuration dialog box is displayed.
- 4. Define the percentage of power ("% Power Bandwidth") that defines the bandwidth to be determined.
- 5. If necessary, change the channel bandwidth for the transmission channel.
- 6. To optimize the settings for the selected channel configuration, select "Adjust Settings" .
- 7. Start a sweep.

The result is displayed as OBW in the marker results.

How to determine the OBW for a multicarrier signal using search limits

- 1. Press the [MEAS] key or select "Select Measurement" in the "Overview" .
- 2. Select the "OBW" measurement function.
- 3. Select the "OBW Config" softkey.
- Define the percentage of power ("% Power Bandwidth") that defines the bandwidth to be determined.
- 5. Define search limits so the search area contains only the first carrier signal:
 - a) Enter values for the left or right limits, or both.
 - b) Enable the use of the required limits.
- 6. Start a sweep.

The result for the first carrier is displayed as OBW in the marker results.

7. Change the search limits so the search area contains the next carrier signal as described in step 5.

The OBW is recalculated and the result for the next carrier is displayed. A new sweep is not necessary!

8. Continue in this way until all carriers have been measured.

7.2.5.5 Measurement Example

In the following example, the bandwidth that occupies 99~% of the total power of a PDC signal at 800~MHz, level 0~dBm is measured.



A programming example demonstrating an OBW measurement in a remote environment is provided in Chapter 8.6.5.2, "Programming Example: OBW Measurement", on page 568.

- 1. Preset the R&S FPL1000.
- 2. Set the "Center Frequency" to 800 MHz.
- 3. Set the "Reference Level" to -10 dBm.
- 4. Press the [MEAS] key or select "Select Measurement" in the "Overview" .
- 5. Select the "OBW" measurement function.
- 6. Select the "OBW Config" softkey.
- 7. Set the "% Power Bandwidth" to 99 %.
- 8. Set the "Channel Bandwidth" to 21 kHz as specified by the PDC standard.
- 9. Optimize the settings for the selected channel configuration by selecting "Adjust Settings" .

- 10. Adjust the reference level to the measured total power by selecting "Auto Level" in the [Auto set] menu.
- 11. The PDC standard requires the peak detector for OBW measurement. In the "Traces" configuration dialog, set the trace detector to "PositivePeak".
- 12. Start a sweep.

The result is displayed as OBW in the marker results.

7.2.6 Spectrum Emission Mask (SEM) Measurement

Spectrum Emission Mask (SEM) measurements monitor compliance with a spectral mask.

•	About the Measurement	290
	Typical Applications	
	SEM Results	
	SEM Basics	
	SEM Configuration	
	How to Perform a Spectrum Emission Mask Measurement	
	Measurement Example: Multi-SEM Measurement	
	Reference: SEM File Descriptions	
	and the second of the second o	

7.2.6.1 About the Measurement

The Spectrum Emission Mask (SEM) measurement defines a measurement that monitors compliance with a spectral mask. The mask is defined with reference to the input signal power. The R&S FPL1000 allows for a flexible definition of all parameters in the SEM measurement. The analyzer performs measurements in predefined frequency ranges with settings that can be specified individually for each of these ranges.

In the basic Spectrum application, spectrum emissions can be measured for multiple sub blocks of channels, where the sub blocks can include gaps or overlap, and define separate masks. Radio signals using multiple standards can also be analyzed.

SEM measurement configurations can be saved to an XML file which can then be exported to another application or loaded on the R&S FPL1000 again later. Some predefined XML files are provided that contain ranges and parameters according to the selected standard.

To improve the performance of the R&S FPL1000 for spectrum emission mask measurements, a "Fast SEM" mode is available.

A special limit check for SEM measurements allows for monitoring compliance of the spectrum.

7.2.6.2 Typical Applications

Spectrum Emission Mask measurements are typically performed to ensure that modulated signals remain within the valid signal level ranges. These ranges are defined by a

particular transmission standard, both in the transmission channel and neighboring channels. Any violations of the mask can interfere with other transmissions.

The 3GPP TS 34.122 standard, for example, defines a mask for emissions outside the transmission channel. This mask is defined relative to the input signal power. Three frequency ranges to each side of the transmission channel are defined.

7.2.6.3 SEM Results

As a result of the Spectrum Emission Mask measurement, the following results are displayed in a diagram (see also "Limit Lines in SEM Measurements" on page 296):

- The measured signal levels
- The result of the limit check (mask monitoring)
- The defined limit lines
- TX channel power "P"
- The used power class



Multi-SEM measurements

Multi-SEM measurements are SEM measurements with more than one sub block. In these measurements, each sub block has its own power class definitions. In this case, the power class is not indicated in the graphical result displays.

Example:

For example, in Figure 7-22, "31 < P < 39" is indicated as the used power class is defined from 31 to 39.

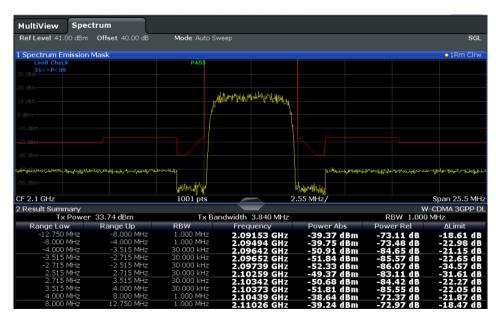


Figure 7-22: Spectrum Emission Mask result displays

In addition to the graphical results of the SEM measurement displayed in the diagram, a result summary is displayed to evaluate the limit check results (see also "Limit Lines in SEM Measurements" on page 296).

The following information is provided in the result summary:

Label	Description
General information	
"Standard"	Loaded standard settings
"Tx Power"	Power of the reference range
"Tx Bandwidth"	Tx bandwidth used by the reference range
"RBW"	RBW used by the reference range
Range results	
"Range Low"	Start of the frequency range the peak value was found in
"Range Up"	Frequency range end the peak value was found in
"RBW"	RBW of the range
"Frequency"	Frequency of the peak power level
"Power Abs"	Absolute peak power level within the range
"Power Rel"	Peak power level within the range, relative to the "Tx Power"
"ΔLimit"	Deviation of the peak power level from the limit line

You can define in which detail the data is displayed in the result summary in the "List Evaluation" settings (see "List Evaluation (Results Configuration)" on page 316). By default, one peak per range is displayed. However, you can change the settings to display only peaks that exceed a threshold ("Margin").

Detected peaks are not only listed in the Result Summary, they are also indicated by blue squares in the diagram (optionally, see Show Peaks in the "List Evaluation" settings).

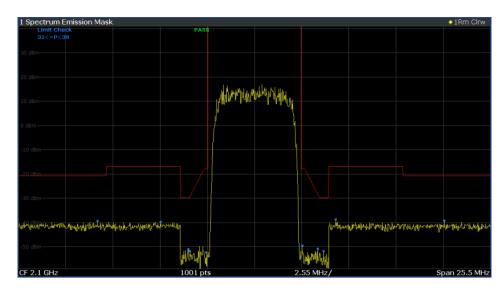


Figure 7-23: Detected peak display in SEM measurement

Furthermore, you can export the results of the result summary to a file which can be exported to another application for further analysis.

Results for SEM with multiple sub blocks

In the Spectrum application only, spectrum emissions can be measured for multiple sub blocks of channels (see "SEM with Multiple Sub Blocks ("Multi-SEM")" on page 300 for details). Up to three sub blocks (with two gaps) can be defined. For each sub block and each gap, the results described above are provided individually in the result summary.

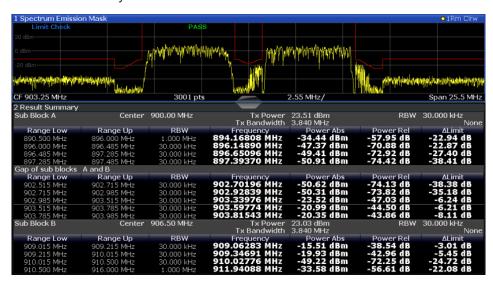


Figure 7-24: SEM results for multiple sub blocks

Retrieving results via remote control

The measurement results of the spectrum emission mask *test* can be retrieved using the CALC:LIM:FAIL? command from a remote computer; see CALCulate<n>: LIMit:FAIL? on page 789 for a detailed description.

The *power* result for the reference range can be queried using CALC:MARK:FUNC:POW:RES? CPOW;

The *peak* power for the reference range can be queried using

CALC:MARK:FUNC:POW:RES? PPOW, see CALCulate<n>:MARKer<m>:FUNCtion: POWer<sb>:RESult? on page 545.

The measured power *trace* can be queried using TRAC: DATA? and TRAC: DATA: X?, see TRACe < n > [:DATA] on page 708 and TRACe < n > [:DATA] : X? on page 710:

The measured peak power list can be queried using TRAC: DATA? LIST, see TRACe < n > [:DATA] on page 708.

7.2.6.4 SEM Basics

Some background knowledge on basic terms and principles used in SEM measurements is provided here for a better understanding of the required configuration settings.

•	Ranges and Range Settings	294
•	Limit Lines in SEM Measurements	.296
•	Fast SEM Measurements	.298
•	SEM with Multiple Sub Blocks ("Multi-SEM")	300

Ranges and Range Settings

In the Spectrum Emission Mask measurements, a range defines a segment for which you can define the following parameters separately:

- Start and stop frequency
- RBW
- VBW
- "Sweep Time"
- "Sweep Points"
- Reference level
- Attenuator settings
- Preamplifier settings
- Transducer settings
- Limit values

Via the sweep list, you define the ranges and their settings. For details on settings, refer to "Sweep List" on page 304.

For details on defining the limits (masks), see "Limit Lines in SEM Measurements" on page 296.

Range definition

After a preset, the sweep list contains a set of default ranges and parameters. For each range, you can change the parameters listed above. You can insert or delete ranges.

The changes of the sweep list are only kept until you load another parameter set (by pressing [PRESET] or by loading an XML file). If you want a parameter set to be available permanently, create an XML file for this configuration (for details refer to "How to save a user-defined SEM settings file" on page 320).

If you load one of the provided XML files, the sweep list contains ranges and parameters according to the selected standard.

Reference range

The range containing the center frequency is defined as the reference range for all other ranges in the sweep list. All range limits are defined in relation to the reference range. The TX power used as a reference for all power level results in the result summary is also calculated for this reference range. You can define whether the power used for reference is the peak power level or the integrated power of the reference range. In the "Sweep List", the reference range is highlighted in blue and cannot be deleted.

Rules

The following rules apply to ranges:

- The minimum span of a range is 20 Hz.
- The individual ranges must not overlap (but can have gaps).
- The maximum number of ranges is 30.
- The minimum number of ranges is 3.
- The reference range cannot be deleted.
- Center the reference range on the center frequency.
- The current "Tx Bandwidth" defines the minimum span of the reference range (see "Channel Power Settings" on page 312).
- Define frequency values for each range relative to the center frequency.

To change the start frequency of the first range or the stop frequency of the last range, select the appropriate span with the [SPAN] key. You can define a span that is smaller than the combined span of all ranges. In this case, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Sweep points

You can define a minimum number of sweep points for each range. The total number of available sweep points is then distributed among the ranges in consideration of the minimum values. If the total number of sweep points is not enough to satisfy the minimum sweep point requirements in all ranges, the R&S FPL1000 adjusts the global

number of Sweep Points accordingly. By default, each range has a minimum of one sweep point.

This allows you to increase the resolution within a specific range for detailed analysis. You do not have to increase the overall number of sweep points and thus the measurement time for the SEM measurement.

Symmetrical ranges

You can easily define a sweep list with symmetrical range settings, i.e. the ranges to the left and right of the reference range are defined symmetrically. When symmetrical setup is activated, the current sweep list configuration is changed to define a symmetrical setup regarding the reference range. The number of ranges to the left of the reference range is reflected to the right, i.e. any missing ranges on the right are inserted, while superfluous ranges are removed. The values in the ranges to the right of the reference range are adapted symmetrically to those in the left ranges.

Symmetrical ranges fulfill the conditions required for "Fast SEM" mode (see "Fast SEM Measurements" on page 298).

Power classes


If the signal power level to be monitored varies and the limits vary accordingly, you can define power classes, which can then be assigned to the frequency ranges. Thus, the limits for the signal levels can be defined differently for varying input levels. For instance, for higher input levels a transmission standard can allow for higher power levels in adjacent channels, whereas for lower input levels the allowed deviation can be stricter. Up to four different power classes can be defined.

Limit Lines in SEM Measurements

For the R&S FPL1000, the spectrum emission mask is defined using limit lines. Limit lines allow you to check the measured data (that is, the trace results) against specified limit values. Generally, it is possible to define limit lines for any measurement in the Spectrum application application using the [Lines] function. For SEM measurements, however, special limit lines are available via the "Sweep List", and it is strongly recommended that you use only these limit line definitions.

In the "Sweep List", you can define a limit line for each power class that varies its level according to the specified frequency ranges. Special limit lines are automatically defined for each power class according to the current "Sweep List" settings every time the settings change. These limit lines are labeled "_SEM_LINE_<xxx>_ABS<0...3>" and "_SEM_LINE_<xxx>_REL<0...3>", where <xxx> is an index to distinguish limit lines between different channel setups.

The limit line defined for the currently used power class is indicated by a red line in the display. The result of the limit check is indicated at the top of the diagram. Note that only "Pass" or "Fail" is indicated; a "Margin" function as for general limit lines is not available.

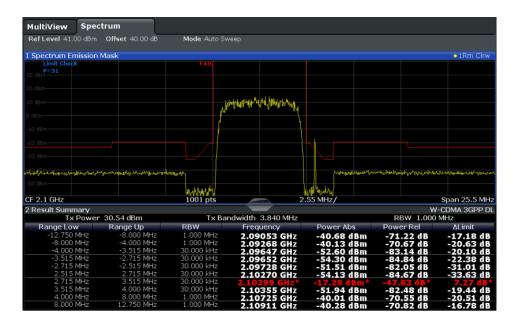

The indicated limit line depends on the settings in the "Sweep List" . Several types of limit checks are possible:

Table 7-11: Limit check types

Limit check type	Pass/fail criteria	Limit line definition
"Absolute"	Absolute power levels must not exceed limit line	Defined by the "Abs Limit Start" / "Abs Limit Stop" values for each range
"Relative"	Power deviations relative to the TX channel power must not exceed limit line	Defined by the "Rel Limit Start" / "Rel Limit Stop" values (relative to the TX channel power), fixed for each range.
"Relative with function f(x)"	If the power exceeds both the absolute and the relative limits, the check fails (see Relative limit line functions below)	Defined by the maximum of the absolute or relative start and stop limit values for each range. Thus, the start or stop point of the limit range, or both, are variable (since the maximum can vary).
"Abs and Rel"	If the power exceeds both the absolute and the relative limits, the check fails.	The less strict (higher) limit line is displayed for each range.
		If you use a function to define the relative limit start or stop value, the signal is checked against an additional condition: the power must exceed the absolute limit, as well as the absolute and relative function values.
"Abs or Rel"	"Abs or Rel" If the power exceeds either the absolute or the relative limits, the check fails.	The stricter (lower) limit line is displayed for each range.
		If you use a function to define the relative limit start or stop value, the signal is checked against an additional condition: if the power exceeds the absolute limit, or the higher of the absolute and relative function values, the check fails.

Relative limit line functions

A new function allows you to define limit lines whose start or end points (or both) are variable, depending on the carrier power. Thus, the resulting limit line can change its slope within the range, depending on the carrier power. Common relative limit lines are calculated once for the defined start and end points and maintain a constant slope.

If the relative limit value function is used in combination with the "Abs and Rel" or "Abs or Rel" limit check types, an additional condition is considered for the limit check (see Table 7-11).

Limit check results in the result summary

For each range, the peak measured value and the deviation of these values from the limit line are displayed in the result summary. If the limit check is passed for the range, the deviation represents the closest value to the limit line. If the limit check is passed for the range, the deviation represents the closest value to the limit line. If the limit check for the range fails, the deviation represents the maximum violation against the limit line. Furthermore, the absolute power levels and the relative deviation of the peaks from the TX channel power are displayed. Values that exceed the limit are indicated in red and by an asterisk (*).





Although a margin functionality is not available for the limit check, a margin (threshold) for the peak values to be displayed in the Result Summary can be defined. (In the "List Evaluation" settings, see "List Evaluation (Results Configuration)" on page 316).

Fast SEM Measurements

To improve the performance of the R&S FPL1000 for spectrum emission mask measurements, a "Fast SEM" mode is available. If this mode is activated, several consecutive ranges with identical sweep settings are combined to one sweep internally, which makes the measurement considerably faster. The displayed results remain unchanged and still consist of several ranges. Thus, measurement settings that apply only to the results, such as limits, can nevertheless be defined individually for each range.

Prerequisites

"Fast SEM" mode is available if the following criteria apply:

- The frequency ranges are consecutive, without frequency gaps
- The following sweep settings are identical (for details see " Sweep List " on page 304):
 - "Filter Type"
 - "RBW"
 - "VBW"
 - "Sweep Time Mode"

- "Reference Level"
- "RF Attenuation Mode"
- "RF Attenuation"
- "Preamplifier"

Activating Fast SEM mode

"Fast SEM" mode is activated in the sweep list (see " Sweep List " on page 304) or using a remote command. Activating the mode for one range automatically activates it for all ranges in the sweep list.

Remote command:

[SENSe:]ESPectrum<sb>:HSPeed on page 573



Fast SEM not supported for multiple sub blocks

For SEM with multiple sub blocks, fast SEM is not available. If more than one sub block is defined and a standard is loaded which contains an active fast SEM setting, this setting is disabled.

For more information on multi-SEM measurements, see "SEM with Multiple Sub Blocks ("Multi-SEM")" on page 300.

Consequences

When the "Fast SEM" mode is activated, the ranges for which these criteria apply are displayed as one single range. The sweep time is defined as the sum of the individual sweep times, initially, but can be changed.



If "Symmetrical Setup" mode is active when "Fast SEM" mode is activated, not all sweep list settings can be configured symmetrically automatically (see also "Symmetrical Setup" on page 310).

Any other changes to the sweep settings of the combined range are applied to each included range and remain changed even after deactivating "Fast SEM" mode.

Example

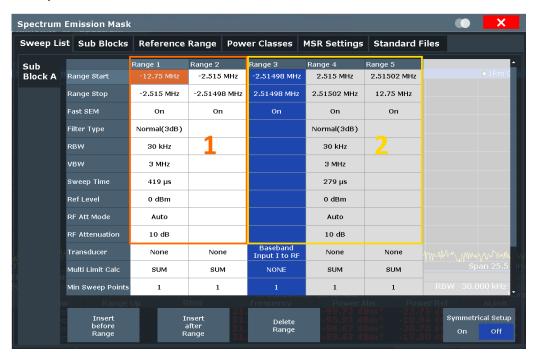


Figure 7-25: Sweep list using Fast SEM mode

In Figure 7-25, a sweep list is shown for which Fast SEM is activated. The formerly five separately defined ranges are combined to two sweep ranges internally.

SEM with Multiple Sub Blocks ("Multi-SEM")

In the Spectrum application application only, spectrum emissions can be measured for multiple sub blocks of channels (also referred to as a "Multi-SEM" measurement). Sub blocks are a set of multiple ranges around a defined center frequency (carrier). Multiple sub blocks can include gaps or overlap, and each sub block defines a separate mask. In the overlapping masks, multi-limit lines are calculated. Up to three sub blocks (with two gaps) can be defined. For each sub block, the familiar configuration settings concerning ranges, limit lines etc. can be defined individually.

Comparison to "traditional" SEM measurement

The default SEM measurement is simply a special case of "Multi-SEM" - consisting of one single block. Only if the number of sub blocks in the basic SEM configuration is larger than 1, multiple sub blocks are inserted in the configuration settings and result tables.

Particular features of configuring multiple sub blocks

The sub blocks are independent of the global start, stop, center and span frequencies for the complete SEM measurement. Thus, there can be gaps that can even include other carrier ranges, but are not configured for the SEM measurement.

For each sub block, you define:

- The center frequency of the reference range of the sub block; center frequencies must be defined in ascending order for sub blocks A,B,C
- The reference range; note that although individual ranges of different sub blocks can overlap, reference ranges for different sub blocks cannot; they must define distinct frequency ranges
- The sweep list, including the limit lines



Fast SEM not supported for multiple sub blocks

For SEM with multiple sub blocks, fast SEM is not available. If more than one sub block is defined and a standard is loaded which contains an active fast SEM setting, this setting is disabled.

Absolute vs relative frequencies

In the default configuration with only one sub block, frequencies are defined relative to the center frequency; this is the familiar configuration.

For setups with more than one sub block, frequencies are defined relative to the center frequency of the reference ranges for the individual sub blocks. However, in the result summary, frequencies are indicated as absolute values. Relative frequencies that refer to different reference ranges would be inconvenient and difficult to analyze.

Limit check behavior for overlapping masks

Since spectrum emission masks are defined individually for each sub block, and sub blocks can overlap, the question arises what happens during the limit check in the overlapping regions? To answer this question, we must distinguish the following cases:

- For the reference range, no limit checking is performed, as the reference range contains the carrier
- For other ranges, only the limit lines defined for ranges between the carriers, that is
 the reference ranges to either side, are significant. In other words: if a limit line definition covers the frequency area of several carriers, only the limit lines for ranges
 between the corresponding reference range and the next closest reference range
 are significant.

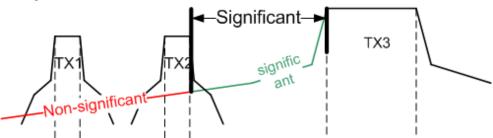


Figure 7-26: Behavior for overlapping masks

 For the ranges in which multiple limit lines are significant, a range-specific function determines the behavior of the limit check

Limit calculation for individual ranges

For each range a function can be defined that determines the behavior of the limit check if there are multiple limit lines:

- "NONE": In reference ranges no limit check is performed;
 Reference ranges always use the function "NONE".
 For other ranges, see the combinations for overlapping ranges below.
- "SUM": sum of the two limit lines (calculated for linear powers) is used
- "MAX" : maximum of the two limit lines is used

This leads to the following combinations for overlapping ranges:

- "MAX" + "MAX" : maximum of the two limit lines is used
- "MAX" + "SUM" : maximum of the two limit lines is used
- "SUM" + "SUM": sum of the two limit lines (calculated for linear powers) is used
- "NONE" + "MAX" / "NONE" + "SUM" : limit line (and parameters) of the "NONE" range are ignored
- "NONE" + "NONE": depends on the position of the overlapping ranges in relation to the mid-frequency between the two neighboring sub blocks:
 - Overlap is completely below the mid-frequency: limits and parameters of the left sub block are used
 - Overlap is completely above the mid-frequency: limits and parameters of the right sub block are used
 - Overlap crosses the mid-frequency: new subranges are created: one to the left of the mid-frequency, one to the right of the mid-frequency. The left subrange uses the limits and parameters of the left sub block, the right subrange uses the limits and parameters of the right sub block.



Different RBWs in overlapping ranges


If different RBWs are defined for the overlapping ranges, the following parameters from the range with the smaller RBW are considered for both ranges:

- RBW
- VBW
- Attenuation
- Reference level
- Transducer
- Filter type
- (proportional) sweep time

In the range with the higher RBW, the following offset is applied to the limit line:

-10*log(RBW_{large} / RBW_{small})

Table 7-12: Limit lines in overlapping ranges crossing the mid-frequency

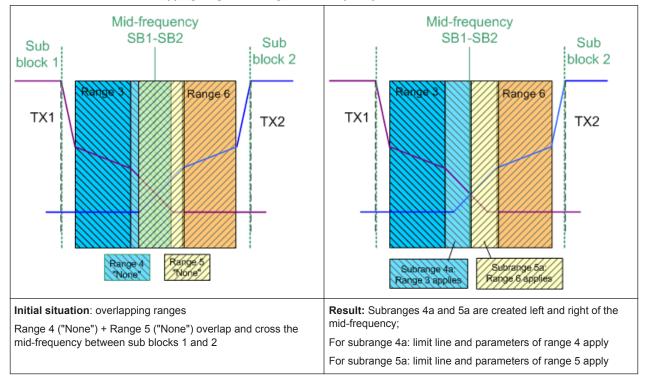

Global SEM limit check

For the complete SEM measurement, which can consist of multiple sub blocks, only one single limit check is performed. A single limit line is calculated according to the individual range limit lines and the defined functions for overlapping ranges. The measured values are then compared with this single limit line. If the limit is exceeded in any range, the result of the limit check is . "' failed!"

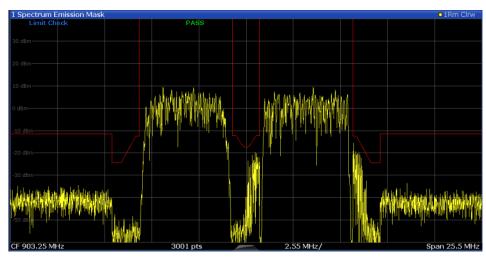


Figure 7-27: Summarized limit line for multiple sub blocks

7.2.6.5 SEM Configuration

Access: "Overview" > "Select Measurement" > "Spectrum Emission Mask"

The SEM measurement is started immediately with the default settings.

The remote commands required to perform these tasks are described in Chapter 8.6.6, "Measuring the Spectrum Emission Mask", on page 569.



Global span settings

The span of the signal to be monitored is configured in the general span settings (see Chapter 7.4.2, "Frequency and Span Settings", on page 377). Only ranges within this global span are considered for the SEM measurement.



Multi-SEM configuration

In the Spectrum application application only, spectrum emissions can be measured for multiple sub blocks of channels (see "SEM with Multiple Sub Blocks ("Multi-SEM")" on page 300). Up to three sub blocks (with two gaps) can be defined. For each sub block, the familiar configuration settings concerning ranges, limit lines etc. can be defined in individual tabs. In addition, settings on the sub blocks themselves must be configured in the "Sub Block" tab of the "Spectrum Emission Mask" configuration dialog box (see "Multi-SEM (Sub Block) Settings" on page 310).

The following settings are available in individual tabs of the "Spectrum Emission Mask" configuration dialog box.

•	Sweep List	304
	Multi-SEM (Sub Block) Settings	
	Reference Range	
	Power Classes	
•	Standard Files	314
•	List Evaluation (Results Configuration)	316


Sweep List

Access: "Overview" > "Select Measurement" > "Spectrum Emission Mask" > "Sweep List"

For SEM measurements, the input signal is split into several frequency ranges which are swept individually and for which different limitations apply. You configure the individual frequency ranges and mask limits in the "Sweep List".



If you edit the sweep list, always follow the rules and consider the limitations described in "Ranges and Range Settings" on page 294.

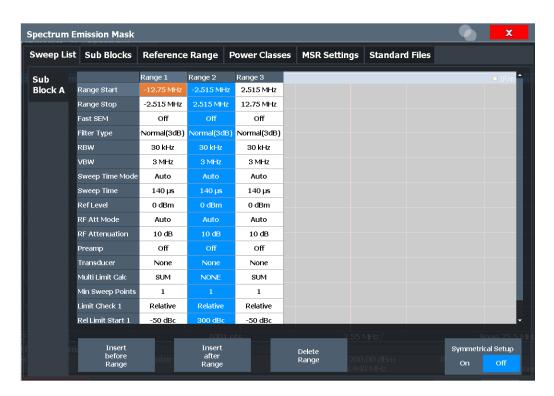

Range Start / Range Stop	305
Fast SEM	306
Filter Type	306
RBW	
VBW	306
Sweep Time Mode	307
Sweep Time	
Ref Level	307
RF Att Mode	307
RF Attenuation	307
Preamp	307
Transducer Factor	307
Limit Check <n></n>	308
Abs Limit Start / Stop <n></n>	308
Rel Limit Start / Stop <n></n>	308
Multi-Limit Calc <n></n>	309
Min Sweep Points	309
Insert before Range / Insert after Range	309
Delete Range	309
Symmetrical Setup	310

Range Start / Range Stop

Sets the start frequency/stop frequency of the selected range.

To change the start/stop frequency of the first or last range, respectively, select the appropriate span in the [SPAN] configuration dialog. You can set a span that is smaller than the overall span of the ranges. In this case, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz. The first and last ranges are adapted to the given span as long as the minimum span of 20 Hz is not violated.

Define frequency values for each range relative to the center frequency. Center the reference range on the center frequency. The current "Tx Bandwidth" defines the minimum span of the reference range (see "Channel Power Settings" on page 312).

Remote command:

```
[SENSe:]ESPectrum<sb>:RANGe<range>[:FREQuency]:STARt on page 575
[SENSe:]ESPectrum<sb>:RANGe<range>[:FREQuency]:STOP on page 576
```

Fast SEM

Activates "Fast SEM" mode for all ranges in the sweep list. For details, see "Fast SEM Measurements" on page 298.

Note: If you deactivate "Fast SEM" mode while "Symmetrical Setup" mode is on, "Symmetrical Setup" mode is automatically also deactivated.

If you activate "Fast SEM" mode while "Symmetrical Setup" mode is on, not all range settings can be configured symmetrically automatically.

Remote command:

```
[SENSe:]ESPectrum<sb>:HSPeed on page 573
```

Filter Type

Sets the filter type for this range.

For details on filter types, see Chapter 7.6.1.6, "Which Data May Pass: Filter Types", on page 395.

Remote command:

```
[SENSe:]ESPectrum<sb>:RANGe<range>:FILTer:TYPE on page 575
```

RBW

Sets the resolution bandwidth for this range.

For details on the RBW, see Chapter 7.6.1.1, "Separating Signals by Selecting an Appropriate Resolution Bandwidth", on page 392.

Remote command:

```
[SENSe:]ESPectrum<sb>:RANGe<range>:BANDwidth:RESolution on page 573
```

VBW

Sets the video bandwidth for this range.

For details on the VBW, see Chapter 7.6.1.2, "Smoothing the Trace Using the Video Bandwidth", on page 392.

Remote command:

```
[SENSe:]ESPectrum<sb>:RANGe<range>:BANDwidth:VIDeo on page 574
```

Sweep Time Mode

Activates or deactivates the auto mode for the sweep time.

Currently, only auto mode is available for the R&S FPL1000.

For details on the sweep time mode, see Chapter 7.6.1.7, "How Long the Data is Measured: Sweep Time ", on page 395

Remote command:

[SENSe:]ESPectrum<sb>:RANGe<range>:SWEep:TIME:AUTO on page 585

Sweep Time

Sets the sweep time value for the range.

For details on the sweep time, see Chapter 7.6.1.7, "How Long the Data is Measured: Sweep Time ", on page 395

Remote command:

[SENSe:]ESPectrum<sb>:RANGe<range>:SWEep:TIME on page 584

Ref Level

Sets the reference level for the range.

For details on the reference level, see Chapter 7.5.1.1, "Reference Level", on page 383.

Remote command:

[SENSe:]ESPectrum<sb>:RANGe<range>:RLEVel on page 584

RF Att Mode

Activates or deactivates the auto mode for RF attenuation.

For details on attenuation, see Chapter 7.5.1.2, "RF Attenuation", on page 384.

Remote command:

[SENSe:]ESPectrum<sb>:RANGe<range>:INPut:ATTenuation:AUTO
on page 576

RF Attenuation

Sets the attenuation value for the range.

Remote command:

[SENSe:]ESPectrum<sb>:RANGe<range>:INPut:ATTenuation on page 576

Preamp

Switches the preamplifier on or off.

For details on the preamplifier, see "Preamplifier" on page 388.

Remote command:

[SENSe:]ESPectrum<sb>:RANGe<range>:INPut:GAIN:STATe on page 577

Transducer Factor

Sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.

• The unit is dB.

For details on transducers, see Chapter 6.3.6.1, "Basics on Transducer Factors", on page 149.

Remote command:

[SENSe:]ESPectrum<sb>:RANGe<range>:TRANsducer on page 585

Limit Check <n>

Sets the type of limit check for the n-th power class in the range. Up to four limits are possible.

For details on limit checks, see "Limit Lines in SEM Measurements" on page 296.

The limit state affects the availability of all limit settings.

Remote command:

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:STATe on page 582
CALCulate<n>:LIMit:FAIL? on page 789

Abs Limit Start / Stop <n>

Sets an absolute limit value for the n-th power class at the start or stop frequency of the range [dBm].

Remote command:

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:ABSolute:STARt
on page 578

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:ABSolute:STOP
on page 578

Rel Limit Start / Stop <n>

Sets a relative limit value for the n-th power class at the start or stop frequency of the range [dBc].

By default, this value is a fixed relative limit, i.e. no function is defined. To define a function for the relative limit, select the input field for "Rel Limit Start" or "Rel Limit Stop" and then the "f(x)" icon that appears.



If the function is set to "Max", you can define a relative *and* an absolute limit level. In this case, the maximum of the two values is used as the limit level.

For more information, see "Relative limit line functions" on page 298.

Remote command:

```
[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STARt
on page 579
[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STOP
on page 580
[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STARt:
FUNCtion on page 580
[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STOP:
FUNCtion on page 582
[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STARt:
ABS on page 579
[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STOP:
ABS on page 581
```

Multi-Limit Calc <n>

Defines the function used to calculate the limit line for the n-th power class for overlapping ranges in Multi-SEM measurements. For details, see "Limit calculation for individual ranges" on page 302.

"NONE" (reference ranges only:) the limit of the reference range is used "SUM" Sum of the two limit lines (calculated for linear powers) is used

"MAX" Maximum of the two limit lines is used

Remote command:

```
[SENSe:]ESPectrum<sb>:RANGe<range>:MLCalc on page 583
```

Min Sweep Points

Defines the minimum number of sweep points for the range.

If necessary to fulfill all minimum sweep point requirements in all ranges, the global Sweep Points setting is increased. By default, each range is supplied with a minimum of one sweep point.

For details, see "Sweep points" on page 295

Remote command:

```
[SENSe:]ESPectrum<sb>:RANGe<range>:POINts:MINimum[:VALue]
on page 583
```

Insert before Range / Insert after Range

Inserts a new range to the left (before) or to the right (after) of the range in which the cursor is currently displayed. The range numbers of the currently focused range and all higher ranges are increased accordingly. The maximum number of ranges is 30.

Remote command:

```
[SENSe:]ESPectrum<sb>:RANGe<range>:INSert on page 577
```

Delete Range

Deletes the currently focused range, if possible. (The reference range cannot be deleted. A minimum of three ranges is required.) The range numbers are updated accordingly.

Remote command:

[SENSe:]ESPectrum<sb>:RANGe<range>:DELete on page 574

Symmetrical Setup

Any changes to the range settings in active "Symmetrical Setup" mode lead to symmetrical changes in the other ranges (where possible). In particular, this means:

- Inserting ranges: a symmetrical range is inserted on the other side of the reference range
- Deleting ranges: the symmetrical range on the other side of the reference range is also deleted
- Editing range settings: the settings in the symmetrical range are adapted accordingly

Note: If "Fast SEM" mode is deactivated while "Symmetrical Setup" mode is on, "Sym Setup" mode is automatically also deactivated.


If "Fast SEM" mode is activated while "Symmetrical Setup" mode is on, not all range settings can be set automatically.

Multi-SEM (Sub Block) Settings

Access: "Overview" > "Select Measurement" > "Spectrum Emission Mask" > "Sub Blocks"

In the Spectrum application application only, spectrum emissions can be measured for multiple sub blocks of channels (see "SEM with Multiple Sub Blocks ("Multi-SEM")" on page 300). Sub blocks are a set of multiple ranges around a defined center frequency (carrier).

By default, a single sub block is assumed. If more than one sub blocks are defined, additional tabs are inserted for each sub block in the individual tabs of the "Spectrum Emission Mask" configuration dialog box.

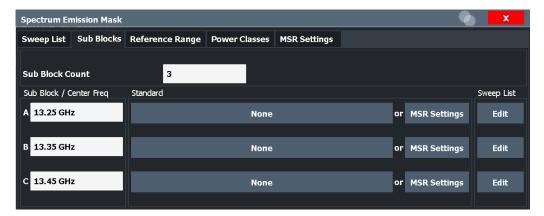

Sub Block Count	310
Sub Block / Center Freq	311
Standard	311
Edit Sweep List	311

Sub Block Count

Defines the number of sub blocks. By default, the familiar SEM measurement with just one single block of ranges is configured.

Remote command:

[SENSe:]ESPectrum<sb>:SCOunt on page 572

Sub Block / Center Freq

Defines the center frequency for an individual sub block. The center frequency determines the reference range used for each block.

For measurements with only one sub block, this setting corresponds to the global setting in the "Frequency" settings (see Center Frequency).

Remote command:

[SENSe:]ESPectrum<sb>:SCENter on page 572

Standard

Defines the use of a standard settings file for a particular sub block. For details, see "Standard Files" on page 314.

Remote command:

[SENSe:]ESPectrum<sb>:PRESet[:STANdard] on page 569


Edit Sweep List

Switches to the "Sweep List" tab of the "Spectrum Emission Mask" dialog box to configure the individual frequency ranges and mask limits for the corresponding sub block. See "Sweep List" on page 304.

Reference Range

Access: "Overview" > "Select Measurement" > "Spectrum Emission Mask" > "Reference Range"

The range around the center frequency is defined as the reference range for all other ranges in the sweep list.

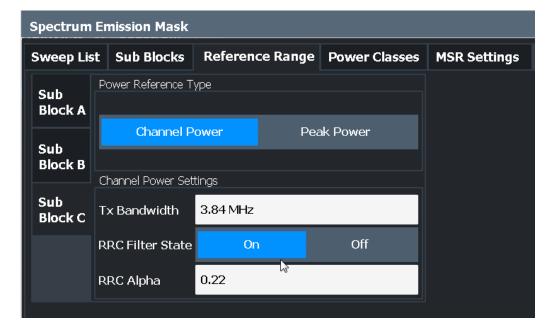

Power Reference Type	312
Channel Power Settings	312
L Tx Bandwidth	
L RRC Filter State	
L Alpha:	

Power Reference Type

Defines how the reference power is calculated.

"Channel Power"

Measures the channel power within the reference range using the integration bandwidth method. Additional settings can be configured for this method.

"Peak Power"

Determines the peak power within the reference range.

Remote command:

[SENSe:]ESPectrum<sb>:RTYPe on page 587

Channel Power Settings

If the "Power Reference Type:" "Channel Power" was selected, additional parameters can be configured.

Tx Bandwidth ← Channel Power Settings

Defines the bandwidth used for measuring the channel power, with:

Minimum span ≤ "Tx Bandwidth" ≤ of reference range

Remote command:

[SENSe:]ESPectrum<sb>:BWID on page 586

RRC Filter State ← Channel Power Settings

Activates or deactivates the use of an RRC filter.

Remote command:

[SENSe:]ESPectrum<sb>:FILTer[:RRC][:STATe] on page 586

Alpha: ← Channel Power Settings

Sets the alpha value of the RRC filter (if activated).


Remote command:

[SENSe:]ESPectrum<sb>:FILTer[:RRC]:ALPHa on page 586

Power Classes

Access: "Overview" > "Select Measurement" > "Spectrum Emission Mask" > "Power Classes"

You can configure power classes which you can then assign to sweep list ranges. For details, see "Power classes" on page 296.

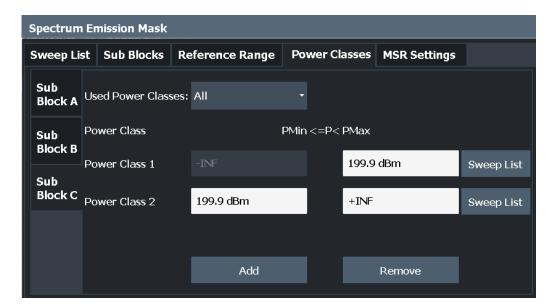

Used Power Classes:	313
PMin / PMax	313
Sweep List	314
Adding or Removing a Power Class	314

Used Power Classes:

Defines which power classes are considered for the SEM measurement. Limits can be defined only for used power classes. It is only possible to select either one specific power class or all the defined power classes.

If "All" is selected, the power class that corresponds to the currently measured power in the reference range is used for monitoring. The limits assigned to that power class are applied (see " Abs Limit Start / Stop <n> " on page 308 and " Rel Limit Start / Stop <n> " on page 308).

Remote command:

CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>[:EXCLusive]
on page 590

To define all limits in one step:

CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>:LIMit[:
STATe] on page 590

PMin / PMax

Defines the power limits for each power class. The first range always starts at -200 dBm (-INF) and the last range always stops at 200 dBm (+INF). These fields cannot be modified. If more than one power class is defined, the value of "PMin" must be equal to the value of "PMax" of the previous power class and vice versa.

Note that the power level can be equal to the lower limit(s), but must be lower than the upper limit(s):

P_{min}≦P<P_{max}

Otherwise the ranges are corrected automatically.

Remote command:

CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>:MINimum
on page 591
CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>:MAXimum
on page 591

Sweep List

Switches to the "Sweep List" tab of the "Spectrum Emission Mask" dialog box and focuses the "Limit Check" setting for the corresponding power class (1-4) in the reference range (see "Limit Check <n> " on page 308).

Adding or Removing a Power Class

Adds a new power class at the end of the list or removes the last power class. After adding or removing, the last power class is adapted to end at "+INF". Note that a maximum of four power classes are available.


Remote command:

CALCulate<n>:LIMit:ESPectrum<sb>:PCLass:COUNt on page 589

Standard Files

Access: "Overview" > "Select Measurement" > "Spectrum Emission Mask" > "Standard Files"

You can save the current measurement settings as a user-defined standard (XML file), or load stored measurement settings. Furthermore, you can delete an existing settings file.

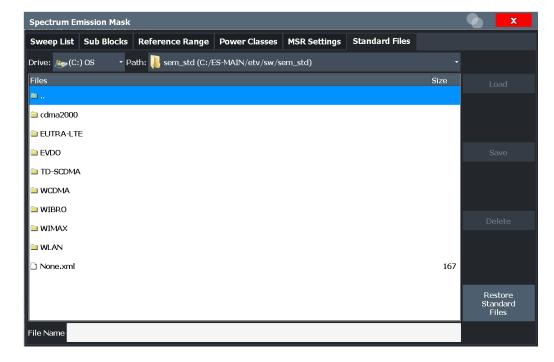

For details, see "How to Manage SEM Settings Files" on page 320.



Standard files for sub blocks (Multi-SEM measurements)

If more than one sub blocks are defined, the "Standard Files" tab and softkey are not available. To load a standard file for an individual sub block, use the Multi-SEM (Sub Block) Settings setting in the "Sub Blocks" tab.

Selecting Storage Location - Drive/ Path/ Files	315
File Name	
Load Standard	
Save Standard	315
Delete Standard	315
Restore Standard Files	316

Selecting Storage Location - Drive/ Path/ Files

Select the storage location of the file on the instrument or an external drive.

The default storage location for the SEM settings files is:

C:\ProgramData\Rohde-Schwarz\ZNL-FPL\sem std.

Remote command:

MMEMory: CATalog? on page 794

File Name

Contains the name of the data file without the path or extension.

By default, the name of a user file consists of a base name followed by an underscore. Multiple files with the same base name are extended by three numbers, e.g. limit lines 005.

For details on the filename and location, see "Storage Location and Filename" on page 105.

Load Standard

Loads the selected measurement settings file.

Remote command:

[SENSe:]ESPectrum<sb>:PRESet[:STANdard] on page 569

Save Standard

Saves the current measurement settings for a specific standard as a file with the defined name.

Remote command:

[SENSe:]ESPectrum<sb>:PRESet:STORe on page 570

Delete Standard

Deletes the selected standard. Standards predefined by Rohde & Schwarz can also be deleted. A confirmation query is displayed to avoid unintentional deletion of the standard.

Note: Restoring predefined standard files. The standards predefined by Rohde & Schwarz available at the time of delivery can be restored using the "Restore Standard Files" function (see "Restore Standard Files" on page 316).

Restore Standard Files

Restores the standards predefined by Rohde & Schwarz available at the time of delivery.

The XML files from the C:\ProgramData\Rohde-Schwarz\ZNL-FPL\sem_backup folder are copied to the C:\ProgramData\Rohde-Schwarz\ZNL-FPL\sem_std folder.

Note that this function will overwrite customized standards that have the same name as predefined standards.


Remote command:

[SENSe:]ESPectrum<sb>:PRESet:RESTore on page 570

List Evaluation (Results Configuration)

Access: "Overview" > "Select Measurement" > "Spectrum Emission Mask" > "List Evaluation"

In the "List Evaluation" dialog box, you configure the contents and display of the SEM results

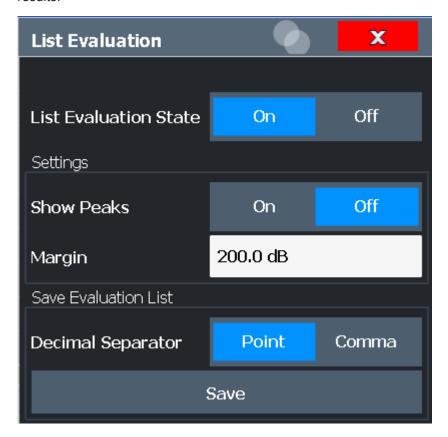

List Evaluation State (Result Summary)	317
Show Peaks	317
Margin	317
Saving the Result Summary (Evaluation List) to a File	317

List Evaluation State (Result Summary)

Activates or deactivates the Result Summary.

Remote command:

CALCulate<n>:ESPectrum:PEAKsearch:AUTO on page 592 TRACe<n>[:DATA] on page 708

Show Peaks

If activated, all peaks that have been detected during an active SEM measurement are marked with blue squares in the Spectrum diagram.

Remote command:

CALCulate<n>:ESPectrum:PEAKsearch:PSHow on page 593

Margin

Although a margin functionality is not available for the limit check, you can define a margin (or: *threshold*) for the peak values to be displayed in the result summary. Only peaks that exceed the margin value are displayed (also in the diagram, if activated).

Remote command:

CALCulate<n>:ESPectrum:PEAKsearch:MARGin on page 593

Saving the Result Summary (Evaluation List) to a File

Exports the Result Summary of the SEM measurement to an ASCII file for evaluation in an external application. If necessary, change the decimal separator for evaluation in other languages.

Define the filename and storage location in the file selection dialog box that is displayed when you select the "Save" function.

For details, see "ASCII File Export Format (Spectrum Emission Mask)" on page 329.

Remote command:

MMEMory:STORe<n>:LIST on page 817
FORMat:DEXPort:DSEParator on page 793

7.2.6.6 How to Perform a Spectrum Emission Mask Measurement

SEM measurements can be performed according to a specific standard or freely configured. Configuration for signals with a regular channel definition can be configured quickly and easily. Selecting the SEM measurement is a prerequisite for all other tasks.

For signals with multiple carriers, also in non-contiguous ranges, an SEM measurement with multiple sub blocks can be configured.

The following tasks are described:

- "To select an SEM measurement" on page 318
- "To perform an SEM measurement according to a standard" on page 318
- "To configure a user-defined SEM measurement" on page 318
- "To perform a Multi-SEM measurement" on page 319



For remote operation, see Chapter 8.6.6.10, "Example: SEM Measurement", on page 594.

To select an SEM measurement

▶ Press the [MEAS] key, then select the "Spectrum Emission Mask" measurement.

To perform an SEM measurement according to a standard

► Load the settings file as described in "How to load an SEM settings file" on page 320 and start a measurement.

To configure a user-defined SEM measurement

- 1. Define the span of the signal you want to monitor in the general span settings.
- 2. Split the frequency span of the measurement into ranges for signal parts with similar characteristics.

Starting from the center frequency, determine which sections of the signal to the left and right can be swept and monitored using the same parameters. Criteria for such a range definition may be, for example:

- The signal power level
- The required resolution bandwidth or sweep time
- Transducer factors
- Permitted deviation from the defined signal level, i.e. the required limit values for monitoring

If the signal consists of a transmission channel and adjacent channels, the channel ranges can usually be used for the range definition.

- If the signal power level to be monitored varies and the limits vary, define power classes. For each range of levels that can be monitored in the same way, define a power class.
 - a) Select the "Overview" softkey.
 - b) Select the "SEM Setup" button.
 - c) Switch to the "Power Classes" tab.
 - d) To add a power class, select the "Add" button.
 - e) Enter the start and stop power levels to define the class.
 - f) Select the power classes to be used for the current measurement:
 - a specific class
 - all classes, to have the required class selected automatically according to the input level measured in the reference range
- 4. Select the "Sweep List" tab of the "Spectrum Emission Mask" dialog box.
- 5. Insert the required ranges using the "Insert before Range" and "Insert after Range" buttons, which refer to the currently selected range (the reference range by default).

- If the signal trace is symmetric to the center frequency, activate the "Sym Setup" option to make setup easier and quicker.
- Define the measurement parameters for each range as required. If symmetrical setup is activated, you only have to configure the ranges to one side of the center range.
 - In particular, define the limits for each range of the signal, i.e. the area in which the signal level can deviate without failing the limit check. If several power classes were defined (see step 3), define limits for each power class.
 - a) Define the type of limit check, i.e. whether absolute values or relative values are checked, or both. The type of limit check is identical for all power classes.
 - b) Define the limit start and stop values.
- 7. If the sweep list settings other than the limit and transducer values are identical for several adjacent ranges, activate "Fast SEM" mode to speed up the measurement. You only have to activate the mode for one range, the others are adapted automatically.
- 8. If necessary, change the settings for the reference power to which all SEM results refer in the "Reference Range" tab.
- 9. To indicate the determined peaks in the display during an SEM measurement, select "Overview" > "Analysis" > "Show Peaks".
- 10. To save the current SEM measurement settings to a file to re-use them later, save a settings file as described in "How to save a user-defined SEM settings file" on page 320.
- 11. Start a sweep.
 - The determined powers and limit deviations for each range are indicated in the Result Summary. If activated, the peak power levels for each range are also indicated in the Spectrum diagram.
- 12. To save the Result Summary, export the results to a file as described in "How to Save SEM Result Files" on page 321.

To perform a Multi-SEM measurement

- 1. Define the span of the signal to be monitored in the general span settings.
- 2. Select the "Multi-SEM Config" softkey.
- 3. Define the number of sub blocks (up to 3) that contain the relevant carriers.
- 4. For each sub block, define the center frequency, that is, the frequency of the TX carrier or a frequency in the dedicated reference range.
- 5. For each sub block, do one of the following:
 - Select a standard settings file to be used.
 - Select the "Edit" button and configure the sweep list manually as defined in "To configure a user-defined SEM measurement" on page 318. Be sure to select

the correct vertical tab for the corresponding sub block within each subtab of the "Spectrum Emission Mask" configuration dialog.

Define a function to be used for overlapping ranges in the "Multi-Limit Calc" field of the sweep list.

6. Start a sweep.

The determined powers and limit deviations for each sub block, each gap, and each range are indicated in the Result Summary. If activated, the peak power levels for each range are also indicated in the Spectrum diagram.

7. To save the Result Summary, export the results to a file as described in "How to Save SEM Result Files" on page 321.

How to Manage SEM Settings Files

SEM measurement settings can be saved to an XML file which can then be exported to another application or loaded on the R&S FPL1000 again later. Some predefined XML files are provided that contain ranges and parameters according to the selected standard. All XML files are stored under

C:\ProgramData\Rohde-Schwarz\ZNL-FPL\sem std.

For details on the file format of the SEM settings file, see "Format Description of SEM XML Files" on page 323.

SEM settings or standard files are managed in the "Standard" tab of the "Spectrum Emission Mask" dialog box. To display this dialog box, select the "Overview" softkey and then the "SEM Setup" button.

How to load an SEM settings file

- 1. From the file selection dialog box, select the settings file (with a .xml extension).
- 2. Select the "Load" button.

The settings from the selected file are restored to the R&S FPL1000 and you can repeat the SEM measurement with the stored settings.

How to save a user-defined SEM settings file

- Configure the SEM measurement as required (see Chapter 7.2.6.6, "How to Perform a Spectrum Emission Mask Measurement", on page 317).
- 2. In the "Standard Files" tab of the "Spectrum Emission Mask" dialog box, define a filename and storage location for the settings file.
- 3. Select the "Save" button.

The settings are stored to a file with the extension .xml as specified.

How to delete an SEM settings file

- 1. In the "Standard Files" tab of the "Spectrum Emission Mask" dialog box, select the file you want to delete.
- 2. Select the "Delete" button.

3. Confirm the message.

The settings file is removed from the R&S FPL1000.

How to restore default SEM settings files

The R&S FPL1000 is delivered with predefined settings files which can be edited and overwritten. However, you can restore the original files.

▶ In the "Standard Files" tab of the "Spectrum Emission Mask" dialog box, select the "Restore Standard Files" button.

The original predefined settings files are available for selection on the R&S FPL1000.

How to Save SEM Result Files

The Result Summary from an SEM measurement can be saved to a file, which can be exported to another application for further analysis, for example.

For details on the file format of the SEM export file, see "ASCII File Export Format (Spectrum Emission Mask)" on page 329.

- Configure and perform an SEM measurement as described in Chapter 7.2.6.6,
 "How to Perform a Spectrum Emission Mask Measurement", on page 317.
- 2. In the "Overview", select the "Analysis" button.
- 3. If necessary, change the "Decimal Separator" to "COMMA" for evaluation in other languages.
- 4. Select the "Save" button.
- In the file selection dialog box, select a storage location and filename for the result file.
- 6. Select the "Save" button.

The file with the specified name and the extension . dat is stored in the defined storage location.


7.2.6.7 Measurement Example: Multi-SEM Measurement

The following measurement example demonstrates an SEM measurement for a signal with multiple sub blocks.



A programming example demonstrating a SEM measurement in a remote environment is provided in Chapter 8.6.6.10, "Example: SEM Measurement", on page 594.

Test setup:

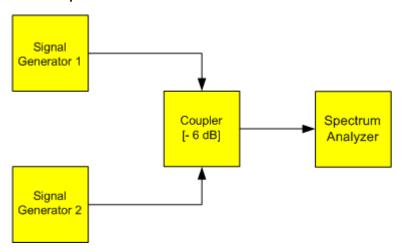

Signal generator settings (e.g. R&S FPL1000 SMW):

Device	Standard	Center frequency	Level	Test model
SigGen 1	3GPP/FDD	900 MHz	0 dBm	1-16
SigGen 2	EUTRA/LTE	906.5 MHz	0 dBm	1_1_5MHz

Setting up the measurement

- 1. Preset the R&S FPL1000.
- 2. Set the center frequency to 903.25 MHz.
- 3. Set the reference level to 10 dBm with an offset of to 30 dB.
- 4. Press the [MEAS] key or select "Select Measurement" in the "Overview" .
- 5. Select the "SEM" measurement function.
- 6. Select the "Sub Blocks" softkey and enter "Sub Block Count" of 2.
- 7. For "Sub Block A", define the settings for the 3GPP/FDD signal:
 - Set the "Center Frequency" to 900 MHz
 - Set the "Base Station RF Bandwidth" to 5 MHz.
 - Select "Apply to SEM".
- 8. For "Sub Block B", define the settings for the EUTRA/LTE signal:
 - Set the "Center Frequency" to 906.5 MHz
 - Set the "Base Station RF Bandwidth" to 5 MHz.
 - Select "Apply to SEM" .
- 9. Select [RUN SINGLE] to perform a measurement with the new settings.

The results of the measurement for each sub block are displayed in the Result Summary. The summarized limit line is indicated in the Spectrum graph.

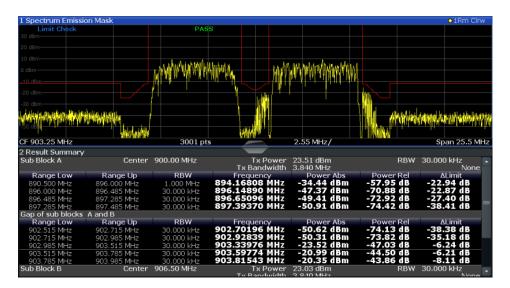


Figure 7-28: Multi-SEM measurement: results of the measurement for each sub block

7.2.6.8 Reference: SEM File Descriptions

This reference provides details on the format of the SEM settings and result files.

Format Description of SEM XML Files

The SEM XML files offer a quick way to change the measurement settings. A set of predefined XML files for different standards is already provided. You can also create and use your own XML files. Alternatively, edit the settings directly in the "Spectrum Emission Mask" dialog box and save the XML file afterwards. This way, you do not have to modify the XML file itself.

In addition to saving the current settings to a file, settings files can also be created independently of the R&S FPL1000, in an external application. When creating your own XML files, be sure to comply with the following conventions because the R&S FPL1000 can only interpret XML files of a known structure. For sample files, see the C:\ProgramData\Rohde-Schwarz\ZNL-FPL\sem_std directory of the R&S FPL1000.

To load a settings file, use the "Load" function in the "Standard Files" tab of the "Spectrum Emission Mask" dialog box (see "How to load an SEM settings file" on page 320). All XML files are stored under

C:\ProgramData\Rohde-Schwarz\ZNL-FPL\sem std.

The files for importing range settings obey the rules of the XML standard. The child nodes, attributes, and structure defined for the data import are described here.



Be sure to follow the structure exactly as shown below or else the R&S FPL1000 is not able to interpret the XML file and error messages are shown on the screen. It is recommended that you make a copy of an existing file and edit the copy of the file.

Basically, the file consists of three elements that can be defined:

- The BaseFormat element
- The PowerClass element
- The Range element

The "BaseFormat" element

It carries information about basic settings. In this element, only the ReferencePower child node has any effects on the measurement itself. The other attributes and child nodes are used to display information about the Spectrum Emission Mask standard on the measurement screen. The child nodes and attributes of this element are shown in Table 7-13.

Example:

In the sample file PowerClass_39_43.xml under C:\ProgramData\Rohde-Schwarz\ZNL-FPL\sem_std\WCDMA\3GPP, these attributes are defined as follows:

- Standard="W-CDMA 3GPP"
- LinkDirection="DL"
- PowerClass="(39,43)dBm"

The "PowerClass" element

It is embedded in the BaseFormat element and contains settings information about the power classes. Up to four different power classes can be defined. For details, refer to "Power Classes" on page 312. The child nodes and attributes of this element are shown in Table 7-14.

The "Range" element

This element is embedded in the <code>PowerClass</code> element. It contains the settings information of the range. There have to be at least three defined ranges: one reference range and at least one range to either side of the reference range. The maximum number of ranges is 30. Note that the R&S FPL1000 uses the same ranges in each power class. Therefore, the contents of the ranges of each defined power class have to be identical to the first power class. The <code>Start</code> and <code>Stop</code> values of the two <code>Limit</code> nodes that are used to determine the power class are an exception. Note also that you must define two limit nodes: one that defines the limit in absolute values and one in relative values. Make sure units for the <code>Start</code> and <code>Stop</code> nodes are identical for each <code>Limit</code> node.

For details, refer to "Sweep List" on page 304. The child nodes and attributes of this element are shown in Table 7-15.

The following tables show the child nodes and attributes of each element and show if a child node or attribute is mandatory for the R&S FPL1000 to interpret the file or not. The hierarchy of the XML cannot be seen in the tables. View one of the predefined files already stored on the R&S FPL1000 in the "C:

\ProgramData\Rohde-Schwarz\ZNL-FPL\sem_std" directory, or check the structure as shown below.

Below, a basic example of the structure of the file is shown, containing all mandatory attributes and child nodes. Note that the PowerClass element and the Range element are themselves elements of the BaseFormat element. They must be inserted where noted. They are separated here simply to provide a better overview. Also, no example values are given here to allow a quick reference to the tables above. Italic font shows the placeholders for the values.

- The BaseFormat element is structured as follows:
- The "PowerClass" element is structured as follows:

</RS SEM ACP File>

- <PowerClass Index="n">
 <StartPower Unit="dBm" InclusiveFlag="true" Value="StartPowerValue"/>
 <StopPower Unit="dBm" InclusiveFlag="false" Value="StopPowerValue"/>
 <DefaultLimitFailMode>"Limit Fail Mode"</DefaultLimitFailMode>
 <Range Index="n">
 <!-- For contents of the Range node, see Table 7-15 -->
 <!-- Define up to twenty Range nodes -->
 </Range>
 ...
 </PowerClass>
- The "Range" element is structured as follows:
 - <Range Index="n">
 <Name="Name">
 <ChannelType>"Channel Type"</Channel Type>
 <WeightingFilter>
 <Type>"FilterType"</Type>
 <RollOffFactor>"Factor"</RollOffFactor>

- <Bandwith>"Bandwidth"</Bandwidth>
- </WeightingFilter>
- <FrequencyRange>
- <Start>"RangeStart"</Start>
- <Stop>"RangeStop"</Stop>
- </FrequencyRange>
- <Limit>
- <Start Unit="Unit" Value="Value"/>
- <Stop Unit="Unit" Value="Value"/>
- </Limit>
- <Limit>
- <Start Unit="Unit" Value="Value"/>
- <Stop Unit="Unit" Value="Value"/>
- </Limit>
- <RBW Bandwidth="Bandwidth" Type="FilterType"/>
- < VBW Bandwidth="Bandwidth"/>
- <Detector>"Detector"</Detector>
- <Sweep Mode="SweepMode" Time="SweepTime"/>
- <Amplitude>
- <ReferenceLevel Unit="dBm" Value="Value"/>
- <RFAttenuation Mode="Auto" Unit="dB" Value="Value"/>
- <Pre><Pre>reamplifier State="State"/>
- </Amplitude>
- <MeasPointsMin>1</MeasPointsMin>
- <CalcRuleMulti>Sum</CalcRuleMulti>
- </Range>

Table 7-13: Attributes and child nodes of the BaseFormat element

Child Node	Attribute	Value	Parameter Description	Mand.
	FileFormatVersion	1.0.0.0		Yes
	Date	YYYY-MM-DD HH:MM:SS	Date in ISO 8601 format	No
Name		<string></string>	Name of the standard	Yes
Instrument	Туре	FSL	Name of the instrument	No
	Application	SA K72 K82	Name of the application	No
LinkDirection	Name	Downlink Uplink None		Yes
	ShortName	DL UL		No
Reference- Power				Yes
Method	TX Channel Power TX Channel Peak Power			Yes
Reference- Channel	<string></string>			No

Table 7-14: Attributes and child nodes of the PowerClass element

Child Node	Attribute	Value	Parameter description	Mand.
StartPower	Value	<power dbm="" in=""></power>	The start power must be equal to the stop power of the previous power class. The Start-Power value of the first range is -200	Yes
	Unit	dBm		Yes
	InclusiveFlag	true		Yes
StopPower	Value	<power dbm="" in=""></power>	The stop power must be equal to the start power of the next power class. The StopPower value of the last range is 200	Yes
	Unit	dBm		
	InclusiveFlag	false		Yes
DefaultLimitFailMode		Absolute Relative Absolute and Relative Absolute or Relative		Yes

Table 7-15: Attributes and child nodes of the Range element (normal ranges)

Child node	Attribute	Value	Parameter description	Mand.
	Index	019	Indices are continuous and have to start with 0	Yes
	Name	<string></string>	Name of the range	Only if ReferenceChannel contains a name and the range is the reference range
	Short- Name	<string></string>	Short name of the range	No
ChannelType		TX Adjacent		Yes
WeightingFilter				Only if ReferencePower method is TX Channel Power and the range is the reference range
Туре		RRC CFilter	Type of the weighting filter	Yes
Roll Off Factor		01	Excess bandwidth of the filter	Only if the filter type is RRC
Bandwidth		<bandwidth hz="" in=""></bandwidth>	Filter bandwidth	Only if the filter type is RRC
FrequencyRange				Yes
Start		<frequency hz="" in=""></frequency>	Start value of the range	Yes
Stop		<frequency hz="" in=""></frequency>	Stop value of the range	Yes

Child node	Attribute	Value	Parameter description	Mand.
Limit		dBm/Hz dBm dBc dBr dB	A Range must contain exactly two limit nodes; one of the limit nodes has to have a relative unit (e.g. dBc), the other one must have an absolute unit (e.g. dBm)	Yes
Start	Value	<numeric_value></numeric_value>	Power limit at start frequency	Yes
	Unit	dBm/Hz dBm dBc dBr dB	Sets the unit of the start value	
Stop	Value	<numeric_value></numeric_value>	Power limit at stop frequency	
	Unit	dBm/Hz dBm dBc dBr dB	Sets the unit of the stop value	
LimitFailMode		Absolute Relative Absolute and Relative Absolute or Relative	If used, it has to be identical to DefaultLimitFailMode	No
RBW	Bandwidth	<bandwidth hz="" in=""></bandwidth>	" RBW " on page 306	Yes
	Туре	NORM PULS CFIL RRC		No
VBW	Bandwidth	<bandwidth hz="" in=""></bandwidth>	" VBW " on page 306	Yes
Detector		NEG POS SAMP RMS AVER QUAS	If used, it has to be identical in all ranges.	No
Sweep	Mode	Manual Auto	" Sweep Time Mode " on page 307	Yes
	Time	<time in="" sec=""></time>	" Sweep Time " on page 307	No
Amplitude				No
ReferenceLevel	Value	<power dbm="" in=""></power>	" Ref Level " on page 307	Yes, if the ReferenceLevel child node is used
	Unit	dBm	Defines dBm as unit	Yes, if the ReferenceLevel node is used
RFAttenuation	Mode	Manual Auto	" RF Att Mode " on page 307	Yes, if the ReferenceLevel child node is used
Preamplifier		ON OFF 1 0	" Preamp " on page 307	Yes

ASCII File Export Format (Spectrum Emission Mask)

When trace data from an SEM measurement is exported, the data is stored in ASCII format as described below. The first part of the file lists information about the signal analyzer and the general setup.

File contents	Explanation
File header	
Type;FPL1003	Model
Version;1.00;	Firmware version
Date;31.Mar 17;	Storage date of data set
Mode;ANALYZER;SEM;	Operating mode and measurement function
Center Freq;13250000000.000000;Hz	X-axis settings
Freq Offset;0.000000;Hz	
Span;25500000.000000;Hz	
x-Axis;LIN;	
Start;13237250000.000000;Hz	
Stop;13262750000.000000;Hz	
Level Offset;0.000000;dB	Y-axis settings
Ref Position;100.000000;%	
y-Axis;LOG;	
Level Range;100.000000;dB	
Trace settings	
Trace Mode;CLR/WRITE;	
Detector;RMS;	
Sweep Count;0;	
Trace 1:;	
x-Unit;Hz;	
y-Unit;dBm;	
List evaluation settings	
Margin;200;	Peak List margin
Reference range settings	
RefType; CPOWER;	Reference power type
TxBandwidth;3840000;;Hz	Channel power settings
Filter State; ON;	
Alpha;0.22;	
PeaksPerRange;1;	Max. number of peaks per range to be detected

File contents	Explanation
Values;2;	Number of detected peaks
File data section	
0;-12750000;-2515000;30000;13242367500;-43.844	Measured peak values:
722747802734;-0.33028793334960938;49.6697120 66650391;FAIL;	<range number="">;</range>
7,7,12,	<start frequency="">;</start>
2;2515000;12750000;30000;13257632500;-43.8447 22747802734;-0.33028793334960938;49.66971206	<stop frequency="">;</stop>
6650391;FAIL;	<resolution bandwidth="" of="" range="">;</resolution>
	<frequency of="" peak="">;</frequency>
	<absolute dbm="" in="" of="" peak="" power="">;</absolute>
	<pre><relative dbc="" in="" of="" peak="" power="">; (related to the channel power)</relative></pre>
	<pre><distance db="" in="" limit="" line="" the="" to="">; (positive value means above the limit)</distance></pre>
	<pre>limit fail (pass = 0, fail =1)>;</pre>


7.2.7 Spurious Emissions Measurement

Spurious Emissions measurements monitor unwanted RF products outside the assigned frequency band generated by an amplifier.

	About the Measurement	.330
•	Spurious Emissions Measurement Results	.331
	Spurious Emissions Basics	
•	Spurious Emissions Measurement Configuration	. 334
•	How to Perform a Spurious Emissions Measurement	.340
•	Reference: ASCII Export File Format (Spurious)	.342

7.2.7.1 About the Measurement

The Spurious Emissions measurement monitors unwanted RF products outside the assigned frequency band generated by an amplifier. The spurious emissions are usually measured across a wide frequency range. The Spurious Emissions measurement allows a flexible definition of all parameters. A result table indicates the largest deviations of the absolute power from the limit line for each range, and the results can be checked against defined limits automatically.

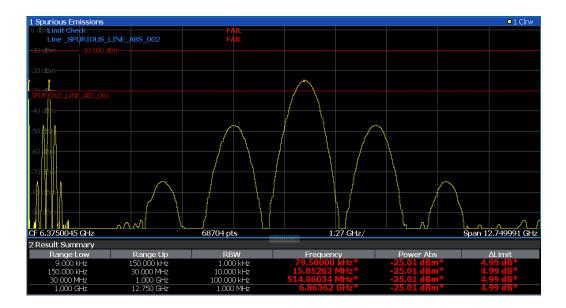

7.2.7.2 Spurious Emissions Measurement Results

The measured signal, including any spurious emissions, and optionally the detected peaks are displayed in the Spurious Emissions measurement diagram. If defined, the limit lines and the limit check results are also indicated. In addition to the graphical results, a result table can be displayed to evaluate the measured powers and limit check results (see also "Limit Lines in Spurious Measurements" on page 333). The details of the evaluation list can be configured.




The following information is provided in the evaluation list for each range:

Column	Description	
Range Low	Frequency range start for the range the peak value belongs to	
Range Up	Frequency range end for the range the peak value belongs to	
RBW	RBW of the range	
Frequency	Frequency at the peak value	
Power Abs	Absolute power level at the peak value	
ΔLimit	Deviation of the absolute power level from the defined limit for the peak value	

By default, one peak per range is displayed. However, you can change the settings to:

- Display all peaks
- Display a certain number of peaks per range
- Display only peaks that exceed a threshold ("Margin")

Display detected peaks as blue squares in the diagram, as well as in the peak list

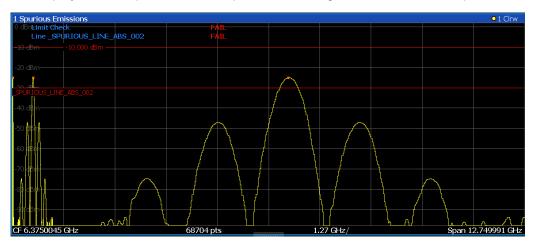

Furthermore, you can save the evaluation list to a file.

Retrieving Results via Remote Control

The measured spurious values of the displayed trace can be retrieved using the TRAC: DATA? SPUR command (see TRACe<n>[:DATA] on page 708).

7.2.7.3 Spurious Emissions Basics

Some background knowledge on basic terms and principles used in Spurious Emissions measurements is provided here for a better understanding of the required configuration settings.

Ranges and Range Settings

Conditions for ranges

The following rules apply to ranges:

- The minimum span of a range is 20 Hz.
- The individual ranges must not overlap (but can have gaps).
- The maximum number of ranges is 30
- The maximum number of sweep points in all ranges is limited to 100001.

You can define a span that is smaller than the combined span of the ranges. In this case, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz.



Defining ranges by remote control

In Spurious Emissions measurements, there are no remote commands to insert new ranges between existing ranges directly. However, you can delete or redefine the existing ranges to create the required order.


A remote command example for defining parameters and ranges in Spurious Emissions measurements is described in Chapter 8.6.7.7, "Programming Example: Spurious Emissions Measurement", on page 608.

Limit Lines in Spurious Measurements

Limit lines allow you to check the measured data against specified limit values. Generally, it is possible to define limit lines for any measurement in the Spectrum application using the [Lines] key. For Spurious measurements, however, a special limit line is available via the "Sweep List", and it is strongly recommended that you use only this limit line definition.

In the "Sweep List", you can define a limit line that varies its level according to the specified frequency ranges. A distinguished limit line is automatically defined according to the current "Sweep List" settings every time the settings change. This limit line is labeled "_SPURIOUS_LINE_ABS_<xxx>", where <xxx> is an index to distinguish limit lines between different channel setups.

If a limit check is activated in the "Sweep List", the "_SPURIOUS_LINE_ABS_<xxx>" limit line is indicated by a red line in the display. The result of the limit check is indicated at the top of the diagram. Note that only "Pass" or "Fail" is indicated; a margin function as for general limit lines is not available. Also, only absolute limits can be checked, not relative ones.

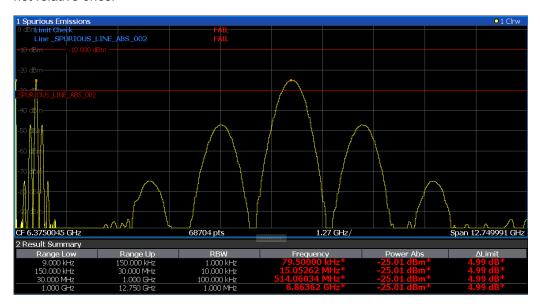



As for general limit lines, the results of each limit line check are displayed (here: "_SPURIOUS_LINE_ABS_<xxx>"), as well as the combined result for all defined limit lines ("Limit Check").

The limit check is considered to be "' failed!" if any signal level outside the absolute limits is measured.

If the limit check is activated, the limit line values for each range are displayed in the evaluation list. Furthermore, the largest deviations of the absolute power from the limit line for each range are displayed. Values that exceed the limit are indicated in red and by an asterisk (*).



Although a margin functionality is not available for the limit check, a margin (threshold) for the peak values to be displayed in the evaluation list can be defined. Furthermore, you can define how many peaks per range are listed. For details, see "List Evaluation" on page 338.

7.2.7.4 Spurious Emissions Measurement Configuration

Access: "Overview" > "Select Measurement" > "Spurious Emissions"

The spurious emissions measurement is started immediately with the default settings.

The remote commands required to perform these tasks are described in Chapter 8.6.7, "Measuring Spurious Emissions", on page 597.


Sweep List

Access: "Overview" > "Select Measurement" > "Spurious Emissions" > "Sweep List"

For Spurious Emissions measurements, the input signal is split into several frequency ranges which are swept individually and for which different limitations apply.



If you edit the sweep list, always follow the rules and consider the limitations described in "Ranges and Range Settings" on page 332.

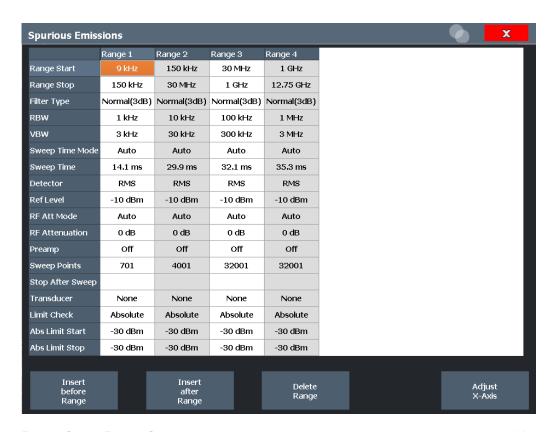

Range Start / Range Stop	335
Filter Type	336
RBW	336
VBW	336
Sweep Time Mode	336
Sweep Time	336
Detector	
Reference Level	337
RF Attenuation Mode	337
RF Attenuation	337
Preamp	337
Sweep Points	337
Stop After Sweep	337
Transducer	337
Limit Check	
Abs Limit Start / Abs Limit Stop	338
Insert before Range / Insert after Range	338
Delete Range	338

Range Start / Range Stop

Sets the start frequency/stop frequency of the selected range.

You can define a span that is smaller than the overall span of the ranges. In this case, the measurement includes only the ranges that lie within the defined span and have a minimum span of 20 Hz.

Remote command:

```
[SENSe:]LIST:RANGe<range>[:FREQuency]:STARt on page 600
[SENSe:]LIST:RANGe<range>[:FREQuency]:STOP on page 601
```

Filter Type

Sets the filter type for this range.

For details on filter types, see Chapter 7.6.1.6, "Which Data May Pass: Filter Types", on page 395.

Remote command:

```
[SENSe:]LIST:RANGe<range>:FILTer:TYPE on page 600
```

RBW

Sets the RBW value for this range.

For details on the RBW, see Chapter 7.6.1.1, "Separating Signals by Selecting an Appropriate Resolution Bandwidth", on page 392.

Remote command:

```
[SENSe:]LIST:RANGe<range>:BANDwidth:RESolution on page 598
```

VBW

Sets the VBW value for this range.

For details on the VBW, see Chapter 7.6.1.2, "Smoothing the Trace Using the Video Bandwidth", on page 392.

Remote command:

```
[SENSe:]LIST:RANGe<range>:BANDwidth:VIDeo on page 599
```

Sweep Time Mode

Activates or deactivates the auto mode for the sweep time.

For details on the sweep time mode, see Chapter 7.6.1.7, "How Long the Data is Measured: Sweep Time ", on page 395

Remote command:

```
[SENSe:]LIST:RANGe<range>:SWEep:TIME:AUTO on page 604
```

Sweep Time

Sets the sweep time value for the range.

For details on the sweep time, see Chapter 7.6.1.7, "How Long the Data is Measured: Sweep Time ", on page 395

Remote command:

```
[SENSe:]LIST:RANGe<range>:SWEep:TIME on page 604
```

Detector

Sets the detector for the range.

For details, refer to "Mapping Samples to sweep Points with the Trace Detector" on page 460.

Remote command:

```
[SENSe:]LIST:RANGe<range>:DETector on page 600
```

Reference Level

Sets the reference level for the range.

For details on the reference level, see Chapter 7.5.1.1, "Reference Level", on page 383.

Remote command:

[SENSe:]LIST:RANGe<range>:RLEVel on page 603

RF Attenuation Mode

Activates or deactivates the auto mode for RF attenuation.

For details on attenuation, see Chapter 7.5.1.2, "RF Attenuation", on page 384.

Remote command:

[SENSe:]LIST:RANGe<range>:INPut:ATTenuation:AUTO on page 602

RF Attenuation

Sets the attenuation value for that range.

Remote command:

[SENSe:]LIST:RANGe<range>:INPut:ATTenuation on page 601

Preamp

Switches the preamplifier on or off.

For details on the preamplifier, see "Preamplifier" on page 388.

Remote command:

[SENSe:]LIST:RANGe<range>:INPut:GAIN:STATe on page 602

Sweep Points

Sets the number of sweep points for the specified range.

For details on sweep points, see Chapter 7.6.1.8, "How Much Data is Measured: Sweep Points and Sweep Count", on page 396.

Remote command:

[SENSe:]LIST:RANGe<range>:POINts[:VALue] on page 603

Stop After Sweep

This function is not available for the R&S FPL1000.

Transducer

Sets a transducer for the specified range. You can only choose a transducer that fulfills the following conditions:

- The transducer overlaps or equals the span of the range.
- The x-axis is linear.
- The unit is dB.

For details on transducers, see Chapter 6.3.6.1, "Basics on Transducer Factors", on page 149.

Remote command:

[SENSe:]LIST:RANGe<range>:TRANsducer on page 604

Limit Check

Activates or deactivates the limit check for all ranges.

For details on limit checks, see "Limit Lines in Spurious Measurements" on page 333.

"ABSOLUTE" Signal is checked against absolute limit values

"NONE" No limit check is performed.

Remote command:

```
[SENSe:]LIST:RANGe<range>:LIMit:STATe on page 603
CALCulate<n>:LIMit:FAIL? on page 789
```

Abs Limit Start / Abs Limit Stop

Sets an absolute limit value at the start or stop frequency of the range [dBm].

Remote command:

```
[SENSe:]LIST:RANGe<range>:LIMit:STARt on page 602
[SENSe:]LIST:RANGe<range>:LIMit:STOP on page 603
```

Insert before Range / Insert after Range

Inserts a new range to the left of the currently focused range (before) or to the right (after). The range numbers of the currently focused range and all higher ranges are increased accordingly. The maximum number of ranges is 30.

Delete Range

Deletes the currently focused range. The range numbers are updated accordingly.

Adjusting the X-Axis to the Range Definitions

Access: "Overview" > "Select Measurement" > "Spurious Emissions" > "Adjust X-Axis"

The frequency axis of the measurement diagram can be adjusted automatically so that the span of all sweep list ranges corresponds to the displayed span. Thus, the x-axis range is set from the start frequency of the first sweep range to the stop frequency of the last sweep range.


Remote command:

```
[SENSe:]LIST:XADJust on page 607
```

List Evaluation

Access: "Overview" > "Select Measurement" > "Spurious Emissions" > "List Evaluation"

Configure the contents and display of the result list.

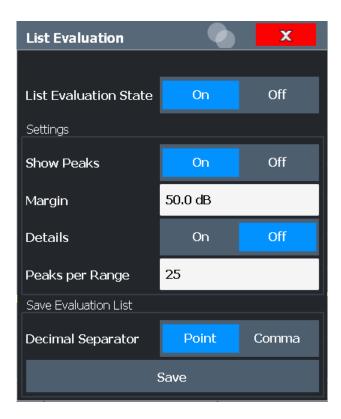

List Evaluation State	
Show Peaks	339
Margin	
Details	
Peaks per Range	340
Save Evaluation List	340

List Evaluation State

Activates or deactivates the list evaluation.

Remote command:

CALCulate<n>:ESPectrum:PEAKsearch:AUTO on page 592 TRACe<n>[:DATA] on page 708

Show Peaks

If activated, all peaks that have been detected during an active list evaluation are marked with blue squares in the diagram.

Remote command:

CALCulate<n>:ESPectrum:PEAKsearch:PSHow on page 593

Margin

A margin functionality is not available for the limit check. However, you can define a margin (=threshold) for the peak values to be displayed in the evaluation list. Only peaks that exceed the margin value are displayed (also in the diagram, if activated).

Remote command:

CALCulate<n>:ESPectrum:PEAKsearch:MARGin on page 593

Details

Configures how detailed the list in the Result Summary is.

On	Includes all detected peaks (up to a maximum defined by "Peaks per Range").
Off	Includes only one peak per range.

Remote command:

CALCulate<n>:ESPectrum:PEAKsearch:DETails on page 605

Peaks per Range

Defines the maximum number of peaks per range that are stored in the list. Once the selected number of peaks has been reached, the peak search is stopped in the current range and continued in the next range. The maximum value is 50.

Remote command:

CALCulate<n>: PEAKsearch: SUBRanges on page 607

Save Evaluation List

Exports the evaluation list of the Spurious Emissions measurement to an ASCII file for evaluation in an external application. If necessary, change the decimal separator for evaluation in other languages.

Define the file name and storage location in the file selection dialog box that is displayed when you select the "Save" function.

For details, see "How to Save the Spurious Emissions Evaluation List" on page 341.

Remote command:

MMEMory:STORe<n>:LIST on page 817
FORMat:DEXPort:DSEParator on page 793

7.2.7.5 How to Perform a Spurious Emissions Measurement

The following step-by-step instructions demonstrate how to perform spurious emissions measurements.



For remote operation, see Chapter 8.6.7.7, "Programming Example: Spurious Emissions Measurement", on page 608.

- 1. Press the [MEAS] key, then select the "Spurious Emissions" measurement.
- 2. Define the span of the signal to be monitored in the general span settings.
- Select the "Overview" softkey, then select the "Spurious Setup" button.The "Spurious Emissions" dialog box is displayed.
- 4. Split the frequency span of the measurement into ranges for signal parts with similar characteristics.

Define the required ranges in the "Sweep List" using the "Insert before Range" and "Insert after Range" buttons, which refer to the currently selected range.

- 5. Define the measurement parameters for each range as required.
- 6. Optionally, define a limit check.
 - a) Activate the limit check by setting "Limit Check" to "ABSOLUTE". The limit check is always activated or deactivated for all ranges simultaneously.
 - b) Define the limit line's start and stop values for each range of the signal. If a signal level higher than the defined limit is measured, the limit check fails, which may indicate a spurious emission.
- 7. Configure the peak detection during a Spurious Emissions measurement: select the "Evaluations" button in the "Overview".
 - To indicate the determined peaks in the display, activate the "Show Peaks" option.
 - To restrict peak detection, define a "Margin". Only peaks that exceed this value are detected.
 - To allow for more peaks per range to be detected than the default 1, increase the "Peaks per Range" value and set "Details" to "On".
- 8. Start a sweep.

The determined powers and limit deviations for each range are indicated in the evaluation list. If activated, the peak power levels for each range are also indicated in the diagram.

9. To save the evaluation list, export the results to a file as described in "How to Save the Spurious Emissions Evaluation List" on page 341.

How to Save the Spurious Emissions Evaluation List

The evaluation list from a Spurious Emissions measurement can be saved to a file, which can be exported to another application for further analysis, for example.

- 1. Configure and perform a Spurious Emissions measurement as described in Chapter 7.2.7.5, "How to Perform a Spurious Emissions Measurement", on page 340.
- 2. Select the "Evaluations" button in the "Overview" .
- If necessary, change the "Decimal Separator" to "COMMA" for evaluation in other languages.
- 4. Select the "Save" button.
- 5. In the file selection dialog box, select a storage location and file name for the result file.
- 6. Select the "Save" button.

The file with the specified name and the extension .dat is stored in the defined storage location.

7.2.7.6 Reference: ASCII Export File Format (Spurious)

The file has a header containing important parameters for scaling, several data sections containing the sweep settings per range, and a data section containing the peak list.

The header data is made up of three columns, separated by ';', with the syntax:

Parameter name; numeric value; basic unit

File contents	Explanation
File header	
Type;FPL1003	Model
Version;1.00;	Firmware version
Date;31.Mar 11;	Storage date of data set
Mode;ANALYZER; SPURIOUS;	Operating mode and measurement function
Center Freq;13250000000.000000;Hz	X-axis settings
Freq Offset;0.000000;Hz	
Span;26499982000.000000;Hz	
x-Axis;LIN;	
Start;9000.000000;Hz	
Stop;80000000000.000000;Hz	
Level Offset;0.000000;dB	Y-axis settings
Ref Position;100.000000;%	
y-Axis;LOG;	
Level Range;100.000000;dB	
Trace settings	
Trace Mode;CLR/WRITE;	
Sweep Count;1;	
TRACE 1:	
Trace Mode;CLR/WRITE;	
x-Unit;Hz;	
y-Unit;dBm;	
List evaluation settings	
Margin;6.000000;s	Peak List margin
PeaksPerRange;25;	Max. number of peaks per range to be detected
Values;3;	Number of detected peaks

File contents	Explanation
File data section	
0;9000;150000;1000;79500;-25.006643295288086;- 12.006643295288086;PASS:	Measured peak values:
0;9000;150000;1000;101022.11126961483;-47.075	<pre><range number="">; <start frequency="">;</start></range></pre>
111389160156;-34.075111389160156;PASS; 0;9000;150000;1000;58380.171184022824;-47.079	<pre><stop frequency="">;</stop></pre>
341888427734;-34.079341888427734;PASS;	<resolution bandwidth="" of="" range="">;</resolution>
	<frequency of="" peak="">;</frequency>
	<absolute dbm="" in="" of="" peak="" power="">;</absolute>
	<pre><distance db="" in="" limit="" line="" the="" to="">; (positive value means above the limit)</distance></pre>
	fail (pass = 0, fail =1)>;

7.2.8 Time Domain Power Measurement

The Time Domain Power measurement determines the power of a signal in the time domain.

A time domain power measurement is only possible for zero span.

	About the Measurement	343
•	Time Domain Power Results	343
	Time Domain Power Basics - Range Definition Using Limit Lines	
	Time Domain Power Configuration	
	How to Measure Powers in the Time Domain	
	Measurement Example	

7.2.8.1 About the Measurement

Using the Time Domain Power measurement function, the R&S FPL1000 determines the power of the signal in zero span by summing up the power at the individual measurement points and dividing the result by the number of measurement points. Thus it is possible to measure the power of TDMA signals during transmission, for example, or during the muting phase. Both the mean power and the RMS power can be measured.

For this measurement, the sample detector is activated.


7.2.8.2 Time Domain Power Results

Several different power results can be determined simultaneously:

Mode	Description
Peak	Peak value from the points of the displayed trace or a segment thereof.
RMS	RMS value from the points of the displayed trace or a segment thereof.

Mode	Description
Mean	Mean value from the points of the displayed trace or a segment thereof. The linear mean value of the equivalent voltages is calculated.
	For example to measure the mean power during a GSM burst
Std Dev	The standard deviation of the measurement points from the mean value.

The result is displayed in the marker results, indicated by "Power" and the selected power mode, e.g. "RMS". The measured values are updated after each sweep or averaged over a user-defined number of sweeps (trace averaging).

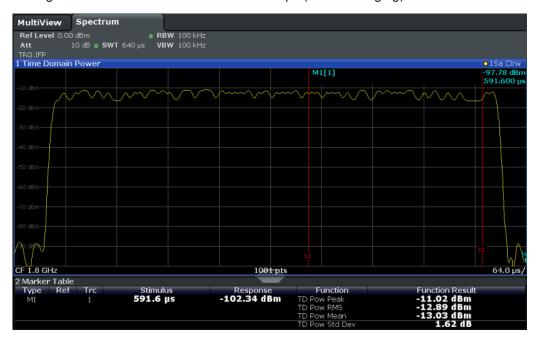

The results can also be queried using the remote commands described in Chapter 8.6.8, "Measuring the Time Domain Power", on page 609.

7.2.8.3 Time Domain Power Basics - Range Definition Using Limit Lines

The range of the measured signal to be evaluated for the power measurement can be restricted using limit lines. The left and right limit lines (S1, S2) define the evaluation range and are indicated by vertical red lines in the diagram. If activated, the power results are only calculated from the levels within the limit lines.

For example, if both the on and off phase of a burst signal are displayed, the measurement range can be limited to the transmission or to the muting phase. The ratio between signal and noise power of a TDMA signal for instance can be measured by using a measurement as a reference value and then varying the measurement range.



In order to get stable measurement results for a limited evaluation range, usually a trigger is required.

7.2.8.4 Time Domain Power Configuration

Access: "Overview" > "Select Measurement" > "Time Domain Power" > "Time Dom Power Config"



The remote commands required to perform these tasks are described in Chapter 8.6.8, "Measuring the Time Domain Power", on page 609.

Results	. 345
Limit State	. 346
Left Limit / Right Limit	346

Results

Activates the power results to be evaluated from the displayed trace or a limited area of the trace.

"Peak" Peak power over several measurements (uses trace averaging, Max Hold)

"RMS" RMS value from the points of the displayed trace or a segment

thereof.

"Mean" Mean value from the points of the displayed trace or a segment

thereof. The linear mean value of the equivalent voltages is calcula-

ted.

"Std Dev" The standard deviation of the measurement points from the mean

value.

The measurement of the mean power is automatically switched on at

the same time.

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:PPEak[:STATe] on page 612
CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:PPEak:RESult? on page 615
CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:RMS[:STATe] on page 612
CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:RMS:RESult? on page 616
CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:MEAN[:STATe] on page 612
CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:MEAN[:STATe] on page 614
```

Limit State

Switches the limitation of the evaluation range on or off. Default setting is off.

If deactivated, the entire sweep time is evaluated. If switched on, the evaluation range is defined by the left and right limit. If only one limit is set, it corresponds to the left limit and the right limit is defined by the stop frequency. If the second limit is also set, it defines the right limit.

Remote command:

```
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] on page 724
```

Left Limit / Right Limit

Defines a power level limit for line S1 (left) or S2 (right).

Remote command:

```
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT on page 724
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHt on page 724
```

7.2.8.5 How to Measure Powers in the Time Domain

The step-by-step procedure to measure powers in the time domain is described here in detail.



For remote operation, see Chapter 8.6.8.4, "Programming Example: Time Domain Power", on page 618.

To measure the power in the time domain

- Select the [MEAS] key.
- 2. From the "Select Measurement" dialog box, select the "Time Domain Power" measurement function.


- 3. Select the type of power measurement results to be determined by selecting the corresponding softkeys.
- 4. To restrict the power evaluation range, define limits:
 - a) Select the "Time Dom Power Config" softkey to display the "Time Domain Power" configuration dialog box.
 - b) Switch on the limits by setting the "Limit State" to "On" . The limit lines S1 and S2 are displayed.
 - c) Define the left limit (limit line S1), the right limit (S2), or both.
- 5. Start a sweep.

The measured powers are displayed in the marker results.

7.2.8.6 Measurement Example

This measurement example demonstrates the time domain power calculation for a GSM burst.

Test setup:

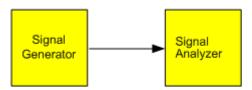

Signal generator settings (e.g. R&S SMW):


Frequency:	1.8 GHz
Level:	-10 dBm
Modulation:	GSM/EDGE

Procedure:

- 1. Preset the R&S FPL1000.
- 2. Set the center frequency to 1.8 GHz.
- 3. Set the RBW to 100 kHz.
- 4. Set the sweep time to 640 μ s.
- 5. Set the trigger source to "IF Power" .
- 6. Define a trigger offset of -50 μ s.
- 7. Select the "Time Domain Power" measurement function from the "Select Measurement" dialog box.
- 8. In the Time Domain Power configuration dialog box, set all four results to "On".
- 9. Set the "Limit State" to "On".

10. Define the left limit at 326 μ s and the right limit at 538 μ s. This range corresponds to the useful part of the GSM burst.

The mean power of the useful part of the GSM burst is calculated to be -13 dBm.

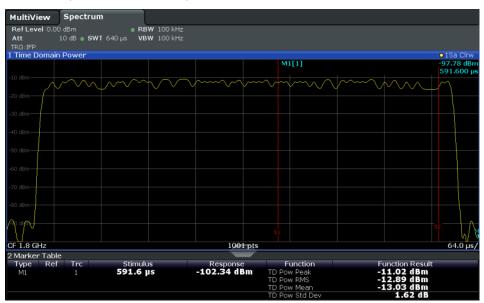

7.2.9 Harmonic Distortion Measurement

The "Harmonic Distortion" measurement measures harmonics and their distortion, including the total harmonic distortion.

•	About the Measurement	.348
•	Harmonic Distortion Basics	.349
•	Harmonic Distortion Results	.351
•	Harmonic Distortion Configuration	352
	How to Determine the Harmonic Distortion.	

7.2.9.1 About the Measurement

With this measurement it is possible to measure the harmonics easily, for example from a VCO. In addition, the total harmonic distortion (THD) is calculated.

For measurements in the frequency domain, the Harmonic Distortion measurement starts with an automatic search for the first harmonic (= peak) within the set frequency range. The center frequency is set to this frequency and the reference level is adjusted accordingly.

For measurements in zero span, the center frequency remains unchanged.

The Harmonic Distortion measurement then performs zero span sweeps at the center frequency and at each harmonic, i.e. at frequencies that are a multiple of the center frequency.

As a result, the zero span sweeps on all harmonics are shown, as well as the RMS values and the total harmonic distortion (THD).



An application note discussing harmonics measurement is available from the Rohde & Schwarz website:

1EF78: Measurement of Harmonics using Spectrum Analyzers

7.2.9.2 Harmonic Distortion Basics

Measuring the harmonics of a signal is a frequent problem which can be solved best using a signal analyzer. In general, every signal contains harmonics. Harmonics are generated by nonlinear characteristics, which add frequencies to a pure sinewave. They can often be reduced by low pass filters. Since the signal analyzer itself has a nonlinear characteristic, for example in its first mixer, measures must be taken to ensure that harmonics produced in the signal analyzer do not cause spurious results. If necessary, the fundamental wave must be attenuated selectively with respect to the other harmonics with a high pass filter. Harmonics are particularly critical regarding high-power transmitters such as transceivers because large harmonics can interfere with other radio services.

Harmonic distortion can be determined as the level of the individual components, or as the root mean square of all components together, the total harmonic distortion (THD). The THD is set in relation to the power of the fundamental frequency (= center frequency).

Obtainable dynamic range

When harmonics are being measured, the obtainable dynamic range depends on the second harmonic intercept of the signal analyzer. The second harmonic intercept is the virtual input level at the RF input mixer at which the level of the 2nd harmonic becomes equal to the level of the fundamental wave. In practice, however, applying a level of this magnitude would damage the mixer. Nevertheless the available dynamic range for measuring the harmonic distance of a DUT can be calculated relatively easily using the second harmonic intercept.

As shown in Figure 7-29, the level of the 2nd harmonic drops by 20 dB if the level of the fundamental wave is reduced by 10 dB.

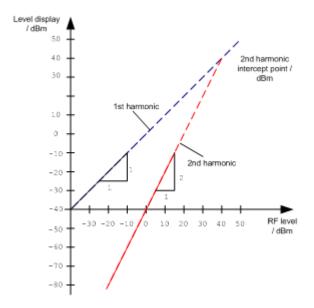


Figure 7-29: Extrapolation of the 1st and 2nd harmonics to the 2nd harmonic intercept at 40 dBm

The following formula for the obtainable harmonic distortion d₂ in dB is derived from the straight-line equations and the given intercept point:

$$d_2 = S.H.I - P_1(1)$$

where:

d ₂	=	harmonic distortion
S.H.I.	=	second harmonic intercept
P _I	=	mixer level/dBm



The mixer level is the RF level applied to the RF input minus the set RF attenuation.

The formula for the internally generated level P₁ at the 2nd harmonic in dBm is:

$$P_1 = 2 * P_1 - S.H.I. (2)$$

The lower measurement limit for the harmonic is the noise floor of the signal analyzer. The harmonic of the measured DUT should – if sufficiently averaged by means of a video filter – be at least 4 dB above the noise floor so that the measurement error due to the input noise is less than 1 dB.

Rules for measuring high harmonic ratios

The following rules for measuring high harmonic ratios can be derived:

- Select the smallest possible IF bandwidth for a minimal noise floor.
- Select an RF attenuation which is high enough to measure the harmonic ratio only.

The maximum harmonic distortion is obtained if the level of the harmonic equals the intrinsic noise level of the receiver. The level applied to the mixer, according to (2), is:

$$P_I = \frac{P_{noise} / dBm + IP2}{2}$$

At a resolution bandwidth of 10 Hz (noise level -143 dBm, S.H.I. = 40 dBm), the optimum mixer level is – 51.5 dBm. According to (1) a maximum measurable harmonic distortion of 91.5 dB minus a minimum S/N ratio of 4 dB is obtained.



Detecting the origin of harmonics

If the harmonic emerges from noise sufficiently (approx. >15 dB), it is easy to check (by changing the RF attenuation) whether the harmonics originate from the DUT or are generated internally by the signal analyzer. If a harmonic originates from the DUT, its level remains constant if the RF attenuation is increased by 10 dB. Only the displayed noise is increased by 10 dB due to the additional attenuation. If the harmonic is exclusively generated by the signal analyzer, the level of the harmonic is reduced by 20 dB or is lost in noise. If both – the DUT and the signal analyzer – contribute to the harmonic, the reduction in the harmonic level is correspondingly smaller.

High-sensitivity harmonics measurements

If harmonics have very small levels, the resolution bandwidth required to measure them must be reduced considerably. The sweep time is, therefore, also increased considerably. In this case, the measurement of individual harmonics is carried out with the R&S FPL1000 set to a small span. Only the frequency range around the harmonics will then be measured with a small resolution bandwidth.

Required measurement time


During the harmonics measurement, zero span sweeps are performed at the center frequency and at each harmonic. The duration of each sweep ("Harmonic Sweep Time", **SWT**) and the "Number of Harmonics" (n) are defined in the "Harmonic Distortion" configuration dialog box. Thus, the required measurement time for the harmonic distortion measurement (*Cumulated Measurement Time*, **CMT**) is:

$$CMT = n*SWT$$

The required measurement time is indicated as "CMT" in the channel bar.

7.2.9.3 Harmonic Distortion Results

As a result of the harmonics distortion measurement, the zero span sweeps of all detected harmonics are shown in the diagram, separated by red display lines. This provides a very good overview of the measurement.

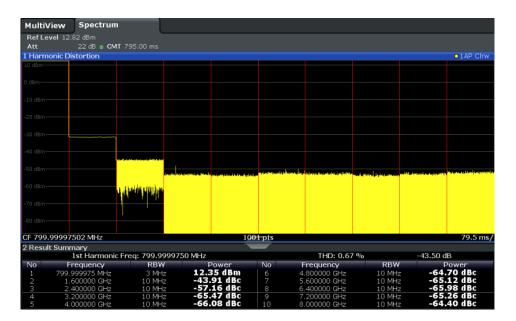

In addition, a result table is displayed providing the following information:

- First harmonic frequency
- THD (total harmonic distortion), relative and absolute values
- For each detected harmonic:
 - Frequency
 - RBW
 - Power

Remote commands

The results can also be queried using remote commands.


The first harmonic frequency can be read out via the general center frequency command [SENSe:]FREQuency:CENTer on page 649.

THD: CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:DISTortion?
on page 621

List of harmonics: CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:LIST?
on page 622

7.2.9.4 Harmonic Distortion Configuration

Access: "Overview" > "Select Measurement" > "Harmonic Distortion" > "Harmonic Distortion Config"

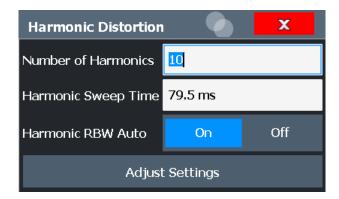

The remote commands required to perform these tasks are described in Chapter 8.6.9, "Measuring the Harmonic Distortion", on page 619.

Number of Harmonics	353
Harmonic Sweep Time	353
Harmonic RBW Auto	353
Adjust Settings	353

Number of Harmonics

Defines the number of harmonics to be measured. The range is from 1 to 26. Default is 10.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:NHARmonics on page 620

Harmonic Sweep Time

Defines the sweep time for the zero span measurement on each harmonic frequency. This setting is identical to the normal sweep time for zero span, see also " Sweep Time " on page 399.

Remote command:

[SENSe:] SWEep:TIME:AUTO on page 663

Harmonic RBW Auto

Enables/disables the automatic adjustment of the resolution bandwidth for Normal (3dB) (Gaussian) filter types.

The automatic adjustment is carried out according to:

"RBW_n = RBW₁ * n"

If RBW_n is not available, the next higher value is used.

Remote command:

 $\label{lambda} {\tt CALCulate < n > : MARKer < m > : FUNCtion : HARMonics : BANDwidth : AUTO} \\ {\tt on page 620}$

Adjust Settings

If harmonic measurement was performed in the frequency domain, a new peak search is started in the frequency range that was set before starting the harmonic measurement. The center frequency is set to this frequency and the reference level is adjusted accordingly.

If harmonic measurement was performed in the time domain, this function adjusts the reference level only.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:PRESet on page 621

7.2.9.5 How to Determine the Harmonic Distortion



In Chapter 7.9.6, "Measurement Example: Measuring Harmonics Using Marker Functions", on page 458, measuring harmonics was described using marker functions. This task can be performed much simpler using the Harmonic Distortion measurement, as described in the following procedure.

For remote operation, see Chapter 8.6.9.5, "Example: Measuring the Harmonic Distortion", on page 622.

- 1. Select the "Harmonic Distortion" measurement function from the "Select Measurement" dialog box.
- 2. Define the number of harmonics to be determined using the "Number of Harmonics" softkey.
- 3. Perform a sweep.
 - The trace for the determined harmonics are displayed in the diagram, separated by red display lines. The measured power for each harmonic in relation to the fundamental is indicated in the result table.
- 4. If the signal changes significantly during or after the harmonics measurement, use the "Adjust Settings" function to adjust the settings automatically and restart the measurement.

7.2.10 Third Order Intercept (TOI) Measurement

The third order intercept point of the R&S FPL1000 can be determined if a two-tone signal with equal carrier levels is applied to the input.

CALCulate<n>:MARKer<m>:FUNCtion:TOI:RESult? on page 624

•	About the TOI Measurement	355
•	TOI Basics	355
•	TOI Results	359
•	TOI Configuration	360
	•	
•	How to Determine the Third Order Intercept Measurement Example – Measuring the R&S FPL1000's Intrinsic Intermodu	361 Ilation

7.2.10.1 About the TOI Measurement

If several signals are applied to a transmission two-port device with nonlinear characteristic, intermodulation products appear at its output at the sums and differences of the signals. The nonlinear characteristic produces harmonics of the useful signals which intermodulate at the characteristic. The intermodulation products of lower order have a special effect since their level is largest and they are near the useful signals. The intermodulation product of third order causes the highest interference. It is the intermodulation product generated from one of the useful signals and the 2nd harmonic of the second useful signal in case of two-tone modulation.

In order to measure the third order intercept point (TOI), a two-tone signal with equal carrier levels is expected at the R&S FPL1000 input. Marker 1 and marker 2 (both normal markers) are set to the maximum of the two signals. Marker 3 and marker 4 are placed on the intermodulation products.

The R&S FPL1000 calculates the third order intercept point from the level difference between the first 2 markers and the markers 3 and 4 and displays it in the marker table.

7.2.10.2 TOI Basics

If several signals are applied to a transmission two-port device with nonlinear characteristic, intermodulation products appear at its output at the sums and differences of the signals. The nonlinear characteristic produces harmonics of the useful signals which intermodulate at the characteristic.

The frequencies of the intermodulation products are above and below the useful signals. The Figure 7-30 shows intermodulation products P_{S1} and P_{S2} generated by the two useful signals P_{U1} and P_{U2} .

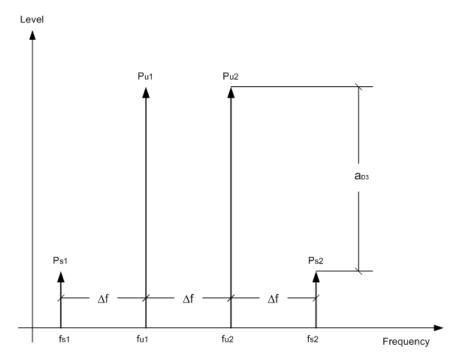


Figure 7-30: Intermodulation products Ps1 and Ps2

The intermodulation product at f_{i2} is generated by mixing the 2nd harmonic of useful signal P_{U2} and signal P_{U1} .

Tthe intermodulation product at f_{i1} is generated by mixing the 2nd harmonic of useful signal P_{U1} and signal P_{U2} .

$$f_{i1} = 2 \times f_{u1} - f_{u2} (1)$$

$$f_{i2} = 2 \times f_{u2} - f_{u1} (2)$$

Dependency on level of useful signals

The level of the intermodulation products depends on the level of the useful signals. If the two useful signals are increased by 1 dB, the level of the intermodulation products increases by 3 dB, which means that the spacing a_{D3} between intermodulation signals and useful signals is reduced by 2 dB. This is illustrated in Figure 7-31.

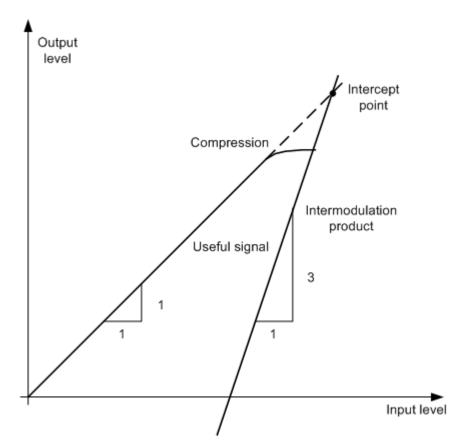


Figure 7-31: Dependency of intermodulation products on level of useful signals

The useful signals at the two-port output increase proportionally with the input level as long as the two-port is in the linear range. A level change of 1 dB at the input causes a level change of 1 dB at the output. Beyond a certain input level, the two-port goes into compression and the output level stops increasing. The intermodulation products of the third order increase three times as quickly as the useful signals. The intercept point is the fictitious level where the two lines intersect. It cannot be measured directly since the useful level is previously limited by the maximum two-port output power.

Calculation method

However, the intercept point can be calculated from the known line slopes and the measured spacing a_{D3} at a given level according to the following formula:

$$IP3 = \frac{a_{D3}}{2} + P_N$$

The third order intercept point (TOI), for example, is calculated for an intermodulation of 60 dB and an input level P_U of -20 dBm according to the following formula:

$$IP3 = \frac{60}{2} + (-20dBm) = 10dBm$$

Intermodulation-free dynamic range

The "Intermodulation-free dynamic range", i.e. the level range in which no internal intermodulation products are generated if two-tone signals are measured, is determined by the third order intercept point, the phase noise and the thermal noise of the signal analyzer. At high signal levels, the range is determined by intermodulation products. At low signal levels, intermodulation products disappear below the noise floor, i.e. the noise floor and the phase noise of the signal analyzer determine the range. The noise floor and the phase noise depend on the resolution bandwidth that has been selected. At the smallest resolution bandwidth, the noise floor and phase noise are at a minimum and so the maximum range is obtained. However, a large increase in sweep time is required for small resolution bandwidths. It is therefore best to select the largest resolution bandwidth possible to obtain the range that is required. Since phase noise decreases as the carrier-offset increases, its influence decreases with increasing frequency offset from the useful signals.

The following diagrams illustrate the intermodulation-free dynamic range as a function of the selected bandwidth and of the level at the input mixer (= signal level – set RF attenuation) at different useful signal offsets.

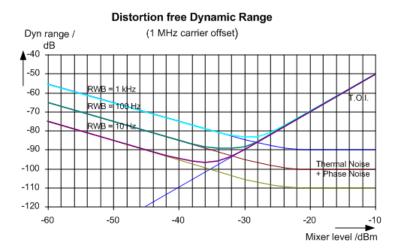


Figure 7-32: Intermodulation-free range as a function of level at the input mixer and the set resolution bandwidth

(Useful signal offset = 1 MHz, DANL = -145 dBm/Hz, TOI = 15 dBm; typical values at 2 GHz)

The optimum mixer level, i.e. the level at which the intermodulation distance is at its maximum, depends on the bandwidth. At a resolution bandwidth of 10 Hz, it is approx. -35 dBm and at 1 kHz increases to approx. -30 dBm.

Phase noise has a considerable influence on the intermodulation-free range at carrier offsets between 10 and 100 kHz (see Figure 7-33). At greater bandwidths, the influence of the phase noise is greater than it would be with small bandwidths. The optimum mixer level at the bandwidths under consideration becomes almost independent of bandwidth and is approx. -40 dBm.

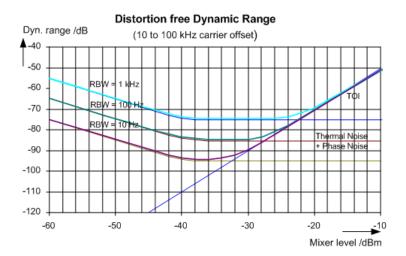


Figure 7-33: Intermodulation-free dynamic range as a function of level at the input mixer and of the selected resolution bandwidth

(Useful signal offset = 10 to 100 kHz, DANL = -145 dBm/Hz, TOI = 15 dBm; typical values at 2 GHz).




If the intermodulation products of a DUT with a very high dynamic range are to be measured and the resolution bandwidth to be used is therefore very small, it is best to measure the levels of the useful signals and those of the intermodulation products separately using a small span. The measurement time will be reduced, in particular if the offset of the useful signals is large. To find signals reliably when frequency span is small, it is best to synchronize the signal sources and the R&S FPL1000.

7.2.10.3 TOI Results

As a result of the TOI measurement, the following values are displayed in the marker area of the diagram:

Label	Description
ТОІ	Third-order intercept point
M1	Maximum of first useful signal
M2	Maximum of second useful signal
M3	First intermodulation product
M4	Second intermodulation product

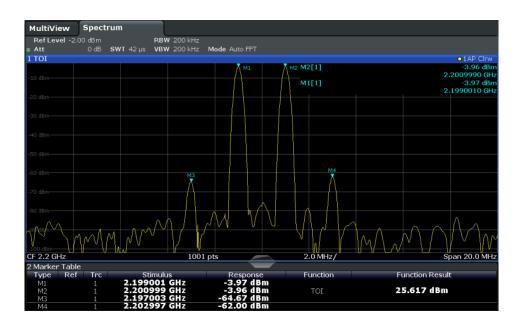


Remote command

The TOI can also be queried using the remote command CALCulate<n>: MARKer<m>: FUNCtion: TOI: RESult? on page 624.

7.2.10.4 TOI Configuration

Access: "Overview" > "Select Measurement" > "Third Order Intercept" > "TOI Config"

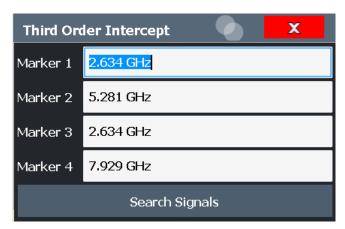

The remote commands required to perform these tasks are described in Chapter 8.6.10, "Measuring the Third Order Intercept Point", on page 623.

Marker 1 / Marker 2 / Marker 3 / Marker 4	30
Search Signals	31

Marker 1 / Marker 2 / Marker 3 / Marker 4

Indicates the detected characteristic values as determined by the TOI measurement (see Chapter 7.2.10.3, "TOI Results", on page 359).

The marker positions can be edited; the TOI is then recalculated according to the new marker values.

To reset all marker positions automatically, use the Search Signals function.

Remote command:

```
CALCulate<n>:MARKer<m>:X on page 721
CALCulate<n>:DELTamarker<m>:X on page 719
CALCulate<n>:DELTamarker<m>:X:RELative? on page 733
```

Search Signals

Performs a new search on the input signals and recalculates the TOI according to the measured values.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:TOI:SEARchsignal ONCE on page 624

7.2.10.5 How to Determine the Third Order Intercept



The precise TOI for the R&S FPL1000 in relation to the input signals is provided in the data sheet.

For remote operation, see Chapter 8.6.10.2, "Programming Example: Measuring the TOI", on page 625.


- 1. Apply a two-tone signal with equal carrier levels to the R&S FPL1000 input.
- 2. On the R&S FPL1000, press the [MEAS] key.
- Select the "Third Order Intercept" measurement function from the "Select Measurement" dialog box.
 - The calculated TOI is indicated in the marker information. The markers required for calculation are displayed in the marker table.
- 4. If the signal changes significantly during or after the TOI measurement, use the "Search Signals" function to start a new signal search automatically and restart the calculation of the TOI.

7.2.10.6 Measurement Example – Measuring the R&S FPL1000's Intrinsic Intermodulation



A programming example demonstrating a TOI measurement in a remote environment is provided in Chapter 8.6.10.2, "Programming Example: Measuring the TOI", on page 625.

Test setup:

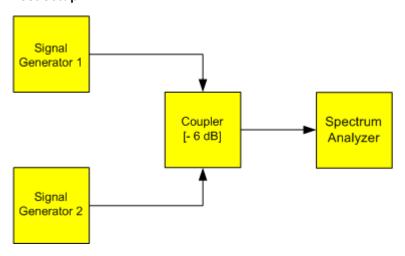

Signal generator settings (e.g. R&S SMW):

Device	Level	Frequency
Signal generator 1	-4 dBm	799.6 MHz
Signal generator 2	-4 dBm	800.4 MHz


Setting up the measurement

- 1. Preset the R&S FPL1000.
- 2. Set the center frequency to 800 MHz and the frequency span to 3 MHz.
- 3. Set the reference level to -10 dBm and RF attenuation to 0 dB.
- Set the resolution bandwidth to 10 kHz.
 The noise is reduced, the trace is smoothed further and the intermodulation products can be seen clearly.
- 5. Set the VBW to 1 kHz.

Measuring intermodulation using the Third Order Intercept (TOI) measurement function

1. Press the [MEAS] key and select the "Third Order Intercept" measurement function from the "Select Measurement" dialog box.


The R&S FPL1000 activates four markers to measure the intermodulation distance. Two markers are positioned on the useful signals and two on the intermodulation products. The TOI is calculated from the level difference between the useful signals and the intermodulation products. It is then displayed on the screen:

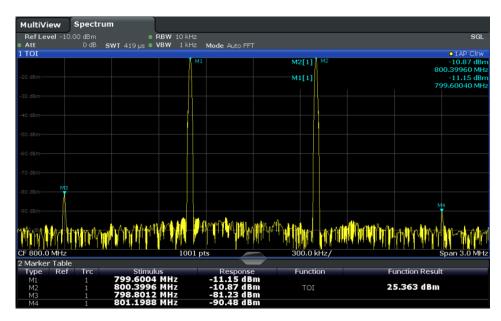

The third order intercept (TOI) is displayed in the marker information.

2. The level of a signal analyzer's intrinsic intermodulation products depends on the RF level of the useful signals at the input mixer. When the RF attenuation is added, the mixer level is reduced and the intermodulation distance is increased. With an additional RF attenuation of 10 dB, the levels of the intermodulation products are reduced by 20 dB. The noise level is, however, increased by 10 dB. Increase the RF attenuation to 20 dB to reduce intermodulation products.

The R&S FPL1000's intrinsic intermodulation products disappear below the noise floor.

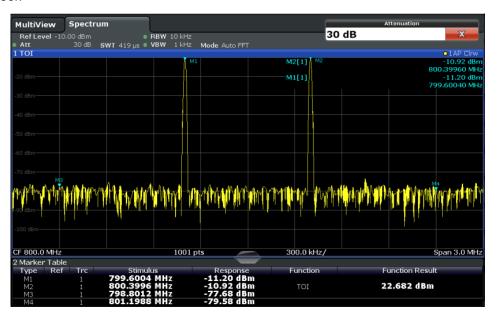

7.2.11 AM Modulation Depth Measurement

This measurement determines the AM modulation depth of an AM-modulated carrier.

•	About the Measurement	.364
•	AM Modulation Depth Results	.364
•	AM Modulation Depth Configuration	365
	Optimizing and Troubleshooting the Measurement	
	How to Determine the AM Modulation Depth	

7.2.11.1 About the Measurement

The AM modulation depth, also known as a modulation index, indicates how much the modulated signal varies around the carrier amplitude. It is defined as:

M_{Depth} = peak signal amplitude / unmodulated carrier amplitude

So for M_{Depth} = 0.5, for example, the carrier amplitude varies by 50% above and below its unmodulated level, and for M_{Depth} = 1.0 it varies by 100%.


When this measurement is activated, marker 1 is set to the peak level, which is considered to be the carrier level. Delta markers 2 and 3 are automatically set symmetrically to the carrier on the adjacent peak values of the trace. The markers can be adjusted manually, if necessary.

The R&S FPL1000 calculates the power at the marker positions from the measured levels. The AM modulation depth is calculated as the ratio between the power values at the reference marker and at the delta markers. If the powers of the two AM side bands are unequal, the mean value of the two power values is used for AM modulation depth calculation.

7.2.11.2 AM Modulation Depth Results

As a result of the AM Modulation Depth measurement, the following values are displayed in the marker area of the diagram:

Label	Description
MDepth	AM modulation depth in percent
M1	Maximum of the signal (= carrier level)
D2	Offset of next peak to the right of the carrier
D3	Offset of the next peak to the left of the carrier

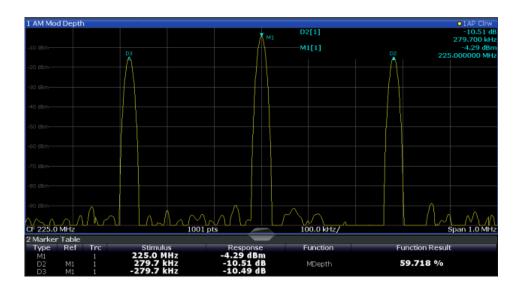


Remote command:

The AM modulation depth can also be queried using the remote command CALCulate<n>:MARKer<m>:FUNCtion:MDEPth:RESult? on page 626.

7.2.11.3 AM Modulation Depth Configuration

Access: "Overview" > "Select Measurement" > "AM Modulation Depth" > "AM Mod Depth Config"

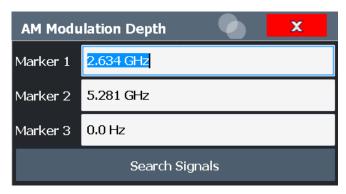

The remote commands required to perform these tasks are described in Chapter 8.6.11, "Measuring the AM Modulation Depth", on page 625.

Marker 1 / Marker 2 / Marker 3	5
Search Signals	6

Marker 1 / Marker 2 / Marker 3

Indicates the detected characteristic values as determined by the AM Modulation Depth measurement:

Marker	Description
M1	Maximum of the signal (= carrier level)
D2	Offset of next peak to the right of the carrier
D3	Offset of the next peak to the left of the carrier

The marker positions can be edited; the modulation depth is then recalculated according to the new marker values.

To reset all marker positions automatically, use the Search Signals function.

Note: Moving the marker positions manually. When the position of delta marker 2 is changed, delta marker 3 is moved symmetrically with respect to the reference marker 1.

Delta marker 3, on the other hand, can be moved for fine adjustment independently of marker 2.

Marker 1 can also be moved manually for re-adjustment without affecting the position of the delta markers.

Remote command:

```
CALCulate<n>:MARKer<m>:X on page 721
CALCulate<n>:DELTamarker<m>:X on page 719
CALCulate<n>:DELTamarker<m>:X:RELative? on page 733
```

Search Signals

Performs a new search on the input signal and recalculates the AM Modulation Depth according to the measured values.

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:MDEPth:SEARchsignal ONCE on page 626
```

7.2.11.4 Optimizing and Troubleshooting the Measurement

If the results do not meet your expectations, try the following methods to optimize the measurement:

- Set the center frequency to the frequency of the device under test.
- Adjust the span so the peaks to the left and right of the carrier, produced by the AM modulated signal, are clearly visible.
 - If the span is too wide, these signals may fall together with the carrier and the measurement can not be performed.
 - If the span is too narrow, theses signals are outside of the measured span and the delta markers can not find these peaks.
 - The rule of thumb is to set the span to three times the value of the AM modulation frequency.

7.2.11.5 How to Determine the AM Modulation Depth

The following step-by-step instructions demonstrate how to determine the AM modulation depth.



For remote operation, see Chapter 8.6.11.2, "Example: Measuring the AM Modulation Depth", on page 627.

- 1. Apply a modulated carrier signal to the R&S FPL1000 input.
- 2. On the R&S FPL1000, press the [MEAS] key.
- 3. Select the "AM Modulation Depth" measurement function from the "Select Measurement" dialog box.
 - The calculated AM Modulation Depth is indicated in the marker information. The markers required for calculation are displayed in the marker table.
- 4. If the signal changes significantly during or after the AM Modulation Depth measurement, use the "Search Signals" function to start a new peak search automatically and restart the calculation of the AM Modulation Depth.


7.3 Receiving Data Input and Providing Data Output

The R&S FPL1000 can analyze signals from different input sources and provide various types of output (such as noise source control signals).

Radio Frequency Input.
Power Sensors.
Output Settings.
367
368
375

7.3.1 Radio Frequency Input

Access: "Overview" > "Input" > "Input Source" > "Radio Frequency"

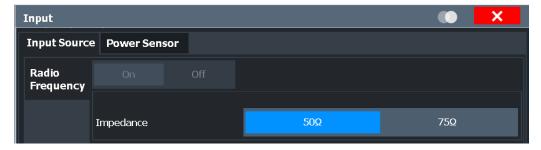



RF Input Protection

The RF input connector of the R&S FPL1000 must be protected against signal levels that exceed the ranges specified in the data sheet. Therefore, the R&S FPL1000 is equipped with an overload protection mechanism. This mechanism becomes active as soon as the power at the input mixer exceeds the specified limit. It ensures that the connection between RF input and input mixer is cut off.

When the overload protection is activated, an error message is displayed in the status bar ("INPUT OVLD"), and a message box informs you that the RF Input was disconnected. Furthermore, a status bit (bit 3) in the STAT: QUES: POW status register is set. In this case you must decrease the level at the RF input connector and then close the message box. Then measurement is possible again. Reactivating the RF input is also possible via the remote command INPut<ip>:ATTenuation: PROTection: RESet.

Radio Frequency State	368
Impedance	368

Radio Frequency State

Activates input from the [RF Input] connector.

Remote command:

INPut<ip>:SELect on page 677

Impedance

For some measurements, the reference impedance for the measured levels of the R&S FPL can be set to 50 Ω or 75 Ω .

Select 75 Ω if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type. (That corresponds to 25 Ω in series to the input impedance of the instrument.) The correction value in this case is 1.76 dB = 10 log (75 Ω / 50 Ω).

This value also affects the unit conversion (see "Reference Level" on page 386).

Remote command:

INPut<ip>: IMPedance on page 677

7.3.2 Power Sensors

The R&S FPL1000 can also analyze data from a connected power sensor.



The [Sensor] connector is provided by the "Additional Interfaces" option R&S FPL1-B5. Additionally, the power sensor measurement requires the option R&S FPL1-K9.

•	Basics on Power Sensors	369
•	Power Sensor Settings	.370
•	How to Work With a Power Sensor	373

7.3.2.1 Basics on Power Sensors

For precise power measurement, up to 4 power sensors can be connected to the instrument via the optional power sensor interface (on the rear panel) or the USB connectors. Both manual operation and remote control are supported.



For a detailed list of supported sensors, see the data sheet.

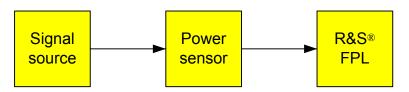


Figure 7-34: Power sensor support – standard test setup




Using the power sensor with several applications

The power sensor cannot be used from the R&S FPL1000 firmware and the R&S Power Viewer Plus (virtual power meter for displaying results of the R&S NRP power sensors) simultaneously.

Result display

The results of the power sensor measurements are displayed in the marker table. For each power sensor, a row is inserted. The sensor index is indicated in the "Type" column.

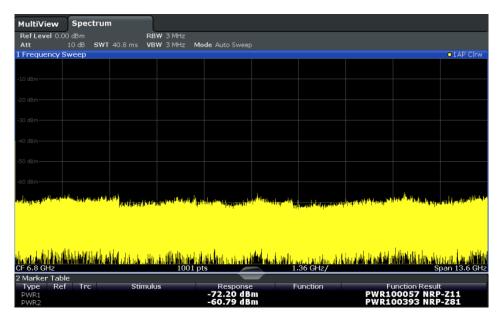


7.3.2.2 Power Sensor Settings

Access: "Overview" > "Input" > "Power Sensor" tab



The power sensor measurement requires the option R&S FPL1-K9.

Each sensor is configured on a separate tab.

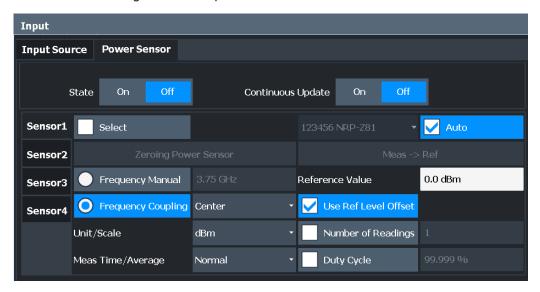

State	370
Continuous Value Update	371
Select	371
Zeroing Power Sensor	371
Frequency Manual	371
Frequency Coupling	371
Unit/Scale	372
Meas Time/Average	372
Setting the Reference Level from the Measurement Meas -> Ref	372
Reference Value	372
Use Ref Level Offset	372
Average Count (Number of Readings)	373
Duty Cycle	373

State

Switches the power measurement for all power sensors on or off. Note that in addition to this general setting, each power sensor can be activated or deactivated individually by the Select setting on each tab. However, the general setting overrides the individual settings.

Remote command:

[SENSe:]PMETer[:STATe] on page 685

Continuous Value Update

If activated, the power sensor data is updated continuously during a sweep with a long sweep time, and even after a single sweep has completed.

This function cannot be activated for individual sensors.

Remote command:

```
[SENSe:]PMETer:UPDate[:STATe] on page 686
```

Select

Selects the individual power sensor for usage if power measurement is generally activated (State function).

The detected **serial numbers** of the power sensors connected to the instrument are provided in a selection list. For each of the four available power sensor indexes ("Power Sensor 1" ... "Power Sensor 4"), which correspond to the tabs in the configuration dialog, one of the detected serial numbers can be assigned. The physical sensor is thus assigned to the configuration setting for the selected power sensor index.

By default, serial numbers not yet assigned are automatically assigned to the next free power sensor index for which "Auto Assignment" is selected.

Alternatively, you can assign the sensors manually by deactivating the "Auto" option and selecting a serial number from the list.

Remote command:

```
[SENSe:]PMETer[:STATe] on page 685
SYSTem:COMMunicate:RDEVice:PMETer:DEFine on page 679
SYSTem:COMMunicate:RDEVice:PMETer:CONFigure:AUTO[:STATe]
on page 678
SYSTem:COMMunicate:RDEVice:PMETer:COUNt? on page 679
```

Zeroing Power Sensor

Starts zeroing of the power sensor.

For details on the zeroing process refer to "How to Zero the Power Sensor" on page 374.

Remote command:

```
CALibration: PMETer: ZERO: AUTO ONCE on page 680
```

Frequency Manual

Defines the frequency of the signal to be measured. The power sensor has a memory with frequency-dependent correction factors. This allows extreme accuracy for signals of a known frequency.

Remote command:

```
[SENSe:] PMETer: FREQuency on page 683
```

Frequency Coupling

Selects the coupling option. The frequency can be coupled automatically to the center frequency of the instrument or to the frequency of marker 1.

Remote command:

```
[SENSe:] PMETer:FREQuency:LINK on page 683
```

Unit/Scale

Selects the unit with which the measured power is to be displayed. Available units are dBm, dB, W and %.

If dB or % is selected, the display is relative to the reference value that is defined with either the "Meas -> Ref" setting or the "Reference Value" setting.

Remote command:

```
UNIT<n>: PMETer: POWer on page 686
UNIT<n>: PMETer: POWer: RATio on page 686
```

Meas Time/Average

Selects the measurement time or switches to manual averaging mode. In general, results are more precise with longer measurement times. The following settings are recommended for different signal types to obtain stable and precise results:

"Short" Stationary signals with high power (> -40dBm), because they require

only a short measurement time and short measurement time provides

the highest repetition rates.

"Normal" Signals with lower power or modulated signals

"Long" Signals at the lower end of the measurement range (<-50 dBm) or

Signals with lower power to minimize the influence of noise

"Manual" Manual averaging mode. The average count is set with the Average

Count (Number of Readings) setting.

Remote command:

```
[SENSe:]PMETer:MTIMe on page 684
[SENSe:]PMETer:MTIMe:AVERage[:STATe] on page 684
```

Setting the Reference Level from the Measurement Meas -> Ref

Sets the currently measured power as a reference value for the relative display. The reference value can also be set manually via the Reference Value setting.

Remote command:

```
CALCulate<n>: PMETer: RELative[:MAGNitude]: AUTO ONCE on page 681
```

Reference Value

Defines the reference value for relative measurements in the unit dBm.

Remote command:

```
CALCulate<n>:PMETer:RELative[:MAGNitude] on page 681
```

Use Ref Level Offset

If activated, takes the reference level offset defined for the analyzer into account for the measured power (see "Shifting the Display (Offset)" on page 387).

If deactivated, takes no offset into account.

Remote command:

```
[SENSe:]PMETer:ROFFset[:STATe] on page 685
```

Average Count (Number of Readings)

Defines the number of readings (averages) to be performed after a single sweep has been started. This setting is only available if manual averaging is selected (Meas Time/Average setting).

The values for the average count range from 0 to 256 in binary steps (1, 2, 4, 8, ...). For average count = 0 or 1, one reading is performed. The general averaging and sweep count for the trace are independent from this setting.

Results become more stable with extended average, particularly if signals with low power are measured. This setting can be used to minimize the influence of noise in the power sensor measurement.

Remote command:

```
[SENSe:]PMETer:MTIMe:AVERage:COUNt on page 684
```

Duty Cycle

Sets the duty cycle to a percent value for the correction of pulse-modulated signals and activates the duty cycle correction. With the correction activated, the sensor calculates the signal pulse power from this value and the mean power.

Remote command:

```
[SENSe:]PMETer:DCYCle[:STATe] on page 682
[SENSe:]PMETer:DCYCle:VALue on page 682
```

7.3.2.3 How to Work With a Power Sensor

The following step-by-step instructions demonstrate how to set up a power sensor. For details on individual functions and settings see Chapter 7.3.2.2, "Power Sensor Settings", on page 370.

The remote commands required to perform these tasks are described in Chapter 8.8.5.2, "Working with Power Sensors", on page 678.

How to Set Up a Power Sensor

Up to 4 external power sensors can be configured separately and used for precise power measurement. All power sensors can be activated and deactivated individually.

The following procedure describes in detail how to configure and activate power sensors.

- 1. To display the "Power Sensor" tab of the "Input" dialog box, do one of the following:
 - Select "Input" from the "Overview".
 - Select the [INPUT/OUTPUT] key and then the "Power Sensor Config" softkey.
- 2. Select the tab for the power sensor index you want to configure, e.g. "Power Sensor 1".
- 3. Press "Select" to analyze the power sensor data according to the current configuration when power measurement is activated.
- 4. From the selection list with serial numbers of connected power sensors, select the sensor you want to configure.

To have newly connected power sensors assigned to a tab automatically (default), select "Auto" .

- 5. Define the frequency of the signal whose power you want to measure.
 - a) To define the frequency manually, select "Frequency Manual" and enter a frequency.
 - b) To determine the frequency automatically, select "Frequency Coupling" and then either "Center", to use the center frequency, or "Marker", to use the frequency defined by marker 1.
- 6. Select the unit for the power result display.
- Select the measurement time for which the average is calculated, or define the number of readings to average. To define the number of readings to be taken into account manually, select "Manual" and enter the number in the "Number of Readings" field.
- 8. To activate the duty cycle correction, select "DutyCycle" and enter a percentage as the correction value.
- 9. If you selected "dB" or "%" as units (relative display), define a reference value:
 - To set the currently measured power as a reference value, press the "Meas -> Ref" button.
 - b) Alternatively, enter a value manually in the "Reference Value" field.
 - c) Optionally, select the "Use Ref Level Offset" option to take the reference level offset set for the analyzer into account for the measured power.
- 10. If necessary, repeat steps 3-10 for another power sensor.
- 11. Set the "Power Sensor State" at the top of the "Power Sensor" tab to "On" to activate power measurement for the selected power sensors.

The results of the power measurement are displayed in the marker table (Function: "Sensor <1...4>").

How to Zero the Power Sensor

- 1. To display the "Power Sensor" tab of the "Input" dialog box, do one of the following:
 - Select "Input" from the "Overview" .
 - Select the [INPUT/OUTPUT] key and then the "Power Sensor Config" softkey.
- 2. Select the tab that is assigned to the power sensor you want to zero.
- Press the "Zeroing Power Sensor" button.
 A dialog box is displayed that prompts you to disconnect all signals from the input of the power sensor.
- 4. Disconnect all signals sending input to the power sensor and press [ENTER] to continue.
- 5. Wait until zeroing is complete.

A corresponding message is displayed.


7.3.3 Output Settings

Access: "Overview" > "Output"

The R&S FPL1000 can provide signals to different output connectors.

These connectors are only available if the R&S FPL1-B5 option is installed.

For details on connectors, refer to the R&S FPL1000 Getting Started manual, "Front / Rear Panel View" chapters.

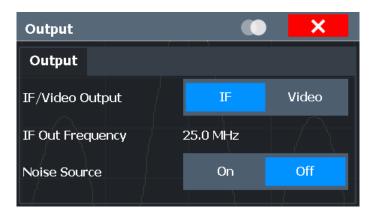

Data Output	375
Noise Source Control	376

Data Output

Defines the type of signal available at one of the output connectors of the R&S FPL.

This connector is only available if the R&S FPL1-B5 option is installed.

"IF" The measured IF value is provided at the IF/VIDEO output connector.

The output is provided at a fixed frequency of 25 MHz. IF and video

output is only available in the time domain (zero span).

"Video" The displayed video signal (i.e. the filtered and detected IF signal) is

available at the IF/VIDEO output connector.

This setting is required to provide demodulated audio frequencies at the output. It is not available for frequency sweeps or I/Q measure-

ments.

The video output is a signal of 1 V. It can be used, for example, to

control demodulated audio frequencies.

Remote command:

OUTPut:IF[:SOURCe] on page 687 OUTPut:IF:IFFRequency on page 688 SYSTem:SPEaker:VOLume on page 689 SYSTem:SPEaker[:STATe] on page 689

Noise Source Control

The R&S FPL1000 provides a connector ([NOISE SOURCE CONTROL]) with a 28 V voltage supply for an external noise source. By switching the supply voltage for an external noise source on or off in the firmware, you can activate or deactivate the device as required.

This connector is only available if the R&S FPL1-B5 option is installed.

External noise sources are useful when you are measuring power levels that fall below the noise floor of the R&S FPL itself, for example when measuring the noise level of an amplifier.

In this case, you can first connect an external noise source (whose noise power level is known in advance) to the R&S FPL and measure the total noise power. From this value you can determine the noise power of the R&S FPL. Then when you measure the power level of the actual DUT, you can deduct the known noise level from the total power to obtain the power level of the DUT.

Remote command:

DIAGnostic: SERVice: NSOurce on page 687

7.4 Frequency and Span Configuration

The frequency and span settings define the scope of the signal and spectrum to be analyzed with the R&S FPL1000.

•	Impact of the Frequency and Span Settings	376
	Frequency and Span Settings	
	Keeping the Center Frequency Stable - Signal Tracking	
	How To Define the Frequency Range	
	How to Move the Center Frequency through the Frequency Range	

7.4.1 Impact of the Frequency and Span Settings

Some background knowledge on the impact of the described settings is provided here for a better understanding of the required configuration.

7.4.1.1 Defining the Scope of the Measurement - Frequency Range

The frequency range defines the scope of the signal and spectrum to be analyzed. It can either be defined as a span around a center frequency, or as a range from a start to a stop frequency. Furthermore, the full span comprising the entire possible frequency range can be selected, or a zero span. The full span option allows you to perform an overview measurement over the entire span. Using the "Last Span" function you can easily switch back to the detailed measurement of a specific frequency range.

For sinusoidal signals, the center frequency can be defined automatically by the R&S FPL1000 as the highest frequency level in the frequency span (see " Adjusting the Center Frequency Automatically (Auto Frequency)" on page 420).

7.4.1.2 Stepping Through the Frequency Range - Center Frequency Stepsize

Using the arrow keys you can move the center frequency in discrete steps through the available frequency range. The step size by which the center frequency is increased or decreased is defined by the "Center Frequency Stepsize".



The "Center Frequency Stepsize" also defines the step size by which the value is increased or decreased when you use the rotary knob to change the center frequency; however, the **rotary knob** moves in steps of only **1/10 of the "Center Frequency Stepsize"** to allow for a more precise setting.

By default, the step size is set in relation to the selected span or resolution bandwidth (for zero span measurements). In some cases, however, it may be useful to set the step size to other values.





For example, to analyze signal harmonics, you can define the step size to be equal to the center frequency. In this case, each stroke of the arrow key selects the center frequency of another harmonic. Similarly, you can define the step size to be equal to the current marker frequency.

7.4.2 Frequency and Span Settings

Access: "Overview" > "Frequency"

For more information see Chapter 7.4.4, "How To Define the Frequency Range", on page 382.

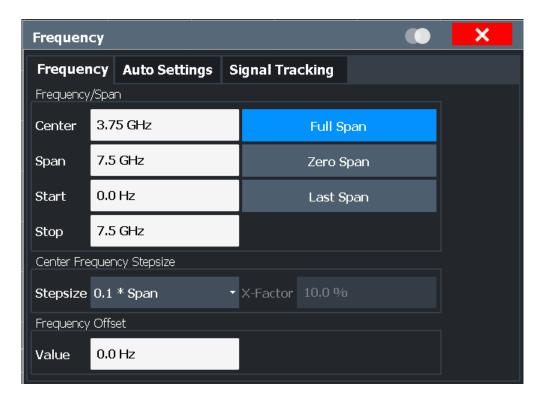

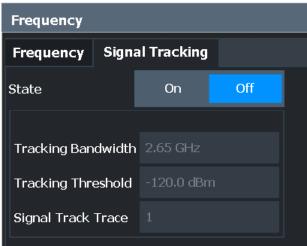



"Auto Settings" are described in Chapter 7.8, "Adjusting Settings Automatically", on page 418.

Signal Tracking is described in Chapter 7.4.3, "Keeping the Center Frequency Stable - Signal Tracking", on page 381.

Center Frequency	9
Span	
Start / Stop	9
Full Span	
Zero Span	

Last Span	380
Center Frequency Stepsize	380
Frequency Offset	381

Center Frequency

Defines the center frequency of the signal in Hertz.

The allowed range of values for the center frequency depends on the frequency span.

span > 0:
$$span_{min}/2 \le f_{center} \le f_{max} - span_{min}/2$$

zero span: 0 Hz \leq f_{center} \leq f_{max}

f_{max} and span_{min} depend on the instrument and are specified in the data sheet.

Remote command:

[SENSe:] FREQuency: CENTer on page 649

Span

Defines the frequency span. The center frequency is kept constant. The following range is allowed:

span = 0: 0 Hz

span >0:

 $span_{min} \le f_{span} \le f_{max}$

f_{max} and span_{min} are specified in the data sheet.

For more information see Chapter 7.4.1.1, "Defining the Scope of the Measurement - Frequency Range", on page 376.

Remote command:

[SENSe:] FREQuency: SPAN on page 651

Start / Stop

Defines the start and stop frequencies.

The following range of values is allowed:

$$f_{min} \le f_{start} \le f_{max} - span_{min}$$

$$f_{min} + span_{min} \le f_{stop} \le f_{max}$$

 f_{min} , f_{max} and span_{min} are specified in the data sheet.

Remote command:

```
[SENSe:] FREQuency:STARt on page 652 [SENSe:] FREQuency:STOP on page 652
```

Full Span

Sets the span to the full frequency range of the R&S FPL1000 specified in the data sheet. This setting is useful for overview measurements.

Remote command:

[SENSe:] FREQuency:SPAN:FULL on page 651

Zero Span

Sets the span to 0 Hz (zero span). The x-axis becomes the time axis with the grid lines corresponding to 1/10 of the current sweep time ("SWT").

For details see Chapter 7.2.1, "Basic Measurements", on page 235.

Remote command:

```
FREQ:SPAN OHz, see [SENSe:] FREQuency:SPAN on page 651
```

Last Span

Sets the span to the previous value. With this function you can switch between an overview measurement and a detailed measurement quickly.

Remote command:

```
[SENSe:] FREQuency: SPAN on page 651
```

Center Frequency Stepsize

Defines the step size by which the center frequency is increased or decreased when the arrow keys are pressed. When you use the rotary knob the center frequency changes in much smaller steps (1/10 the size as for the arrow keys).

The step size can be coupled to the span (span > 0) or the resolution bandwidth (span = 0), or it can be manually set to a fixed value.

For more details see Chapter 7.4.1.2, "Stepping Through the Frequency Range - Center Frequency Stepsize", on page 377.

	· · · · · · · · · · · · · · · · · · ·
"0.1 * Span" / "0.1 * RBW"	Sets the step size for the center frequency to 10 % of the span / RBW. This is the default setting.
"0.5 * Span" / "0.5 * RBW"	Sets the step size for the center frequency to 50 % of the span / RBW.
"x * Span" / "x * RBW"	Sets the step size for the center frequency to a manually defined factor of the span / RBW. The "X-Factor" defines the percentage of the span / RBW. Values between 1 and 100 % in steps of 1 % are allowed. The default setting is 10 %.
"= Center"	Sets the step size to the value of the center frequency and removes the coupling of the step size to span or resolution bandwidth. The used value is indicated in the "Value" field.
"= Marker"	This setting is only available if a marker is active. Sets the step size to the value of the current marker and removes the coupling of the step size to span or resolution bandwidth. The used value is indicated in the "Value" field.
"Manual"	Defines a fixed step size for the center frequency. Enter the step size

Remote command:

```
[SENSe:] FREQuency:CENTer:STEP:LINK on page 650
[SENSe:] FREQuency:CENTer:STEP:LINK:FACTor on page 650
[SENSe:] FREQuency:CENTer:STEP on page 649
```

in the "Value" field.

Frequency Offset

Shifts the displayed frequency range along the x-axis by the defined offset.

This parameter has no effect on the instrument's hardware, or on the captured data or on data processing. It is simply a manipulation of the final results in which absolute frequency values are displayed. Thus, the x-axis of a spectrum display is shifted by a constant offset if it shows absolute frequencies, but not if it shows frequencies relative to the signal's center frequency.

A frequency offset can be used to correct the display of a signal that is slightly distorted by the measurement setup, for example.


The allowed values range from -100 GHz to 100 GHz. The default setting is 0 Hz.

Remote command:

[SENSe:] FREQuency:OFFSet on page 651

7.4.3 Keeping the Center Frequency Stable - Signal Tracking

If the signal drifts on the display but you want to keep the center frequency on the signal peak, the center frequency can be adjusted automatically using **signal tracking**. In this case, the signal trace is surveyed in a specified bandwidth around the expected center frequency. After each sweep, the center frequency is set to the maximum signal found within the searched bandwidth. If no maximum signal above a defined threshold value is found in the searched bandwidth, the center frequency remains unchanged. The search bandwidth and the threshold value are shown in the diagram by red lines which are labeled as "TRK".

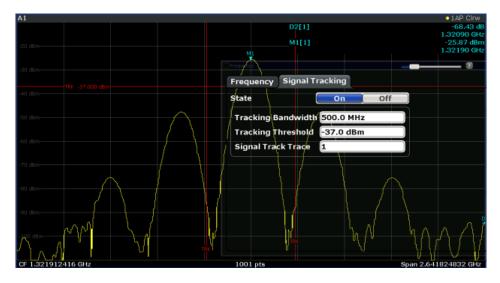

Signal Tracking

Access: "Overview" > "Frequency" > "Signal Tracking" tab

Defines the settings for signal tracking. These settings are only available for spans > 0.

For more details see Chapter 7.4.3, "Keeping the Center Frequency Stable - Signal Tracking", on page 381.

If activated, after each sweep, the center frequency is set to the maximum level of the specified "Signal Track Trace" found within the searched "Tracking Bandwidth".

If the signal level does not pass the "Tracking Threshold", the center frequency is not changed.

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:STRack[:STATe] on page 655
CALCulate<n>:MARKer<m>:FUNCtion:STRack:BANDwidth on page 656
CALCulate<n>:MARKer<m>:FUNCtion:STRack:THReshold on page 656
CALCulate<n>:MARKer<m>:FUNCtion:STRack:TRACe on page 656
```

7.4.4 How To Define the Frequency Range

The following step-by-step instructions demonstrate how to configure the frequency and span settings. For details on individual functions and settings see Chapter 7.4.2, "Frequency and Span Settings", on page 377.

The remote commands required to perform these tasks are described in Chapter 8.8.1, "Defining the Frequency and Span", on page 648.

To configure the frequency and span

Frequency and span settings can be configured via the "Frequency" dialog box. Signal tracking is configured in the "Signal Tracking" tab of this dialog box.

- 1. To display the "Frequency" dialog box, do one of the following:
 - Select "Frequency" from the "Overview".
 - Select the [FREQ] key and then the "Frequency Config" softkey.
 - Select the [SPAN] key and then the "Frequency Config" softkey.
- 2. Define the frequency range using one of the following methods:
 - Define the "Center Frequency" and "Span" .
 - Define the "Start Frequency" and "Stop Frequency".
 - To perform a measurement in the time domain, define the "Center Frequency" and select the "Zero Span" button.
 - To perform a measurement over the entire available frequency range, select the "Full Span" button.
 - To return to the previously set frequency range, select the "Last Span" button.

7.4.5 How to Move the Center Frequency through the Frequency Range

In some cases it may be useful to move the center frequency through a larger frequency range, for example from one harmonic to another.

- In the "Frequency" dialog box, define the "Center Frequency Stepsize". This is the
 size by which the center frequency is to be increased or decreased in each step.
 Enter a manual or relative value, or set the step size to the current center frequency or marker value. To move from one harmonic to the next, use the center
 frequency or marker value.
- 2. Select the "Center Frequency" dialog field.

Amplitude and Vertical Axis Configuration

3. Use the arrow keys to move the center frequency in discrete steps through the available frequency range.

7.5 Amplitude and Vertical Axis Configuration

In the Spectrum application, measurement results usually consist of the measured signal levels (amplitudes) displayed on the vertical (y-)axis for the determined frequency spectrum or for the measurement time (horizontal, x-axis). The settings for the vertical axis, regarding amplitude and scaling, are described here.



"Auto Settings" are described in Chapter 7.8, "Adjusting Settings Automatically", on page 418.

•	Impact of the Vertical Axis Settings	383
	Amplitude Settings	
	Scaling the Y-Axis	
	· · ·	390

7.5.1 Impact of the Vertical Axis Settings

Some background knowledge on the impact of the described settings is provided here for a better understanding of the required configuration.

•	Reference Level	383
•	RF Attenuation	384
	Scaling	385

7.5.1.1 Reference Level

The reference level value is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IF Overload" status display.

Internally, the reference level is also used to determine the optimum hardware settings for the R&S FPL1000. The defined reference level should correspond with the maximum expected RF input level.



When determining the expected input level, consider that the power from *all* input signals contribute to the total power. The reference level must be higher than the total power from all signals.

The optimum reference level for the current measurement settings can be set automatically by the R&S FPL1000 (see "Reference Level" on page 386).

The reference level determines the amplitude represented by the topmost grid line in the display. When you change the reference level, the measurement is not restarted;

the results are merely shifted in the display. Only if the reference level changes due to a coupled RF attenuation (see " Attenuation Mode / Value " on page 388), the measurement is restarted.

In general, the R&S FPL measures the signal voltage at the RF input. The level display is calibrated in RMS values of an unmodulated sine wave signal. In the default state, the level is displayed at a power of 1 mW (= dBm). Via the known input impedance, conversion to other units is possible.

Reference level offset

If the signal is attenuated or amplified before it is fed into the R&S FPL1000, you can define an (arithmetic) offset to the reference level so the application shows correct power results. All displayed power level results are shifted by this value, and the scaling of the y-axis is changed accordingly.

To determine the required offset, consider the external attenuation or gain applied to the input signal. For attenuation, define a positive offset so the R&S FPL1000 increases the displayed power values.

If an external gain is applied, define a negative offset so the R&S FPL1000 decreases the displayed power values.

Note, however, that the *internal* reference level (used to adjust the hardware settings to the expected signal optimally) ignores any "Reference Level Offset". Thus, it is important to keep in mind the actual power level the R&S FPL1000 must handle, and not to rely on the displayed reference level.

internal reference level = displayed reference level - offset

Example

- The initial reference level is 2 dBm with no offset.
 Both the displayed reference level and the internal reference level are 2 dBm.
- 2. An offset of 3 dB is defined.

The displayed reference level is adjusted to 5 dBm. The internal reference level remains at 2 dBm. (5 dBm (displayed ref level) - 3 dB (offset) = 2 dBm)

3. Now the user decreases the reference level to 1 dBm.

The displayed reference level is adjusted to 1 dBm. The internal reference level is adjusted to:

1 dBm (displayed ref level) - 3 dB (offset) = -2 dBm.

7.5.1.2 RF Attenuation

The attenuation is meant to protect the input mixer from high RF input levels. The level at the input mixer is determined by the set RF attenuation according to the formula:

"level_{mixer} = level_{input} – RF attenuation"

The maximum mixer level allowed is -13 dBm.

Amplitude and Vertical Axis Configuration

Mixer levels above this value may lead to incorrect measurement results, which is indicated by the "RF Overload" status display. Furthermore, higher input levels may damage the instrument. Therefore, the required RF attenuation is determined automatically according to the reference level by default.

High attenuation levels also avoid intermodulation. On the other hand, attenuation must be compensated for by re-amplifying the signal levels after the mixer. Thus, high attenuation values cause the inherent noise (i.e the noise floor) to rise and the sensitivity of the analyzer decreases.

The sensitivity of a signal analyzer is directly influenced by the selected RF attenuation. The highest sensitivity is obtained at an RF attenuation of 0 dB. Each additional 10 dB step reduces the sensitivity by 10 dB, i.e. the displayed noise is increased by 10 dB. To measure a signal with an improved signal-to-noise ratio, decrease the RF attenuation.



For ideal sinusoidal signals, the displayed signal level is independent of the RF attenuation.

Depending on the type of measurement you must find a compromise between a low noise floor and high intermodulation levels, and protecting the instrument from high input levels. You achieve this best by letting the R&S FPL determine the optimum level automatically (see " Attenuation Mode / Value " on page 388).

7.5.1.3 Scaling

In a linear display, the measurement values are distributed linearly throughout the grid. That means the entire range of measured values is divided by the number of rows in the grid (10) and each row corresponds to 1/10 of the total range. Linear scaling is useful to determine precise levels for a small range of values. However, if large and small values appear in the same display, it is difficult to determine individual values precisely or to distinguish values that are close together.

In a logarithmic display, smaller values are distributed among a much larger area of the display, while large values are condensed to a smaller area. Now it is much easier to distinguish several lower values, as they are spread over a wider area. Logarithmic scaling is useful when large ranges of values must be combined in one display. Logarithmic scaling is best applied to measurement values in logarithmic units (dB, dBm etc.).


In addition to linear or logarithmic scaling, the vertical axis can be set to display either absolute or relative values. Absolute values show the measured levels, while relative values show the difference between the measured level and the defined reference level. Relative values are indicated in percent for linear scaling, and in dB for logarithmic scaling.

7.5.2 Amplitude Settings

Access: "Overview" > "Amplitude"

Amplitude settings determine how the R&S FPL must process or display the expected input power levels.

The remote commands required to define these settings are described in Chapter 8.8.3.1, "Amplitude Settings", on page 664.

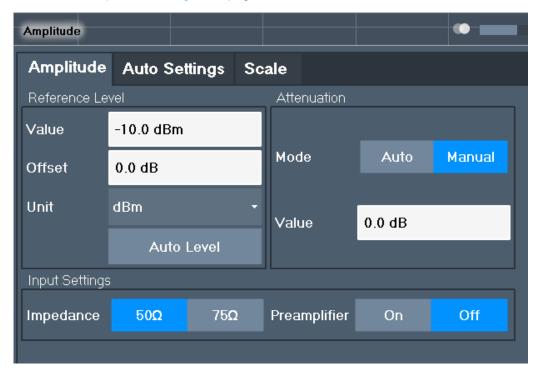

Reference Level	386
L Shifting the Display (Offset)	
L Unit	
L Setting the Reference Level Automatically (Auto Level)	387
Attenuation Mode / Value	388
Impedance	388
Preamplifier	388

Reference Level

Defines the expected maximum reference level. Signal levels above this value may not be measured correctly. This is indicated by an "IF Overload" status display.

The reference level can also be used to scale power diagrams; the reference level is then used as the maximum on the y-axis.

Since the hardware of the R&S FPL is adapted according to this value, it is recommended that you set the reference level close above the expected maximum signal level. Thus you ensure an optimum measurement (no compression, good signal-to-noise ratio).

For details, see Chapter 7.5.1.1, "Reference Level", on page 383.

Remote command:

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel on page 665

Amplitude and Vertical Axis Configuration

Shifting the Display (Offset) ← Reference Level

Defines an arithmetic level offset. This offset is added to the measured level. In some result displays, the scaling of the y-axis is changed accordingly.

Define an offset if the signal is attenuated or amplified before it is fed into the R&S FPL1000 so the application shows correct power results. All displayed power level results are shifted by this value.

The setting range is ±200 dB in 0.01 dB steps.

Note, however, that the *internal* reference level (used to adjust the hardware settings to the expected signal) ignores any "Reference Level Offset". Thus, it is important to keep in mind the actual power level the R&S FPL1000 must handle. Do not rely on the displayed reference level (internal reference level = displayed reference level - offset).

For details, see "Reference level offset" on page 384.

Remote command:

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet on page 665

Unit ← Reference Level

The R&S FPL measures the signal voltage at the RF input.

In the default state, the level is displayed at a power level of 1 mW (= dBm). Via the known input impedance (50 Ω or 75 Ω , see " Impedance " on page 368), conversion to other units is possible.

The following units are available and directly convertible:

- dBm
- dBmV
- dBµV
- dBµA
- dBpW
- Volt
- Ampere
- Watt

Remote command:

INPut<ip>:IMPedance on page 677
CALCulate<n>:UNIT:POWer on page 664

Setting the Reference Level Automatically (Auto Level) ← Reference Level

Automatically determines a reference level which ensures that no overload occurs at the R&S FPL for the current input data. At the same time, the internal attenuators are adjusted so the signal-to-noise ratio is optimized, while signal compression and clipping are minimized.

To determine the required reference level, a level measurement is performed on the R&S FPI

If necessary, you can optimize the reference level further. Decrease the attenuation level manually to the lowest possible value before an overload occurs, then decrease the reference level in the same way.

You can change the measurement time for the level measurement if necessary (see "Changing the Automatic Measurement Time (Meastime Manual)" on page 420).

Amplitude and Vertical Axis Configuration

Remote command:

[SENSe:]ADJust:LEVel on page 655

Attenuation Mode / Value

The RF attenuation can be set automatically as a function of the selected reference level (Auto mode). This ensures that no overload occurs at the [RF Input] connector for the current reference level. It is the default setting.

In "Manual" mode, you can set the RF attenuation in 5 dB steps down to 0 dB (with option R&S FPL1-B22: in 1 dB steps). Other entries are rounded to the next integer value. The range is specified in the data sheet. If the defined reference level cannot be set for the defined RF attenuation, the reference level is adjusted accordingly and the warning "limit reached" is displayed.

NOTICE! Risk of hardware damage due to high power levels. When decreasing the attenuation manually, ensure that the power level does not exceed the maximum level allowed at the RF input, as an overload may lead to hardware damage.

For details, see Chapter 7.5.1.2, "RF Attenuation", on page 384.

Remote command:

```
INPut<ip>:ATTenuation on page 666
INPut<ip>:ATTenuation:AUTO on page 666
```

Impedance

For some measurements, the reference impedance for the measured levels of the R&S FPL can be set to 50 Ω or 75 Ω .

Select 75 Ω if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type. (That corresponds to 25 Ω in series to the input impedance of the instrument.) The correction value in this case is 1.76 dB = 10 log (75 Ω / 50 Ω).

This value also affects the unit conversion (see "Reference Level" on page 386).

Remote command:

INPut<ip>:IMPedance on page 677

Preamplifier

If the (optional) internal preamplifier hardware is installed, a preamplifier can be activated for the RF input signal.

You can use a preamplifier to analyze signals from DUTs with low output power.

The input signal is amplified by 20 dB if the preamplifier option is activated.

Remote command:

INPut<ip>:GAIN:STATe on page 666


7.5.3 Scaling the Y-Axis

The individual scaling settings that affect the vertical axis are described here.

Access: "Overview" > "Amplitude" > "Scale" tab

Or: [AMPT] > "Scale Config"

The remote commands required to define these settings are described in Chapter 8.8.3, "Configuring the Vertical Axis (Amplitude, Scaling)", on page 664.

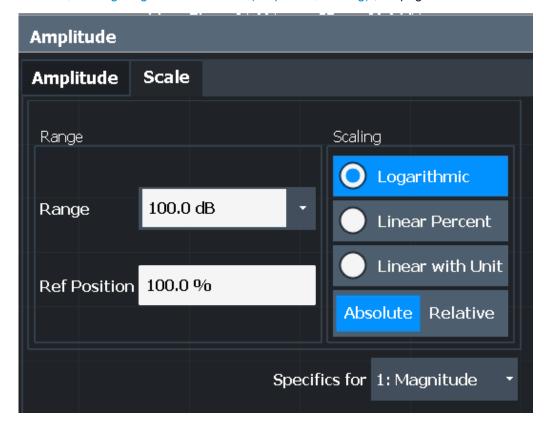

Range	389
Ref Level Position	
Auto Scale Once	390
Scaling	390

Range

Defines the displayed y-axis range in dB.

The default value is 100 dB.

Remote command:

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe] on page 667

Ref Level Position

Defines the reference level position, i.e. the position of the maximum AD converter value on the level axis in %, where 0 % corresponds to the lower and 100 % to the upper limit of the diagram.

For spectrograms, this value defines the position of the reference level value within the span covered by the color map. In this case, the value is given in %, where 0 % corresponds to the maximum (right end) and 100 % to the minimum (left end) of the color map.

Remote command:

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition on page 668

Amplitude and Vertical Axis Configuration

Auto Scale Once

Automatically determines the optimal range and reference level position to be displayed for the current measurement settings.

The display is only set once; it is not adapted further if the measurement settings are changed again.

Remote command:

```
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO ONCE on page 668
```

Scaling

Defines the scaling method for the y-axis.

For more information see Chapter 7.5.1.3, "Scaling", on page 385.

"Logarithmic" Logarithmic scaling (only available for logarithmic units - dB..., and A,

V, Watt)

"Linear with

Unit"

Linear scaling in the unit of the measured signal

"Linear Per-

cent"

"Absolute"

Linear scaling in percentages from 0 to 100

The labeling of the level lines refers to the absolute value of the refer-

ence level (not available for "Linear Percent")

"Relative" The scaling is in dB, relative to the reference level (only available for

logarithmic units - dB...). The upper line of the grid (reference level) is

always at 0 dB.

Remote command:

```
DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing on page 669
DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE on page 668
```

7.5.4 How to Optimize the Amplitude Display

This section gives you some advice on how to optimize the display of the measured signal amplitudes depending on the required evaluation.

- 1. Perform a measurement with the default settings to get an impression of the values to be expected.
- 2. Use the "Auto Level" function ([AUTO] menu) to optimize the reference level.
- 3. Use the "AF Auto Scale" function ([AUTO] menu) to optimize the scaling.
- 4. To determine a precise level at a specific point in the signal:
 - Reduce the "Range" of the y-axis to a small area around the required level. If necessary, change the "Ref Level Position" so the required range remains visible.
 - Select "Linear with Unit" scaling.

Now you can set a marker at the point in question and read the result.

5. To detect a spurious signal close to the noise floor:

- Set the "RF Attenuation" to "Manual" mode and reduce the "Value" to lower the noise floor.
- Select "Relative" "Logarithmic" scaling.

Now you can determine if any spurious levels of a certain size are visible.

7.6 Bandwidth, Filter and Sweep Configuration

The basic bandwidth, filter and sweep settings that apply to most measurements are described here. These parameters define how the data is measured: how much data is collected internally and which filters are used.

7.6.1 Impact of the Bandwidth, Filter and Sweep Settings

The bandwidth, filter and sweep settings are closely related and interdependent. The values available for resolution bandwidth and video bandwidth depend on the selected filter type. In addition, these settings have an impact on other measurement parameters. The following equation shows the interdependency of these settings:

$T_{MIN} = K*Span/RBW^2$

where K = Filter constant

By default, a Gaussian filter is used. The resolution bandwidth, the video bandwidth and the "Sweep Time" are set automatically according to the set span, and default coupling is used. Thus, the following settings are applied:

RBW = 100 * Span

VBW = RBW = 100 * Span

"Sweep Time" = T_{min} for set Span, RBW, VBW

When defining the bandwidth and filter settings, consider the impact of the individual settings on the other settings and the measurement result, as described in more detail in the following sections.

 Separating Signals by Selecting an Appropriate Resolution 	Bandwidth392
Smoothing the Trace Using the Video Bandwidth	392
Coupling VBW and RBW	393
Coupling Span and RBW	
How Data is Measured: the Sweep Type	
Which Data May Pass: Filter Types	
How Long the Data is Measured: Sweep Time	
How Much Data is Measured: Sweep Points and Sweep C	
How Often Data is Measured: Sweep Mode	

Bandwidth, Filter and Sweep Configuration

7.6.1.1 Separating Signals by Selecting an Appropriate Resolution Bandwidth

The resolution bandwidth defines the 3 dB bandwidth of the resolution filter to be used. An RF sinusoidal signal is displayed according to the passband characteristic of the resolution filter (RBW), i.e. the signal display reflects the shape of the filter.

A basic feature of a signal analyzer is being able to separate the spectral components of a mixture of signals. The resolution at which the individual components can be separated is determined by the resolution bandwidth. Selecting a resolution bandwidth that is too large may make it impossible to distinguish between spectral components, i.e. they are displayed as a single component. Smaller resolution bandwidths, however, increase the required "Sweep Time".

Two signals with the same amplitude can be resolved if the resolution bandwidth is smaller than or equal to the frequency spacing of the signal. If the resolution bandwidth is equal to the frequency spacing, the spectrum display screen shows a level drop of 3 dB precisely in the center of the two signals. Decreasing the resolution bandwidth makes the level drop larger, which thus makes the individual signals clearer.

The highest sensitivity is obtained at the smallest bandwidth (1 Hz). If the bandwidth is increased, the reduction in sensitivity is proportional to the change in bandwidth. Increasing the bandwidth by a factor of 3 increases the displayed noise by approx. 5 dB (4.77 dB precisely). If the bandwidth is increased by a factor of 10, the displayed noise increases by a factor of 10, i.e. 10 dB.

If there are large level differences between signals, the resolution is determined by selectivity as well as by the resolution bandwidth that has been selected. The measure of selectivity used for signal analyzers is the ratio of the 60 dB bandwidth to the 3 dB bandwidth (= shape factor).

For the R&S FPL1000, the shape factor for bandwidths is < 5, i.e. the 60 dB bandwidth of the 30 kHz filter is < 150 kHz.

The higher spectral resolution with smaller bandwidths is won by longer "Sweep Time" s for the same span. The "Sweep Time" has to allow the resolution filters to settle during a sweep at all signal levels and frequencies to be displayed.

If the RBW is too large, signal parts that are very far away (e.g. from a different signal) are considered in the measurement and distort the results. The noise increases.

If the RBW is too small, parts of the signal are lost. As the displayed signal always reflects the shape of the filter, select a bandwidth large enough so the displayed signal reflects the entire shape of the filter.

7.6.1.2 Smoothing the Trace Using the Video Bandwidth

The video filters are responsible for smoothing the displayed trace. Using video bandwidths that are small compared to the resolution bandwidth, only the signal average is displayed and noise peaks and pulsed signals are repressed. If pulsed signals are to be measured, it is advisable to use a video bandwidth that is large compared to the resolution bandwidth (VBW = $10 \times RBW$) for the amplitudes of pulses to be measured correctly.

Bandwidth, Filter and Sweep Configuration

The level of a sine wave signal is not influenced by the video bandwidth. A sine wave signal can therefore be freed from noise by using a video bandwidth that is small compared with the resolution bandwidth, and thus be measured more accurately.



RMS/Average detector and VBW

If an RMS or average detector is used, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS or average detector no longer occurs. However, the VBW is still considered when calculating the "Sweep Time". This leads to a longer "Sweep Time" for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS or average detector. Normally, if the RMS or average detector is used the "Sweep Time" should be increased to get more stable traces.

7.6.1.3 Coupling VBW and RBW

The video bandwidth can be coupled to the resolution bandwidth automatically. In this case, if the resolution bandwidth is changed, the video bandwidth is automatically adjusted.

Coupling is recommended if a minimum "Sweep Time" is required for a selected resolution bandwidth. Narrow video bandwidths require longer "Sweep Time" s due to the longer settling time. Wide bandwidths reduce the signal/noise ratio.

Table 7-16: Overview of RBW/VBW ratios and recommendations for use

Ratio RBW/VBW	Recommendation for use
1/1	Recommended for sinusoidal signals This is the default setting for automatic coupling.
0.1	Recommended when the amplitudes of pulsed signals are to be measured correctly. The IF filter is exclusively responsible for the pulse shape. No additional evaluation is performed by the video filter.
10	Recommended to suppress noise and pulsed signals in the video domain.
Manually set (0.001 to 1000)	Recommended for other measurement requirements

7.6.1.4 Coupling Span and RBW

The resolution bandwidth can be coupled to the span setting, either by a manually defined factor or automatically. If the span is changed, the resolution bandwidth is automatically adjusted. The automatic coupling adapts the resolution bandwidth to the currently set frequency span/100.

With a span/RBW ratio of 100 and a screen resolution of 1000 pixels, each frequency in the spectrum is displayed by 10 pixels. A span/RBW ratio of 1000 provides the highest resolution.

A higher span/RBW ratio (i.e. low RBW values and large frequency spans), however, results in large amounts of data.

Bandwidth, Filter and Sweep Configuration

7.6.1.5 How Data is Measured: the Sweep Type

In a standard analog **frequency sweep**, the local oscillator of the analyzer sweeps the applied signal quasi analog from the start to the stop frequency to determine the frequency spectrum.

Alternatively, the analyzer can sample signal levels over time at a defined frequency and transform the data to a spectrum by Fast Fourier Transformation (**FFT**). Although this measurement method requires additional calculations, it can provide results much faster than the frequency sweep, in particular for small RBWs.

Which sweep mode is appropriate for the current measurement depends on the span, RBW, VBW and "Sweep Time" settings. The R&S FPL1000 automatically selects the appropriate sweep type. For RBWs lower than 100 kHz and for gated measurements, an FFT is performed, otherwise a sweep is performed.

Optimization

In FFT mode, FFT analysis is performed to determine a spectrum of frequencies. Several analysis steps are required to cover the entire span. The partial span which is covered by one FFT analysis depends on the RBW. The partial span cannot be defined directly, but it can be optimized according to measurement requirements.

Narrow partial spans provide a higher dynamic range, and also allow you to perform measurements near a carrier with a reduced reference level. With a wide partial span, the carrier and the useful signal are likely to be measured at the same time, in which case the powers of both signals are summarized, so the reference level must be high enough to consider this factor. With a narrow partial span, this is less likely to happen, so the reference level can be reduced.

For an optimal dynamic range, the narrowest possible partial span (depending on the RBW) is used. Furthermore, the autorange function for the internal IF gain calculation is activated to obtain the best control range of the A/D converter.

On the other hand, the narrower the partial span, the more steps are required to cover the entire span, thus increasing analysis and calculation time. To **optimize the sweep rate**, the widest possible partial span (depending on the RBW) is used.



For an optimal sweep rate, it is recommended that you set the "Sweep Time" to "Auto", as well.

For general purpose measurements, an "Auto" mode is available, which provides a **compromise between a large dynamic range and a fast sweep**. In this case, a medium-sized partial span is used.

Optimization for zero span sweeps

For normal sweeps in the time domain (zero span), the optimization mode determines the selection of the A/D converter prefilter, which depends on the RBW.

In "Dynamic" mode, the narrowest possible prefilter is used.

In "Speed" mode, the widest possible prefilter is used.

In "Auto" mode, a medium-sized prefilter is used.

7.6.1.6 Which Data May Pass: Filter Types

While the filter is irrelevant when measuring individual narrowband signals (as long as the signal remains within the RBW), the measurement result for broadband signals is very dependant on the selected filter type and its shape. If the filter is too narrow, the signal is distorted by the filter. If the filter is too wide, multiple signals can no longer be distinguished. Generally, the smaller the filter width and the steeper its edges, the longer the settling time and thus the longer the "Sweep Time" must be.

All resolution bandwidths are realized with digital filters. Normal (3dB) Gaussian filters are set by default. Some communication standards require different filters.

For a list of available filter types, see Chapter 7.6.3, "Reference: List of Available RRC and Channel Filters", on page 404.

Normal (3 dB) Gaussian filters

Gaussian filters provide a good compromise between steep edges and a short settling time. This filter is suitable for most measurement tasks and is used by default.

The available Gaussian (3 dB) filters are listed in the R&S FPL1000 data sheet.

Channel filters

Channel filters are fairly steep but require a long settling time; they are useful for pulse measurements in the time domain.

7.6.1.7 How Long the Data is Measured: Sweep Time

Each filter has a settling time that must be awaited in order to obtain correct results. Since the resolution bandwidth and video bandwidth define the filter, the smaller of the two determines the minimum "Sweep Time" required for the measurement. Allowed values depend on the ratio of span to RBW and RBW to VBW.

If the selected "Sweep Time" is too short for the selected bandwidth and span, level measurement errors will occur. In this case, the R&S FPL1000 displays the error message "Sweep time too low" and marks the indicated "Sweep Time" with a red bullet. Furthermore, a status bit indicates an error.

(For more information see "STATus:QUEStionable:TIMe Register" on page 197.)

The "Sweep Time" can be coupled to the span (not zero span), video bandwidth (VBW) and resolution bandwidth (RBW) automatically. If the span, resolution bandwidth or video bandwidth is changed, the "Sweep Time" is automatically adjusted.



Note that the "Sweep Time" only indicates how long data is captured; the time required to process the captured data may be considerably longer, in particular for FFT mode. For FFT mode, an estimated duration is indicated behind the "Sweep Time" in the channel bar (for RF measurements only).

7.6.1.8 How Much Data is Measured: Sweep Points and Sweep Count

By default, 1001 data points are determined in a single sweep. During the next sweep, 1001 new data points are collected, and so on. The number of **sweep points** defines how much of the entire span is covered by a single data point. By increasing the number of sweep points you can increase the reliability of the individual data points and thus the accuracy of the analyzed results. However, these data points are all stored on the instrument, occupying a large amount of memory, and each sweep point increases the overall measurement time.

The number of sweeps to be performed in single sweep mode is defined by the "Sweep Count". Values from 0 to 200000 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the "Sweep/ Average Count" also determines the number of averaging or maximum search procedures (see "Analyzing Several Traces - Trace Mode" on page 463).

For details on how the number of sweep points and the sweep count affect the trace results on the screen, see "Mapping Samples to sweep Points with the Trace Detector" on page 460.

7.6.1.9 How Often Data is Measured: Sweep Mode

How often the spectrum is swept depends on the sweep mode. Either a certain number of sweeps can be defined ("Sweep Count") which are performed in "Single Sweep" mode, or the sweep is repeated continuously ("Continuous Sweep" mode).

By default, the data is collected for the specified number of sweeps and the corresponding trace is displayed. When the next sweep is started, the previous trace is deleted.

However, the data from a single sweep run can also be retained and displayed together with the new data ("Continue Single Sweep" mode). This is particularly of interest when using the trace configurations "Average" or "Max Hold" to take previously recorded measurements into account for averaging/maximum search (see "Analyzing Several Traces - Trace Mode" on page 463).

7.6.2 Bandwidth, Filter and Sweep Settings

Access: "Overview" > "Bandwidth"

The remote commands required to define these settings are described in Chapter 8.8.2, "Configuring Bandwidth and Sweep Settings", on page 657.

How to perform a basic sweep measurement is described in Chapter 7.2.1.2, "How to Perform a Basic Sweep Measurement", on page 236.

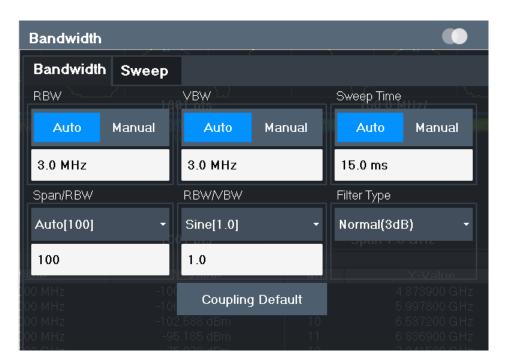


Figure 7-35: Bandwidth dialog box for RF measurements

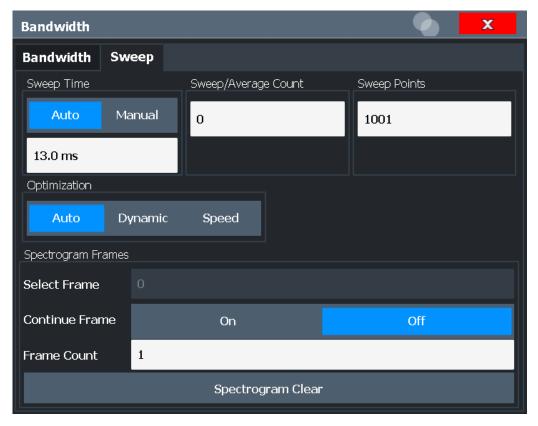


Figure 7-36: Sweep dialog box for spectrogram display

RBW	398
VBW	398
Sweep Time	399
Span/RBW	
RBW/VBW	
Filter Type	400
Default Coupling	400
Sweep/Average Count	400
Sweep Points	401
Optimization	401
Sweep Type	402
Single Sweep / Run Single	402
Continuous Sweep / Run Cont	402
Continue Single Sweep	403
Spectrogram Frames	403
L Select Frame	403
L Continue Frame	403
L Frame Count	404
L Clear Spectrogram	404

RBW

Defines the resolution bandwidth. The available resolution bandwidths are specified in the data sheet. Numeric input is always rounded to the nearest possible bandwidth.

If "Auto" is selected, the resolution bandwidth is coupled to the selected span (for span > 0). If the span is changed, the resolution bandwidth is automatically adjusted.

If the resolution bandwidth is defined manually, a green bullet is displayed next to the "RBW" display in the channel bar.

For more information see Chapter 7.6.1.1, "Separating Signals by Selecting an Appropriate Resolution Bandwidth", on page 392.

For measurements on I/Q data in the frequency domain, the maximum RBW is 1 MHz.

Remote command:

```
[SENSe:]BANDwidth[:RESolution] on page 657
[SENSe:]BANDwidth[:RESolution]:AUTO on page 658
```

VBW

Defines the video bandwidth automatically or manually.

For more information see Chapter 7.6.1.2, "Smoothing the Trace Using the Video Bandwidth", on page 392.

"Auto" The video bandwidth is coupled to the resolution bandwidth. If the

resolution bandwidth is changed, the video bandwidth is automatically

adjusted.

"Manual" For manual mode, define the bandwidth value. The available video

bandwidths are specified in the data sheet. Numeric input is always

rounded to the nearest possible bandwidth.

If the video bandwidth is defined manually, a green bullet is displayed

next to the "VBW" display in the channel bar.

Remote command:

[SENSe:]BANDwidth:VIDeo:AUTO on page 659 [SENSe:]BANDwidth:VIDeo on page 659

Sweep Time

Defines the duration of a single sweep, during which the defined number of sweep points are measured. The "Sweep Time" can be defined automatically or manually.

The allowed "Sweep Time" s depend on the device model; refer to the data sheet.

For more information see Chapter 7.6.1.7, "How Long the Data is Measured: Sweep Time ", on page 395.

Note: The "Sweep Time" only indicates how long data is captured; the time required to process the captured data may be considerably longer, in particular for FFT mode. For FFT mode, an estimated duration is indicated behind the "Sweep Time" in the channel bar (for RF measurements only).

"Auto" The "Sweep Time" is coupled to the span (not zero span), video

bandwidth (VBW) and resolution bandwidth (RBW). If the span, resolution bandwidth or video bandwidth is changed, the "Sweep Time" is

automatically adjusted.

"Manual" For manual mode, define the "Sweep Time" . Allowed values depend

on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet. Numeric input is always rounded to the nearest possible

"Sweep Time".

Remote command:

[SENSe:]SWEep:TIME:AUTO on page 663 [SENSe:]SWEep:TIME on page 663 [SENSe:]SWEep:DURation? on page 661

Span/RBW

Sets the coupling ratio if RBW is set to auto mode.

For more information see Chapter 7.6.1.4, "Coupling Span and RBW", on page 393.

"Auto[100]" "Resolution Bandwidth" = "Span/100"

This coupling ratio is the default setting of the R&S FPL1000.

"Manual" The coupling ratio is defined manually.

The span/resolution bandwidth ratio can be set in the range from 1 to

10000.

Remote command:

[SENSe:]BANDwidth[:RESolution]:RATio on page 658

RBW/VBW

Sets the coupling ratio between the resolution bandwidth and the video bandwidth.

This setting is only effective if VBW is set to auto mode.

For more information see Chapter 7.6.1.3, "Coupling VBW and RBW", on page 393.

"Sine[1/1]" "Video Bandwidth" = "Resolution Bandwidth"

This is the default setting for the coupling ratio RBW/VBW and is rec-

ommended if sinusoidal signals are to be measured.

"Pulse[0.1]" "Video Bandwidth" = 10 x "Resolution Bandwidth"

or

"Video Bandwidth" = "10 MHz" (= max. VBW)

Recommended for pulse signals

"Noise[10]" "Video Bandwidth" = "Resolution Bandwidth/10"

Recommended for noise measurements

"Manual" The coupling ratio is defined manually.

The RBW/VBW ratio can be set in the range of 0.001 to 1000.

Remote command:

```
[SENSe:]BANDwidth:VIDeo:AUTO on page 659 [SENSe:]BANDwidth:VIDeo:RATio on page 659
```

Filter Type

Defines the filter type.

The following filter types are available:

- Normal (3dB)
- Channel

For more information see Chapter 7.6.1.6, "Which Data May Pass: Filter Types", on page 395.

Remote command:

```
[SENSe:]BANDwidth[:RESolution]:TYPE on page 658
```

Default Coupling

Sets all coupled functions to the default state ("Auto"). In addition, the ratio "RBW/VBW" is set to "Sine[1/1]" and the ratio "Span/RBW" to 100.

For more information see Chapter 7.6.1.3, "Coupling VBW and RBW", on page 393.

Remote command:

```
[SENSe:]BANDwidth[:RESolution]:AUTO on page 658
[SENSe:]BANDwidth:VIDeo:AUTO on page 659
[SENSe:]SWEep:TIME:AUTO on page 663
```

Sweep/Average Count

Defines the number of sweeps to be performed in the single sweep mode. Values from 0 to 200000 are allowed. If the values 0 or 1 are set, one sweep is performed.

The sweep count is applied to all the traces in all diagrams.

If the trace modes "Average", "Max Hold" or "Min Hold" are set, this value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if "Sweep Count" = 0 (default), averaging is performed over 10 sweeps. For "Sweep Count" =1, no averaging, maxhold or minhold operations are performed.

For more information, see Chapter 7.6.1.8, "How Much Data is Measured: Sweep Points and Sweep Count", on page 396.

For spectrogram displays, the sweep count determines how many sweeps are combined in one frame in the spectrogram; that is: how many sweeps the R&S FPL1000 performs to plot one trace in the spectrogram result display. For more details, see "Time Frames" on page 473.

Remote command:

[SENSe:]SWEep:COUNt on page 660 [SENSe:]AVERage<n>:COUNt on page 695

Sweep Points

Defines the number of measured values to be collected during one sweep.

For details see Chapter 7.6.1.8, "How Much Data is Measured: Sweep Points and Sweep Count", on page 396.

All values from 101 to 100001 can be set. The default value is 1001 sweep points.

Remote command:

[SENSe:] SWEep:POINts on page 662

Optimization

In FFT mode, several FFT analysis steps are required to cover the entire measurement span. The span which is covered by one FFT analysis step is called *partial span*. The partial span cannot be defined directly, but it can be optimized according to measurement requirements.

Table 7-17: Optimization parameters in FFT mode

Optimization mode	Description
Dynamic	Optimizes the dynamic range by using the narrowest possible partial span (depending on the RBW).
	The autorange function for the internal IF gain calculation is activated to obtain the best control range for the A/D converter.
Speed	Optimizes the sweep rate by using the widest possible partial span (depending on the RBW).
	The autorange function for the internal IF gain calculation is deactivated. (Note: set the reference level accordingly to optimize the control range for the A/D converter).
	It is recommended that you set the Sweep Time to "Auto" to optimize the sweep rate.
Auto	Uses a medium-sized partial span to obtain a compromise between a large dynamic range and a fast sweep rate.
	The autorange function for the internal IF gain calculation is deactivated. (Note: set the reference level accordingly to optimize the control range for the A/D converter).

Zero span mode

For zero span measurements, the optimization mode defines the selection of the A/D converter prefilter.

Table 7-18: Optimization parameters in zero span mode

Optimization mode	Description
Dynamic	The narrowest filter possible (depending on the RBW) is used.
Speed	The widest filter possible (depending on the RBW) is used.
Auto	A medium-sized prefilter is used.

Remote command:

[SENSe:] SWEep:OPTimize on page 661

Sweep Type

The R&S FPL1000 automatically sets the optimal sweep type for the current measurement (sweep or FFT). The sweep type cannot be defined manually.

Single Sweep / Run Single

After triggering, starts the number of sweeps set in "Sweep Count". The measurement stops after the defined number of sweeps has been performed.

While the measurement is running, the "Single Sweep" softkey and the [RUN SINGLE] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Note: Sequencer. If the Sequencer is active, the "Single Sweep" softkey only controls the sweep mode for the currently selected channel setup. However, the sweep mode only takes effect the next time the Sequencer activates that channel setup, and only for a channel-defined sequence. In this case, the Sequencer sweeps a channel setup in single sweep mode only once.

Furthermore, the [RUN SINGLE] key controls the Sequencer, not individual sweeps. [RUN SINGLE] starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed channel setup is updated.

For details on the Sequencer, see Chapter 5.4.1, "The Sequencer Concept", on page 87.

Remote command:

INITiate<n>[:IMMediate] on page 543

Continuous Sweep / Run Cont

After triggering, starts the sweep and repeats it continuously until stopped. This is the default setting.

While the measurement is running, the "Continuous Sweep" softkey and the [RUN CONT] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

Note: Sequencer. If the Sequencer is active, the "Continuous Sweep" softkey only controls the sweep mode for the currently selected channel setup. However, the sweep mode only takes effect the next time the Sequencer activates that channel setup, and only for a channel-defined sequence. In this case, a channel setup in continuous sweep mode is swept repeatedly.

Furthermore, the [RUN CONT] key controls the Sequencer, not individual sweeps. [RUN CONT] starts the Sequencer in continuous mode.

For details on the Sequencer, see Chapter 5.4.1, "The Sequencer Concept", on page 87.

Remote command:

INITiate<n>:CONTinuous on page 543

Continue Single Sweep

After triggering, repeats the number of sweeps set in "Sweep Count", without deleting the trace of the last measurement.

While the measurement is running, the "Continue Single Sweep" softkey and the [RUN SINGLE] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Remote command:

INITiate<n>:CONMeas on page 542

Spectrogram Frames

These settings are only available if spectrogram display is active.

For more information see Chapter 7.10.2.3, "How to Display and Configure a Spectrogram", on page 484.

Select Frame ← Spectrogram Frames

Selects a specific frame, loads the corresponding trace from the memory, and displays it in the Spectrum window.

Note that activating a marker or changing the position of the active marker automatically selects the frame that belongs to that marker.

This function is only available in single sweep mode or if the sweep is stopped, and only if a spectrogram is selected.

The most recent frame is number 0, all previous frames have a negative number.

For more details see "Time Frames" on page 473.

Remote command:

CALCulate<n>:SPECtrogram:FRAMe:SELect on page 700

Continue Frame ← Spectrogram Frames

Determines whether the results of the previous sweeps are included in the analysis of the next sweeps for trace modes "Max Hold", "Min Hold", and "Average".

This function is available in single sweep mode only.

• On

When the average or peak values are determined for the new sweep, the results of the previous sweeps in the spectrogram are also taken into account.

Off

The average or peak values are determined from the results of the newly swept frames only.

Remote command:

CALCulate<n>:SPECtrogram:CONTinuous on page 699

Frame Count ← Spectrogram Frames

Determines how many frames are plotted during a single sweep (as opposed to a continuous sweep). The maximum number of possible frames depends on the history depth (see " History Depth " on page 480).

Remote command:

CALCulate<n>:SPECtrogram:FRAMe:COUNt on page 699

Clear Spectrogram ← Spectrogram Frames

Resets the spectrogram result display and clears the history buffer.

This function is only available if a spectrogram is selected.

Remote command:

CALCulate<n>:SPECtrogram:CLEar[:IMMediate] on page 699

7.6.3 Reference: List of Available RRC and Channel Filters

For power measurement a number of especially steep-edged channel filters are available (see the following table). The indicated filter bandwidth is the 3 dB bandwidth.



The available Gaussian 3 dB sweep filters are listed in the R&S FPL1000 data sheet.

Table 7-19: Filter types

Filter Bandwidth	Filter Type	Application
100 Hz	CFILter	
200 Hz	CFILter	
300 Hz	CFILter	
500 Hz	CFILter	
1 kHz	CFILter	
1.5 kHz	CFILter	
2 kHz	CFILter	
2.4 kHz	CFILter	SSB
2.7 kHz	CFILter	
3 kHz	CFILter	
3.4 kHz	CFILter	
4 kHz	CFILter	DAB, Satellite
4.5 kHz	CFILter	
5 kHz	CFILter	
6 kHz	CFILter	

Filter Bandwidth	Filter Type	Application
8.5 kHz	CFILter	ETS300 113 (12.5 kHz channels)
9 kHz	CFILter	AM Radio
10 kHz	CFILter	
12.5 kHz	CFILter	CDMAone
14 kHz	CFILter	ETS300 113 (20 kHz channels)
15 kHz	CFILter	
16 kHz	CFILter	ETS300 113 (25 kHz channels)
20 kHz	CFILter	
21 kHz	CFILter	PDC
25 kHz	CFILter	APCO 25-P2
30 kHz	CFILter	CDPD, CDMAone
50 kHz	CFILter	
		·
100 kHz	CFILter	
150 kHz	CFILter	FM Radio
192 kHz	CFILter	PHS
200 kHz	CFILter	GSM
300 kHz	CFILter	
500 kHz	CFILter	J.83 (8-VSB DVB, USA); RF ID 14333
		·
1 MHz	CFILter	CDMAone
1.228 MHz	CFILter	CDMAone
1.5 MHz	CFILter	DAB
2 MHz	CFILter	
3 MHz	CFILter	
3.75 MHz	CFILter	
5 MHz	CFILter	
	CFILter	
	CFILter	
	CFILter	

Triggering means to capture the interesting part of the signal. Choosing the right trigger type and configuring all trigger settings correctly allows you to detect various incidents in your signals.

Gating allows you to restrict measurement analysis to the important part or parts of the signal, for example bursts.

•	Triggering	. 406
•	Gating	.414

7.7.1 Triggering

7.7.1.1 Triggered Measurements

In a basic measurement with default settings, the sweep is started immediately. However, sometimes you want the measurement to start only when a specific condition is fulfilled, for example a signal level is exceeded, or in certain time intervals. For these cases you can define a trigger for the measurement. In FFT sweep mode, the trigger defines when the data acquisition starts for the FFT conversion.

An "Offset" can be defined to delay the measurement after the trigger event, or to include data before the actual trigger event in time domain measurements (pre-trigger offset).

For complex tasks, advanced trigger settings are available:

- Hysteresis to avoid unwanted trigger events caused by noise
- Holdoff to define exactly which trigger event will cause the trigger in a jittering signal

•	Trigger Source	406
	Trigger Offset	
	Trigger Hysteresis	
	Trigger Drop-Out Time	
	Trigger Holdoff	

Trigger Source

The trigger source defines which source must fulfill the condition that triggers the measurement. Basically, this can be:

- Time: the measurement is repeated in a regular interval
- Power: an input signal is checked for a defined power level
 The trigger signal can be any of the following:
 - The input signal at one of various stages in the signal analysis process before or after the input mixer, after the video filter etc.
 - A signal from an external device via one of the [TRIGGER INPUT / OUTPUT] connectors on the instrument

For details on the available trigger sources see "Trigger Source" on page 411.

Trigger Offset

An offset can be defined to delay the measurement after the trigger event, or to include data before the actual trigger event in time domain measurements (pre-trigger offset). Pre-trigger offsets are possible because the R&S FPL1000 captures data continuously in the time domain, even before the trigger occurs.

See "Trigger Offset" on page 412.

Trigger Hysteresis

Setting a hysteresis for the trigger helps avoid unwanted trigger events caused by noise, for example. The hysteresis is a threshold to the trigger level that the signal must fall below on a rising slope or rise above on a falling slope before another trigger event occurs.

Example:

In the following example, the second possible trigger event is ignored as the signal does not exceed the hysteresis (threshold) before it reaches the trigger level again on the rising edge. On the falling edge, however, two trigger events occur as the signal exceeds the hysteresis before it falls to the trigger level the second time.



Figure 7-37: Effects of the trigger hysteresis

See "Hysteresis" on page 413

Trigger Drop-Out Time

If a modulated signal is instable and produces occasional "drop-outs" during a burst, you can define a minimum duration that the input signal must stay below the trigger level before triggering again. This is called the "drop-out" time. Defining a dropout time helps you stabilize triggering when the analyzer is triggering on undesired events.

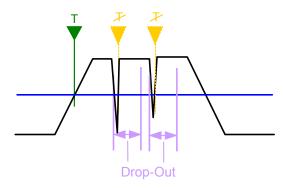


Figure 7-38: Effect of the trigger drop-out time

See "Drop-Out Time" on page 412.



Drop-out times for falling edge triggers

If a trigger is set to a falling edge ("Slope" = "Falling", see " Slope " on page 413) the measurement is to start when the power level falls below a certain level. This is useful, for example, to trigger at the end of a burst, similar to triggering on the rising edge for the beginning of a burst.

If a drop-out time is defined, the power level must remain below the trigger level at least for the duration of the drop-out time (as defined above). However, if a drop-out time is defined that is longer than the pulse width, this condition cannot be met before the final pulse, so a trigger event will not occur until the pulsed signal is over!

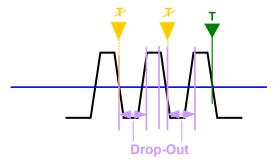


Figure 7-39: Trigger drop-out time for falling edge trigger

For gated measurements, a combination of a falling edge trigger and a drop-out time is generally not allowed.

Trigger Holdoff

The trigger holdoff defines a waiting period before the next trigger after the current one will be recognized.

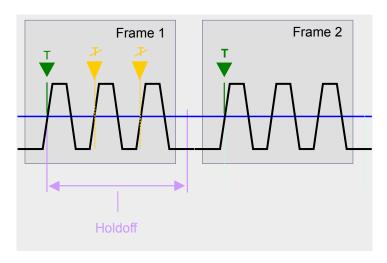


Figure 7-40: Effect of the trigger holdoff

See "Trigger Holdoff" on page 413.

7.7.1.2 Trigger Settings

Access: "Overview" > "Trigger/Gate"



External triggers from one of the [TRIGGER INPUT / OUTPUT] connectors on the R&S FPL1000 are configured in a separate tab of the dialog box.

For step-by-step instructions on configuring triggered measurements, see Chapter 7.7.1.4, "How to Configure a Triggered Measurement", on page 414.

Preview	410
L Frequency	
L RBW	
L Sweep Time	
Trigger Source	

L Free Run	411
L External Trigger 1	411
L Video	
L IF Power	411
L Time	412
Trigger Level	
Repetition Interval	412
Drop-Out Time	412
Trigger Offset	412
Hysteresis	413
Trigger Holdoff	
Sinne	413

Preview

The preview mode allows you to try out trigger settings before actually applying them to the current measurement.

The preview diagram displays a zero span measurement at the center frequency with the defined RBW and sweep time. This is useful to analyze bursts, for example, to determine the required gate settings.

The trigger settings are applied to the measurement when the dialog box is closed.

Note: The zero span settings refer only to the preview diagram. The main diagram remains unchanged.

If preview mode is switched off, any changes to the settings in this dialog box are applied to the measurement diagram directly. In this case, the zero span settings for the preview diagram are not displayed.

For information on the zero span settings see:

- "Center Frequency" on page 379
- "RBW" on page 398
- "Sweep Time" on page 399

Frequency ← Preview

Defines the center frequency.

Remote command:

[SENSe:] FREQuency: CENTer on page 649

RBW ← **Preview**

Defines the bandwidth value. The available resolution bandwidths are specified in the data sheet. Numeric input is always rounded to the nearest possible bandwidth.

Remote command:

[SENSe:]BANDwidth[:RESolution] on page 657

Sweep Time ← Preview

Defines the sweep time. Allowed values depend on the ratio of span to RBW and RBW to VBW. For details refer to the data sheet. Numeric input is always rounded to the nearest possible sweep time.

Remote command:

[SENSe:] SWEep:TIME on page 663

Trigger Source

Selects the trigger source. If a trigger source other than "Free Run" is set, "TRG" is displayed in the channel bar and the trigger source is indicated.

For gated measurements, this setting also selects the gating source.

For more information see "Trigger Source" on page 406.

Remote command:

```
TRIGger[:SEQuence]:SOURce on page 672
[SENSe:]SWEep:EGATe:SOURce on page 675
```

Free Run ← Trigger Source

No trigger source is considered. Data acquisition is started manually or automatically and continues until stopped explicitly.

In the Spectrum application, this is the default setting.

Remote command:

```
TRIG:SOUR IMM, see TRIGger[:SEQuence]:SOURce on page 672
```

External Trigger 1 ← Trigger Source

Data acquisition starts when the TTL signal fed into the trigger input connector of the R&S FPL1000 meets or exceeds the specified trigger level.

```
(See "Trigger Level" on page 412).
```

Remote command:

```
TRIG:SOUR EXT, TRIG:SOUR EXT2

See TRIGger[:SEQuence]:SOURce on page 672
```

SWE:EGAT:SOUR EXT for gated triggering, see [SENSe:]SWEep:EGATe:SOURce on page 675

Video ← Trigger Source

Defines triggering by the video signal, i.e. the filtered and detected version of the input signal (the envelope of the IF signal), as displayed on the screen.

Define a trigger level from 0 % to 100 % of the diagram height. The absolute trigger level is indicated by a horizontal trigger line in the diagram, which you can also move graphically to change the trigger level.

Video mode is only available in the time domain, and not for I/Q-based data.

Remote command:

```
TRIG:SOUR VID, see TRIGger[:SEQuence]:SOURce on page 672
```

IF Power ← **Trigger Source**

The R&S FPL1000 starts capturing data as soon as the trigger level is exceeded around the third intermediate frequency.

For frequency sweeps, the third IF represents the start frequency. The trigger bandwidth at the third IF depends on the RBW and sweep type.

This trigger source is only available for RF input.

The available trigger levels depend on the RF attenuation and preamplification. A reference level offset, if defined, is also considered.

For details on available trigger levels and trigger bandwidths, see the data sheet.

Note: Be aware that in auto sweep type mode, due to a possible change in sweep types, the trigger bandwidth can vary considerably for the same RBW setting.

Remote command:

```
TRIG:SOUR IFP, see TRIGger[:SEQuence]:SOURce on page 672

SWE:EGAT:SOUR IFP for gated triggering, see [SENSe:]SWEep:EGATe:SOURce on page 675
```

Time ← **Trigger Source**

Triggers in a specified repetition interval.

Remote command:

```
TRIG:SOUR TIME, see TRIGger[:SEQuence]:SOURce on page 672
```

Trigger Level

Defines the trigger level for the specified trigger source.

For gated measurements, this setting also defines the gate level.

For details on supported trigger levels, see the data sheet.

Remote command:

```
TRIGger[:SEQuence]:LEVel:IFPower on page 671
TRIGger[:SEQuence]:LEVel:IQPower on page 672
TRIGger[:SEQuence]:LEVel[:EXTernal<port>] on page 671
```

Repetition Interval

Defines the repetition interval for a time trigger. The shortest interval is 2 ms.

The repetition interval should be set to the exact pulse period, burst length, frame length or other repetitive signal characteristic.

Remote command:

```
TRIGger[:SEQuence]:TIME:RINTerval on page 673
```

Drop-Out Time

Defines the time the input signal must stay below the trigger level before triggering again.

For more information on the drop-out time, see "Trigger Drop-Out Time" on page 407.

Remote command:

```
TRIGger[:SEQuence]:DTIMe on page 670
```

Trigger Offset

Defines the time offset between the trigger event and the start of the sweep.

For more information, see "Trigger Offset" on page 407.

Offset > 0:	Start of the sweep is delayed
Offset < 0:	Sweep starts earlier (pretrigger)
	Only possible for zero span (e.g. I/Q Analyzer application) and gated trigger switched off
	Maximum allowed range limited by the sweep time:
	Pretrigger _{max} = sweep time _{max}

For the "Time" trigger source, this function is not available.

Remote command:

TRIGger[:SEQuence]:HOLDoff[:TIME] on page 670

Hysteresis

Defines the distance in dB to the trigger level that the trigger source must exceed before a trigger event occurs. Setting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level.

This setting is only available for "IF Power" trigger sources. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

For more information, see "Trigger Hysteresis" on page 407.

Remote command:

TRIGger[:SEQuence]:IFPower:HYSTeresis on page 671

Trigger Holdoff

Defines the minimum time (in seconds) that must pass between two trigger events. Trigger events that occur during the holdoff time are ignored.

For more information, see "Trigger Holdoff" on page 408.

Remote command:

```
TRIGger[:SEQuence]:IFPower:HOLDoff on page 670
```

Slope

For all trigger sources except time, you can define whether triggering occurs when the signal rises to the trigger level or falls down to it.

For gated measurements in "Edge" mode, the slope also defines whether the gate starts on a falling or rising edge.

Remote command:

```
TRIGger[:SEQuence]:SLOPe on page 672
[SENSe:]SWEep:EGATe:POLarity on page 675
```

7.7.1.3 How to Determine the Required Trigger/Gate Parameters

- In the "Trigger And Gate" dialog box, switch on "Show Preview".
 A zero span measurement for the currently defined center frequency is displayed.
- 2. Set the "Frequency", "RBW" and "Sweep Time" such that the relevant part of the signal is displayed, for example a complete burst.
- 3. Determine the parameters you want to use to define the trigger and gate conditions from the preview diagram, for example:
 - the length of a burst or slot
 - the upper or lower power level of a pulse
 - the maximum noise level
 - the power level or time at which a certain incident occurs

- 4. Try out different trigger and gate settings as described in How to Configure a Triggered Measurement and How to Configure a Gated Measurement, then select "Update Main Diagram" to see the effect of the current settings on the main measurement in the background.
- 5. If the results are as expected, close the dialog box to keep the changes permanently. Otherwise, correct the settings as necessary.

7.7.1.4 How to Configure a Triggered Measurement

To define a time trigger:

- 1. In the "Trigger And Gate" dialog box, define the "Trigger Source" = "Time".
- 2. Define the "Repetition Interval": the time after which a new measurement is started.

To define an external trigger:

- Connect an external device that will provide the trigger signal to one of the TRIG-GER INPUT / OUTPUT connectors on the R&S FPL1000 (for details see the R&S FPL1000 "Getting Started" manual).
- 2. In the "Trigger And Gate" dialog box, define the "Trigger Source" = "External".
- 3. Configure the external trigger as described for the other power triggers.

To define a power trigger:

- 1. In the "Trigger And Gate" dialog box, define the "Trigger Source" = "IF Power".
- 2. Define the "Trigger Level": the power level at which the measurement will start.
- 3. Define whether the signal must cross the trigger level on a falling or on a rising edge ("Slope") to trigger the measurement.
- 4. To start the measurement with a time delay, define a "Trigger Offset" .
- To reject triggers due to noise or jittering in the signal, define a "Hysteresis" that is larger than the expected noise or jittering. After the previous trigger, the signal must exceed this threshold before the next level crossing triggers a new measurement.
- 6. To skip multiple triggers in a burst, define a "Holdoff" time that must pass between two triggers. The holdoff time should be slightly larger than the burst.

7.7.2 Gating

•	Gated Measurements	415
•	Gate Settings	417
•	How to Configure a Gated Measurement	418

7.7.2.1 Gated Measurements

Like a gate provides an opening in a fence, a gated measurement lets data from the input signal pass in defined areas only. The *gate* controls exactly when data is included in the measurement results and when not. The gate is opened by the trigger source, which is also the gate source. Gates can be used in two different modes:

- Level: The gate opens and the measurement starts when a defined level in the gate source is exceeded and stops when the gate source drops below the "Gate Level".
 - Using a pulsed gate signal in level mode, the following behavior can be achieved: When the gate source signal is active, the input signal data is collected; when the gate signal is inactive, the input signal is ignored.
- **Edge**: The gate opens and the measurement starts when a defined level in the gate source is exceeded and stops when the defined "Gate Length" is reached.

Additionally, a delay time can be defined so that the first few measurement points after the gate opening are ignored.

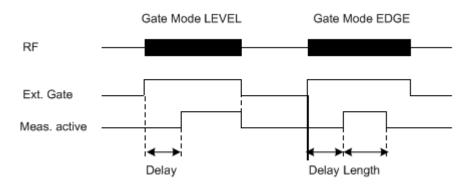


Figure 7-41: Effects of Gate mode, Gate delay and Gate length

Example:

By using a gate in sweep mode and stopping the measurement while the gate signal is inactive, the spectrum for pulsed RF carriers can be displayed without the superposition of frequency components generated during switching. Similarly, the spectrum can also be analyzed for an inactive carrier. The sweep can be controlled by an external gate or by the internal power trigger.

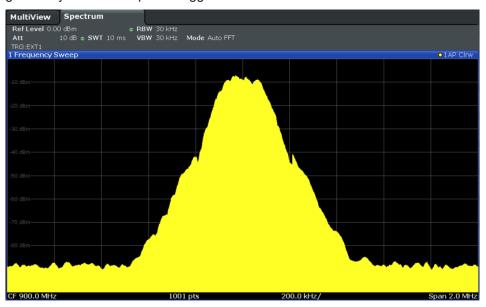


Figure 7-42: GSM signal with GATE OFF

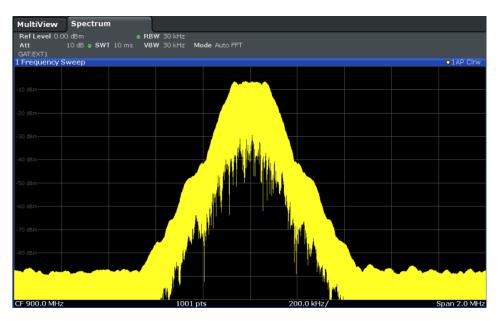


Figure 7-43: GSM signal with GATE ON

Gated sweep operation is also possible for zero span measurements. This allows you to display level variations of individual slots, for instance in burst signals, versus time.

To indicate that a gate is used for the sweep, "GAT" and the gate source is displayed in the channel bar.

7.7.2.2 Gate Settings

Gate settings define one or more extracts of the signal to be measured.



Gating is not available for measurements on I/Q-based data.

Gated Trigger	417
Gate Mode	
Gate Delay	417
Gate Length	418

Gated Trigger

Switches gated triggering on or off.

If the gate is switched on, a gate signal applied to one of the [TRIGGER INPUT] connectors or the internal IF power detector controls the sweep.

Remote command:

[SENSe:] SWEep:EGATe on page 674

Gate Mode

Sets the gate mode.

For more information see Chapter 7.7.2.1, "Gated Measurements", on page 415

"Edge" The trigger event for the gate to open is the detection of the signal

edge.

After the gate signal has been detected, the gate remains open until

the gate length is over.

"Level" The trigger event for the gate to open is a particular power level.

After the gate signal has been detected, the gate remains open until

the signal disappears.

Note: If you perform gated measurements in combination with the IF Power trigger, the R&S FPL1000 ignores the holding time for frequency sweep, FFT sweep, zero span and I/Q mode measurements.

Remote command:

[SENSe:]SWEep:EGATe:TYPE on page 675

Gate Delay

Defines the delay time between the gate signal and the continuation of the measurement.

The delay position on the time axis in relation to the sweep is indicated by a line labeled "GD".

For more information see Chapter 7.7.2.1, "Gated Measurements", on page 415

Adjusting Settings Automatically

Remote command:

[SENSe:] SWEep:EGATe:HOLDoff on page 674

Gate Length

Defines how long the gate is open when it is triggered. The gate length can only be set in the edge-triggered gate mode. In the level-triggered mode the gate length depends on the level of the gate signal.

The gate length in relation to the sweep is indicated by a line labeled "GL".

For more information see Chapter 7.7.2.1, "Gated Measurements", on page 415

Remote command:

[SENSe:] SWEep:EGATe:LENGth on page 674

7.7.2.3 How to Configure a Gated Measurement

A gated measurement records data only while the gate conditions are fulfilled. These step-by-step instructions demonstrate how to configure a gated measurement manually.


To configure a common gated measurement

- Determine the required parameters as described in Chapter 7.7.1.3, "How to Determine the Required Trigger/Gate Parameters", on page 413.
- The gate is opened by a trigger event, which must be based on a power source.
 Define the trigger as described in Chapter 7.7.1.4, "How to Configure a Triggered Measurement", on page 414. As the "Trigger Source", use "IF Power", "Video" or "External".
- 3. Define how long the gate is to remain open:
 - To measure the signal as long as the trigger level is exceeded, for example for one or more pulses, define "Gate Mode" = "Level".
 - To measure the signal for a certain time after a level is exceeded, for example during a burst:
 - a) Define "Gate Mode" = "Edge".
 - b) Define the time to measure for each gate: "Gate Length".
- 4. To open the gate with a time delay, for example to ignore an overshoot, define a "Gate Delay".
- 5. Select "Gated Trigger" = "On".

7.8 Adjusting Settings Automatically

Access: "Overview" > "Amplitude" / "Frequency" > "Auto Settings"

Adjusting Settings Automatically

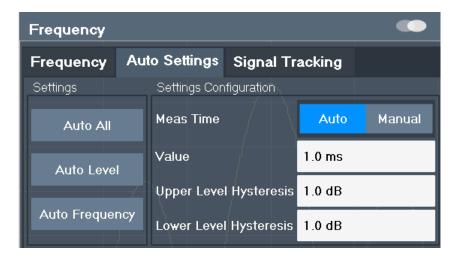

Some settings can be adjusted by the R&S FPL1000 automatically according to the current measurement settings. In order to do so, a measurement is performed. The duration of this measurement can be defined automatically or manually.



Adjusting settings automatically during triggered measurements

When you select an auto adjust function a measurement is performed to determine the optimal settings. If you select an auto adjust function for a triggered measurement, you are asked how the R&S FPL1000 should behave:

- (default:) The measurement for adjustment waits for the next trigger
- The measurement for adjustment is performed without waiting for a trigger.
 The trigger source is temporarily set to "Free Run". After the measurement is completed, the original trigger source is restored. The trigger level is adjusted as follows:
 - For IF Power and RF Power triggers:
 Trigger Level = Reference Level 15 dB
 - For Video trigger:Trigger Level = 85 %

Remote command:

[SENSe:] ADJust:CONFigure:TRIGger on page 654

Adjusting all Determinable Settings Automatically (Auto All)	419
Adjusting the Center Frequency Automatically (Auto Frequency)	
Setting the Reference Level Automatically (Auto Level)	420
Resetting the Automatic Measurement Time (Meastime Auto)	420
Changing the Automatic Measurement Time (Meastime Manual)	420
Upper Level Hysteresis	421
Lower Level Hysteresis	421

Adjusting all Determinable Settings Automatically (Auto All)

Activates all automatic adjustment functions for the current measurement settings.

This includes:

Adjusting Settings Automatically

- Auto Frequency
- Auto Level

Remote command:

[SENSe:]ADJust:ALL on page 652

Adjusting the Center Frequency Automatically (Auto Frequency)

The R&S FPL adjusts the center frequency automatically.

The optimum center frequency is the frequency with the highest S/N ratio in the frequency span. As this function uses the signal counter, it is intended for use with sinusoidal signals.

Remote command:

[SENSe:] ADJust: FREQuency on page 655

Setting the Reference Level Automatically (Auto Level)

Automatically determines a reference level which ensures that no overload occurs at the R&S FPL for the current input data. At the same time, the internal attenuators are adjusted so the signal-to-noise ratio is optimized, while signal compression and clipping are minimized.

To determine the required reference level, a level measurement is performed on the R&S FPL.

If necessary, you can optimize the reference level further. Decrease the attenuation level manually to the lowest possible value before an overload occurs, then decrease the reference level in the same way.

You can change the measurement time for the level measurement if necessary (see "Changing the Automatic Measurement Time (Meastime Manual)" on page 420).

Remote command:

[SENSe:]ADJust:LEVel on page 655

Resetting the Automatic Measurement Time (Meastime Auto)

Resets the measurement duration for automatic settings to the default value.

Remote command:

```
[SENSe:]ADJust:CONFigure[:LEVel]:DURation:MODE on page 653
```

Changing the Automatic Measurement Time (Meastime Manual)

This function allows you to change the measurement duration for automatic setting adjustments. Enter the value in seconds.

Note: The maximum possible measurement duration depends on the currently selected measurement and the installed (optional) hardware. Thus, the measurement duration actually used to determine the automatic settings may be shorter than the value you define here.

Remote command:

```
[SENSe:]ADJust:CONFigure[:LEVel]:DURation:MODE on page 653 [SENSe:]ADJust:CONFigure[:LEVel]:DURation on page 653
```

Upper Level Hysteresis

When the reference level is adjusted automatically using the Auto Level function, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines an upper threshold the signal must exceed (compared to the last measurement) before the reference level is adapted automatically.

Remote command:

[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer on page 654

Lower Level Hysteresis

When the reference level is adjusted automatically using the Auto Level function, the internal attenuators and the preamplifier are also adjusted. To avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Remote command:

[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer on page 654

7.9 Marker Usage

Markers help you analyze your measurement results by determining particular values in the diagram. Thus you can extract numeric values from a graphical display both in the time and frequency domain. In addition to basic markers, sophisticated marker functions are provided for special results such as noise or demodulation.



Markers in Spectrogram Displays


In the spectrogram result display, you can activate up to 16 markers or delta markers at the same time. Each marker can be assigned to a different frame. Therefore, in addition to the frequency you also define the frame number when activating a new marker. If no frame number is specified, the marker is positioned on the currently selected frame. All markers are visible that are positioned on a visible frame.

•	Basics on Markers	421
	Marker Settings	
	Marker Search Settings and Positioning Functions	
	Marker (Measurement) Functions	
	How to Work With Markers	
•	Measurement Example: Measuring Harmonics Using Marker Functions	458

7.9.1 Basics on Markers

Some background knowledge on marker settings and functions is provided here for a better understanding of the required configuration settings.

Markers are used to mark points on traces, to read out measurement results and to select a display section quickly. R&S FPL1000 provides 16 markers per display window. In the Spectrum application, the same markers are displayed in all windows.

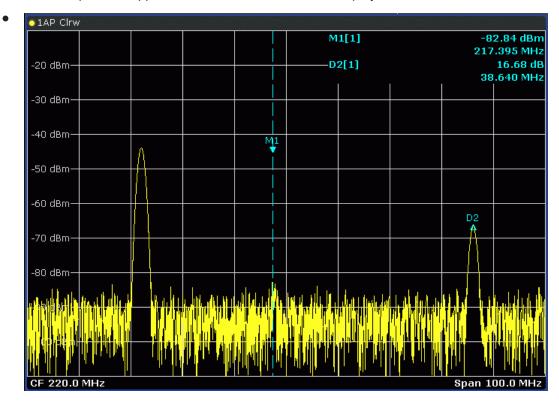

- Alternatively, change the position of the selected marker using the rotary knob. By default, the marker is moved from one pixel to the next. If you need to position the marker more precisely, change the step size to move from one sweep point to the next (General Marker Setting).
- You can also set an active marker to a new position by defining its x-position numerically. When you select the softkey for a marker, an edit dialog box is displayed.
- The most commonly required marker settings and functions are also available as softkeys or via the context menu. Tap the marker on the touch screen and hold your finger for about 2 seconds until the context menu is opened, then select the required entry.
- Softkeys for active markers (displayed on the screen) are highlighted blue. The softkey for the currently selected marker (for which functions are performed) is highlighted orange.
- To set individual markers very quickly, use the softkeys in the "Marker" menu.
- To set up several markers at once, use the "Marker" dialog box.
- To position the selected marker to a special value, use the softkeys in the "Marker To" menu.
- To determine more sophisticated marker results, use the special functions in the "Marker Function" dialog box.

In addition to basic markers, sophisticated marker functions are provided for special results such as noise or band power measurements.

•	Marker Types	423
•	Activating Markers	.423
•	Marker Results	423

7.9.1.1 Marker Types

All markers can be used either as normal markers or delta markers. A normal marker indicates the absolute signal value at the defined position in the diagram. A delta marker indicates the value of the marker relative to the specified reference marker (by default marker 1).

In addition, special functions can be assigned to the individual markers. The availability of special marker functions depends on whether the measurement is performed in the frequency or time domain, and on the type of measurement.

Temporary markers are used in addition to the markers and delta markers to analyze the measurement results for special marker functions. They disappear when the associated function is deactivated.

7.9.1.2 Activating Markers

Only active markers are displayed in the diagram and in the marker table.

Active markers are indicated by a highlighted softkey.

By default, marker 1 is active and positioned on the maximum value (peak) of trace 1 as a normal marker. If several traces are displayed, the marker is set to the maximum value of the trace which has the lowest number and is not frozen (View mode). The next marker to be activated is set to the frequency of the next lower level (next peak) as a delta marker; its value is indicated as an offset to marker 1.

A marker can only be activated when at least one trace in the corresponding window is visible. If a trace is switched off, the corresponding markers and marker functions are also deactivated. If the trace is switched on again, the markers along with coupled functions are restored to their original positions, provided the markers have not been used on another trace.

7.9.1.3 Marker Results

Normal markers point to a sweep point on the time or frequency axis and display the associated numeric value for that sweep point. Delta markers indicate an offset between the level at the delta marker position and the level at the position of the assigned reference marker, in dB.

Signal count markers determine the frequency of a signal at the marker position very accurately.

The results can be displayed directly within the diagram area or in a separate table. By default, the first two active markers are displayed in the diagram area. If more markers are activated, the results are displayed in a marker table.

Marker information in diagram area

By default, the results of the last two markers or delta markers that were activated are displayed in the diagram area.



The following information is displayed there:

- The marker type (M for normal, D for delta, or special function name)
- The marker number (1 to 16)
- The assigned trace number in square brackets []
- The marker value on the y-axis, or the result of the marker function
- The marker position on the x-axis

For n dB down markers, additional information is displayed, see Table 7-20.

Marker information in marker table

In addition to the marker information displayed within the diagram area, a separate marker table may be displayed beneath the diagram. This table provides the following information for all active markers:

Туре	Marker type: N (normal), D (delta), T (temporary, internal) and number
Ref	Reference marker for delta markers
Trc	Trace to which the marker is assigned
Frame	Spectrogram frame the marker is positioned in. Displayed only when the Spectrogram is displayed.
X-value	X-value of the marker
Y-value	Y-value of the marker
Function	Activated marker or measurement function
Function Result	Result of the active marker or measurement function


7.9.2 Marker Settings

Or: [MKR] > "Marker Config"

The remote commands required to define these settings are described in Chapter 8.8.8.1, "Setting Up Individual Markers", on page 716.

7.9.2.1 Individual Marker Setup

Up to 17 markers or delta markers can be activated for each window simultaneously. Initial marker setup is performed using the "Marker" dialog box.

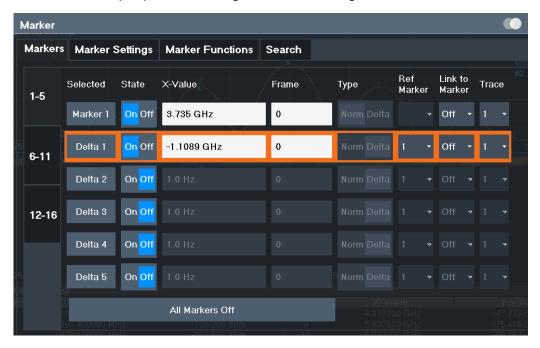

The markers are distributed among 3 tabs for a better overview. By default, the first marker is defined as a normal marker, whereas all others are defined as delta markers with reference to the first marker. All markers are assigned to trace 1, but only the first marker is active.

Selected Marker	425
Marker State	426
Marker Position X-value	426
Frame (Spectrogram only)	426
Marker Type	426
Reference Marker	426
Linking to Another Marker	427
Assigning the Marker to a Trace	427
Select Marker	427
All Marker Off	428

Selected Marker

Marker name. The marker which is currently selected for editing is highlighted orange.

Remote command:

Marker selected via suffix <m> in remote commands.

Marker State

Activates or deactivates the marker in the diagram.

Remote command:

```
CALCulate<n>:MARKer<m>[:STATe] on page 720
CALCulate<n>:DELTamarker<m>[:STATe] on page 718
```

Marker Position X-value

Defines the position (x-value) of the marker in the diagram. For normal markers, the absolute position is indicated. For delta markers, the position relative to the reference marker is provided.

Remote command:

```
CALCulate<n>:MARKer<m>:X on page 721
CALCulate<n>:DELTamarker<m>:X on page 719
```

Frame (Spectrogram only)

Spectrogram frame the marker is assigned to.

Remote command:

```
CALCulate<n>:MARKer<m>:SPECtrogram:FRAMe on page 736
CALCulate<n>:DELTamarker<m>:SPECtrogram:FRAMe on page 741
```

Marker Type

Toggles the marker type.

The type for marker 1 is always "Normal", the type for delta marker 1 is always "Delta". These types cannot be changed.

Note: If normal marker 1 is the active marker, switching the "Mkr Type" activates an additional delta marker 1. For any other marker, switching the marker type does not activate an additional marker, it only switches the type of the selected marker.

"Normal" A normal marker indicates the absolute value at the defined position

in the diagram.

"Delta" A delta marker defines the value of the marker relative to the speci-

fied reference marker (marker 1 by default).

Remote command:

```
CALCulate<n>:MARKer<m>[:STATe] on page 720
CALCulate<n>:DELTamarker<m>[:STATe] on page 718
```

Reference Marker

Defines a marker as the reference marker which is used to determine relative analysis results (delta marker values).

If the reference marker is deactivated, the delta marker referring to it is also deactivated.

If a fixed reference point is configured (see "Defining a Fixed Reference" on page 429), the reference point ("FXD") can also be selected instead of another marker.

Remote command:

```
CALCulate<n>:DELTamarker<m>:MREF on page 718
```

Linking to Another Marker

Links the current marker to the marker selected from the list of active markers. If the x-axis value of the initial marker is changed, the linked marker follows to the same position on the x-axis. Linking is off by default.

Using this function you can set two markers on different traces to measure the difference (e.g. between a max hold trace and a min hold trace or between a measurement and a reference trace).

Remote command:

```
CALCulate<n>:MARKer<m>:LINK:TO:MARKer<m> on page 719

CALCulate<n>:DELTamarker<m>:LINK:TO:MARKer<m> on page 717

CALCulate<n>:DELTamarker<m>:LINK on page 716
```

Assigning the Marker to a Trace

The "Trace" setting assigns the selected marker to an active trace. The trace determines which value the marker shows at the marker position. If the marker was previously assigned to a different trace, the marker remains on the previous frequency or time, but indicates the value of the new trace.

If a trace is turned off, the assigned markers and marker functions are also deactivated.

Remote command:

CALCulate<n>:MARKer<m>:TRACe on page 720

Select Marker

The "Select Marker" function opens a dialog box to select and activate or deactivate one or more markers quickly.



Remote command:

CALCulate<n>:MARKer<m>[:STATe] on page 720
CALCulate<n>:DELTamarker<m>[:STATe] on page 718

All Marker Off


Deactivates all markers in one step.

Remote command:

CALCulate<n>:MARKer<m>:AOFF on page 719

7.9.2.2 General Marker Settings

Some general marker settings allow you to influence the marker behavior for all markers.

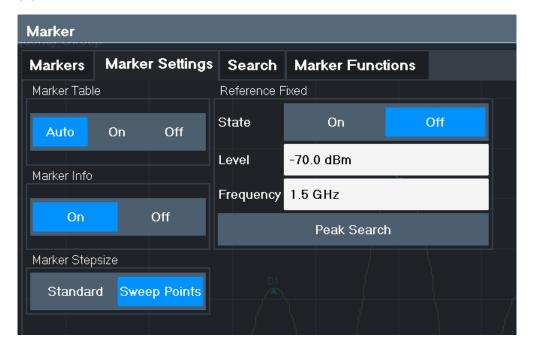

Marker Table Display	428
Marker Info	429
Marker Stepsize	429
Defining a Fixed Reference	

Marker Table Display

Defines how the marker information is displayed.

"On" Displays the marker information in a table in a separate area beneath

the diagram.

"Off" No separate marker table is displayed.

If Marker Info is active, the marker information is displayed within the

diagram area.

"Auto" (Default) If more than two markers are active, the marker table is dis-

played automatically.

If Marker Info is active, the marker information for up to two markers

is displayed in the diagram area.

Remote command:

DISPlay[:WINDow<n>]:MTABle on page 721

Marker Info

Turns the marker information displayed in the diagram on and off.



Remote command:

DISPlay:MINFo[:STATe] on page 722

Marker Stepsize

Defines the size of the steps that the marker position is moved using the rotary knob.

"Standard" The marker position is moved in steps of (Span/1000), which corre-

> sponds approximately to the number of pixels for the default display of 1001 sweep points. This setting is most suitable to move the

marker over a larger distance.

"Sweep The marker position is moved from one sweep point to the next. This Points"

setting is required for a very precise positioning if more sweep points

are collected than the number of pixels that can be displayed on the screen. It is the default mode.

Remote command:

CALCulate<n>:MARKer<m>:X:SSIZe on page 722

Defining a Fixed Reference

Instead of using a reference marker that may vary its position depending on the measurement results, a fixed reference marker can be defined for trace analysis.

Note that this function may not be available in all result displays.

For "State" = "On", a vertical and a horizontal red display line are displayed, marked as "FXD" . The normal marker 1 is activated and set to the peak value of the trace assigned to marker 1, and a delta marker to the next peak. The fixed reference marker is set to the position of marker 1 at the peak value. The delta marker refers to the fixed reference marker.

The "Level" and "Frequency" or "Time" settings define the position and value of the reference marker. To move the fixed reference, move the red display lines marked "FXD" in the diagram, or change the position settings in the "Marker Settings" tab of the "Marker" dialog box.

Peak Search sets the fixed reference marker to the current maximum value of the trace assigned to marker 1.

If activated, the fixed reference marker ("FXD") can also be selected as a Reference Marker instead of another marker.

Remote command:

```
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed[:STATe] on page 746
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y on page 746
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X on page 745
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[:PEAK]
on page 745
```

7.9.3 Marker Search Settings and Positioning Functions

Access: "Overview" > "Analysis" > "Marker" > "Search"

or: [MKR TO]

Several functions are available to set the marker to a specific position very quickly and easily, or to use the current marker position to define another characteristic value. In order to determine the required marker position, searches may be performed. The search results can be influenced by special settings.

For more information on searching for signal peaks see Chapter 7.9.4.8, "Marker Peak List", on page 453.

The remote commands required to define these settings are described in Chapter 8.8.8.4, "Positioning the Marker", on page 726.


7.9.3.1 Marker Search Settings

Access: [MKR TO] > "Search Config"

Markers are commonly used to determine peak values, i.e. maximum or minimum values, in the measured signal. Configuration settings allow you to influence the peak search results.



For Spectrograms, special marker settings are available, see Chapter 7.9.3.2, "Marker Search Settings for Spectrograms", on page 432.

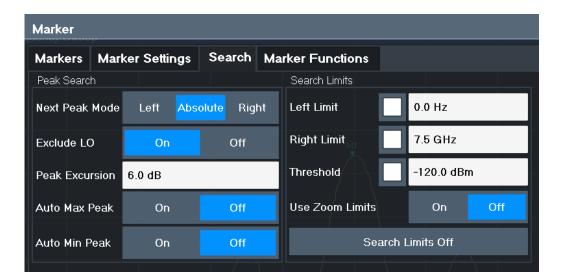



Auto Max Peak Search / Auto Min Peak Search	431
Search Limits	432
L Search Limits (Left / Right)	432
L Search Threshold	
L Use Zoom Limits	
L Deactivating All Search Limits	432

Search Mode for Next Peak

Selects the search mode for the next peak search.

"Left" Determines the next maximum/minimum to the left of the current

peak.

"Absolute" Determines the next maximum/minimum to either side of the current

peak.

"Right" Determines the next maximum/minimum to the right of the current

peak.

Remote command:

Chapter 8.8.8.4, "Positioning the Marker", on page 726

Exclude LO

If activated, restricts the frequency range for the marker search functions.

"On" The minimum frequency included in the peak search range is $\geq 5 \times 10^{-10}$

resolution bandwidth (RBW).

Due to the interference by the first local oscillator to the first intermediate frequency at the input mixer, the LO is represented as a signal at 0 Hz. To avoid the peak marker jumping to the LO signal at 0

Hz, this frequency is excluded from the peak search.

"Off" No restriction to the search range. The frequency 0 Hz is included in

the marker search functions.

Remote command:

CALCulate<n>:MARKer<m>:LOEXclude on page 723

Peak Excursion

Defines the minimum level value by which a signal must rise or fall so that it is identified as a maximum or a minimum by the search functions.

Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

For analog demodulation, the unit and value range depends on the selected result display type.

For more information see Chapter 7.9.4.8, "Marker Peak List", on page 453.

Remote command:

CALCulate<n>:MARKer<m>:PEXCursion on page 723

Auto Max Peak Search / Auto Min Peak Search

If activated, a maximum or minimum peak search is performed automatically for marker 1 after each sweep.

For spectrogram displays, define which frame the peak is to be searched in.

Remote command:

```
CALCulate<n>:MARKer<m>:MAXimum:AUTO on page 726
CALCulate<n>:MARKer<m>:MINimum:AUTO on page 728
```

Search Limits

The search results can be restricted by limiting the search area or adding search conditions.

Search Limits (Left / Right) ← Search Limits

If activated, limit lines are defined and displayed for the search. Only results within the limited search range are considered.

For details on limit lines for searches, see "Peak search limits" on page 454.

Remote command:

```
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] on page 724
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT on page 724
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHt on page 724
```

Search Threshold ← Search Limits

Defines an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

Remote command:

```
CALCulate<n>: THReshold on page 725
```

Use Zoom Limits ← Search Limits

If activated, the peak search is restricted to the active zoom area defined for a single zoom.

Remote command:

```
CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM[:STATe] on page 725
```

Deactivating All Search Limits ← Search Limits

Deactivates the search range limits.

Remote command:

```
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] on page 724
CALCulate<n>:THReshold:STATe on page 726
```


7.9.3.2 Marker Search Settings for Spectrograms

```
Access: "Overview" > "Analysis" > "Markers" > "Search"
```

```
or: [MKR TO] > "Search Config"
```

Spectrograms show not only the current sweep results, but also the sweep history. Thus, when searching for peaks, you must define the search settings within a single time frame (x-direction) and within several time frames (y-direction).

These settings are only available for spectrogram displays.

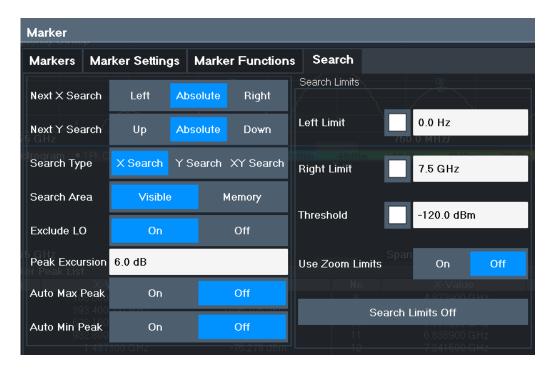

Search Mode for Next Peak in X-Direction	433
Search Mode for Next Peak in Y-Direction	433
Marker Search Type	434
Marker Search Area	434
Exclude LO	434
Peak Excursion	435
Auto Max Peak Search / Auto Min Peak Search	435
Search Limits	435
L Search Limits (Left / Right)	435
L Search Threshold	435
L Use Zoom Limits	436
L Deactivating All Search Limits	436

Search Mode for Next Peak in X-Direction

Selects the search mode for the next peak search within the currently selected frame.

"Left" Determines the next maximum/minimum to the left of the current

peak.

"Absolute" Determines the next maximum/minimum to either side of the current

peak

"Right" Determines the next maximum/minimum to the right of the current

peak.

Remote command:

Chapter 8.8.8.4, "Positioning the Marker", on page 726

Search Mode for Next Peak in Y-Direction

Selects the search mode for the next peak search within all frames at the current marker position.

"Up" Determines the next maximum/minimum above the current peak (in

more recent frames).

"Absolute" Determines the next maximum/minimum above or below the current

peak (in all frames).

"Down" Determines the next maximum/minimum below the current peak (in

older frames).

Remote command:

```
CALCulate<n>:MARKer<m>:SPECtrogram:Y:MAXimum:ABOVe on page 737 CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:ABOVe on page 742
```

CALCulate<n>:MARKer<m>:SPECtrogram:Y:MAXimum:BELow on page 738 CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:BELow on page 743

CALCulate<n>:MARKer<m>:SPECtrogram:Y:MAXimum:NEXT on page 738

CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:NEXT on page 743

CALCulate<n>:MARKer<m>:SPECtrogram:Y:MINimum:ABOVe on page 739

CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MINimum:ABOVe on page 744

CALCulate<n>:MARKer<m>:SPECtrogram:Y:MINimum:BELow on page 739 CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MINimum:BELow on page 744

CALCulate<n>:MARKer<m>:SPECtrogram:Y:MINimum:NEXT on page 739
CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MINimum:NEXT on page 744

Marker Search Type

Defines the type of search to be performed in the spectrogram.

"X-Search" Searches only within the currently selected frame.

"Y-Search" Searches within all frames but only at the current frequency position.

"XY-Search" Searches in all frames at all positions.

Remote command:

Defined by the search function, see Chapter 8.8.8.6, "Marker Search (Spectrograms)", on page 735

Marker Search Area

Defines which frames the search is performed in.

"Visible" Only the visible frames are searched.

"Memory" All frames stored in the memory are searched.

Remote command:

```
CALCulate<n>:MARKer<m>:SPECtrogram:SARea on page 737 CALCulate<n>:DELTamarker<m>:SPECtrogram:SARea on page 741
```

Exclude LO

If activated, restricts the frequency range for the marker search functions.

"On" The minimum frequency included in the peak search range is ≥ 5 ×

resolution bandwidth (RBW).

Due to the interference by the first local oscillator to the first intermediate frequency at the input mixer, the LO is represented as a signal at 0 Hz. To avoid the peak marker jumping to the LO signal at 0 $\,$

Hz, this frequency is excluded from the peak search.

No restriction to the search range. The frequency 0 Hz is included in

the marker search functions.

Remote command:

"Off"

CALCulate<n>:MARKer<m>:LOEXclude on page 723

Peak Excursion

Defines the minimum level value by which a signal must rise or fall so that it is identified as a maximum or a minimum by the search functions.

Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

For analog demodulation, the unit and value range depends on the selected result display type.

For more information see Chapter 7.9.4.8, "Marker Peak List", on page 453.

Remote command:

CALCulate<n>:MARKer<m>:PEXCursion on page 723

Auto Max Peak Search / Auto Min Peak Search

If activated, a maximum or minimum peak search is performed automatically for marker 1 after each sweep.

For spectrogram displays, define which frame the peak is to be searched in.

Remote command:

```
CALCulate<n>:MARKer<m>:MAXimum:AUTO on page 726
CALCulate<n>:MARKer<m>:MINimum:AUTO on page 728
```

Search Limits

The search results can be restricted by limiting the search area or adding search conditions.

Search Limits (Left / Right) ← Search Limits

If activated, limit lines are defined and displayed for the search. Only results within the limited search range are considered.

For details on limit lines for searches, see "Peak search limits" on page 454.

Remote command:

```
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] on page 724
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT on page 724
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHt on page 724
```

Search Threshold ← Search Limits

Defines an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

Remote command:

CALCulate<n>: THReshold on page 725

Use Zoom Limits ← Search Limits

If activated, the peak search is restricted to the active zoom area defined for a single zoom.

Remote command:

CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM[:STATe] on page 725

Deactivating All Search Limits ← Search Limits

Deactivates the search range limits.

Remote command:

```
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] on page 724 CALCulate<n>:THReshold:STATe on page 726
```

7.9.3.3 Positioning Functions

Access: [MKR ->]

The following functions set the currently selected marker to the result of a peak search or set other characteristic values to the current marker value.

Peak Search	436
Search Next Peak	436
Search Minimum	437
Search Next Minimum	437
Center Frequency = Marker Frequency	437
Reference Level = Marker Level	

Peak Search

Sets the selected marker/delta marker to the maximum of the trace. If no marker is active, marker 1 is activated.

For spectrogram displays, define which frame the peak is to be searched in.

Remote command:

```
CALCulate<n>:MARKer<m>:MAXimum[:PEAK] on page 727
CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK] on page 731
```

Search Next Peak

Sets the selected marker/delta marker to the next (lower) maximum of the assigned trace. If no marker is active, marker 1 is activated.

For spectrogram displays, define which frame the next peak is to be searched in.

Remote command:

```
CALCulate<n>:MARKer<m>:MAXimum:NEXT on page 727
CALCulate<n>:MARKer<m>:MAXimum:RIGHt on page 728
CALCulate<n>:MARKer<m>:MAXimum:LEFT on page 727
CALCulate<n>:DELTamarker<m>:MAXimum:NEXT on page 730
CALCulate<n>:DELTamarker<m>:MAXimum:RIGHt on page 731
CALCulate<n>:DELTamarker<m>:MAXimum:LEFT on page 730
```

Search Minimum

Sets the selected marker/delta marker to the minimum of the trace. If no marker is active, marker 1 is activated.

For spectrogram displays, define which frame the minimum is to be searched in.

Remote command:

```
CALCulate<n>:MARKer<m>:MINimum[:PEAK] on page 729
CALCulate<n>:DELTamarker<m>:MINimum[:PEAK] on page 732
```

Search Next Minimum

Sets the selected marker/delta marker to the next (higher) minimum of the selected trace. If no marker is active, marker 1 is activated.

For spectrogram displays, define which frame the next minimum is to be searched in.

Remote command:

```
CALCulate<n>:MARKer<m>:MINimum:NEXT on page 729

CALCulate<n>:MARKer<m>:MINimum:LEFT on page 728

CALCulate<n>:MARKer<m>:MINimum:RIGHt on page 729

CALCulate<n>:DELTamarker<m>:MINimum:NEXT on page 732

CALCulate<n>:DELTamarker<m>:MINimum:LEFT on page 731

CALCulate<n>:DELTamarker<m>:MINimum:RIGHt on page 732
```

Center Frequency = Marker Frequency

Sets the center frequency to the selected marker or delta marker frequency. A peak can thus be set as center frequency, for example to analyze it in detail with a smaller span.

This function is not available for zero span measurements.

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:CENTer on page 648
```

Reference Level = Marker Level


Sets the reference level to the selected marker level.

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:REFerence on page 664
```

7.9.4 Marker (Measurement) Functions

Access: "Overview" > "Analysis" > "Marker Functions"

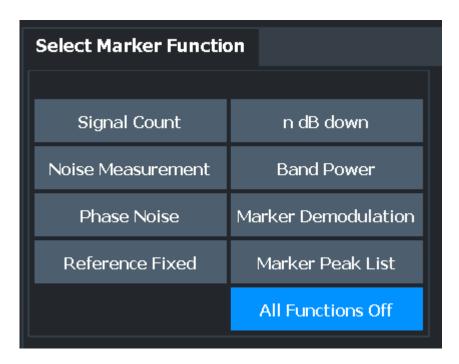

The remote commands required to define these settings are described in Chapter 8.8.8, "Working with Markers", on page 715.

 Measuring Noise Density (Noise Meas Marker)	•	Precise Frequency (Signal Count) Marker	438
 Measuring Characteristic Bandwidths (n dB Down Marker)	•	Measuring Noise Density (Noise Meas Marker)	440
 Fixed Reference Marker	•	Phase Noise Measurement Marker	442
 Measuring the Power in a Channel (Band Power Marker)	•	Measuring Characteristic Bandwidths (n dB Down Marker)	445
 Demodulating Marker Values and Providing Audio Output (Marker Demodulation) 	•	Fixed Reference Marker	447
• Marker Peak List	•	Measuring the Power in a Channel (Band Power Marker)	448
Marker Peak List453	•	Demodulating Marker Values and Providing Audio Output (Marker Demodulation	on)
			. 451
Deactivating All Marker Functions457	•	Marker Peak List	. 453
	•	Deactivating All Marker Functions	457

7.9.4.1 Precise Frequency (Signal Count) Marker

Access: "Overview" > "Analysis" > "Marker Functions" > "Select Marker Function" > "Signal Count" > "Signal Count Config"

Or: [MKR] > "Select Marker Function" > "Signal Count" > "Signal Count Config"

A normal marker determines the position of the point on the trace and indicates the signal frequency at this position. The trace, however, contains only a limited number of points. Depending on the selected span, each trace point can contain many measurement values. Thus, the frequency resolution of each trace point is limited.


(See also Chapter 7.6.1.8, "How Much Data is Measured: Sweep Points and Sweep Count", on page 396).

Frequency resolution is further restricted by the RBW and sweep time settings.

To determine the frequency of a signal point accurately without changing the sweep settings, the R&S FPL1000 is equipped with a signal counter. The signal counter sets the RF to the current marker position, then counts the zero crossings of the IF (thus the term signal *counter*) and derives the precise frequency value.

Signal counting can be performed explicitly at the current marker position ("Signal Count" marker function), or implicitly by the R&S FPL1000 for certain functions.

Signal counting is only possible while the instrument is not sweeping. Thus, to perform a signal count for a marker, the sweep is stopped at the marker position. The frequency is determined with the desired resolution and then the sweep is allowed to continue.

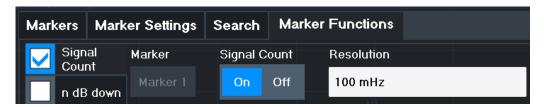

A measurement example is described in "Measuring the Signal Frequency Using the Signal Counter" on page 239.



Signal counters are not available for measurements on I/Q-based data.

Remote commands:

CALCulate<n>:MARKer<m>:COUNt on page 761

CALCulate<n>:MARKer<m>:COUNt:RESolution on page 762

Signal Count Marker State 439

Resolution 439

Signal Count Marker State

Activates or deactivates the special signal count marker function.

When activated, the sweep stops at the reference marker until the signal counter has delivered a result.

Remote command:

CALCulate<n>:MARKer<m>:COUNt on page 761
CALCulate<n>:MARKer<m>:COUNt:FREQuency? on page 762

Resolution

Defines the resolution with which the signal is analyzed around the reference marker 1.

Remote command:

CALCulate<n>:MARKer<m>:COUNt:RESolution on page 762

7.9.4.2 Measuring Noise Density (Noise Meas Marker)

Access: "Overview" > "Analysis" > "Marker Functions" > "Select Marker Function" > "Noise Measurement" > "Noise Meas Config"

Or: [MKR] > "Select Marker Function" > "Noise Measurement" > "Noise Meas Config"

Using the noise measurement marker function, the noise power density is measured at the position of the marker. In the time domain mode, all points of the trace are used to determine the noise power density. When measurements are performed in the frequency domain, eight points to the right and left of the marker (if available) are used for the measurement to obtain a stable result.

Result display

Noise density is the noise referred to a bandwidth of 1 Hz. With logarithmic amplitude units (dBm, dBmV, dBm μ V, dB μ A), the noise power density is output in dBm/Hz, i.e. as the level in 1 Hz bandwidth with reference to 1 mW. With linear amplitude units (V, A, W), the noise voltage density is analyzed in μ V/ \sqrt{Hz} ; the noise current density in μ A/ \sqrt{Hz} ; the noise power density in μ W/ \sqrt{Hz} .

The result is indicated as the **function result in the Marker Table**.

Prerequisite settings

The following settings are required to obtain correct values:

- Detector: Sample or RMS
- Video bandwidth:
 - \leq 0.1 resolution bandwidth with sample detector \geq 3 x resolution bandwidth with RMS detector
- Trace averaging:

In the default setting, the R&S FPL1000 uses the sample detector for the noise function. With the sample detector, you can set the trace to "Average" mode to stabilize the measured values. When the RMS detector is used, trace averaging produces noise levels that are too low and cannot be corrected. Instead, increase the sweep time to obtain stable measurement results.

Correction factors

The R&S FPL1000 uses the following correction factors to analyze the noise density from the marker level:

- Since the noise power is indicated with reference to 1 Hz bandwidth, the bandwidth correction value is deducted from the marker level. It is 10 x lg (1 Hz/BWNoise), where BWNoise is the noise or power bandwidth of the set resolution filter (RBW).
- RMS detector: With the exception of bandwidth correction, no further corrections are required since this detector already indicates the power for each point of the trace
- Sample detector: As a result of video filter averaging and trace averaging, 1.05 dB is added to the marker level. This is the difference between the average value and the RMS value of white noise. With a logarithmic level axis, 1.45 dB is added addi-


tionally. Logarithmic averaging is thus fully taken into account, which yields a value that is 1.45 dB lower than that of linear averaging.

- To allow for a more stable noise display, eight trace points on each side of the measurement frequency are averaged.
- For span > 0, the measured values are averaged versus time (after a sweep).



The R&S FPL1000 noise figure can be calculated from the measured power density level. It is calculated by deducting the set RF attenuation (RF Att) from the displayed noise level and adding 174 to the result.

The individual marker settings correspond to those defined in the "Marker" dialog box (see Chapter 7.9.2.1, "Individual Marker Setup", on page 425). Any settings to the marker state or type changed in the "Marker Function" dialog box are also changed in the "Marker" dialog box and vice versa.

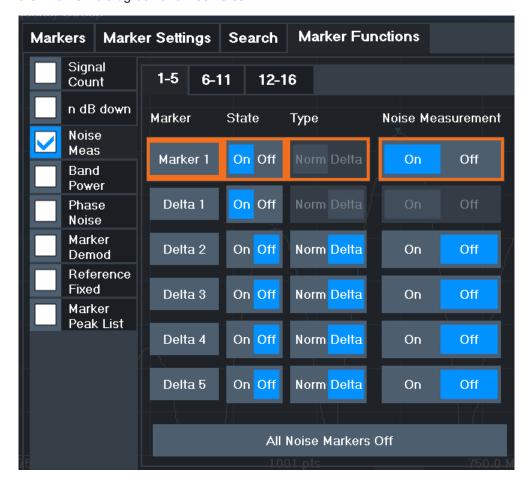

Remote commands:

CALCulate<n>:MARKer<m>:FUNCtion:NOISe[:STATe] on page 751

CALCulate<n>:MARKer<m>:FUNCtion:NOISe:RESult? on page 751

Marker State	442
Marker Type	442
Noise Measurement State	
Switching All Noise Measurement Off	442

Marker State

Activates or deactivates the marker in the diagram.

Remote command:

```
CALCulate<n>:MARKer<m>[:STATe] on page 720
CALCulate<n>:DELTamarker<m>[:STATe] on page 718
```

Marker Type

Toggles the marker type.

The type for marker 1 is always "Normal", the type for delta marker 1 is always "Delta". These types cannot be changed.

Note: If normal marker 1 is the active marker, switching the "Mkr Type" activates an additional delta marker 1. For any other marker, switching the marker type does not activate an additional marker, it only switches the type of the selected marker.

"Normal" A normal marker indicates the absolute value at the defined position

in the diagram.

"Delta" A delta marker defines the value of the marker relative to the speci-

fied reference marker (marker 1 by default).

Remote command:

```
CALCulate<n>:MARKer<m>[:STATe] on page 720
CALCulate<n>:DELTamarker<m>[:STATe] on page 718
```

Noise Measurement State

Activates or deactivates noise measurement for the marker in the diagram.

This function is only available for normal markers.

If activated, the marker displays the noise power density measured at the position of the marker.

For details see Chapter 7.9.4.2, "Measuring Noise Density (Noise Meas Marker)", on page 440.

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:NOISe[:STATe] on page 751 CALCulate<n>:MARKer<m>:FUNCtion:NOISe:RESult? on page 751
```

Switching All Noise Measurement Off

Deactivates noise measurement for all markers.

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:NOISe[:STATe] on page 751
```

7.9.4.3 Phase Noise Measurement Marker

Access: "Overview" > "Analysis" > "Marker Functions" > "Phase Noise" > "Phase Noise Config"

Or: [MKR] > "Select Marker Function" > "Phase Noise" > "Phase Noise Config" For each of the 16 markers phase noise measurement can be activated.

Phase noise is unintentional modulation of a carrier; it creates frequencies next to the carrier frequency. A phase noise measurement consists of noise density measurements at defined offsets from the carrier; the results are given in relation to the carrier level (dBc). The phase noise marker function measures the noise power at the delta markers referred to 1 Hz bandwidth. Marker 1 is used as the reference for the phase noise measurement. By default, the current frequency and level of marker 1 are used as the fixed reference marker. However, a peak search can be started to use the current signal peak as the reference point, or a reference point can be defined manually.

Since the reference point is fixed, the reference level or the center frequency can be set so that the carrier is outside the displayed frequency range after phase noise measurement is started. Or a notch filter can be switched on to suppress the carrier.


Alternatively, the reference point can be determined automatically by a peak search after each sweep. This function can be used to track a drifting source during a phase noise measurement. The delta marker 2, which shows the phase noise measurement result, keeps the delta frequency value. Therefore the phase noise measurement leads to reliable results in a certain offset although the source is drifting. Only if the marker 2 reaches the border of the span, the delta marker value is adjusted to be within the span. In these cases, select a larger span.

The result of the phase noise measurement is the difference in level between the reference point and the noise power density. It is indicated as the function result of the phase noise marker in the marker table.

The sample detector is automatically used and the video bandwidth set to 0.1 times the resolution bandwidth (RBW). The two settings are taken into account in the correction values used for the noise power measurement. To obtain stable results, two pixels on the right and the left of the delta marker position are taken for the measurement.

The procedure for determining the noise power is identical to the method used for the noise power measurement (see Chapter 7.9.4.2, "Measuring Noise Density (Noise Meas Marker)", on page 440).

The individual marker settings correspond to those defined in the "Marker" dialog box. Any settings to the marker state or type changed in the "Marker Function" dialog box are also changed in the "Marker" dialog box and vice versa.

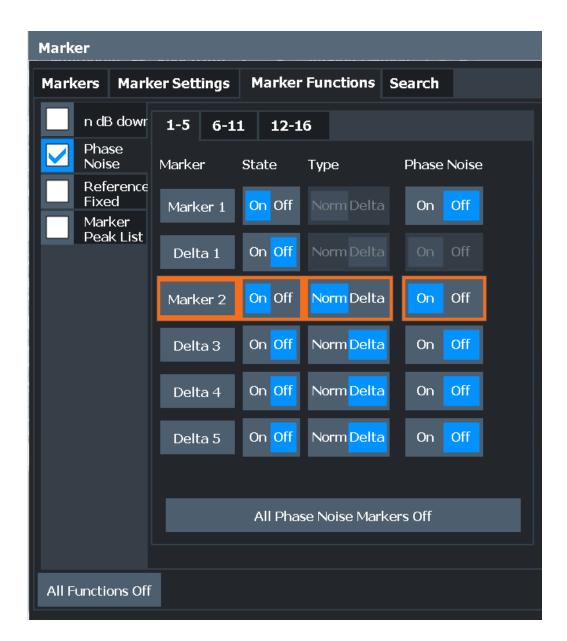

Remote commands:

CALCulate<n>:MARKer<m>:FUNCtion:PNOise[:STATe] on page 754

CALCulate<n>:MARKer<m>:FUNCtion:PNOise:RESult? on page 753

Phase Noise Measurement State	444
Defining Reference Point	445
Switching All Phase Noise Measurements Off	445

Phase Noise Measurement State

Activates or deactivates phase noise measurement for the reference point in the diagram.

This function is only available for delta markers.

If activated, the delta markers display the phase noise measured at defined offsets from the reference position.

Remote command:

```
CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise[:STATe] on page 753 CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise:RESult? on page 752
```

Defining Reference Point

Instead of using marker 1 as the reference marker, a fixed reference marker can be defined for phase noise measurement.

The "Level" and "Frequency" or "Time" settings define the position and value of the reference point.

Alternatively, a **Peak Search** can be performed to set the maximum value of the selected trace as the reference point.

If "Automatic Peak Search" is activated, a peak search is started automatically after each sweep and the result is used as the reference point.

Remote command:

```
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y on page 746
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X on page 745
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[:PEAK]
on page 745
CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise:AUTO on page 752
```

Switching All Phase Noise Measurements Off

Deactivates phase noise measurement for all markers.

Remote command:

```
CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise[:STATe] on page 753
```

7.9.4.4 Measuring Characteristic Bandwidths (n dB Down Marker)

Access: "Overview" > "Analysis" > "Marker Functions" > "n dB down" > "n dB Down Config"

Or: [MKR] > "Select Marker Function" > "n dB down" > "n dB Down Config"

When characterizing the shape of a signal, the bandwidth at a specified offset from its peak level is often of interest. The offset is specified as a relative decrease in amplitude of n dB. To measure this bandwidth, you could use several markers and delta markers and determine the bandwidth manually. However, using the n dB down marker function makes the task very simple and quick.

The n dB down marker function uses the current value of marker 1 as the reference point. It activates two temporary markers T1 and T2 located on the signal, whose level is n dB below the level of the reference point. Marker T1 is placed to the left and marker T2 to the right of the reference marker. The default setting for n is 3 dB, but it can be changed.

If a positive offset is entered, the markers T1 and T2 are placed below the active reference point. If a negative value is entered (for example for notch filter measurements), the markers T1 and T2 are placed above the active reference point.

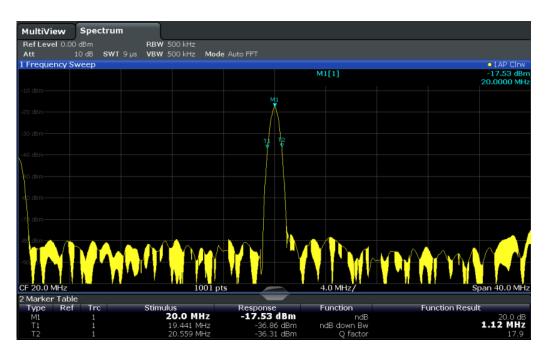



Figure 7-44: n dB down marker function

The following marker function results are displayed:

Table 7-20: n dB down marker function results

Label	Description
M1	Current position and level of marker 1
ndB	Offset value (n dB down)
ndB down Bw / PWid	Determined bandwidth or pulse width (zero span) at the offset
Q-factor	Quality factor of the determined bandwidth (characteristic of damping or resonance)
T1, T2	Current position and level of the temporary markers

If the required position for the temporary markers cannot be determined uniquely, for example due to noise, dashes are displayed as a result.

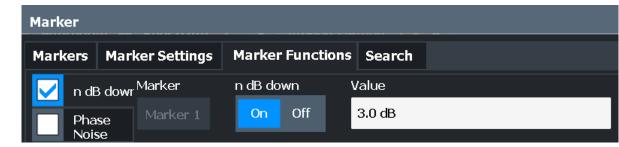

Remote commands:

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:STATe on page 760

n dB down Marker State

Activates or deactivates the special n dB down marker function.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:STATe on page 760
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:RESult? on page 759

n dB down Value

Defines the delta level from the reference marker 1 used to determine the bandwidth or time span.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency? on page 759
CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:TIME? on page 760


7.9.4.5 Fixed Reference Marker

Access: "Overview" > "Analysis" > "Marker Functions" > "Reference Fixed"

Or: [MKR] > "Select Marker Function" > "Reference Fixed"

Instead of using a reference marker that may vary its position depending on the measurement results, a fixed reference marker can be defined for trace analysis. Once positioned, the reference marker does not move during subsequent sweeps unless you explicitly move it manually.

When you select this marker function, a vertical and a horizontal red display line are displayed, marked as "FXD" . A normal marker is activated and set to the peak value and a delta marker to the next peak. The fixed reference marker is set to the position of the normal marker at the peak value. The delta marker refers to the fixed reference marker.

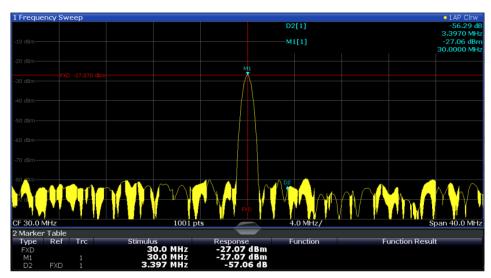

You can move the position of the fixed reference marker graphically by dragging the display lines, or numerically by entering values for the marker position and level.

Remote commands:

```
CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed[:STATe] on page 746

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X on page 745

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y on page 746
```

7.9.4.6 Measuring the Power in a Channel (Band Power Marker)

Access: "Overview" > "Analysis" > "Marker Functions" > "Band Power" > "Band Power Config"

or: [MKR] > "Select Marker Function" > "Band Power"

To determine the noise power in a transmission channel, you could use a noise marker and multiply the result with the channel bandwidth. However, the results would only be accurate for flat noise.

Band power markers allow you to measure the integrated power for a defined span (band) around a marker (similar to ACP measurements). By default, 5 % of the current span is used. The span is indicated by limit lines in the diagram. The results can be displayed either as a power (dBm) or density (dBm/Hz) value and are indicated in the marker table for each band power marker.



Relative band power markers

The results for band power markers which are defined as *delta* markers and thus have a reference value can also be calculated as reference power values (in dB).

In this case, the result of the band power deltamarker is the difference between the absolute power in the band around the delta marker and the absolute power for the reference marker. The powers are subtracted logarithmically, so the result is a dB value.

[Relative band power (Delta2) in dB] = [absolute band power (Delta2) in dBm] - [absolute (band) power of reference marker in dBm]

The measured power for the reference marker may be an absolute power at a single point (if the reference marker is not a band power marker), or the power in a band (if the reference marker is a band power marker itself).


If the reference marker for the band power marker is also a delta marker, the absolute power level for the reference marker is used for calculation.



Band power markers are only available for standard frequency measurements (not zero span) in the Spectrum application.

For the I/Q Analyzer application, band power markers are only available for Spectrum displays.


The entire band must lie within the display. If it is moved out of the display, the result cannot be calculated (indicated by "- - -" as the "Function Result"). However, the width of the band is maintained so that the band power can be calculated again when it returns to the display.

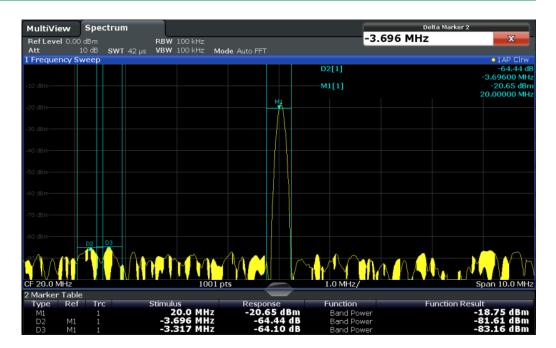

All markers can be defined as band power markers, each with a different span. When a band power marker is activated, if no marker is active yet, marker 1 is activated. Otherwise, the currently active marker is used as a band power marker (all other marker functions for this marker are deactivated).

If the detector mode for the marker trace is set to "Auto", the RMS detector is used.

The individual marker settings correspond to those defined in the "Marker" dialog box (see Chapter 7.9.2.1, "Individual Marker Setup", on page 425). Any settings to the marker state or type changed in the "Marker Function" dialog box are also changed in the "Marker" dialog box and vice versa.

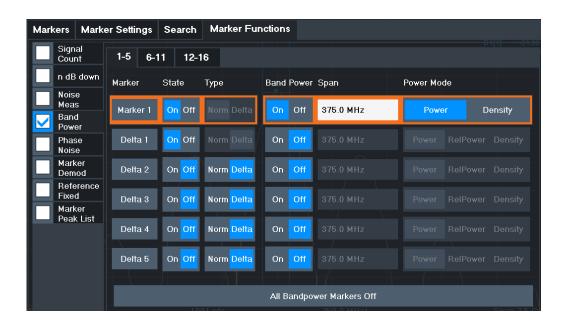

Remote commands:

Band Power Measurement State

Activates or deactivates band power measurement for the marker in the diagram.

Band power markers are only available for standard frequency measurements (not zero span) in the Spectrum application.

If activated, the markers display the power or density measured in the band around the current marker position.

For details see Chapter 7.9.4.6, "Measuring the Power in a Channel (Band Power Marker)", on page 448.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:BPOWer[:STATe] on page 756
CALCulate<n>:DELTamarker<m>:FUNCtion:BPOWer[:STATe] on page 758

Span

Defines the span (band) around the marker for which the power is measured. The span is indicated by lines in the diagram.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:BPOWer:SPAN on page 755
CALCulate<n>:DELTamarker<m>:FUNCtion:BPOWer:SPAN on page 757

Power Mode

Defines the mode of the power measurement result.

For analog demodulation measurements, the power mode is not editable for AM, FM, or PM spectrum results. In this case, the marker function does not determine a power value, but rather the deviation within the specified span.

"Power" The result is an absolute power level.

The power unit depends on the Unit setting.

"Relative This setting is only available for a delta band power marker.

Power" The result is the difference between the absolute power in the band

around the delta marker and the absolute power for the reference marker (see " Reference Marker " on page 426). The powers are sub-

tracted logarithmically, so the result is a dB value.

[Relative band power (Delta2) in dB] = [absolute band power (Delta2) in dBm]. [absolute (band) power of reference marker in dBm]

in dBm] - [absolute (band) power of reference marker in dBm] For details see "Relative band power markers" on page 448

"Density" The result is a power level in relation to the bandwidth, displayed in

dBm/Hz.

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:BPOWer:MODE on page 755
CALCulate<n>:DELTamarker<m>:FUNCtion:BPOWer:MODE on page 756
```

Switching All Band Power Measurements Off

Deactivates band power measurement for all markers.

Remote command:

```
CALCulate<n>:MARKer<m>:FUNCtion:BPOWer[:STATe] on page 756
CALCulate<n>:DELTamarker<m>:FUNCtion:BPOWer[:STATe] on page 758
```

7.9.4.7 Demodulating Marker Values and Providing Audio Output (Marker Demodulation)

Access: "Overview" > "Analysis" > "Marker Functions" > "Select Marker Function" > "Marker Demodulation" > "Marker Demod Config"

Or: [MKR] > "Select Marker Function" > "Marker Demodulation" > "Marker Demod Config"

The R&S FPL1000 provides demodulators for AM, FM and PM signals. The demodulation marker function sends the demodulated data at the current marker frequency to the audio output. Thus, a displayed signal can be identified acoustically with the help of the internal loudspeaker or with headphones.




This function is not available for Spectrum Emission Mask measurements or measurements on I/Q-based data.

The sweep stops at the frequency determined by marker 1 for the selected time and the RF signal is demodulated in a bandwidth that corresponds to the RBW. Alternatively, demodulation can be activated continuously, i.e. audio output occurs regardless

of the marker position and the marker stop time. For measurements in the time domain (zero span), demodulation is always continuous.

Optionally, a minimum level ("Squelch Level") can be defined so that the signal is only demodulated when it exceeds the set level. This is useful during continuous demodulation to avoid listening to noise.

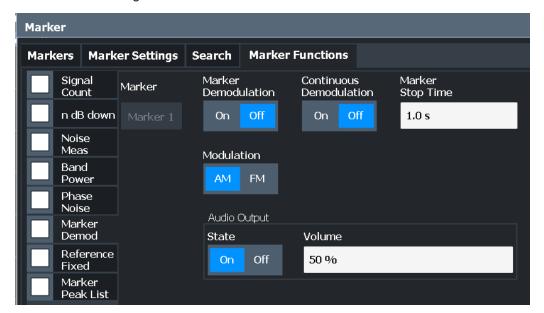

Marker Demodulation State	452
Continuous Demodulation	452
Marker Stop Time	452
Modulation	
Loudspeaker	453
Audio Output Volume	

Marker Demodulation State

Activates or deactivates the demodulation output.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:DEModulation[:STATe] on page 764

Continuous Demodulation

If activated, the signal is demodulated continuously (not only at the marker position) and sent to the audio output. This allows you to monitor the frequency range acoustically (assuming the sweep time is long enough).

For zero span measurements, demodulation is always active continuously.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:DEModulation:CONTinuous on page 763

Marker Stop Time

Defines how long the sweep is stopped at the marker position to output the demodulated signal.

For zero span measurements, demodulation is always active continuously, regardless of the marker stop time.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:DEModulation:HOLDoff on page 764

Modulation

Defines the demodulation mode for output (AM/FM). The default setting is AM.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:DEModulation:SELect on page 764

Loudspeaker

If enabled, the demodulated audio signal is output to the IF/VIDEO connector (on the rear panel of the R&S FPL).

This connector is only available if the R&S FPL1-B5 option is installed.

Note that output to the [Phones] connector on the front panel is always possible, regardless of the "Loudspeaker" state.

Remote command:

SYSTem: SPEaker[:STATe] on page 689

Audio Output Volume

Sets the volume of the built-in loudspeaker for demodulated signals. This setting is used for all applications.

The setting is available in the time domain in Spectrum mode and in Analog Demodulation mode.

This connector is only available if the R&S FPL1-B5 option is installed.

Remote command:

SYSTem: SPEaker: VOLume on page 689

7.9.4.8 Marker Peak List

Access: "Overview" > "Analysis" > "Marker Functions" > "Marker Peak List"

Or: [MKR] > "Select Marker Function" > "Marker Peak List"

A common measurement task is to determine peak values, i.e. maximum or minimum signal levels. The R&S FPL1000 provides various peak search functions and applications:

- Setting a marker to a peak value once (Peak Search)
- Searching for a peak value within a restricted search area (Search Limits)
- Creating a marker table with all or a defined number of peak values for one sweep (Marker Peak List)
- Updating the marker position to the current peak value automatically after each sweep (Auto Peak Search)

Peak search limits

The peak search can be restricted to a search area. The search area is defined by limit lines which are also indicated in the diagram. In addition, a minimum value (threshold) can be defined as a further search condition.

When is a peak a peak? - Peak excursion

During a peak search, for example when a marker peak table is displayed, noise values may be detected as a peak if the signal is very flat or does not contain many peaks. Therefore, you can define a relative threshold ("Peak Excursion"). The signal level must increase by the threshold value before falling again before a peak is detected. To avoid identifying noise peaks as maxima or minima, enter a peak excursion value that is higher than the difference between the highest and the lowest value measured for the displayed inherent noise.

Effect of peak excursion settings (example)

The following figure shows a trace to be analyzed.

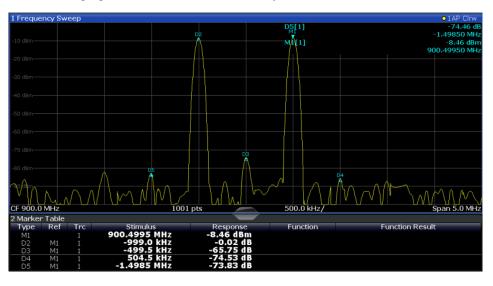


Figure 7-45: Trace example


The following table lists the peaks as indicated by the marker numbers in the diagram above, as well as the minimum decrease in amplitude to either side of the peak:

Marker #	Min. amplitude decrease to either side of the signal
1	30 dB
2	29.85 dB
3	20 dB
4	10 dB
5	18 dB

In order to eliminate the smaller peaks M3,M4 and M5 in the example above, a peak excursion of at least 20 dB is required. In this case, the amplitude must rise at least 20 dB before falling again before a peak is detected.

Marker peak list

The marker peak list determines the frequencies and levels of peaks in the spectrum. It is updated automatically after each sweep. How many peaks are displayed can be defined, as well as the sort order. In addition, the detected peaks can be indicated in the diagram. The peak list can also be exported to a file for analysis in an external application.

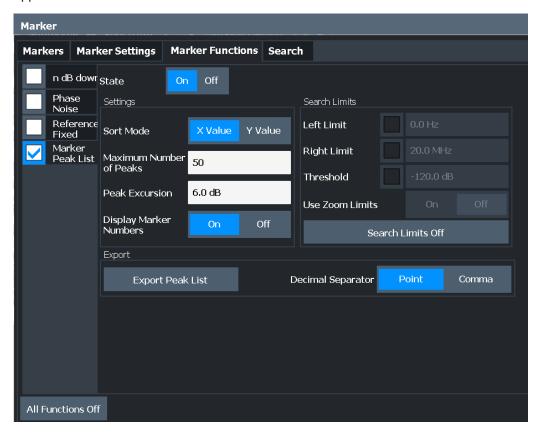

Remote commands:

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STATe on page 749

TRAC? LIST, see TRACe<n>[:DATA] on page 708

Peak List State	456
Sort Mode	456
Maximum Number of Peaks	
Peak Excursion	
Display Marker Numbers	456
Export Peak List	

Peak List State

Activates/deactivates the marker peak list. If activated, the peak list is displayed and the peaks are indicated in the trace display.

For each listed peak the frequency/time ("X-value") and level ("Y-Value") values are given.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STATe on page 749

Sort Mode

Defines whether the peak list is sorted according to the x-values or y-values. In either case the values are sorted in ascending order.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT on page 749

Maximum Number of Peaks

Defines the maximum number of peaks to be determined and displayed.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE on page 749

Peak Excursion

Defines the minimum level value by which a signal must rise or fall so that it is identified as a maximum or a minimum by the search functions.

Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

For analog demodulation, the unit and value range depends on the selected result display type.

For more information see Chapter 7.9.4.8, "Marker Peak List", on page 453.

Remote command:

CALCulate<n>:MARKer<m>:PEXCursion on page 723

Display Marker Numbers

By default, the marker numbers are indicated in the diagram so you can find the peaks from the list. However, for large numbers of peaks the marker numbers may decrease readability; in this case, deactivate the marker number display.

Remote command:

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:ANNotation:LABel[:STATe]
on page 747

Export Peak List

The peak list can be exported to an ASCII file (.DAT) for analysis in an external application.

Remote command:

MMEMory:STORe<n>:PEAK on page 817
FORMat:DEXPort:DSEParator on page 793

7.9.4.9 Deactivating All Marker Functions

Access: "Overview" > "Analysis" > "Marker Functions" > "All Functions Off"

Or: [MKR] > "All Functions Off"

All special marker functions can be deactivated in one step.

Remote command:

7.9.5 How to Work With Markers

The following step-by-step instructions demonstrate in detail how to work with markers.

- How to Use a Fixed Reference Marker......457

7.9.5.1 How to Analyze a Signal Point in Detail

When you need to analyze a characteristic point in the signal in more detail, the following procedure can be helpful:

- 1. Perform a peak search to determine the characteristic point roughly by pressing the [Peak Search] key.
- 2. If the required signal point is not the maximum, continue the peak search to one of the subsequent maxima or minima:
 - a) Press the [Mkr ->] key.
 - b) Select the "Next Peak" or "Next Min" key.
 - If necessary, change the search settings by selecting the "Search Config" softkey.
- 3. Center the display around the determined signal point by setting the marker value to the center frequency. Select the "Center = Mkr Freq" softkey.
- 4. Determine the precise frequency of the signal point:
 - a) Select the "Select Marker Function" softkey.
 - b) Select the "Signal Count" button.
 - c) Select the "Signal Count Resolution" softkey.
 - d) Select the resolution depending on how precise the result needs to be.

7.9.5.2 How to Use a Fixed Reference Marker

By default, delta markers refer to marker 1. However, they can also refer to a fixed reference marker.

How to Define and Move a Fixed Reference Marker

1. To display a fixed reference marker, do one of the following:

- Press the [MKR FUNC] key, then select the "Reference Fixed" marker function.
- In the "Marker" dialog box, in the "Reference Fixed" area of the "Marker Config" tab, set the "State" to "On".

A vertical and a horizontal red display line are displayed, marked as "FXD" . The normal marker 1 is activated and set to the peak value of the trace assigned to marker 1, and a delta marker to the next peak. The fixed reference marker is set to the position of marker 1 at the peak value.

- 2. To move the fixed reference marker, do one of the following:
 - Change the "Level" and "Frequency" of the reference point in the "Marker Config" tab of the "Marker" dialog box, . By default, the current peak value of trace 1 is set.
 - Set the fixed reference marker to the current peak value by selecting the "Peak Search" button in the "Marker Config" tab of the "Marker" dialog box.
 - Move the "FXD" display lines that define the position of the fixed reference marker by dragging them on the screen.

How to Assign a Fixed Reference Marker to Delta Markers

- 1. In the "Marker" dialog box, select the horizontal "Markers" tab.
- 2. For the active delta marker that is to refer to the fixed reference marker, select "FXD" from the "Reference Marker" list.

The delta marker indicates the offset of the current trace value at the marker position from the fixed reference value.

7.9.6 Measurement Example: Measuring Harmonics Using Marker Functions

This measurement example describes how to measure harmonics using the provided marker functions. Note that this task can be performed much simpler using the Harmonic Distortion measurement (see Chapter 7.2.9, "Harmonic Distortion Measurement", on page 348).

Signal generator settings (e.g. R&S SMW):

Frequency:	128 MHz
Level:	- 25 dBm

Procedure:

- 1. Preset the R&S FPL1000.
- 2. Set the center frequency to 128 MHz.
- 3. Set the span to 100 kHz.

The R&S FPL1000 displays the reference signal with a span of 100 kHz and resolution bandwidth of 1 kHz.

- 4. Switch on the marker by pressing the [MKR] key. The marker is positioned on the trace maximum.
- 5. Set the measured signal frequency and the measured level as reference values:
 - a) Press the [MKR FUNC] key
 - b) Press the "Reference Fixed" softkey.

The position of the marker becomes the reference point. The reference point level is indicated by a horizontal line, the reference point frequency with a vertical line. At the same time, the delta marker 2 is switched on.

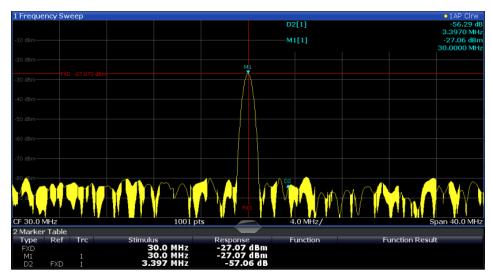


Figure 7-46: Fundamental wave and the frequency and level reference point

6. Make the step size for the center frequency correspond to the signal frequency: in the "Frequency" configuration dialog box, select "Center Frequency Stepsize" = "Marker".

The step size for the center frequency is now equal to the marker frequency.

7. Move the center frequency to the 2nd harmonic of the signal by pressing the [UP] (�) key.

The center frequency is set to the 2nd harmonic.

8. Place the delta marker on the 2nd harmonic: in the "Marker To" menu, select the "Peak" softkey.

The delta marker moves to the maximum of the 2nd harmonic. The displayed level result is relative to the reference point level (= fundamental wave level).

The other harmonics are measured by repeating steps step 7 and step 8, with the center frequency being incremented or decremented in steps of 128 MHz using the [UP] or [DOWN] keys.

7.10 Trace Configuration

A trace is a collection of measured data points. The trace settings determine how the measured data is analyzed and displayed on the screen.

•	Standard Traces	460
•	Spectrograms	472
•	Trace Math	487

7.10.1 Standard Traces

7.10.1.1 Basics on Setting up Traces

Some background knowledge on traces is provided here for a better understanding of the required configuration settings.

•	Mapping Samples to sweep Points with the Trace Detector	460
•	Analyzing Several Traces - Trace Mode	463
	How Many Traces are Averaged - Sweep Count + Sweep Mode	
•	How Trace Data is Averaged - the Averaging Mode	465
	Trace Smoothing	

Mapping Samples to sweep Points with the Trace Detector

A trace displays the values measured at the sweep points. The number of samples taken during a sweep can be much larger than the number of sweep points that are displayed in the measurement trace.

Example:

Assume the following measurement parameters:

• Sample rate: 32 MSamples / s

sweep points: 1000sweep time: 100 ms

Span: 5 GHz

During a single sweep, 3.2 * 10⁶ samples are collected and distributed to 1000 sweep points, i.e. 3200 samples are collected per sweep point. For each sweep point, the measured data for a frequency span of 5 MHz (span/<sweep points>) is analyzed.

Note that if you increase the number of sweep points, the frequency span analyzed for each point in the trace decreases, making the result more stable.

See also Chapter 7.6.1.8, "How Much Data is Measured: Sweep Points and Sweep Count", on page 396.

Obviously, a data reduction must be performed to determine which of the samples are displayed for each sweep point. This is the trace detector's task.

The trace detector can analyze the measured data using various methods:




The detector activated for the specific trace is indicated in the corresponding trace information by an abbreviation.

Table 7-21: Detector types

Detector	Abbrev.	Description
Positive Peak	Pk	Determines the largest of all positive peak values of the levels measured at the individual frequencies which are displayed in one sample point
Negative Peak	Mi	Determines the smallest of all negative peak values of the levels measured at the individual frequencies which are displayed in one sample point
Auto Peak	Ар	Combines the peak detectors; determines the maximum and the minimum value of the levels measured at the individual frequencies which are displayed in one sample point (not available for SEM)
RMS	Rm	Calculates the root mean square of all samples contained in a sweep point. To do so, R&S FPL1000 uses the linear voltage after envelope detection. The sampled linear values are squared, summed and the sum is divided by the number of samples (= root mean square). For logarithmic display, the logarithm is formed from the square sum. For linear display, the root mean square value is displayed. Each sweep point thus corresponds to the power of the measured values summed up in the sweep point. The RMS detector supplies the power of the signal irrespective of the waveform (CW carrier, modulated carrier, white noise or impulsive signal). Correction factors as needed for other detectors to measure the power of the different signal classes are not required.
Average	Av	Calculates the linear average of all samples contained in a sweep point. To this effect, R&S FPL1000 uses the linear voltage after envelope detection. The sampled linear values are summed up and the sum is divided by the number of samples (= linear average value). For logarithmic display, the logarithm is formed from the average value. For linear display, the average value is displayed. Each sweep point thus corresponds to the average of the measured values summed up in the sweep point. The average detector supplies the average value of the signal irrespective of the waveform (CW carrier, modulated carrier, white noise or impulsive signal).
Sample	Sa	Selects the last measured value of the levels measured at the individual frequencies which are displayed in one sample point; all other measured values for the frequency range are ignored

The result obtained from the selected detector for a sweep point is displayed as the value at this frequency point in the trace.

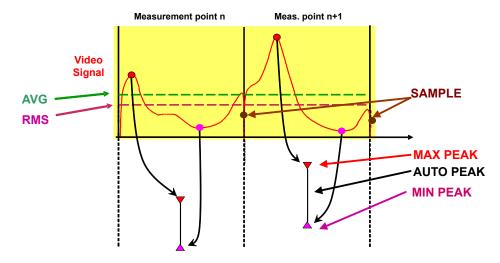

You can define the trace detector to be used for the individual traces manually, or the R&S FPL1000 can select the appropriate detector automatically.

The detectors of the R&S FPL1000 are implemented as pure digital devices. All detectors work in parallel in the background, which means that the measurement speed is independent of the detector combination used for different traces.



RMS detector and VBW

If the RMS detector is selected, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used, the sweep time should be increased to get more stable traces.

Auto detector

If the R&S FPL1000 is set to define the appropriate detector automatically, the detector is set depending on the selected trace mode:

Trace mode	Detector
Clear Write	Auto Peak
Max Hold	Positive Peak
Min Hold	Negative Peak
Average	Sample Peak
View	_
Blank	_

Analyzing Several Traces - Trace Mode

If several sweep are performed one after the other, or continuous sweep are performed, the trace mode determines how the data for subsequent traces is processed. After each sweep, the trace mode determines whether:

- The data is frozen (View)
- The data is hidden (Blank)
- The data is replaced by new values (Clear Write)
- The data is replaced selectively (Max Hold, Min Hold, Average)



Each time the trace mode is changed, the selected trace memory is cleared.

The trace mode also determines the detector type if the detector is set automatically, see "Mapping Samples to sweep Points with the Trace Detector" on page 460.

The R&S FPL1000 supports the following trace modes:

Table 7-22: Overview of available trace modes

Trace Mode	Description
Blank	Hides the selected trace.
Clear Write	Overwrite mode: the trace is overwritten by each sweep. This is the default setting. All available detectors can be selected.
Max Hold	The maximum value is determined over several measurements and displayed. The R&S FPL1000 saves the sweep result in the trace memory only if the new value is greater than the previous one.
	This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.
	This mode is not available for statistics measurements.
Min Hold	The minimum value is determined from several measurements and displayed. The R&S FPL1000 saves the sweep result in the trace memory only if the new value is lower than the previous one.
	This mode is useful for example for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed, whereas a CW signal is recognized by its constant level.
	This mode is not available for statistics measurements.
Average	The average is formed over several measurements and displayed. The Sweep/Average Count determines the number of averaging procedures. This mode is not available for statistics measurements.
View	The current contents of the trace memory are frozen and displayed.



If a trace is frozen ("View" mode), the measurement settings, apart from scaling settings, can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current measurement settings is indicated by a yellow asterisk on the tab label.

If you change any parameters that affect the scaling of the diagram axes, the R&S FPL1000 automatically adapts the trace data to the changed display range. This allows you to zoom into the diagram after the measurement to show details of the trace.

How Many Traces are Averaged - Sweep Count + Sweep Mode

In "Average" trace mode, the sweep count and sweep mode determine how many traces are averaged. The more traces are averaged, the smoother the trace is likely to become.

The algorithm for averaging traces depends on the sweep mode and sweep count.

sweep count = 0 (default)

In "Continuous" sweep mode, a continuous average is calculated for 10 sweeps, according to the following formula:

$$Trace = \frac{9 * Trace_{old} + MeasValue}{10}$$

Figure 7-47: Equation 1

Due to the weighting between the current trace and the average trace, past values have practically no influence on the displayed trace after about ten sweeps. With this setting, signal noise is effectively reduced without need for restarting the averaging process after a change of the signal.

In "Single" sweep mode, the current trace is averaged with the previously stored averaged trace. No averaging is carried out for the first sweep but the measured value is stored in the trace memory. The next time a sweep is performed, the trace average is calculated according to the following formula:

$$Trace = \frac{Trace_{old} + MeasValue}{2}$$

The averaged trace is then stored in the trace memory.

sweep count = 1

The currently measured trace is displayed and stored in the trace memory. No averaging is performed.

sweep count > 1

For both **"Single"** sweep mode and **"Continuous"** sweep mode, averaging takes place over the selected number of sweeps. In this case the displayed trace is determined during averaging according to the following formula:

$$Trace_n = \frac{1}{n} \cdot \left[\sum_{i=1}^{n-1} (T_i) + MeasValue_n \right]$$

Figure 7-48: Equation 2

Where n is the number of the current sweep ($n = 2 \dots$ Sweep Count). No averaging is carried out for the first sweep but the measured value is stored in the trace memory. With increasing n, the displayed trace is increasingly smoothed since there are more individual sweeps for averaging.

After the selected number of sweeps, the average trace is saved in the trace memory. Until this number of sweeps is reached, a preliminary average is displayed. When the averaging length defined by the "Sweep Count" is attained, averaging is continued in continuous sweep mode or for "Continue Single Sweep" according to the following formula:

$$Trace = \frac{(N-1)*Trace_{old} + MeasValue}{N}$$

Where N is the sweep count

How Trace Data is Averaged - the Averaging Mode

When the trace is averaged over several sweeps (Trace mode: "Average"), different methods are available to determine the trace average.

With logarithmic averaging, the dB values of the display voltage are averaged or subtracted from each other with trace mathematical functions.

With linear averaging, the level values in dB are converted into linear voltages or powers before averaging. Voltage or power values are averaged or offset against each other and reconverted into level values.

For stationary signals, the two methods yield the same result.

Logarithmic averaging is recommended if sinewave signals are to be clearly visible against noise since with this type of averaging noise suppression is improved while the sinewave signals remain unchanged.

For noise or pseudo-noise signals, the positive peak amplitudes are decreased in logarithmic averaging due to the characteristic involved. The negative peak values are increased relative to the average value. If the distorted amplitude distribution is averaged, a value is obtained that is smaller than the actual average value. The difference is -2.5 dB.

This low average value is usually corrected in noise power measurements by a 2.5 dB factor. Therefore the R&S FPL1000 offers the selection of linear averaging. The trace data is linearized before averaging, then averaged and logarithmized again for display on the screen. The average value is always displayed correctly irrespective of the signal characteristic.

Trace Smoothing

A Video Bandwidth Filter (VBW) is a hardware-based method of smoothing the trace (see also Chapter 7.6.1.2, "Smoothing the Trace Using the Video Bandwidth", on page 392). However, other sweep and bandwidth settings may be coupled to the VBW, and for some signals, a VBW may not be freely selectable to obtain the required smoothing effect. Therefore, a software-based trace smoothing function is also available

(Software-based) **smoothing** is a way to visually remove anomalies in the trace that may distort the results. The smoothing process is based on a moving average over the complete measurement range. The number of samples included in the averaging process (the *aperture* size) is variable and is a percentage of all samples that the trace consists of.

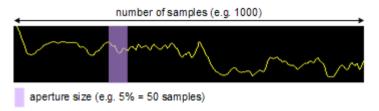


Figure 7-49: Sample size included in trace smoothing



Effects of smoothing on post-processing functions

Note that in Spectrum mode, all functions performed after the sweep, such as limit checks, markers, or channel power measurements, are based on the smoothed trace data. Thus, the results differ from results based on the original trace.

You can turn trace smoothing on and off for all traces individually and compare, for example, the raw and the smooth trace.

Linear smoothing is based on the following algorithm:

$$y'(s) = \frac{1}{n} \left(\sum_{x=s-\frac{n-1}{2}}^{x=s+\frac{n-1}{2}} y(x) \right)$$

Equation 7-1: Linear trace smoothing

With:

s = sample number

x =sample offset from s

n = aperture size


7.10.1.2 Trace Settings

Access: "Overview" > "Analysis" > "Traces"

Or: [TRACE] > "Trace Config"

You can configure the settings for up to 6 individual traces.

For settings on spectrograms, see Chapter 7.10.2.2, "Spectrogram Settings", on page 479.

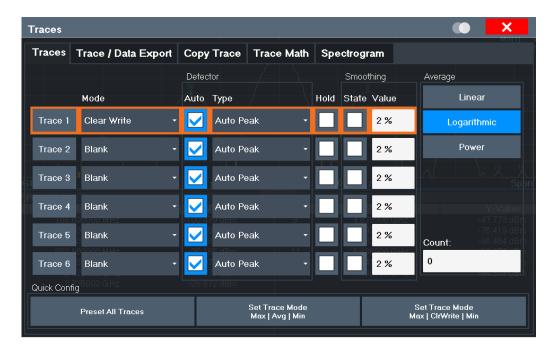

Trace 1 / Trace 2 / Trace 3 / Trace 4 / Trace 5 / Trace 6	467
Trace Mode	467
Detector	468
Hold	468
Smoothing	469
Average Mode	469
Average Count	469
Predefined Trace Settings - Quick Config	470
Trace 1 / Trace 2 / Trace 3 / Trace 4 (Softkeys)	470
Copy Trace	470

Trace 1 / Trace 2 / Trace 3 / Trace 4 / Trace 5 / Trace 6

Selects the corresponding trace for configuration. The currently selected trace is highlighted.

For details see Chapter 7.10.1.3, "How to Configure a Standard Trace", on page 471.

Remote command:

Selected via numeric suffix of:TRACe<1...6> commands DISPlay[:WINDow<n>]:TRACe<t>[:STATe] on page 694

Trace Mode

Defines the update mode for subsequent traces.

For details, see "Analyzing Several Traces - Trace Mode" on page 463.

"Clear/ Write" Overwrite mode (default): the trace is overwritten by each sweep. The "Detector" is automatically set to "Auto Peak" .

"Max Hold" The maximum value is determined over several sweeps and dis-

played. The R&S FPL1000 saves each trace point in the trace mem-

ory only if the new value is greater than the previous one. The "Detector" is automatically set to "PositivePeak". This mode is not available for statistics measurements.

"Min Hold" The minimum value is determined from several measurements and

displayed. The R&S FPL1000 saves each trace point in the trace memory only if the new value is lower than the previous one. The "Detector" is automatically set to "Negative Peak". This mode is not available for statistics measurements.

"Average" The average is formed over several sweeps.

The Sweep/Average Count determines the number of averaging pro-

cedures.

The "Detector" is automatically set to "Sample".

This mode is not available for statistics measurements.

"View" The current contents of the trace memory are frozen and displayed.

"Blank" Removes the selected trace from the display.

Remote command:

```
DISPlay[:WINDow<n>]:TRACe<t>:MODE on page 693
```

Detector

Defines the trace detector to be used for trace analysis.

For details see "Mapping Samples to sweep Points with the Trace Detector" on page 460.

"Auto" Selects the optimum detector for the selected trace and filter mode.

This is the default setting.

"Type" Defines the selected detector type.

Remote command:

```
[SENSe:][WINDow<n>:]DETector<t>[:FUNCtion] on page 697
[SENSe:][WINDow<n>:]DETector<t>[:FUNCtion]:AUTO on page 697
```

Hold

If activated, traces in "Min Hold", "Max Hold" and "Average" mode are not reset after specific parameter changes have been made.

Normally, the measurement is started again after parameter changes, before the measurement results are analyzed (e.g. using a marker). In all cases that require a new measurement after parameter changes, the trace is reset automatically to avoid false results (e.g. with span changes). For applications that require no reset after parameter changes, the automatic reset can be switched off.

The default setting is off.

Remote command:

DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous on page 694

Smoothing

If enabled, the trace is smoothed by the specified value (between 1 % and 50 %). The smoothing value is defined as a percentage of the display width. The larger the smoothing value, the greater the smoothing effect.

Note: Effects of smoothing on post-processing functions. Note that in Spectrum mode, all functions performed after the sweep, such as limit checks, markers, or channel power measurements, are based on the smoothed trace data. Thus, the results will differ from results based on the original trace.

For more information see "Trace Smoothing" on page 465.

Remote command:

```
DISPlay[:WINDow<n>]:TRACe<t>:SMOothing[:STATe] on page 695
DISPlay[:WINDow<n>]:TRACe<t>:SMOothing:APERture on page 695
```

Average Mode

Defines the mode with which the trace is averaged over several sweeps.

This setting is generally applicable if trace mode "Average" is selected. For FFT sweeps, the setting also affects the VBW (regardless of whether or not the trace is averaged).

(See also "Video Bandwidth (VBW)" on page 262).

How many sweeps are averaged is defined by the "Sweep/Average Count" on page 400.

For details see "How Trace Data is Averaged - the Averaging Mode" on page 465.

"Linear" The power level values are converted into linear units prior to averag-

ing. After the averaging, the data is converted back into its original

unit.

"Logarithmic" For logarithmic scaling, the values are averaged in dBm. For linear

scaling, the behavior is the same as with linear averaging.

"Power" Activates linear power averaging.

The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original

unit.

Use this mode to average power values in Volts or Amperes correctly. In particular, for small VBW values (smaller than the RBW), use power averaging mode for correct power measurements in FFT

sweep mode.

Remote command:

```
[SENSe:] AVERage<n>: TYPE on page 696
```

Average Count

Determines the number of averaging or maximum search procedures If the trace modes "Average", "Max Hold" or "Min Hold" are set.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count =1, no averaging, Max Hold or Min Hold operations are performed.

This value is identical to the Sweep/Average Count setting in the "Sweep" settings.

Remote command:

[SENSe:]AVERage<n>:COUNt on page 695

Predefined Trace Settings - Quick Config

Commonly required trace settings have been predefined and can be applied very quickly by selecting the appropriate button.

Function	Trace Settings	
Preset All Traces	Trace 1:	Clear Write
		Auto Detector (Auto Peak)
	Traces 2-6:	Blank
		Auto Detector
Set Trace Mode	Trace 1:	Max Hold
Max Avg Min		Auto Detector (Positive Peak)
	Trace 2:	Average
		Auto Detector (Sample)
	Trace 3:	Min Hold
		Auto Detector (Negative Peak)
	Traces 4-6:	Blank
		Auto Detector
Set Trace Mode	Trace 1:	Max Hold
Max ClrWrite Min		Auto Detector (Positive Peak)
	Trace 2:	Clear Write
		Auto Detector (Auto Peak)
	Trace 3:	Min Hold
		Auto Detector (Negative Peak)
	Traces 4-6:	Blank
		Auto Detector

Trace 1 / Trace 2 / Trace 3 / Trace 4 (Softkeys)

Displays the "Traces" settings and focuses the "Mode" list for the selected trace.

For details see Chapter 7.10.1.3, "How to Configure a Standard Trace", on page 471.

Remote command:

DISPlay[:WINDow<n>]:TRACe<t>[:STATe] on page 694

Copy Trace

Access: "Overview" > "Analysis" > "Traces" > "Copy Trace"

Or: [TRACE] > "Copy Trace"

Copies trace data to another trace.

The first group of buttons (labeled "Trace 1" to "Trace 6") selects the source trace. The second group of buttons (labeled "Copy to Trace 1" to "Copy to Tace 6") selects the destination.

Remote command:

TRACe<n>: COPY on page 698

7.10.1.3 How to Configure a Standard Trace

Step-by-step instructions on configuring the trace settings are provided here.

For details on individual functions and settings see Chapter 7.10.1.2, "Trace Settings", on page 466.

The remote commands required to perform these tasks are described in Chapter 8.8.7, "Configuring the Trace Display and Retrieving Trace Data", on page 692.

Trace settings are configured in the "Traces" dialog box.

To display the "Traces" dialog box, do one of the following:

- Press the [TRACE] key and then select the "Trace Config" softkey.
- Select "Analysis" from the "Overview", then select the "Traces" tab.
- 1. For each trace, select the "Trace Mode" and "Trace Detector" . Traces with the trace mode "Blank" are not displayed.
- 2. To configure several traces to predefined display modes in one step, press the button for the required function:
 - "Preset All Traces"
 - "Set Trace Mode Max | Avg | Min"
 - "Set Trace Mode Max | ClrWrite | Min"

For details see Chapter 7.10.1.2, "Trace Settings", on page 466.

- 3. For "Average" trace mode, define the number of sweeps to be averaged in the "Count:" field.
- 4. If linear scaling is used, select the "Average Mode": "Linear".
- 5. To improve the trace stability, increase the number of "Sweep Points" or the "Sweep Time" (in the "Sweep" settings).

All configured traces (not set to "Blank") are displayed after the next sweep.

How to Copy Traces

- 1. A trace copy function is provided in a separate tab of the "Traces" dialog box. To display this tab do one of the following:
 - Select the [TRACE] key and then the "Trace Copy" softkey.
 - Select "Analysis" from the "Overview", then select the "Trace Copy" tab.
- 2. Select the "Source" trace to be copied.

3. Select the "Copy to Trace" button for the trace to which the settings are to be applied.

The settings from the source trace are applied to the destination trace. The newly configured trace (if not set to "Blank") is displayed after the next sweep.


7.10.2 Spectrograms

7.10.2.1 Working with Spectrograms

In addition to the standard "level versus frequency" or "level versus time" traces, the R&S FPL1000 also provides a spectrogram display of the measured data.

A spectrogram shows how the spectral density of a signal varies over time. The x-axis shows the frequency, the y-axis shows the time. A third dimension, the power level, is indicated by different colors. Thus you can see how the strength of the signal varies over time for different frequencies.

Example:

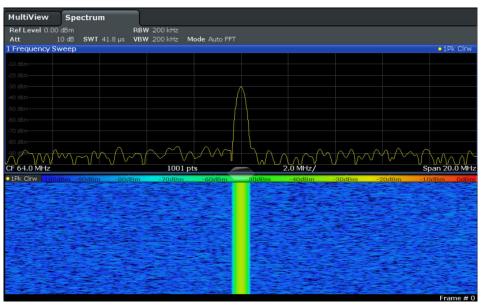

In this example, you see the spectrogram for the calibration signal of the R&S FPL1000, compared to the standard spectrum display. Since the signal does not change over time, the color of the frequency levels does not change over time, i.e. vertically. The legend above the spectrogram display describes the power levels the colors represent.

Result display

The spectrogram result can consist of the following elements:

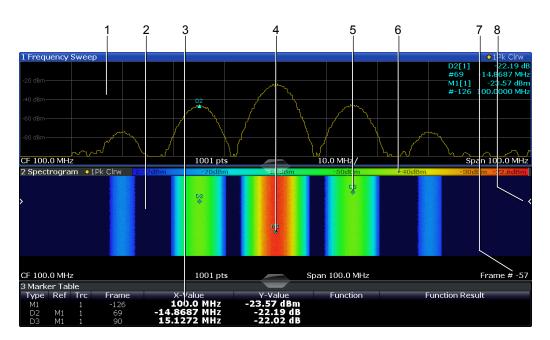


Figure 7-50: Screen layout of the spectrogram result display

- 1 = Spectrum result display
- 2 = Spectrogram result display
- 3 = Marker list
- 4 = Marker
- 5 = Delta marker
- 6 = Color map
- 7 = Timestamp / frame number
- 8 = Current frame indicator

For more information about spectrogram configuration, see Chapter 7.10.2.2, "Spectrogram Settings", on page 479.

Remote commands:

Activating and configuring spectrograms:

Chapter 8.8.7.2, "Configuring Spectrograms", on page 698

Storing results:

MMEMory:STORe<n>:SPECtrogram on page 818

•	Time Frames	.473
•	Markers in the Spectrogram	.475
•	Color Maps	.476

Time Frames

The time information in the spectrogram is displayed vertically, along the y-axis. Each line (or trace) of the y-axis represents one or more captured sweep and is called a **time frame** or simply "frame". As with standard spectrum traces, several measured values are combined in one sweep point using the selected detector.

(See "Mapping Samples to sweep Points with the Trace Detector" on page 460).

Frames are sorted in chronological order, beginning with the most recently recorded frame at the top of the diagram (frame number 0). With the next sweep, the previous frame is moved further down in the diagram, until the maximum number of captured frames is reached. The display is updated continuously during the measurement, and the measured trace data is stored. Spectrogram displays are continued even after single measurements unless they are cleared manually.

The maximum number of frames that you can capture is summarized in Table 7-23.

Table 7-23: Correlation between number of sweep points and number of frames stored in the history buffer

Sweep Points	Max. History Depth
≤1250	20000
2001	12488
4001	6247
8.001	3124
16.001	1562
32.001	781



The scaling of the time axis (y-axis) is not configurable. However, you can enlarge the spectrogram display by maximizing the window using the "Split/Maximize" key.



Frame analysis - Frame count vs. sweep count

As described for standard spectrum sweeps, the sweep count defines how many sweeps are analyzed to create a single trace. Thus, for a trace in "Average" mode, for example, a sweep count of 10 means that 10 sweeps are averaged to create a single trace, or frame.

The frame count, on the other hand, determines how many frames are plotted during a single sweep measurement (as opposed to a continuous sweep). For a frame count of 2, for example, 2 frames will be plotted during each single sweep. For continuous sweep mode, the frame count is irrelevant; one frame is plotted per sweep until the measurement is stopped.

If you combine the two settings, 20 sweeps will be performed for each single sweep measurement. The first 10 will be averaged to create the first frame, the next 10 will be averaged to create the second frame.

As you can see, increasing the sweep count increases the accuracy of the individual traces, while increasing the frame count increases the number of traces in the diagram.

Especially for "Average" or "Min Hold" and "Max Hold" trace modes, the number of sweeps that are analyzed to create a single trace has an effect on the accuracy of the results. Thus, you can also define whether the results from frames in previous traces are considered in the analysis for each new trace ("Continue Frame").

Tracking absolute time - timestamps

Alternatively to the frame count, the absolute time (that is: a *timestamp*) at which a frame was captured can be displayed. While the measurement is running, the timestamp shows the system time. In single sweep mode or if the sweep is stopped, the timestamp shows the time and date at the end of the sweep. Thus, the individual frames can be identified by their timestamp or their frame count.

When active, the timestamp replaces the display of the frame number in the diagram footer (see Figure 7-50).

Displaying individual frames

The spectrogram diagram contains all stored frames since it was last cleared. Arrows on the left and right border of the spectrogram indicate the currently selected frame. The spectrum diagram always displays the spectrum for the currently selected frame.


The current frame number is indicated in the diagram footer, or alternatively a time-stamp, if activated. The current frame, displayed at the top of the diagram, is frame number 0. Older frames further down in the diagram are indicated by a negative index, e.g. "-10". You can display the spectrum diagram of a previous frame by changing the current frame number.

Markers in the Spectrogram

Markers and delta markers are shaped like diamonds in the spectrogram. They are only displayed in the spectrogram if the marker position is inside the visible area of the spectrogram. If more than two markers are active, the marker values are displayed in a separate marker table.

In the spectrum result display, the markers and their frequency and level values (1) are displayed as usual. Additionally, the frame number is displayed to indicate the position of the marker in time (2).



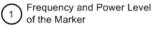

2 Frame Number of the Marker

In the spectrogram result display, you can activate up to 16 markers or delta markers at the same time. Each marker can be assigned to a different frame. Therefore, in addition to the frequency you also define the frame number when activating a new marker. If no frame number is specified, the marker is positioned on the currently selected frame. All markers are visible that are positioned on a visible frame. Special search functions are provided for spectrogram markers.

In the spectrum result display, only the markers positioned on the currently selected frame are visible. In "Continuous Sweep" mode, this means that only markers positioned on frame 0 are visible. To view markers that are positioned on a frame other than frame 0 in the spectrum result display, you must stop the measurement and select the corresponding frame.

Color Maps

Spectrograms assign power levels to different colors to visualize them. The legend above the spectrogram display describes the power levels the colors represent.

The color display is highly configurable to adapt the spectrograms to your needs. You can define:

- Which colors to use (Color scheme)
- Which value range to apply the color scheme to
- How the colors are distributed within the value range, i.e where the focus of the visualization lies (shape of the color curve)

The individual colors are assigned to the power levels automatically by the R&S FPL1000.

The Color Scheme

Hot



Uses a color range from blue to red. Blue colors indicate low levels, red colors indicate high ones.

Cold



Uses a color range from red to blue. Red colors indicate low levels, blue colors indicate high ones.

The "Cold" color scheme is the inverse "Hot" color scheme.

Radar



Uses a color range from black over green to light turquoise with shades of green in between. Dark colors indicate low levels, light colors indicate high ones.

Grayscale



Shows the results in shades of gray. Dark gray indicates low levels, light gray indicates high ones.

The Value Range of the Color Map

If the measured values only cover a small area in the spectrogram, you can optimize the displayed value range so it becomes easier to distinguish between values that are close together. Display only parts of interest.

The Shape and Focus of the Color Curve

The color mapping function assigns a specified color to a specified power level in the spectrogram display. By default, colors on the color map are distributed evenly. However, to visualize a certain area of the value range in greater detail than the rest, you

can set the focus of the color mapping to that area. Changing the focus is performed by changing the shape of the color curve.

The color curve is a tool to shift the focus of the color distribution on the color map. By default, the color curve is linear. If you shift the curve to the left or right, the distribution becomes non-linear. The slope of the color curve increases or decreases. One end of the color palette then covers a large range of results, while the other end distributes several colors over a relatively small result range.

You can use this feature to put the focus on a particular region in the diagram and to be able to detect small variations of the signal.

Example:

In the color map based on the linear color curve, the range from -100 dBm to -60 dBm is covered by blue and a few shades of green only. The range from -60 dBm to -20 dBm is covered by red, yellow and a few shades of green.

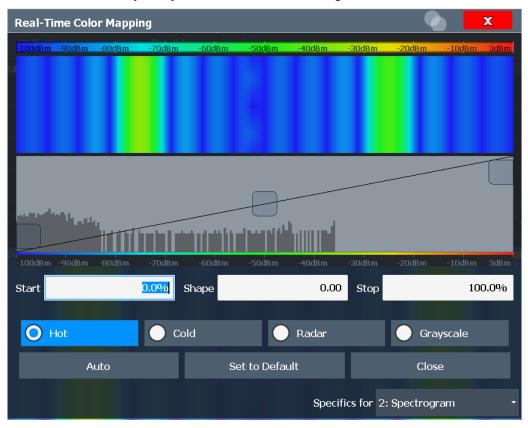


Figure 7-51: Spectrogram with (default) linear color curve shape = 0

The sample spectrogram is dominated by blue and green colors. After shifting the color curve to the left (negative value), more colors cover the range from -100 dBm to -60 dBm (blue, green and yellow). This range occurs more often in the example. The range from -60 dBm to -20 dBm, on the other hand, is dominated by various shades of red only.

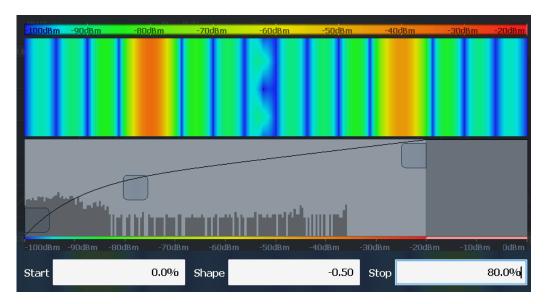


Figure 7-52: Spectrogram with non-linear color curve (shape = -0.5)

7.10.2.2 Spectrogram Settings

Access: [TRACE] > "Spectrogram Config"

The individual settings available for spectrogram display are described here. For settings on color mapping, see "Color Map Settings" on page 482.

Settings concerning the frames and how they are handled during a sweep are provided as additional sweep settings for spectrogram display.


See Chapter 7.6, "Bandwidth, Filter and Sweep Configuration", on page 391.

Search functions for spectrogram markers are described in Chapter 7.9.3.2, "Marker Search Settings for Spectrograms", on page 432.

General Spectrogram Settings

Access: [TRACE] > "Spectrogram Config"

This section describes general settings for spectrogram display.

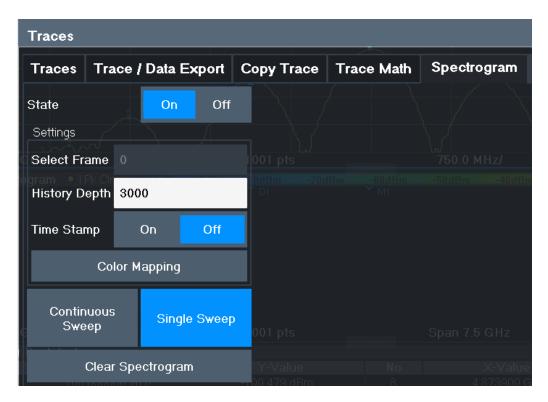

10.4
History Depth
Time Stamp
Color Mapping
Continuous Sweep / Run Cont
Single Sweep / Run Single481
Clear Spectrogram482

Select Frame

Selects a specific frame, loads the corresponding trace from the memory, and displays it in the Spectrum window.

Note that activating a marker or changing the position of the active marker automatically selects the frame that belongs to that marker.

This function is only available in single sweep mode or if the sweep is stopped, and only if a spectrogram is selected.

The most recent frame is number 0, all previous frames have a negative number.

For more details see "Time Frames" on page 473.

Remote command:

CALCulate<n>:SPECtrogram:FRAMe:SELect on page 700

History Depth

Sets the number of frames that the R&S FPL1000 stores in its memory.

The maximum number of frames depends on the Sweep Points.

If the memory is full, the R&S FPL1000 deletes the oldest frames stored in the memory and replaces them with the new data.

Remote command:

CALCulate<n>:SPECtrogram:HDEPth on page 700

Time Stamp

Activates and deactivates the timestamp. The timestamp shows the system time while the measurement is running. In single sweep mode or if the sweep is stopped, the timestamp shows the time and date of the end of the sweep.

When active, the timestamp replaces the display of the frame number.

Remote command:

```
CALCulate<n>:SPECtrogram:TSTamp[:STATe] on page 702 CALCulate<n>:SPECtrogram:TSTamp:DATA? on page 701
```

Color Mapping

Opens the "Color Mapping" dialog.

For details see "Color Maps" on page 476.

Continuous Sweep / Run Cont

After triggering, starts the sweep and repeats it continuously until stopped. This is the default setting.

While the measurement is running, the "Continuous Sweep" softkey and the [RUN CONT] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again. The results are not deleted until a new measurement is started.

Note: Sequencer. If the Sequencer is active, the "Continuous Sweep" softkey only controls the sweep mode for the currently selected channel setup. However, the sweep mode only takes effect the next time the Sequencer activates that channel setup, and only for a channel-defined sequence. In this case, a channel setup in continuous sweep mode is swept repeatedly.

Furthermore, the [RUN CONT] key controls the Sequencer, not individual sweeps. [RUN CONT] starts the Sequencer in continuous mode.

For details on the Sequencer, see Chapter 5.4.1, "The Sequencer Concept", on page 87.

Remote command:

INITiate<n>:CONTinuous on page 543

Single Sweep / Run Single

After triggering, starts the number of sweeps set in "Sweep Count". The measurement stops after the defined number of sweeps has been performed.

While the measurement is running, the "Single Sweep" softkey and the [RUN SINGLE] key are highlighted. The running measurement can be aborted by selecting the highlighted softkey or key again.

Note: Sequencer. If the Sequencer is active, the "Single Sweep" softkey only controls the sweep mode for the currently selected channel setup. However, the sweep mode only takes effect the next time the Sequencer activates that channel setup, and only for a channel-defined sequence. In this case, the Sequencer sweeps a channel setup in single sweep mode only once.

Furthermore, the [RUN SINGLE] key controls the Sequencer, not individual sweeps. [RUN SINGLE] starts the Sequencer in single mode.

If the Sequencer is off, only the evaluation for the currently displayed channel setup is updated.

For details on the Sequencer, see Chapter 5.4.1, "The Sequencer Concept", on page 87.

Remote command:

INITiate<n>[:IMMediate] on page 543

Clear Spectrogram

Resets the spectrogram result display and clears the history buffer.

This function is only available if a spectrogram is selected.

Remote command:

CALCulate<n>:SPECtrogram:CLEar[:IMMediate] on page 699

Color Map Settings

Access: "Overview" > "Analysis" > "Traces" > "Spectrogram" > "Color Mapping" or: [TRACE] > "Spectrogram Config" > "Color Mapping"

For more information on color maps see "Color Maps" on page 476. For details on changing color mapping settings see "How to Configure the Color Mapping" on page 485.

In addition to the available color settings, the dialog box displays the current color map and provides a preview of the display with the current settings.

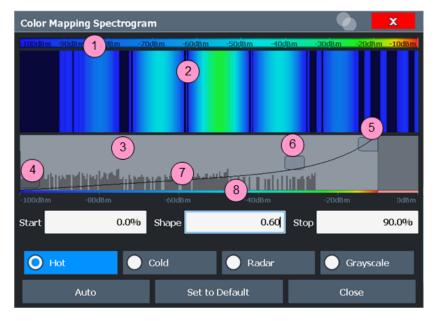


Figure 7-53: Color Mapping dialog box

- 1 = Color map: shows the current color distribution
- 2 = Preview pane: shows a preview of the spectrogram with any changes that you make to the color scheme
- 3 = Color curve pane: graphical representation of all settings available to customize the color scheme
- 4/5 = Color range start and stop sliders: define the range of the color map or amplitudes for the spectrogram
- 6 = Color curve slider: adjusts the focus of the color curve
- 7 = Histogram: shows the distribution of measured values
- 8 = Scale of the horizontal axis (value range)

Start / Stop	483
Shape	
Hot / Cold / Radar / Grayscale	
Auto	
Set to Default	
Close	483

Start / Stop

Defines the lower and upper boundaries of the value range of the spectrogram.

Remote command:

```
DISPlay[:WINDow<n>]:SPECtrogram:COLor:LOWer on page 703
DISPlay[:WINDow<n>]:SPECtrogram:COLor:UPPer on page 704
```

Shape

Defines the shape and focus of the color curve for the spectrogram result display.

"-1 to <0" More colors are distributed among the lower values
"0" Colors are distributed linearly among the values
">0 to 1" More colors are distributed among the higher values

Remote command:

```
DISPlay[:WINDow<n>]:SPECtrogram:COLor:SHAPe on page 704
```

Hot / Cold / Radar / Grayscale

Sets the color scheme for the spectrogram.

Remote command:

```
DISPlay[:WINDow<n>]:SPECtrogram:COLor[:STYLe] on page 704
```

Auto

Defines the color range automatically according to the existing measured values for optimized display.

Set to Default

Sets the color mapping to the default settings.

Remote command:

```
DISPlay[:WINDow<n>]:SPECtrogram:COLor:DEFault on page 703
```

Close

Saves the changes and closes the dialog box.

7.10.2.3 How to Display and Configure a Spectrogram

The following tasks are described here:

- "To display a spectrogram" on page 484
- "To remove the spectrogram display" on page 484
- "To set a marker in the spectrogram" on page 484
- "To configure a spectrogram" on page 485
- "To select a color scheme" on page 485
- "To set the value range graphically using the color range sliders" on page 486
- "To set the value range of the color map numerically" on page 486
- "To set the color curve shape graphically using the slider" on page 487
- "To set the color curve shape numerically" on page 487

To display a spectrogram

1. In the "Overview", select "Display", then drag the evaluation type "Spectrogram" to the diagram area.

Alternatively:

- a) Select the [TRACE] key and then the "Spectrogram Config" softkey.
- b) Toggle "Spectrogram" to "On".
- 2. To clear an existing spectrogram display, select "Clear Spectrogram" .
- 3. Start a new measurement using [RUN SINGLE] or [RUN CONT].

The spectrogram is updated continuously with each new sweep.

- 4. To display the spectrum diagram for a specific time frame:
 - a) Stop the continuous measurement or wait until the single sweep is completed.
 - b) Select the frame number in the diagram footer.
 - c) Enter the required frame number in the edit dialog box. Note that the most recent sweep is frame number 0, all previous frames have negative numbers.

To remove the spectrogram display

- 1. Select the [TRACE] key and then the "Spectrogram Config" softkey.
- 2. Toggle "Spectrogram" to "Off".

The standard spectrum display is restored.

To set a marker in the spectrogram

- 1. While a spectrogram is displayed, select the [MARKER] key.
- 2. Select a "Marker" softkey.
- 3. Enter the frequency or time (x-value) of the marker or delta marker.

4. Enter the frame number for which the marker is to be set, for example 0 for the current frame, or -2 for the second to last frame. Note that the frame number is always 0 or a negative value!

The marker is only visible in the spectrum diagram if it is defined for the currently selected frame. In the spectrogram result display all markers are visible that are positioned on a visible frame.

To configure a spectrogram

- 1. Configure the spectrogram frames:
 - a) Select the [SWEEP] key.
 - b) Select the "Sweep Config" softkey.
 - c) In the "Sweep/Average Count" field, define how many sweeps are to be analyzed to create a single frame.
 - d) In the "Frame Count" field, define how many frames are to be plotted during a single sweep measurement.
 - e) To include frames from previous sweeps in the analysis of the new frame (for "Max Hold", "Min Hold" and "Average" trace modes only), select "Continue Frame" = "On".
- 2. Define how many frames are to be stored in total:
 - a) Select the [TRACE] key and then the "Spectrogram Config" softkey.
 - b) Select the "History Depth" softkey.
 - c) Enter the maximum number of frames to store.
- Optionally, replace the frame number by a time stamp by toggling the "Time Stamp" softkey to "On".
- If necessary, adapt the color mapping for the spectrogram to a different value range or color scheme as described in "How to Configure the Color Mapping" on page 485.

How to Configure the Color Mapping

The color display is highly configurable to adapt the spectrogram to your needs.

The settings for color mapping are defined in the "Color Mapping" dialog box. To display this dialog box, do one of the following:

Select the color map in the window title bar of the Spectrogram result display.

To select a color scheme

You can select which colors are assigned to the measured values.

► In the "Color Mapping" dialog box, select the option for the color scheme to be used.

Editing the value range of the color map

The distribution of the measured values is displayed as a histogram in the "Color Mapping" dialog box. To cover the entire measurement value range, make sure the first and last bar of the histogram are included.

To ignore noise in a spectrogram, for example, exclude the lower power levels from the histogram.




The value range of the color map must cover at least 10% of the value range on the horizontal axis of the diagram, that means, the difference between the start and stop values must be at least 10%.

The value range of the color map can be set numerically or graphically.

To set the value range graphically using the color range sliders

- 1. Select and drag the bottom color curve slider (indicated by a gray box at the left of the color curve pane) to the lowest value you want to include in the color mapping.
- 2. Select and drag the top color curve slider (indicated by a gray box at the right of the color curve pane) to the highest value you want to include in the color mapping.

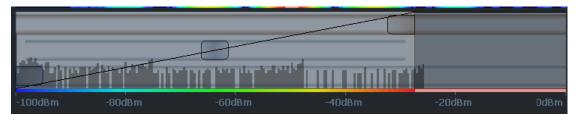

To set the value range of the color map numerically

- 1. In the "Start" field, enter the percentage from the left border of the histogram that marks the beginning of the value range.
- 2. In the "Stop" field, enter the percentage from the right border of the histogram that marks the end of the value range.

Example:

The color map starts at -110 dBm and ends at -10 dBm (that is: a range of 100 dB). In order to suppress the noise, you only want the color map to start at -90 dBm. Thus, you enter 10% in the "Start" field. The R&S FPL1000 shifts the start point 10% to the right, to -90 dBm.



Adjusting the reference level and level range

Since the color map is configured using percentages of the total value range, changing the reference level and level range of the measurement (and thus the power value range) also affects the color mapping in the spectrogram.


Editing the shape of the color curve

The color curve is a tool to shift the focus of the color distribution on the color map. By default, the color curve is linear, i.e. the colors on the color map are distributed evenly. If you shift the curve to the left or right, the distribution becomes non-linear. The slope of the color curve increases or decreases. One end of the color palette then covers a large number of results, while the other end distributes several colors over a relatively small result range.

The color curve shape can be set numerically or graphically.

To set the color curve shape graphically using the slider

Select and drag the color curve shape slider (indicated by a gray box in the middle of the color curve) to the left or right. The area beneath the slider is focused, i.e. more colors are distributed there.

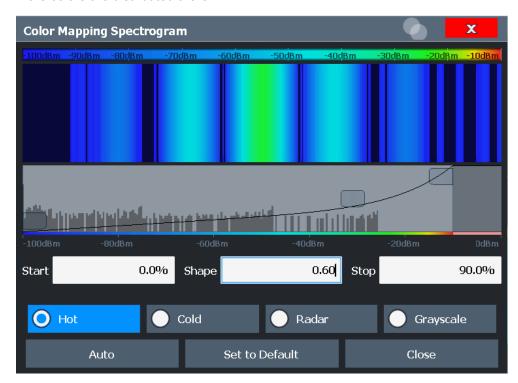


To set the color curve shape numerically

- ▶ In the "Shape" field, enter a value to change the shape of the curve:
 - A negative value (-1 to <0) focuses the lower values
 - 0 defines a linear distribution
 - A positive value (>0 to 1) focuses the higher values

7.10.3 Trace Math

Access: [TRACE] > "Trace Math"

If you have several traces with different modes, for example an average trace and a maximum trace, it may be of interest to compare the results of both traces. In this example, you could analyze the maximum difference between the average and maximum values. To analyze the span of result values, you could subtract the minimum trace from the maximum trace. For such tasks, the results from several traces can be combined using mathematical functions.

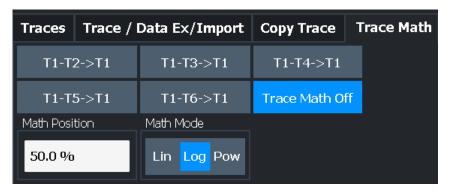

Trace Math Function	488
Trace Math Off	488
Trace Math Position	488
Trace Math Mode	489

Trace Math Function

Defines which trace is subtracted from trace 1. The result is displayed in trace 1.

The result refers to the zero point defined with the Trace Math Position setting. The following subtractions can be performed:

"T1-T2->T1"	Subtracts trace 2 from trace 1.
"T1-T3->T1"	Subtracts trace 3 from trace 1
"T1-T4->T1"	Subtracts trace 4 from trace 1
"T1-T5->T1"	Subtracts trace 5 from trace 1
"T1-T6->T1"	Subtracts trace 6 from trace 1

To switch off the trace math, use the Trace Math Off button.

Remote command:

CALCulate<n>:MATH[:EXPRession][:DEFine] on page 705 CALCulate<n>:MATH:STATe on page 707

Trace Math Off

Deactivates any previously selected trace math functions.

Remote command:

CALC:MATH:STAT OFF, see CALCulate<n>:MATH:STATe on page 707

Trace Math Position

Defines the zero point on the y-axis of the resulting trace in % of the diagram height. The range of values extends from -100 % to +200 %.

Remote command:

CALCulate<n>:MATH:POSition on page 706

Trace Math Mode

Defines the mode for the trace math calculations.

"Lin"

Activates linear subtraction, which means that the power level values are converted into linear units prior to subtraction. After the subtraction, the data is converted back into its original unit.

This setting takes effect if the grid is set to a linear scale. In this case, subtraction is done in two ways (depending on the set unit):

- The unit is set to either W or dBm: the data is converted into W prior to subtraction, i.e. averaging is done in W.
- The unit is set to either V, A, dBmV, dBµV, dBµA or dBpW: the data is converted into V prior to subtraction, i.e. subtraction is done in V.

"Log"

Activates logarithmic subtraction.

This subtraction method only takes eff

This subtraction method only takes effect if the grid is set to a logarithmic scale, i.e. the unit of the data is dBm. In this case the values are subtracted in dBm. Otherwise (i.e. with linear scaling) the behavior is the same as with linear subtraction.

"Power"

Activates linear power subtraction.

The power level values are converted into unit Watt prior to subtraction. After the subtraction, the data is converted back into its original

Unlike the linear mode, the subtraction is always done in W.

Remote command:

CALCulate<n>:MATH:MODE on page 706

7.11 Display and Limit Lines

Display and limit lines help you analyze a measurement trace.



Display lines are only available in the Spectrum and (optional) Analog Demodulation applications.

In the I/Q Analyzer application, lines are only available for measurements in the frequency domain.

Access: "Overview" > "Analysis" > "Lines"

For remote operation, see Chapter 8.8.9, "Configuring Display and Limit Lines", on page 774.

•	Display Lines	490
•	Limit Lines	492

7.11.1 Display Lines

7.11.1.1 Basics on Display Lines

Display lines help you analyze a trace – as do markers. The function of a display line is comparable to that of a ruler that can be shifted on the trace in order to mark absolute values. They are used exclusively to visually mark relevant frequencies or points in time (zero span), as well as constant level values. It is not possible to check automatically whether the points are below or above the marked level values - use limit lines for that task (see Chapter 7.11.2.1, "Basics on Limit Lines", on page 492).

Two different types of display lines are provided:

- Two horizontal lines: "Horizontal Line 1" and "Horizontal Line 2".
 These lines are continuous horizontal lines across the entire width of a diagram and can be shifted up and down.
- Two vertical lines: "Vertical Line 1" and "Vertical Line 2"
 These lines are continuous vertical lines across the entire height of the diagram and can be shifted left and right.

Lables

Each line is identified by one of the following abbreviations in the diagrams:

- H1: "Horizontal Line 1"
- H2: "Horizontal Line 2"
- V1: "Vertical Line 1"
- V2: "Vertical Line 2"

7.11.1.2 Display Line Settings

Access: "Overview" > "Analysis" > "Lines" > "Display Lines"

Two vertical and two horizontal lines can be defined in the display.



Vertical Line 1 / Vertical Line 2	491
Horizontal Line 1 / Horizontal Line 2	491

Vertical Line 1 / Vertical Line 2

Activates a vertical display line (V1 or V2) in the diagram at the specified point of the x-axis, depending on the scale of the axis.

Remote command:

```
CALCulate<n>:FLINe<fl> on page 775
CALCulate<n>:FLINe<fl> on page 775
CALCulate<n>:TLINe<tl> on page 775
CALCulate<n>:TLINe<tl> on page 775
```

Horizontal Line 1 / Horizontal Line 2

Activates a horizontal display line (H1 or H2) in the diagram at the specified point of the y-axis

Remote command:

```
CALCulate<n>:DLINe<dl> on page 774
CALCulate<n>:DLINe<dl> on page 774
```

7.11.1.3 Defining Display Lines

- 1. Display lines are configured in the "Lines Config" dialog box. To display this dialog box, press the [Lines] key and then "Lines Config".
- 2. Select the "Display Lines" tab.
- 3. To define a vertical line, select "Vertical Line 1" or 2 and enter the x-value at which the line is to be displayed.
 - To define a horizontal line, select "Horizontal Line 1" or 2 and enter the y-value at which the line is to be displayed.

7.11.2 Limit Lines

Limit lines allow you to check automatically whether the measured points are below or above specified values.

•	Basics on Limit Lines	492
	Limit Line Settings and Functions.	
	How to Define Limit Lines	
•	Reference: Limit Line File Format.	507

7.11.2.1 Basics on Limit Lines

Limit lines are used to define amplitude curves or spectral distribution boundaries in the result diagram which are not to be exceeded. They indicate, for example, the upper limits for interference radiation or spurious waves which are allowed from a device under test (DUT). When transmitting information in TDMA systems (e.g. GSM), the amplitude of the bursts in a time slot must adhere to a curve that falls within a specified tolerance band. The lower and upper limits may each be specified by a limit line. Then, the amplitude curve can be controlled either visually or automatically for any violations of the upper or lower limits (GO/NOGO test).

The R&S FPL1000 supports limit lines with a maximum of 200 data points. Eight of the limit lines stored in the instrument can be activated simultaneously. The number of limit lines stored in the instrument is only limited by the capacity of the storage device used.

Limit line data can also be exported to a file in ASCII (CSV) format for further evaluation in other applications. Limit lines stored in the specified ASCII (CSV) format can also be imported to the R&S FPL1000 for other measurements.

Compatibility

Limit lines are compatible with the current measurement settings, if the following applies:

- The x unit of the limit line has to be identical to the current setting.
- The y unit of the limit line has to be identical to the current setting with the exception of dB based units; all dB based units are compatible with each other.

Validity

Only limit lines that fulfill the following conditions can be activated:

- Each limit line must consist of a minimum of 2 and a maximum of 200 data points.
- The frequencies/times for each data point must be defined in ascending order; however, for any single frequency or time, two data points may be entered (to define a vertical segment of a limit line).
- Gaps in frequency or time are not allowed. If gaps are desired, two separate limit lines must be defined and then both enabled.
- The entered frequencies or times need not necessarily be selectable in R&S FPL1000. A limit line may also exceed the specified frequency or time range.
 The minimum frequency for a data point is -200 GHz, the maximum frequency is

200 GHz. For the time range representation, negative times may also be entered. The allowed range is -1000 s to +1000 s.

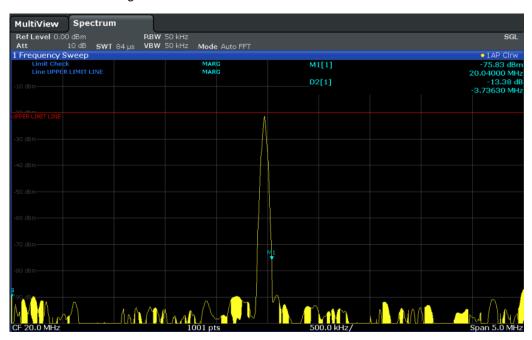


Figure 7-54: Example for an upper limit line

Limits and Margins

Limit lines define strict values that must not be exceeded by the measured signal. A **margin** is similar to a limit, but less strict and it still belongs to the valid data range. It can be used as a warning that the limit is almost reached. The margin is not indicated by a separate line in the display, but if it is violated, a warning is displayed. Margins are defined as lines with a fixed distance to the limit line.


To check the signal for maximum levels you must define an **upper limit**, whereas to check the signal for minimum levels you must define a **lower limit**.

Limits can be defined relative to the reference level, the beginning of the time scale, or the center frequency, or as absolute values.

Relative scaling is suitable, for example, if masks for bursts are to be defined in zero span, or if masks for modulated signals are required in the frequency domain.

Thresholds

If the y-axis for the limit line data points uses relative scaling, an additional absolute **threshold** can be defined for the limit check. In this case, both the threshold value and the relative limit line must be exceeded before a violation occurs.

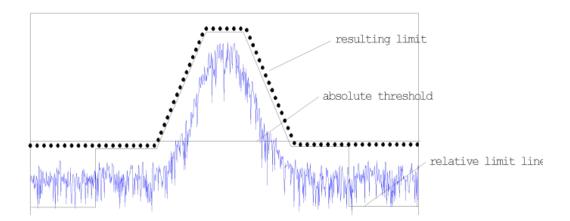

Offsets and Shifting

A configured limit line can easily be moved vertically or horizontally. Two different methods to do so are available:

- An offset moves the entire line in the diagram without editing the configured values
 or positions of the individual data points. This option is only available if relative
 scaling is used.
 - Thus, a new limit line can be easily generated based upon an existing limit line which has been shifted horizontally or vertically.
- Defining a shift width for the values or position of the individual data points changes the line configuration, thus changing the position of the line in the diagram.

Limit Check Results

A limit check is automatically performed as soon as any of the limit lines is activated ("Visibility" setting). Only the specified "Traces to be Checked" are compared with the active limit lines. The status of the limit check for each limit line is indicated in the diagram. If a violation occurs, the limit check status is set to "MARG" for a margin violation, or to "Fail" for a limit violation.

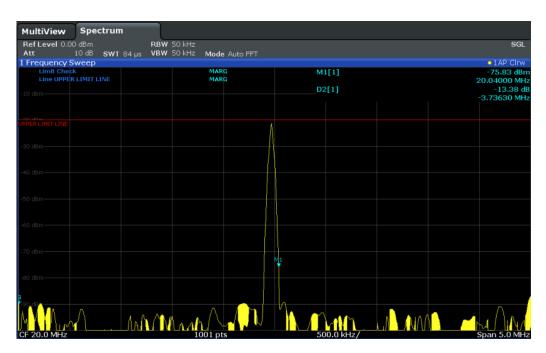


Figure 7-55: Margin violation for limit check

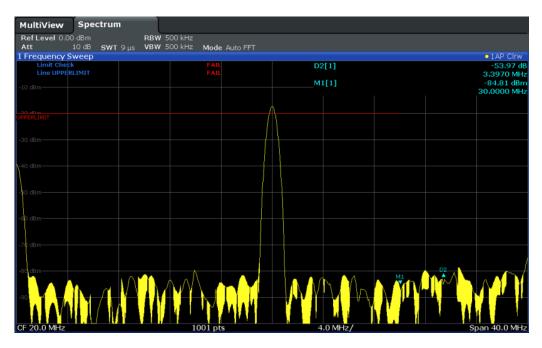


Figure 7-56: Limit violation for limit check



Storing and Recalling Limit Lines

Limit lines can be stored with the configuration settings so they can be recalled for other measurements at a later time (seeChapter 6.2.2, "Storing and Recalling Instrument Settings and Measurement Data", on page 100). Note, however, that any changes made to the limit lines *after* storing the configuration file cannot be restored and will be overwritten by the stored values when the configuration file is recalled. Always remember to store the settings again after changing the limit line values.

After recalling measurement settings, the limit line values applied to the measurement may be different to those displayed in the "Limit Lines" dialog box; see "Saving and recalling transducer and limit line settings" on page 102.

7.11.2.2 Limit Line Settings and Functions

Access: "Overview" > "Analysis" > "Lines"

or: [LINES] > "Line Config"

Up to 8 limit lines can be displayed simultaneously in the R&S FPL1000. Many more can be stored on the instrument.




Stored limit line settings

When storing and recalling limit line settings, consider the information provided in "Saving and recalling transducer and limit line settings" on page 102.

Limit Line Management

Access: "Overview" > "Analysis" > "Lines" > "Limit Lines"

or: [LINES] > "Line Config" > "Limit Lines"

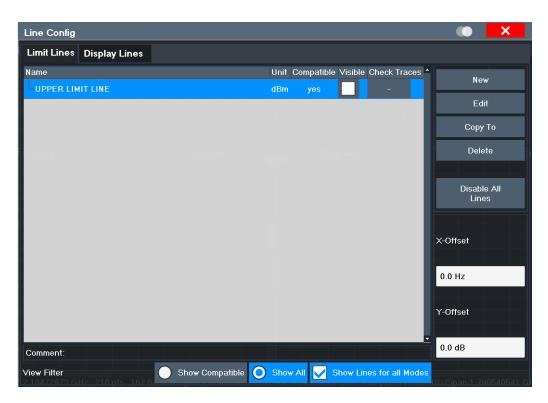

For the limit line overview, the R&S FPL1000 searches for all stored limit lines with the file extension .LIN in the limits subfolder of the main installation folder. The overview allows you to determine which limit lines are available and can be used for the current measurement.

For details on settings for individual lines see "Limit Line Details" on page 499.

For more basic information on limit lines see Chapter 7.11.2.1, "Basics on Limit Lines", on page 492.

Name	497
Unit	498
Compatibility	498
Visibility	
Traces to be Checked	
Comment	498
Included Lines in Overview (View Filter)	498
L Show Lines for all Modes	
X-Offset	498
Y-Offset	499
Create New Line	499
Edit Line	499
Copy Line	499
Delete Line	
Disable All Lines	499

Name

The name of the stored limit line.

Unit

The unit in which the y-values of the data points of the limit line are defined.

Compatibility

Indicates whether the limit line definition is compatible with the current measurement settings.

For more information on which conditions a limit line must fulfill to be compatible, see "Compatibility" on page 492.

Visibility

Displays or hides the limit line in the diagram. Up to 8 limit lines can be visible at the same time. Inactive limit lines can also be displayed in the diagram.

Remote command:

```
CALCulate<n>:LIMit:LOWer:STATe on page 781
CALCulate<n>:LIMit:UPPer:STATe on page 785
CALCulate<n>:LIMit:ACTive? on page 786
```

Traces to be Checked

Defines which traces are automatically checked for conformance with the limit lines. As soon as a trace to be checked is defined, the assigned limit line is active. One limit line can be activated for several traces simultaneously. If any of the "Traces to be Checked" violate any of the active limit lines, a message is indicated in the diagram.

Remote command:

```
CALCulate<n>:LIMit:TRACe<t>:CHECk on page 787
```

Comment

An optional description of the limit line.

Included Lines in Overview (View Filter)

Defines which of the stored lines are included in the overview.

"Show Com- Only compatible lines

patible" Whether a line is compatible or not is indicated in the Compatibility

setting.

"Show All" All stored limit lines with the file extension .LIN in the limits sub-

folder of the main installation folder (if not restricted by "Show Lines

for all Modes" setting).

Show Lines for all Modes ← Included Lines in Overview (View Filter)

If activated (default), limit lines from all applications are displayed. Otherwise, only lines that were created in the Spectrum application are displayed.

Note that limit lines from some applications may include additional properties that are lost when the limit lines are edited in the Spectrum application. In this case a warning is displayed when you try to store the limit line.

X-Offset

Shifts a limit line that has been specified for relative frequencies or times (x-axis) horizontally.

This setting does not have any effect on limit lines that are defined by absolute values for the x-axis.

Remote command:

CALCulate<n>:LIMit:CONTrol:OFFSet on page 778

Y-Offset

Shifts a limit line that has relative values for the y-axis (levels or linear units such as volt) vertically.

This setting does not have any effect on limit lines that are defined by absolute values for the y-axis.

Remote command:

```
CALCulate<n>:LIMit:LOWer:OFFSet on page 780 CALCulate<n>:LIMit:UPPer:OFFSet on page 784
```

Create New Line

Creates a new limit line.

Edit Line

Edit an existing limit line configuration.

Copy Line

Copy the selected limit line configuration to create a new line.

Remote command:

```
CALCulate<n>:LIMit:COPY on page 786
```

Delete Line

Delete the selected limit line configuration.

Remote command:

```
CALCulate<n>:LIMit:DELete on page 787
```

Disable All Lines

Disable all limit lines in one step.


Remote command:

```
CALCulate<n>:LIMit:STATe on page 787
```

Limit Line Details

```
Access: "Overview" > "Analysis" > "Lines" > "Limit Lines" > "New" / "Edit" / "Copy To"

or: [LINES] > "Line Config" > "Limit Lines" > "New" / "Edit" / "Copy To"
```

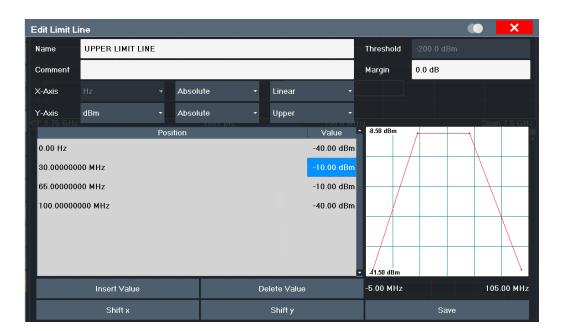

Name	500
Comment	500
Threshold	500
Margin	501
X-Axis	501
Y-Axis	501
Data Points	501
Insert Value	502
Delete Value	502
Shift x	502
Shift y	502
Save	502
Import	502
Export	502

Name

Defines the limit line name. All names must be compatible with Windows conventions for file names. The limit line data is stored under this name (with a .LIN extension).

Remote command:

CALCulate<n>:LIMit:NAME on page 782

Comment

Defines an optional comment for the limit line.

Remote command:

CALCulate<n>:LIMit:COMMent on page 777

Threshold

Defines an absolute threshold value (only for relative scaling of the y-axis).

For details on thresholds see "Thresholds" on page 493.

Remote command:

```
CALCulate<n>:LIMit:LOWer:THReshold on page 782
CALCulate<n>:LIMit:UPPer:THReshold on page 785
```

Margin

Defines a margin for the limit line. The default setting is 0 dB (i.e. no margin).

For details on margins see "Limits and Margins" on page 493.

Remote command:

```
CALCulate<n>:LIMit:LOWer:MARGin on page 780 CALCulate<n>:LIMit:UPPer:MARGin on page 783
```

X-Axis

Describes the horizontal axis on which the data points of the limit line are defined. Includes the following settings:

- Unit:
 - "Hz" : for frequency domain
 - "s" : for time domain
- Scaling mode: absolute or relative values

For relative values, the frequencies are referred to the currently set center frequency. In the time domain, the left boundary of the diagram is used as the reference.

Scaling: linear or logarithmic

Remote command:

```
CALCulate<n>:LIMit:LOWer:MODE on page 780

CALCulate<n>:LIMit:UPPer:MODE on page 784

CALCulate<n>:LIMit:CONTrol:DOMain on page 778

CALCulate<n>:LIMit:CONTrol:SPACing on page 779
```

Y-Axis

Describes the vertical axis on which the data points of the limit line are defined. Includes the following settings:

- Level unit
- Scaling mode: absolute or relative (dB/%) values
 Relative limit values refer to the reference level.
- Limit type: upper or lower limit; values must stay above the lower limit and below the upper limit to pass the limit check

Remote command:

```
CALCulate<n>:LIMit:UNIT on page 782

CALCulate<n>:LIMit:LOWer:SPACing on page 781

CALCulate<n>:LIMit:UPPer:SPACing on page 785
```

Data Points

Each limit line is defined by a minimum of 2 and a maximum of 200 data points. Each data point is defined by its position (x-axis) and value (y-value). Data points must be defined in ascending order. The same position can have two different values.

Remote command:

```
CALCulate<n>:LIMit:CONTrol[:DATA] on page 777
CALCulate<n>:LIMit:LOWer[:DATA] on page 779
CALCulate<n>:LIMit:UPPer[:DATA] on page 783
```

Insert Value

Inserts a data point in the limit line above the selected one in the "Edit Limit Line" dialog box.

Delete Value

Deletes the selected data point in the "Edit Limit Line" dialog box.

Shift x

Shifts the x-value of each data point horizontally by the defined shift width (as opposed to an additive offset defined for the entire limit line, see "X-Offset" on page 498).

Remote command:

```
CALCulate<n>:LIMit:CONTrol:SHIFt on page 779
```

Shift y

Shifts the y-value of each data point vertically by the defined shift width (as opposed to an additive offset defined for the entire limit line, see "Y-Offset" on page 499).

Remote command:

```
CALCulate<n>:LIMit:LOWer:SHIFt on page 781 CALCulate<n>:LIMit:UPPer:SHIFt on page 784
```

Save

Saves the currently edited limit line under the name defined in the "Name" field.

Import

Opens a file selection dialog box and loads the limit line from the selected file in .CSV format

Note that a valid import file must contain a minimum of required information for the R&S FPL1000.

For details on the file format see Chapter 7.11.2.4, "Reference: Limit Line File Format", on page 507.

Remote command:

```
MMEMory:LOAD<n>:LIMit on page 788
```

Export

Opens a file selection dialog box and stores the currently displayed limit line to the defined file in .CSV format.

For details on the file format see Chapter 7.11.2.4, "Reference: Limit Line File Format", on page 507.

The limit line can be imported again later by the R&S FPL1000 for use in other measurements.

Remote command:

```
MMEMory:STORe<n>:LIMit on page 788
```

Display and Limit Lines

7.11.2.3 How to Define Limit Lines

Access: "Overview" > "Analysis" > "Lines" > "Limit Lines"

or: [LINES] > "Line Config" > "Limit Lines"



Limit lines for spurious and SEM measurements

Note that for spurious and SEM measurements, special limit lines can be defined for each frequency range, see "Limit Lines in SEM Measurements" on page 296 and "Limit Lines in Spurious Measurements" on page 333. It is strongly recommended that you define limits only via the "Sweep List" dialog for these measurements, not using the [Lines] key.

Any changes to the special limit lines are automatically overwritten when the sweep list settings are changed.

The following tasks are described here:

- "How to find compatible limit lines" on page 503
- "How to activate and deactivate a limit check" on page 503
- "How to edit existing limit lines" on page 504
- "How to copy an existing limit line" on page 504
- "How to delete an existing limit line" on page 504
- "How to configure a new limit line" on page 504
- "How to move the limit line vertically or horizontally" on page 505

How to find compatible limit lines

▶ In the "Line Config" dialog box, select the "View Filter" option: "Show Compatible" .

All stored limit lines with the file extension .LIN in the limits subfolder of the main installation folder of the instrument that are compatible to the current measurement settings are displayed in the overview.

How to activate and deactivate a limit check

A limit check is automatically performed as soon as any of the limit lines is activated.

- 1. To activate a limit check:
 - Select the "Check Traces" setting for a limit line in the overview and select the trace numbers to be included in the limit check. One limit line can be assigned to several traces.
 - The specified traces to be checked are compared with the active limit lines. The status of the limit check is indicated in the diagram.
- To deactivate a limit line, deactivate all "Traces to be Checked" for it.To deactivate all limit lines at once, select the "Disable All Lines" button.
 - The limit checks for the deactivated limit lines are stopped and the results are removed form the display.

How to edit existing limit lines

Existing limit line configurations can be edited.

- 1. In the "Line Config" dialog box, select the limit line.
- 2. Select the "Edit" button.
- Edit the line configuration as described in "How to configure a new limit line" on page 504.
- 4. Save the new configuration by selecting the "Save" button.

If the limit line is active, the edited limit line is displayed in the diagram.

How to copy an existing limit line

- 1. In the dialog box, select the limit line.
- 2. Select the "Line Config" "Copy To" button.
- 3. Define a new name to create a new limit with the same configuration as the source line.
- Edit the line configuration as described in "How to configure a new limit line" on page 504.
- 5. Save the new configuration by selecting the "Save" button.

The new limit line is displayed in the overview and can be activated.

How to delete an existing limit line

- 1. In the "Line Config" dialog box, select the limit line.
- 2. Select the "Delete" button.
- 3. Confirm the message.

The limit line and the results of the limit check are deleted.

How to configure a new limit line

- 1. In the "Line Config" dialog box, select the "New" button.
 - The "Edit Limit Line" dialog box is displayed. The current line configuration is displayed in the preview area of the dialog box. The preview is updated after each change to the configuration.
- 2. Define a "Name" and, optionally, a "Comment" for the new limit line.
- 3. Define the x-axis configuration:
 - Time domain or frequency domain
 - Absolute or relative limits
 - Linear or logarithmic scaling
- Define the y-axis configuration:
 - Level unit

- Absolute or relative limits
- Upper or lower limit line
- 5. Define the data points: minimum 2, maximum 200:
 - a) Select "Insert Value".
 - b) Define the x-value ("Position") and y-value ("Value") of the first data point.
 - c) Select "Insert Value" again and define the second data point.
 - d) Repeat this to insert all other data points.
 - To insert a data point before an existing one, select the data point and then "Insert Value" .
 - To insert a new data point at the end of the list, move the focus to the line after the last entry and then select "Insert Value".
 - To delete a data point, select the entry and then "Delete Value".
- 6. Check the current line configuration in the preview area of the dialog box. If necessary, correct individual data points or add or delete some.
 - If necessary, shift the entire line vertically or horizontally by selecting the "Shift x" or "Shift y" button and defining the shift width.
- Optionally, define a "Margin" at a fixed distance to the limit line.
 The margin must be within the valid value range and is not displayed in the diagram or preview area.
- 8. Optionally, if the y-axis uses relative scaling, define an absolute "Threshold" as an additional criteria for a violation.
- 9. Save the new configuration by selecting the "Save" button.

The new limit line is displayed in the overview and can be activated.

How to move the limit line vertically or horizontally

A configured limit line can easily be moved vertically or horizontally. Thus, a new limit line can be easily generated based upon an existing limit line which has been shifted horizontally.

- 1. In the "Line Config" dialog box, select the limit line.
- 2. To shift the complete limit line parallel in the horizontal direction, select the "X-Off-set" button and enter an offset value.
 - To shift the complete limit line parallel in the vertical direction, select the "Y-Offset" button and enter an offset value.
- 3. To shift the individual data points of a limit line by a fixed value (all at once):
 - a) Select the "Edit" button.
 - b) In the "Edit Limit Line" dialog box, select the "Shift x" or "Shift y" button and define the shift width.
 - c) Save the shifted data points by selecting the "Save" button.

If activated, the limit line is shifted in the diagram.

How to export a limit line

Limit line configurations can be stored to an ASCII file for evaluation in other programs or to be imported later for other measurements.

- 1. In the "Line Config" dialog box, select the limit line.
- 2. Select the "New" or "Edit" button.
- Define the limit line as described in "How to configure a new limit line" on page 504.
- 4. Select "Export" to save the configuration to a file.

You are asked whether you would like to save the configuration internally on the R&S FPL1000 first.

- 5. Select a file name and location for the limit line.
- 6. Select the decimal separator to be used in the file.
- 7. Select "Save".

The limit line is stored to a file with the specified name and the extension .CSV. For details on the file format see Chapter 7.11.2.4, "Reference: Limit Line File Format", on page 507.

How to import a limit line

Limit line configurations that are stored in an ASCII file and contain a minimum of required data can be imported to the R&S FPL1000.

For details on the required file format see Chapter 7.11.2.4, "Reference: Limit Line File Format", on page 507.

- 1. In the "Line Config" dialog box, select the limit line.
- 2. Select the "New" or "Edit" button.
- 3. Select "Import" to load a limit line from a file.

You are asked whether you would like to save the current configuration on the R&S FPL1000 first.

- 4. Select the file name of the limit line.
- Select the decimal separator that was used in the file.
- 6. Select "Select".

The limit line is loaded from the specified file and displayed in the "Edit Limit Line" dialog box.

Activate the limit line as described in "How to activate and deactivate a limit check" on page 503.

Display and Limit Lines

7.11.2.4 Reference: Limit Line File Format

Limit line data can be exported to a file in ASCII (CSV) format for further evaluation in other applications. Limit lines stored in the specified ASCII (CSV) format can also be imported to the R&S FPL1000 for other measurements (see "How to import a limit line" on page 506). This reference describes in detail the format of the export/import files for limit lines. Note that the **bold** data is **mandatory**, all other data is optional.

Different language versions of evaluation programs may require a different handling of the decimal point. Thus, you can define the decimal separator to be used (see " Decimal Separator " on page 113).

Table 7-24: ASCII file format for limit line files

File contents	Description
Header data	
sep=;	Separator for individual values (required by Microsoft Excel, for example)
Type;RS_LimitLineDefinition;	Type of data
FileFormatVersion;1.00;	File format version
Date;01.Oct 2006;	Date of data set storage
OptionID;SpectrumAnalyzer	Application the limit line was created for
Name;RELFREQ1	Limit line name
Comment;Defines the upper limit line	Description of limit line
XAxisScaling;LINEAR	Scaling of x-axis linear (LIN) or logarithmic (LOG)
XAxisUnit;FREQ_HZ	Unit of x values
XAxisScaleMode;ABSOLUTE	Scaling of x-axis (absolute or relative)
YAxisUnit;LEVEL_DB	Unit of y values
YAxisScaleMode;ABSOLUTE	Scaling of y-axis (absolute or relative)
Mode;UPPER	Type of limit line (upper, lower)
ThresholdUnit;LEVEL_DBM	Unit of threshold value
ThresholdValue;-200	Threshold value
MarginValue;0	Margin value
NoOfPoints;5	Number of points the line is defined by
Data section for individual data points	
-4500000000;-50	x- and y-values of each data point defining the line
-200000000;-30	
-100000000;0	
0;-30	
2500000000;-50	

7.12 Zoomed Displays

You can zoom into the diagram to visualize the measurement results in greater detail. Using the touchscreen or a mouse pointer you can easily define the area to be enlarged.

Graphical Zoom Versus Measurement Zoom

Graphical zooming is merely a visual tool, it does not change any measurement settings, such as the number of sweep points, the frequency range, or the reference level. Graphical zooming only changes the resolution of the displayed trace points temporarily. You must explicitly activate the graphical zoom function (see Chapter 7.12.2, "Zoom Functions", on page 510).



Graphical zoom and the number of sweep points

Note that (graphical) zooming is merely a visual tool, it does not change any measurement settings, such as the number of sweep points!

You should increase the number of sweep points before zooming, as otherwise the resolution of the trace in the zoomed region is poor (see Chapter 7.6.1.8, "How Much Data is Measured: Sweep Points and Sweep Count", on page 396).

When you change the display using touch gestures, however, the corresponding measurement settings are adapted (see also Chapter 4.4.4, "Touchscreen Gestures", on page 76). For example, dragging horizontally in a spectrum display changes the center frequency. Dragging vertically in a spectrum display changes the reference level (for absolute scaling). These changes are permanent for the measurement. This behavior is also referred to as *measurement zoom*, and is active by default in the new R&S FPL1000.However, you can also activate it manually for a display that has already been zoomed graphically. In this case, the temporary changes to the display are replaced by permanent changes to the measurement settings with the same effect.

Example:

Assume you have a spectrum display from a spurious emission measurement. You graphically zoom into the area around a detected spur. If you now activate a measurement zoom, the reference level, the center frequency, the frequency span, and the scaling settings are adapted so that the results of the measurement now indicate only the formerly zoomed area around the detected spur.

•	Single Zoom Versus Multiple Zoom	. 508
•	Zoom Functions	. 510
	How to Zoom Into a Diagram	512

7.12.1 Single Zoom Versus Multiple Zoom

Two different (graphical) zoom modes are available: single zoom and multiple zoom. A single zoom replaces the current diagram by a new diagram which displays an enlarged extract of the trace. This function can be used repetitively until the required

details are visible. In multiple zoom mode, you can enlarge up to four different areas of the trace simultaneously. An overview window indicates the zoom areas in the original trace, while the zoomed trace areas are displayed in individual windows. The zoom areas can be moved and resized any time. The zoom area that corresponds to the individual zoom display is indicated in the lower right corner, between the scrollbars.



Figure 7-57: Single zoom

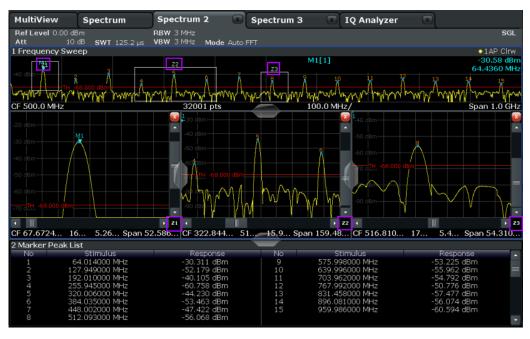


Figure 7-58: Multiple zoom



Using the zoom area to restrict a peak search

The selected zoom area can be used to restrict the search range for a peak search, but only in single zoom mode (see " Use Zoom Limits " on page 432).

7.12.2 Zoom Functions

Access: "Zoom" icons in toolbar

Single Zoom	510
Multi-Zoom	
Measurement Zoom	510
Level Lock	511
L X-LockL Y-Lock	511
L Y-Lock	511
L Adapt Hardware to Zoom (selected diagram)	511
Restore Original Display	511

Single Zoom



A single zoom replaces the current diagram by a new diagram which displays an enlarged extract of the trace. This function can be used repetitively until the required details are visible.

Remote command:

```
DISPlay[:WINDow<n>]:ZOOM[:STATe] on page 691
DISPlay[:WINDow<n>]:ZOOM:AREA on page 690
```

Multi-Zoom



In multiple zoom mode, you can enlarge several different areas of the trace simultaneously. An overview window indicates the zoom areas in the original trace, while the zoomed trace areas are displayed in individual windows. The zoom area that corresponds to the individual zoom display is indicated in the lower right corner, between the scrollbars.

Remote command:

```
DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>[:STATe] on page 692
DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:AREA on page 691
```

Measurement Zoom

As opposed to the graphical zoom, which is merely a visual tool, the measurement zoom adapts the measurement settings such that the data you are interested in is displayed in the required detail. In measurement zoom mode, you can change the display using touch gestures. This is the default operating mode of the R&S FPL1000.

For details on touch gestures see "Operating Basics" in the R&S FPL1000 Getting Started manual.

Note: The measurement settings are adapted to practical values based on a suitable grid for the current settings, rather than to unwieldy values that reflect precisely the pixel you happen to tap.

If the measurement zoom leads to undesirable results, you can easily return to the original measurement settings using the "UNDO" function.

When you select the "Measurement Zoom" icon, then tap in a diagram, a dotted rectangle is displayed which you can drag to define the zoom area. This allows you to define the zoom area more precisely than by spreading two fingers in the display.

The measurement zoom function provides further options in a context-sensitive menu, which is displayed when you tap the icon for a second or so (or right-click it). These options concern the behavior of the firmware for subsequent touch gestures on the screen. Note that these settings remain unchanged after a channel preset.



Level Lock ← **Measurement Zoom**

If activated (default), the reference level (and thus the attenuation) is locked, that is: remains unchanged during touch gestures on the screen.

X-Lock ← **Measurement Zoom**

If activated, the x-axis of the diagram is not changed during subsequent touch gestures.

Y-Lock ← Measurement Zoom

If activated, the y-axis of the diagram is not changed during subsequent touch gestures.

Adapt Hardware to Zoom (selected diagram) ← Measurement Zoom

If you already performed a graphical zoom using the "Single Zoom" on page 510 or "Multi-Zoom" on page 510 functions, this function automatically adapts the measurement settings to maintain the currently zoomed display.

Restore Original Display



Restores the original display, that is, the originally calculated displays for the entire capture buffer, and closes all zoom windows.

Remote command:

Single zoom:

DISPlay[:WINDow<n>]:ZOOM[:STATe] on page 691

Multiple zoom:

 $\label{local_decom} $$ DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>[:STATe] on page 692 (for each multiple zoom window)$

7.12.3 How to Zoom Into a Diagram

The remote commands required to zoom into a display are described in Chapter 8.8.6, "Zooming into the Display", on page 690.

The following tasks are described here:

- "To zoom into the diagram at one position" on page 512
- "To return to original display" on page 513
- "To zoom into multiple positions in the diagram" on page 513
- "To maintain a zoomed display permanently" on page 514



For information on how to zoom into a diagram using touch gestures and change the display permanently, see Chapter 4.4.4, "Touchscreen Gestures", on page 76.


To zoom into the diagram at one position

1.

Click on the "Single Zoom" icon in the toolbar.

Zoom mode is activated.

2. Tap and drag your finger in the diagram to select the area to be enlarged. The selected area is indicated by a dotted rectangle.

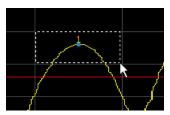


When you leave the touchscreen, the diagram is replaced by the zoomed trace area.

3. Repeat these steps, if necessary, to enlarge the diagram further.



Scrolling in the zoomed display

You can scroll the diagram area to display the entire diagram using the scrollbars at the right and at the bottom of the diagram.

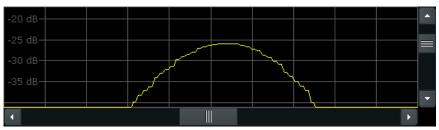

To return to original display



Click on the "Zoom Off" icon in the toolbar.

The original trace display is restored. Zoom mode remains active, however.

To zoom into multiple positions in the diagram

Click on the "Multi-Zoom" icon in the toolbar.

Multiple zoom mode is activated.

Select the first area in the diagram to be enlarged as described in "To zoom into the diagram at one position" on page 512. The selected area is indicated by a dotted rectangle.

When you have completed your selection, the original trace is shown in an overview diagram with the selected area indicated by a dotted rectangle. The zoomed trace area is displayed in a separate window (see Figure 7-58.



Click on the "Multi-Zoom" icon in the toolbar again.

- In the overview diagram, select the next area to be enlarged.
 The second zoom area is indicated in the overview diagram, and a second zoom window is displayed.
- 5. Repeat these steps, if necessary, to zoom into further trace areas (up to four).

To move or change zoom areas

In multiple zoom mode, you can change the size or position of the individual zoom areas easily at any time.

► To resize a zoom area, tap directly **on** the corresponding frame in the overview window and drag the line to change the size of the frame.

To move a zoom area, tap **inside** the corresponding frame in the overview window and drag the frame to the new position.

The contents of the zoom windows are adapted accordingly.

To maintain a zoomed display permanently

Graphical zooming only changes the resolution of the displayed trace points temporarily. In order to change the display permanently, you must change the corresponding measurement settings.

(Note: Performing a measurement zoom automatically adapts the measurement settings to reflect a graphically zoomed display, see "To perform a measurement zoom" on page 514).

1. Perform a graphical zoom as described in the previous procedures.



- 2. Select the "Measurement Zoom" icon from the toolbar.
- 3. Select "Adapt Hardware to Zoom (selected diagram)".

The measurement settings are adapted as required to obtain the zoomed result display.

To perform a measurement zoom

Performing a measurement zoom automatically adapts the measurement settings to reflect a graphically zoomed display.



- Select the "Measurement Zoom" icon from the toolbar.
- 2. Do one of the following to define the zoom area:
 - Stretch two fingers in the diagram to enlarge the area between them.
 - Tap and drag one finger in the diagram to select the area to be enlarged. The selected area is indicated by a dotted rectangle.

The measurement settings are adapted as required to obtain the zoomed result display.

7.13 Importing and Exporting Measurement Results for Evaluation

The R&S FPL1000 provides various evaluation methods for the results of the performed measurements. However, you may want to evaluate the data with further, exter-

nal applications. In this case, you can export the measurement data to a standard format file (ASCII or XML). Some of the data stored in these formats can also be reimported to the R&S FPL1000 for further evaluation later, for example in other applications.

The following data types can be exported (depending on the application):

- Trace data
- Table results, such as result summaries, marker peak lists etc.
- I/Q data

The following data types can be imported (depending on the application):

I/Q data



I/Q data can only be imported and exported in applications that process I/Q data, such as the I/Q Analyzer or optional applications.

See the corresponding user manuals for those applications for details.

•	Displaying a Reference Trace - Importing Trace Data	515
	Trace/Data Ex/Import	
	How to Import Traces	
	How to Export Trace Data and Numerical Results	
	How to Export a Peak List	
	Reference: ASCII File Export Format	

7.13.1 Displaying a Reference Trace - Importing Trace Data

Trace data that was stored during a previous measurement can be imported to the Spectrum application, for example as a reference trace.

The data in the import file must have a specified format (see Chapter 7.13.6, "Reference: ASCII File Export Format", on page 522), and can be stored in .CSV or .DAT format.

Trace Mode

The trace mode for the imported traces is set to "View" so that the data is not overwritten immediately during the next sweep. Other trace settings remain unchanged. Thus, the displayed trace may not comply with the displayed trace settings in the channel bar.

Detector type and number of sweep points

In particular, the detector type and the number of sweep points remain unchanged.

If the detector type of the active trace requires two points per x-value ("Auto Peak"), but the file contains only one, each point is duplicated. If the detector type requires only one point per x-value, but the file contains two, each second point is ignored.

If the file contains more sweep points than the active trace requires, the superfluous points are ignored. If the file does not contain enough sweep points, the missing points are inserted as -200 dBm.

Units

If the unit of the y-axis values in the file does not correspond to the active result display, the imported values are converted. If no unit is defined in the file, it is assumed to be dBm.

Importing multiple traces in one file

If the import file contains more than one trace, you can import several traces at once, overwriting the existing trace data for any active trace in the result display with the same trace number. Data from the import file for currently not active traces is not imported.

Alternatively, you can import a single trace only, which is displayed for the trace number specified in "Import to Trace" . This list contains all currently active traces in the result display. If a trace with the specified number exists in the import file, that trace is imported. Otherwise, the first trace in the file is imported (indicated by a message in the status bar).

Example:

The import file contains trace 1, trace 2, and trace 4. The current result display has 4 active traces.

"Import to Trace" = 2: trace 2 of the import file is displayed as trace 2 in the result display.

"Import to Trace" = 3: trace 3 is not available in the import file, thus trace 1 is imported and displayed as trace 3 in the result display

"Import to Trace" is enabled: Trace 1 is imported from the file and replaces trace 1 in the result display.

Trace 2 is imported from the file and replaces trace 2 in the result display.

Trace 4 is imported from the file and replaces trace 4 in the result display.

Trace 3 in the result display remains unchanged.

Importing spectrogram traces

Trace data can also be imported to an active Spectrogram result display.

Note the following differences that apply in this case:

- The measurement must be stopped before import.
- Only trace 1 is imported to the spectrogram. Any other traces may be imported to a Spectrum display, if available. However, they do not change the spectrogram display, which always refers to trace 1.
- A single spectrum is inserted as a new frame number 0.
- The trace mode is not changed to "View" as for Spectrum trace imports.

7.13.2 Trace/Data Ex/Import


Access: [TRACE] > "Trace Config" > "Trace / Data Export"

The R&S FPL1000 provides various evaluation methods for the results of the performed measurements. However, you may want to evaluate the data with other, external applications. In this case, you can export the measurement data to a standard ASCII format file (DAT or CSV). You can also import existing trace data from a file, for example as a reference trace (Spectrum application only).



The standard data management functions (e.g. saving or loading instrument settings) that are available for all R&S FPL1000 applications are not described here.

See Chapter 6.2.2, "Storing and Recalling Instrument Settings and Measurement Data", on page 100 for a description of the standard functions.

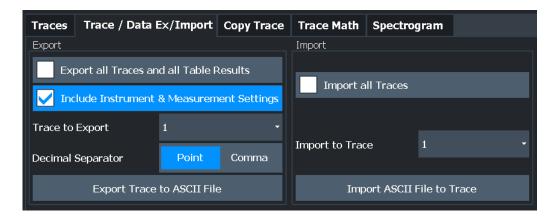

Export all Traces and all Table Results	517
Include Instrument & Measurement Settings	518
Trace to Export	518
Decimal Separator	
Export Trace to ASCII File	
L File Type	519
L Decimal Separator	
Importing Traces	
L Import All Traces / Import to Trace	
L Import ASCII File to Trace	

Export all Traces and all Table Results

Selects all displayed traces and result tables (e.g. Result Summary, marker table etc.) in the current application for export to an ASCII file.

Alternatively, you can select one specific trace only for export (see Trace to Export).

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

Remote command:

FORMat:DEXPort:TRACes on page 711

Include Instrument & Measurement Settings

Includes additional instrument and measurement settings in the header of the export file for result data.

See Chapter 7.13.6, "Reference: ASCII File Export Format", on page 522 for details.

Remote command:

FORMat:DEXPort:HEADer on page 817

Trace to Export

Defines an individual trace that will be exported to a file.

This setting is not available if Export all Traces and all Table Results is selected.

Decimal Separator


Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.

Remote command:

FORMat:DEXPort:DSEParator on page 793

Export Trace to ASCII File

Saves the selected trace or all traces in the currently active result display to the specified file and directory in the selected ASCII format.

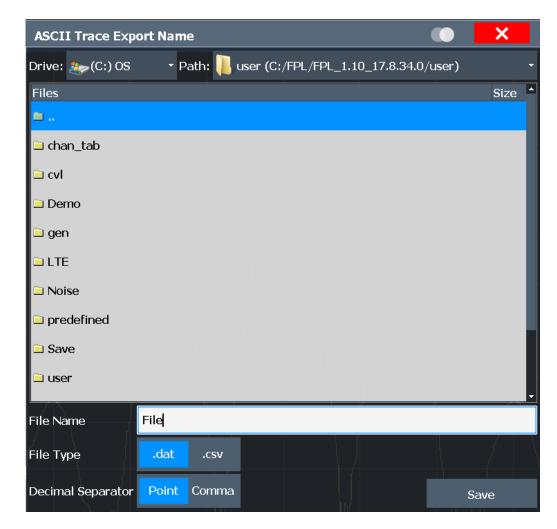

If the spectrogram display is selected when you perform this function, the entire histogram buffer with all frames is exported to a file. The data for a particular frame begins with information about the frame number and the time that frame was recorded. For large history buffers the export operation may take some time.

For details on the file format in the Spectrum application, see Chapter 7.13.6, "Reference: ASCII File Export Format", on page 522.

Note: Secure user mode.

In secure user mode, settings that are stored on the instrument are stored to volatile memory, which is restricted to 256 MB. Thus, a "memory limit reached" error can occur although the hard disk indicates that storage space is still available.

To store data permanently, select an external storage location such as a USB memory device.

Remote command:

MMEMory:STORe<n>:TRACe on page 712
MMEMory:STORe<n>:SPECtrogram on page 818

File Type ← Export Trace to ASCII File

Determines the format of the ASCII file to be imported or exported.

Depending on the external program in which the data file was created or will be evaluated, a comma-separated list (CSV) or a plain data format (DAT) file may be required.

Remote command:

FORMat: DEXPort: FORMat on page 711

Decimal Separator ← **Export Trace to ASCII File**

Defines the decimal separator for floating-point numerals for the data export/import files. Evaluation programs require different separators in different languages.

Remote command:

FORMat:DEXPort:DSEParator on page 793

Importing Traces

Trace data that was stored during a previous measurement can be imported to the Spectrum application, for example as a reference trace.

Import All Traces / Import to Trace ← Importing Traces

If the import file contains more than one trace, you can import several traces at once, overwriting the existing trace data for any active trace in the result display with the same trace number. Data from the import file for currently not active traces is not imported.

Alternatively, you can import a single trace only, which is displayed for the trace number specified in "Import to Trace". This list contains all currently active traces in the result display. If a trace with the specified number exists in the import file, that trace is imported. Otherwise, the first trace in the file is imported (indicated by a message in the status bar).

Remote command:

FORMat: DIMPort: TRACes on page 712

Import ASCII File to Trace ← Importing Traces

Loads one trace or all traces from the selected file in the selected ASCII format (.DAT or .CSV) to the currently active result display.

Remote command:

FORMat: DIMPort: TRACes on page 712

7.13.3 How to Import Traces

Trace data that was stored during a previous measurement can be imported to the Spectrum application, for example as a reference trace.

To import trace data

- 1. Press the [Trace] key.
- 2. Select "Trace Config" > "Trace / Data Export" / "Import" .
- Select "Import All Traces" to import traces for all the currently active traces, or select a specific trace to be imported in "Import to Trace".
- 4. Select "Import ASCII File to Trace" .

- 5. Select the file format in which the data is stored.
- 6. Select the file that contains the trace data.
- 7. Select "Select" to close the dialog box and start the import.

7.13.4 How to Export Trace Data and Numerical Results

The measured trace data and numerical measurement results in tables can be exported to an ASCII file. For each sweep point the measured trace position and value are output.

The file is stored with a .DAT extension. For details on the storage format see Chapter 7.13.6, "Reference: ASCII File Export Format", on page 522.



For the results of a Spectrum Emission Mask (SEM) or Spurious Emissions measurement, special file export functions are available, see "How to Save SEM Result Files" on page 321(SEM) and "Save Evaluation List" on page 340 (Spurious).

To export trace data and table results

- 1. Select [TRACE] > "Trace Config" > "Trace / Data Export" tab.
- 2. Select "Export all Traces and all Table Results" to export all available measurement result data for the current application, or select a specific "Trace to Export".
- 3. Optionally, select the "Include Instrument & Measurement Settings" option to insert additional information in the export file header.
- 4. If necessary, change the decimal separator to be used for the ASCII export file.
- 5. Select the "Export Trace to ASCII File" button.
- 6. In the file selection dialog box, select the storage location and file name for the export file.
- 7. Select "Save" to close the dialog box and export the data to the file.

7.13.5 How to Export a Peak List

You can save the results of a marker peak list to an ASCII file.

- 1. Press the [MKR FUNCT] key.
- 2. Select the "Marker Peak List" softkey.
- 3. Set the marker peak list "State" to "On" .
- 4. Press the [RUN SINGLE] key to perform a single sweep measurement and create a marker peak list.

- 5. Select the "Marker Peak List" softkey to display the "Marker Peak List" dialog box again.
- 6. If necessary, change the decimal separator to be used for the ASCII export file.
- 7. Select the "Export Peak List" button.
- 8. In the file selection dialog box, select the storage location and file name for the export file.
- 9. Select "Save" to close the dialog box and export the peak list data to the file.

7.13.6 Reference: ASCII File Export Format

Trace data can be exported to a file in ASCII format for further evaluation in other applications. This reference describes in detail the format of the export files for result data.

(For details see Chapter 7.13.4, "How to Export Trace Data and Numerical Results", on page 521)



For a description of the file formats for spectrum emission mask (SEM) measurement settings and results, see Chapter 7.2.6.8, "Reference: SEM File Descriptions", on page 323.

The file format for Spurious Emissions measurement results is described in Chapter 7.2.7.6, "Reference: ASCII Export File Format (Spurious)", on page 342.

The file consists of the header containing important scaling parameters and a data section containing the trace data. Optionally, the header can be excluded from the file (see "Include Instrument & Measurement Settings" on page 518).

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace), followed by the measured data in one or several columns (depending on the measurement) which are also separated by a semicolon.

The results are output in the same order as they are displayed on the screen: window by window, trace by trace, and table row by table row.

Generally, the format of this ASCII file can be processed by spreadsheet calculation programs, e.g. MS-Excel. Different language versions of evaluation programs may require a different handling of the decimal point. Thus you can define the decimal separator to be used (decimal point or comma, see "Decimal Separator" on page 113).

If the spectrogram display is selected when you select the "ASCII Trace Export" soft-key, the entire histogram buffer with all frames is exported to a file. The data corresponding to a particular frame begins with information about the frame number and the time that frame was recorded.

Table 7-25: ASCII file format for trace export in the Spectrum application

File contents	Description
Header data	
Type;R&S FPL1000;	Instrument model
Version;1.00;	Firmware version
Date;01.Oct 2006;	Date of data set storage
Mode;ANALYZER;	Operating mode
Preamplifier;OFF	Preamplifier status
Transducer; OFF	Transducer status
Center Freq;55000;Hz	Center frequency
Freq Offset;0;Hz	Frequency offset
Start;10000;Hz	Start/stop of the display range.
Stop;100000;Hz	Unit: Hz for span > 0, s for span = 0, dBm/dB for statistics measurements
Span;90000;Hz	Frequency range (0 Hz in zero span and statistics measurements)
Ref Level;-30;dBm	Reference level
Level Offset;0;dB	Level offset
Rf Att;20;dB	Input attenuation
El Att;2.0;dB	Electrical attenuation
RBW;100000;Hz	Resolution bandwidth
VBW;30000;Hz	Video bandwidth
SWT;0.005;s	Sweep time
Sweep Count;20;	Number of sweeps set
Ref Position;75;%	Position of reference level referred to diagram limits (0 % = lower edge)
Level Range;100;dB	Display range in y direction. Unit: dB with x-axis LOG, % with x-axis LIN
x-Axis;LIN;	Scaling of x-axis linear (LIN) or logarithmic (LOG)
y-Axis;LOG;	Scaling of y-axis linear (LIN) or logarithmic (LOG)
x-Unit;Hz;	Unit of x values: Hz with span > 0; s with span = 0; dBm/dB with statistics measurements
y-Unit;dBm;	Unit of y values: dB*/V/A/W depending on the selected unit with y-axis LOG or % with y-axis LIN
Data section for individual window	
Window;1;Frequency Sweep	Window number and name
Trace 1;;	Selected trace

File contents	Description	
Trace Mode;AVERAGE;	Display mode of trace: CLR/WRITE,AVER-AGE,MAXHOLD,MINHOLD	
Detector;AUTOPEAK;	Selected detector	
Values; 1001;	Number of measurement points	
10000;-10.3;-15.7 10130;-11.5;-16.9 10360;-12.0;-17.4 ;;	Measured values: <x value="">, <y1>, <y2>; <y2> being available only with detector AUTOPEAK and containing in this case the smallest of the two measured values for a measurement point.</y2></y2></y1></x>	
Data section for individual trace		
Trace 2;;	Next trace in same window	
Data section for individual window		
Window;2;	Name of next window	
Data section for individual trace		
Trace 1;;	First trace	

Table 7-26: ASCII file format for spectrogram trace export

File contents	Description
Header	
Type;R&S FPL1000;	Instrument model
Version;5.00;	Firmware version
Date;01.Oct 2006;	Date of data set storage
Mode;ANALYZER; SPECTROGRAM	Operating mode
Center Freq;55000;Hz	Center frequency
Freq Offset;0;Hz	Frequency offset
Span;90000;Hz	Frequency range (0 Hz in zero span and statistics measurements)
x-Axis;LIN;	Scaling of x-axis linear (LIN) or logarithmic (LOG)
Start;10000;Hz	Start/stop of the display range.
Stop;100000;Hz	Unit: Hz for span > 0, s for span = 0, dBm/dB for statistics measurements
Ref Level;-30;dBm	Reference level
Level Offset;0;dB	Level offset
Ref Position;75; %	Position of reference level referred to diagram limits (0 % = lower edge)
y-Axis;LOG;	Scaling of y-axis linear (LIN) or logarithmic (LOG)

Optimizing Measurements

File contents	Description
Level Range;100;dB	Display range in y direction. Unit: dB with x-axis LOG, % with x-axis LIN
Rf Att;20;dB	Input attenuation
RBW;100000;Hz	Resolution bandwidth
VBW;30000;Hz	Video bandwidth
SWT;0.005;s	Sweep time
Trace Mode;AVERAGE;	Display mode of trace: CLR/WRITE,AVER-AGE,MAXHOLD,MINHOLD
Detector;AUTOPEAK;	Selected detector
Sweep Count;20;	Number of sweeps set
Data section	
Trace 1:;;	Selected trace
x-Unit;Hz;	Unit of x values: Hz with span > 0; s with span = 0; dBm/dB with statistics measurements
y-Unit;dBm;	Unit of y values: dB*/V/A/W depending on the selected unit with y-axis LOG or % with y-axis LIN
Values; 1001;	Number of measurement points
Frames;2;	Number of exported frames
Frame;0;	Most recent frame number
Timestamp;17.Mar 11;11:27:05.990	Timestamp of this frame
10000;-10.3;-15.7	Measured values, identical to spectrum data:
10130;-11.5;-16.9	<x value="">, <y1>, <y2>; <y2> being available only with detector</y2></y2></y1></x>
10360;-12.0;-17.4	AUTOPEAK and containing in this case the smallest of the two measured values for a measurement point.
;;	measured values for a measurement point.
Frame;-1;	Next frame
Timestamp;17.Mar 11;11:27:05.342	Timestamp of this frame

7.14 Optimizing Measurements

7.14.1 Minimizing the Measurement Duration

If you want to minimize the measurement duration, try the following methods to optimize the measurement:

Reduce the span of the measurement to the relevant parts of the signal only.

Optimizing Measurements

- Increase the RBW to minimize the measurement time; however, consider the requirements of the standard if you need to measure according to standard!
- Reduce the sweep time and thus the amount of data to be captured and calculated; however, consider the requirements regarding the standard deviation.
- To determine average (or peak) values, use an RMS detector (or peak detector) with a higher sweep time instead of trace averaging to obtain better average power results in less time. Furthermore, enforce the use of the sweep type "FFT" (as opposed to "Auto"; in Sweep mode, the averaging effect of the RMS detector may be less efficient).
- When performing multiple measurements, use multiple channel setups to switch between measurements rather than changing the settings within one channel repeatedly.

Additional information

An application note discussing measurement speed optimization is available from the Rohde & Schwarz website:

1EF90: Speeding up Spectrum Analyzer Measurements

7.14.2 Improving Averaging Results

Instead of **trace averaging**, use an RMS detector with a higher sweep time to obtain better average power results in less time. Furthermore, enforce the use of the **sweep type "FFT"** (as opposed to "Auto"; in Sweep mode, the averaging effect of the RMS detector may be less efficient).

In FFT mode, FFTs are calculated per bin and combined using the RMS detector. For trace averaging, on the other hand, the local oscillator must be switched repeatedly for each trace, which takes additional time.

Generally, a higher **sweep time** leads to more data to be averaged and thus stabilizes the results. In FFT mode, a higher sweep time means more FFTs are calculated and combined per bin.

Thus, in the same capture time, the FFT mode with an RMS detector can provide better results than an averaged trace.

Conventions Used in SCPI Command Descriptions

8 Remote Commands

The commands required to perform measurements in the Spectrum application in a remote environment are described here.



Compatibility with former R&S signal and spectrum analyzers

As a rule, the R&S FPL1000 supports most commands from previous R&S signal and spectrum analyzers such as the FSQ, FSP, FSU, or FSV. However, the default values, in particular the number of sweep points or particular bandwidths, may vary. Therefore, the R&S FPL1000 can emulate these other devices, including their default values, in order to repeat previous measurements or support existing control applications as in legacy systems.

•	Conventions Used in SCPI Command Descriptions	527
•	Common Suffixes.	528
•	Common Commands	528
•	Commands for Remote Instrument Operation	532
	Selecting the Operating Mode and Application	
	Configuring and Performing Measurements	
	Remote Commands for Result Displays	
	Setting Basic Spectrum RF Measurement Parameters	
	Managing Settings and Results	
	Configuring the R&S FPL1000	
	Using the Status Register	
	Deprecated Commands	855

8.1 Conventions Used in SCPI Command Descriptions

Note the following conventions used in the remote command descriptions:

Command usage

If not specified otherwise, commands can be used both for setting and for querying parameters.

If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.

• Parameter usage

If not specified otherwise, a parameter can be used to set a value and it is the result of a query.

Parameters required only for setting are indicated as **Setting parameters**. Parameters required only to refine a query are indicated as **Query parameters**. Parameters that are only returned as the result of a query are indicated as **Return values**.

Conformity

Commands that are taken from the SCPI standard are indicated as **SCPI confirmed**. All commands used by the R&S FPL1000 follow the SCPI syntax rules.

Asynchronous commands

Common Commands

A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an **Asynchronous command**.

Reset values (*RST)

Default parameter values that are used directly after resetting the instrument (*RST command) are indicated as *RST values, if available.

Default unit

This is the unit used for numeric values if no other unit is provided with the parameter

Manual operation

If the result of a remote command can also be achieved in manual operation, a link to the description is inserted.

8.2 Common Suffixes

In the Spectrum application, the following common suffixes are used in remote commands:

Table 8-1: Common suffixes used in remote commands in the Spectrum application

Suffix	Value range	Description
<m></m>	1 to 16	Marker
<n></n>	1 to 16	Window (in the currently selected channel setup)
<t></t>	1 to 6	Trace
< i>	1 to 8	Limit line

8.3 Common Commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CAL?	529
*CLS	
*ESE	
*ESR?	
*IDN?	
*IST?	
*OPC	530
*OPT?	530
*PCB.	530
*PRE	

Common Commands

*PSC	531
*RST	
*SRE	
*STB?	
*TRG	532
*TST?	
*WAI	532

*CAL?

Calibration query

Initiates a calibration of the instrument and subsequently queries the calibration status. Responses > 0 indicate errors.

Note: If you start a self-alignment remotely, then select the "Local" softkey while the alignment is still running, the instrument only returns to the manual operation state after the alignment is completed.

Usage: Query only

Manual operation: See "Start Self Alignment" on page 162

*CLS

Clear status

Sets the status byte (STB), the standard event register (ESR) and the EVENt part of the QUEStionable and the OPERation registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

*ESE <Value>

Event status enable

Sets the event status enable register to the specified value. The query returns the contents of the event status enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

*ESR?

Event status read

Returns the contents of the event status register in decimal form and subsequently sets the register to zero.

Return values:

<Contents> Range: 0 to 255

Usage: Query only

Common Commands

*IDN?

Identification

Returns the instrument identification.

Usage: Query only

*IST?

Individual status query

Returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

Return values:

<ISTflag> 0 | 1

Usage: Query only

*OPC

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query form writes a "1" into the output buffer as soon as all preceding commands have been executed. This is used for command synchronization.

*OPT?

Option identification query

Queries the options included in the instrument. For a list of all available options and their description refer to the data sheet.

Usage: Query only

*PCB <Address>

Pass control back

Indicates the controller address to which remote control is returned after termination of the triggered action.

Setting parameters:

<Address> Range: 0 to 30

Usage: Setting only

*PRE <Value>

Parallel poll register enable

Common Commands

Sets parallel poll enable register to the indicated value. The query returns the contents of the parallel poll enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

*PSC <Action>

Power on status clear

Determines whether the contents of the <code>ENABle</code> registers are preserved or reset when the instrument is switched on. Thus a service request can be triggered when the instrument is switched on, if the status registers ESE and SRE are suitably configured. The query reads out the contents of the "power-on-status-clear" flag.

Parameters:

<Action> 0 | 1

0

The contents of the status registers are preserved.

1

Resets the status registers.

*RST

Reset

Sets the instrument to a defined default status. The default settings are indicated in the description of commands.

The command is equivalent to SYSTem: PRESet.

Usage: Setting only

*SRE <Contents>

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents> Contents of the service request enable register in decimal form.

Bit 6 (MSS mask bit) is always 0.

Range: 0 to 255

*STB?

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

Commands for Remote Instrument Operation

*TRG

Trigger

Triggers all actions waiting for a trigger event. In particular, *TRG generates a manual trigger signal. This common command complements the commands of the TRIGger subsystem.

Usage: Event

*TST?

Self-test query

Initiates self-tests of the instrument and returns an error code

Note: If you start a self-test remotely, then select the "Local" softkey while the test is still running, the instrument only returns to the manual operation state after the test is completed. In this case, the self-test cannot be aborted.

Return values:

<ErrorCode> integer > 0 (in decimal format)

An error occurred.

0

No errors occurred.

Usage: Query only

*WAI

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and *OPC).

Usage: Event

8.4 Commands for Remote Instrument Operation

The following commands are required to shutdown or reboot the R&S FPL1000 from a remote PC.

SYSTem:CLOGging	532
SYSTem:REBoot	533
SYSTem:SHUTdown	533

SYSTem:CLOGging <State>

This command turns logging of remote commands on and off.

Selecting the Operating Mode and Application

Parameters:

<State> ON | 1

Writes all remote commands that have been sent to a file.

The destination is C:

\Users\Public\Documents\Rohde-Schwarz\Analyzer\ScpiLogging

.

where <no.> is a sequential number

A new log file is started each time logging was stopped and is

restarted.

OFF | 0

*RST: 0

Manual operation: See "I/O Logging" on page 206

SYSTem:REBoot

This command reboots the instrument, including the operating system.

Usage: Event

SYSTem:SHUTdown

This command shuts down the instrument.

Usage: Event

8.5 Selecting the Operating Mode and Application

The following commands are required to select the operating mode or the application and to configure a Sequencer in a remote environment.

•	Selecting the Mode and Applications	533
•	Performing a Sequence of Measurements	537
•	Programming Example: Performing a Sequence of Measurements	539

8.5.1 Selecting the Mode and Applications

DISPlay:ATAB	534
INSTrument:CREate:DUPLicate	
INSTrument:CREate[:NEW]	
INSTrument:CREate:REPLace	
INSTrument:DELete	
INSTrument:LIST?	
INSTrument:REName	
INSTrument[:SELect].	

Selecting the Operating Mode and Application

DISPlay:ATAB <State>

This command switches between the MultiView tab and the most recently displayed channel setup. If only one channel setup is active, this command has no effect.

Parameters:

<State> ON | OFF | 1 | 0

ON | 1

The MultiView tab is displayed.

OFF | 0

The most recently displayed channel setup is displayed.

*RST: 0

INSTrument:CREate:DUPLicate

This command duplicates the currently selected channel setup, i.e creates a new channel setup of the same type and with the identical measurement settings. The name of the new channel setup is the same as the copied channel setup, extended by a consecutive number (e.g. "IQAnalyzer" -> "IQAnalyzer 2").

The channel setup to be duplicated must be selected first using the INST: SEL command.

Usage: Event

Manual operation: See " Duplicate Current Channel " on page 87

INSTrument:CREate[:NEW] < Channel Type>, < Channel Name>

This command adds an additional channel setup.

See also

- INSTrument[:SELect] on page 536
- INSTrument: CREate: DUPLicate on page 534

Parameters:

<ChannelType> Channel type of the new channel setup.

For a list of available channel setup types see INSTrument:

LIST? on page 535.

<ChannelName> String containing the name of the channel setup. The channel

setup name is displayed as the tab label for the channel setup. Note: If the specified name for a new channel setup already exists, the default name, extended by a sequential number, is used for the new channel setup (see INSTrument:LIST?

on page 535).

Manual operation: See " New Channel Setup " on page 87

Selecting the Operating Mode and Application

INSTrument:CREate:REPLace < ChannelName1>, < ChannelType>, < ChannelName2>

This command replaces a channel setup with another one.

Setting parameters:

<ChannelName1> String containing the name of the channel setup you want to

replace.

<ChannelType> Channel type of the new channel setup.

For a list of available channel setup types see INSTrument:

LIST? on page 535.

<ChannelName2> String containing the name of the new channel setup.

Note: If the specified name for a new channel setup already exists, the default name, extended by a sequential number, is used for the new channel setup (see INSTrument:LIST?

on page 535).

Usage: Setting only

Manual operation: See "Replace Current Channel Setup" on page 87

INSTrument: DELete < Channel Name >

This command deletes a channel setup.

Parameters:

<ChannelName> String containing the name of the channel setup you want to

delete.

A channel setup must exist in order to be able delete it.

Usage: Event

Manual operation: See "Closing a channel setup" on page 87

INSTrument:LIST?

This command queries all active channel setups. This is useful in order to obtain the names of the existing channel setups, which are required in order to replace or delete the channel setups.

Return values:

<ChannelType>, For each channel setup, the command returns the channel setup

<ChannelName> type and channel setup name (see tables below).

Tip: to change the channel setup name, use the INSTrument:

REName command.

Example: INST:LIST?

Result for 3 channel setups:

'ADEM', 'Analog Demod', 'IQ', 'IQ Analyzer', 'IQ', 'IQ Analyzer2'

Usage: Query only

Manual operation: See "Changing the Channel Setup Name" on page 68

Selecting the Operating Mode and Application

Table 8-2: Available channel setup types and default channel setup names

Application	<channeltype> Parameter</channeltype>	Default Channel Setup Name*)
Spectrum	SANALYZER	Spectrum
Analog Demodulation	ADEM	Analog Demod
I/Q Analyzer	IQ	IQ Analyzer
Noise Figure Measure- ments	NOISE	Noise

Note: the default channel setup name is also listed in the table. If the specified name for a new channel setup already exists, the default name, extended by a sequential number, is used for the new channel setup.

INSTrument:REName < ChannelName1>, < ChannelName2>

This command renames a channel setup.

Parameters:

<ChannelName1> String containing the name of the channel setup you want to

rename.

<ChannelName2> String containing the new channel setup name.

Note that you cannot assign an existing channel setup name to

a new channel setup; this will cause an error.

Usage: Setting only

Manual operation: See "Changing the Channel Setup Name" on page 68

INSTrument[:SELect] <ChannelType> | <ChannelName>

This command activates a new channel setup with the defined channel setup type, or selects an existing channel setup with the specified name.

Also see

• INSTrument:CREate[:NEW] on page 534

Parameters:

<ChannelType> Channel type of the new channel setup.

For a list of available channel setup types see INSTrument:

LIST? on page 535.

<ChannelName> String containing the name of the channel setup.

Example: INST IQ

INST 'MyIQSpectrum'

Selects the channel setup named 'MylQSpectrum' (for example before executing further commands for that channel setup).

Selecting the Operating Mode and Application

Manual operation: See " Spectrum " on page 84

See " I/Q Analyzer " on page 84 See " Analog Demod " on page 84 See " Noise Figure " on page 84

See "Defining a channel setup" on page 86 See " New Channel Setup " on page 87

8.5.2 Performing a Sequence of Measurements

The following commands control the sequencer.

For details on the Sequencer see Chapter 5.4, "Running a Sequence of Measurements", on page 87.

INITiate <n>:SEQuencer:ABORt</n>	537
INITiate <n>:SEQuencer:IMMediate</n>	537
INITiate <n>:SEQuencer:MODE</n>	538
SYSTem:SEQuencer	538

INITiate<n>:SEQuencer:ABORt

This command stops the currently active sequence of measurements. The Sequencer itself is not deactivated, so you can start a new sequence immediately using INITiate<n>: SEQuencer: IMMediate on page 537.

To deactivate the Sequencer use SYSTem: SEQuencer on page 538.

Suffix:

<n> irrelevant

Usage: Event

Manual operation: See "Sequencer State" on page 90

INITiate<n>:SEQuencer:IMMediate

This command starts a new sequence of measurements by the Sequencer.

Before this command can be executed, the Sequencer must be activated (see SYSTem: SEQuencer on page 538).

Suffix:

<n> irrelevant

Example: SYST:SEQ ON

Activates the Sequencer. INIT:SEQ:MODE SING

Sets single sequence mode so each active measurement will be

performed once.
INIT:SEQ:IMM

Starts the sequential measurements.

Usage: Event

Selecting the Operating Mode and Application

Manual operation: See "Sequencer State" on page 90

INITiate<n>:SEQuencer:MODE < Mode>

This command selects the way the R&S FPL1000 application performs measurements sequentially.

Before this command can be executed, the Sequencer must be activated (see SYSTem: SEQuencer on page 538).

Note: In order to synchronize to the end of a sequential measurement using *OPC, *OPC? or *WAI you must use SINGle Sequence mode.

Suffix:

<n> irrelevant

Parameters:

<Mode> SINGle

Each measurement is performed once (regardless of the channel's sweep mode), considering each channels' sweep count, until all measurements in all active channels have been per-

formed.

CONTinuous

The measurements in each active channel are performed one after the other, repeatedly (regardless of the channel's sweep mode), in the same order, until the Sequencer is stopped.

CDEFined

First, a single sequence is performed. Then, only those channels in continuous sweep mode (INIT: CONT ON) are repeated.

*RST: CONTinuous

Example: SYST:SEQ ON

Activates the Sequencer. INIT:SEQ:MODE SING

Sets single sequence mode so each active measurement will be

performed once.
INIT:SEQ:IMM

Starts the sequential measurements.

Manual operation: See "Sequencer Mode" on page 90

SYSTem:SEQuencer <State>

This command turns the Sequencer on and off. The Sequencer must be active before any other Sequencer commands (INIT:SEQ...) are executed, otherwise an error will occur.

Selecting the Operating Mode and Application

Parameters:

<State> ON | OFF | 0 | 1

ON | 1

The Sequencer is activated and a sequential measurement is

started immediately.

OFF | 0

The Sequencer is deactivated. Any running sequential measure-

ments are stopped. Further Sequencer commands

(INIT: SEQ...) are not available.

*RST: 0

Example: SYST:SEQ ON

Activates the Sequencer. INIT:SEQ:MODE SING

Sets single Sequencer mode so each active measurement will

be performed once. INIT: SEQ: IMM

Starts the sequential measurements.

SYST:SEQ OFF

Manual operation: See "Sequencer State" on page 90

8.5.3 Programming Example: Performing a Sequence of Measurements

This example demonstrates how to perform several measurements in a sequence in a remote environment.

```
//2xSpectrumanalyzer + 2xIQ, start Sequencer at the end, test OPC?
// -----
//----Preparing the instrument and first channel -----
//Activate new IQ channel
INSTrument:CREate:NEW IQ,'IQ 1'
//Set sweep count for new IQ channel
SENS:SWEEP:COUNT 6
//Change trace modes for IQ channel
DISP:TRAC1:MODE BLANK
DISP:TRAC2:MODE MAXH
DISP:TRAC3:MODE MINH
//Switch to single sweep mode
INIT: CONT OFF
//switch back to first (default) analyzer channel
INST:SEL 'Spectrum';*WAI
//Switch into SEM
SENSe:SWEep:MODE ESPectrum
//Load Sem standard file for W-CDMA
SENSe: ESPectrum: PRESet: STANdard 'WCDMA\3GPP\DL\3GPP DL.xml'
```

Selecting the Operating Mode and Application

```
//Set sweep count in Spectrum channel
SENS:SWEEP:COUNT 5
//-----Creating a second measurement channel ------
//Create second IQ channel
INSTrument:CREate:NEW IQ,'IQ 2'
//Set sweep count
SENS:SWEEP:COUNT 2
//Change trace modes
DISP:TRAC1:MODE MAXH
DISP:TRAC2:MODE MINH
//Create new analyzer channel
INSTrument:CREate:NEW SANalyzer,'Spectrum 2'
//Activate ACLR measurement in channel 'Spectrum 2'
CALCulate:MARKer:FUNCtion:POWer:SELect ACPower
//Load W-CDMA Standard
CALCulate:MARKer:FUNCtion:POWer:PRESet FW3Gppcdma
//Change trace modes
DISP:TRAC2:MODE MAXH
DISP:TRAC1:MODE MINH
//-----Performing a sweep and retrieving results-----
//Change sweep count
SENS:SWEep:COUNt 7
//Single Sweep mode
INIT: CONT OFF
//Switch back to first IQ channel
INST:SEL 'IQ 1'; *WAI
//Perform a measurement
INIT:IMM; *OPC?
//Retrieve results
CALC:MARK:Y?
//Activate Multiview
DISPlay:ATAB ON
//----Performing a sequence of measurements with the Sequencer-----
//Activate Sequencer
SYSTem:SEQuencer ON
//Start sweep in Sequencer
INITiate:SEQuencer:IMMediate;*OPC?
//Switch into first IQ channel to get results
INST:SEL 'IQ 1';*WAI
CALCulate:MARKer:MAXimum
CALC:MARK:Y?
//Change sweep time in IQ
SENS:SWE:TIME 300us
//Switch to single Sequencer mode
INITiate:SEQuencer:MODE SINGle
```

Configuring and Performing Measurements

```
//Sweep all channels once, taking the sweep count in each channel into account
INITiate:SEQuencer:IMMediate;*OPC?
//Set marker to maximum in IQ1 and query result
CALCulate:MARKer:MAXimum
CALC:MARK:Y?
//Switch to second IQ channel and retrieve results
INST:SEL 'IQ 2'; *WAI
CALCulate:MARKer:MIN
CALC:MARK:Y?
//Switch to first Spectrum channel
INST:SEL 'Spectrum';*WAI
//Query one of the SEM results
CALCulate:MARKer:FUNCtion:POWer:RESult? CPOWer
//Switch to second Spectrum channel
INST:SEL 'Spectrum 2';*WAI
//Query channel power result
CALCulate:MARKer:FUNCtion:POWer:RESult? ACPower
```

8.6 Configuring and Performing Measurements

The following commands are required to configure measurements in a remote environment. The tasks for manual operation are described in Chapter 7.2, "Measurements and Results", on page 234.

	Performing Measurements	541
•	Configuring Power Measurements	544
•	Measuring the Channel Power and ACLR	
•	Measuring the Carrier-to-Noise Ratio	. 566
•	Measuring the Occupied Bandwidth	. 567
•	Measuring the Spectrum Emission Mask	569
•	Measuring Spurious Emissions	597
•	Measuring the Time Domain Power	
•	Measuring the Harmonic Distortion	619
•	Measuring the Third Order Intercept Point	.623
•	Measuring the AM Modulation Depth	625
•	List Evaluations	.628
•	Measuring the Pulse Power	. 632
•	Programming Example: Performing a Basic Frequency Sweep	. 636

8.6.1 Performing Measurements

Useful commands for performing measurements described elsewhere

- INITiate<n>:ESPectrum on page 571
- INITiate<n>:SPURious on page 598

Configuring and Performing Measurements

Remote commands exclusive for performing measurements:

ABORt	542
INITiate <n>:CONMeas.</n>	
INITiate <n>:CONTinuous</n>	543
INITiate <n>[:IMMediate]</n>	543
[SENSe:]SWEep:COUNt:CURRent?	

ABORt

This command aborts the measurement in the current channel setup and resets the trigger system.

To prevent overlapping execution of the subsequent command before the measurement has been aborted successfully, use the *OPC? or *WAI command after ABOR and before the next command.

Note on blocked remote control programs:

If a sequential command cannot be completed, for example because a triggered sweep never receives a trigger, the remote control program will never finish and the remote channel to the R&S FPL is blocked for further commands. In this case, you must interrupt processing on the remote channel first in order to abort the measurement.

To do so, send a "Device Clear" command from the control instrument to the R&S FPL on a parallel channel to clear all currently active remote channels. Depending on the used interface and protocol, send the following commands:

• Visa: viClear()

Now you can send the ${\tt ABORt}$ command on the remote channel performing the measurement.

Example: ABOR;:INIT:IMM

Aborts the current measurement and immediately starts a new

one.

Example: ABOR; *WAI

INIT:IMM

Aborts the current measurement and starts a new one once

abortion has been completed.

Usage: Event

INITiate<n>:CONMeas

This command restarts a (single) measurement that has been stopped (using ABORt) or finished in single sweep mode.

The measurement is restarted at the beginning, not where the previous measurement was stopped.

Suffix:

<n> irrelevant

Configuring and Performing Measurements

Example: INIT: CONT OFF

Switches to single sweep mode. DISP:WIND:TRAC:MODE AVER Switches on trace averaging.

SWE: COUN 20

Setting the sweep counter to 20 sweeps.

INIT; *WAI

Starts the measurement and waits for the end of the 20 sweeps.

INIT: CONM; *WAI

Continues the measurement (next 20 sweeps) and waits for the

end.

Result: Averaging is performed over 40 sweeps.

Usage: Event

Manual operation: See "Continue Single Sweep " on page 403

INITiate<n>:CONTinuous <State>

This command controls the sweep mode for an individual channel setup.

Note that in single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

Example: INIT:CONT OFF

Switches the sweep mode to single sweep.

INIT: CONT ON

Switches the sweep mode to continuous sweep.

Manual operation: See "Frequency Sweep " on page 235

See "Zero Span" on page 235

See "Continuous Sweep / Run Cont " on page 402

INITiate<n>[:IMMediate]

This command starts a (single) new measurement.

With sweep count or average count > 0, this means a restart of the corresponding number of measurements. With trace mode MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

You can synchronize to the end of the measurement with *OPC, *OPC? or *WAI.

Suffix:

<n> irrelevant

Configuring and Performing Measurements

Example: INIT:CONT OFF

Switches to single sweep mode. DISP:WIND:TRAC:MODE AVER Switches on trace averaging.

SWE: COUN 20

Sets the sweep counter to 20 sweeps.

INIT; *WAI

Starts the measurement and waits for the end of the 20 sweeps.

Usage: Event

Manual operation: See "Frequency Sweep" on page 235

See "Zero Span" on page 235

See "Single Sweep / Run Single" on page 402

[SENSe:]SWEep:COUNt:CURRent?

This query returns the current number of started sweeps or measurements. This command is only available if a sweep count value is defined and the instrument is in single sweep mode.

Example: SWE:COUNt 64

Sets sweep count to 64 INIT: CONT OFF

Switches to single sweep mode

INIT

Starts a sweep (without waiting for the sweep end!)

SWE: COUN: CURR?

Queries the number of started sweeps

Usage: Query only

8.6.2 Configuring Power Measurements

The following commands work for several power measurements.

CALCulate <n>:MARKer<m>:FUNCtion:POWer:MODE</m></n>	544
CALCulate <n>:MARKer<m>:FUNCtion:POWer<sb>:RESult?</sb></m></n>	545
CALCulate <n>:MARKer<m>:FUNCtion:POWer:SELect</m></n>	547
CALCulate <n>:MARKer<m>:FUNCtion:POWer[:STATe]</m></n>	547
[SENSe:]POWer:ACHannel:PRESet	548
[SENSe:]POWer:ACHannel:PRESet:RLEVel	548
[SENSe:]POWer:TRACe	548

CALCulate<n>:MARKer<m>:FUNCtion:POWer:MODE < Mode>

This command selects the trace display mode for power measurements.

Suffix:

<n> Window <m> Marker

Configuring and Performing Measurements

Parameters:

<Mode> WRITe

The power is calculated from the current trace.

MAXHold

The power is calculated from the current trace and compared with the previous power value using a maximum algorithm.

Manual operation: See "Power Mode" on page 268

CALCulate<n>:MARKer<m>:FUNCtion:POWer<sb>:RESult? < Measurement>

This command queries the results of power measurements.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n>, <m> irrelevant

<sb> 1 | 2 | 3 (4 | 5)

Multi-SEM: 1 to 3

for all other measurements: irrelevant

Configuring and Performing Measurements

Query parameters:

<Measurement>

ACPower | MCACpower

ACLR measurements (also known as adjacent channel power or multicarrier adjacent channel measurements).

Returns the power for every active transmission and adjacent channel. The order is:

- power of the transmission channels
- power of adjacent channel (lower,upper)
- power of alternate channels (lower,upper)

The unit of the return values depends on the scaling of the y-axis:

- logarithmic scaling returns the power in the current unit
- linear scaling returns the power in W

CN

Carrier-to-noise measurements. Returns the C/N ratio in dB.

CN₀

Carrier-to-noise measurements.

Returns the C/N ratio referenced to a 1 Hz bandwidth in dBm/Hz.

CPOWer

Channel power measurements.

Returns the channel power. The unit of the return values depends on the scaling of the y-axis:

- logarithmic scaling returns the power in the current unit
- linear scaling returns the power in W

For SEM measurements, the return value is the channel power of the reference range.

PPOWer

Peak power measurements.

Returns the peak power. The unit of the return values depends on the scaling of the y-axis:

- logarithmic scaling returns the power in the current unit
- · linear scaling returns the power in W

For SEM measurements, the return value is the peak power of the reference range.

Note that this result is only available if the power reference type is set to peak power (see [SENSe:]ESPectrum<sb>:RTYPe on page 587).

OBANdwidth | OBWidth

Occupied bandwidth.

Returns the occupied bandwidth in Hz.

COBandwidth | COBWidth

<Centroid frequency>,<Frequency offset>

See Chapter 7.2.5.2, "OBW Results", on page 285

Usage: Query only

Configuring and Performing Measurements

Manual operation: See " C/N " on page 282

See " C/N0 " on page 282

CALCulate<n>:MARKer<m>:FUNCtion:POWer:SELect < MeasType>

This command selects a power measurement and turns the measurement on.

Suffix:

<n> Window <m> Marker

Parameters:

<MeasType> ACPower | MCACpower

Adjacent channel leakage ratio (ACLR), also known as adjacent

channel power or multicarrier adjacent channel.

The R&S FPL1000 performs the measurement on the trace

selected with [SENSe:]POWer:TRACe.

CPOWer

Channel power measurement with a single carrier.

The R&S FPL1000 performs the measurement on the trace

selected with [SENSe:]POWer:TRACe.

OBANdwidth | OBWidth

Occupied bandwidth measurement.

The R&S FPL1000 performs the measurement on the trace that

marker 1 is positioned on.

CN

Carrier-to-noise ratio measurement.

CN₀

Carrier-to-noise ratio measurement referenced to 1 Hz band-

width

Manual operation: See " C/N " on page 282

See " C/N0 " on page 282

CALCulate<n>:MARKer<m>:FUNCtion:POWer[:STATe] <State>

This command turns a power measurement on and off.

Suffix:

<n>, <m> irrelevant

Parameters:

<State> ON | OFF | 1 | 0

ON | 1

The power measurement selected with CALCulate<n>: MARKer<m>: FUNCtion: POWer: SELect is activated.

OFF | 0

A standard frequency sweep is activated.

*RST: 0

Configuring and Performing Measurements

Usage: Setting only

Manual operation: See " C/N " on page 282

See " C/N0 " on page 282

[SENSe:]POWer:ACHannel:PRESet < Measurement>

This command determines the ideal span, bandwidths and detector for the current power measurement.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Parameters:

<Measurement> ACPower | MCACpower

ACLR measurement

CPOWer

channel power measurement

OBANdwidth | OBWidth

Occupied bandwidth measurement

CN

Carrier to noise ratio

CN0

Carrier to noise ration referenced to a 1 Hz bandwidth

Manual operation: See "Optimized Settings (Adjust Settings)" on page 268

See " Adjust Settings " on page 282 See " Adjust Settings " on page 287

[SENSe:]POWer:ACHannel:PRESet:RLEVel

This command determines the ideal reference level for the current measurement.

This automatic routine makes sure that the that the signal power level does not overload the R&S FPL1000 or limit the dynamic range by too small a S/N ratio.

To determine the best reference level, the R&S FPL1000 aborts current measurements and performs a series of test sweeps. After it has finished the test, it continues with the actual measurement.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end. This is only possible in single sweep mode.

Usage: Event

[SENSe:]POWer:TRACe <TraceNumber>

This command selects the trace channel power measurements are performed on.

Configuring and Performing Measurements

For the measurement to work, the corresponding trace has to be active.

Parameters:

<TraceNumber> Range: 1 to 6

*RST: 1

Example: POW:TRAC 2

Assigns the measurement to trace 2.

Manual operation: See "Selected Trace "on page 267

8.6.3 Measuring the Channel Power and ACLR

All remote control commands specific to channel power or ACLR measurements are described here.



See also Chapter 8.6.2, "Configuring Power Measurements", on page 544.

•	Managing Measurement Configurations	549
	Configuring the Channels	
	Defining Weighting Filters	
	Selecting the Reference Channel	
	Checking Limits	
•	Performing an ACLR Measurement	562
•	Retrieving and Analyzing Measurement Results	562
	Programming Examples for Channel Power Measurements	

8.6.3.1 Managing Measurement Configurations

The following commands control measurement configurations for ACLR measurements.

CALCulate <n>:MARKer<m>:FUNCtion:POWer:PRESet</m></n>	549
CALCulate <n>:MARKer<m>:FUNCtion:POWer:STANdard:CATalog?</m></n>	550
CALCulate <n>:MARKer<m>:FUNCtion:POWer:STANdard:DELete</m></n>	550
CALCulate <n>:MARKer<m>:FUNCtion:POWer:STANdard:SAVE</m></n>	550

CALCulate<n>:MARKer<m>:FUNCtion:POWer:PRESet <Standard>

This command loads a measurement configuration.

The measurement configuration for power measurements consists of weighting filter, channel bandwidth and spacing, resolution and video bandwidth, detector and sweep time.

Suffix:

<n> Window <m> Marker

Configuring and Performing Measurements

Parameters:

<Standard> For more information see Chapter 7.2.3.8, "Reference: Prede-

fined CP/ACLR Standards", on page 279.

If you want to load a customized configuration, the parameter is

a string containing the file name.

Manual operation: See "Predefined Standards" on page 265

See "User Standards" on page 265

CALCulate<n>:MARKer<m>:FUNCtion:POWer:STANdard:CATalog?

This command queries all files containing ACLR standards.

Suffix:

<n> Window <m> Marker

Return values:

<Standards> List of standard files.

Usage: Query only

Manual operation: See "User Standards" on page 265

CALCulate<n>:MARKer<m>:FUNCtion:POWer:STANdard:DELete <Standard>

This command deletes a file containing an ACLR standard.

Suffix:

<n> Window <m> Marker

Parameters:

<Standard> String containing the file name of the standard.

Usage: Event

Manual operation: See "User Standards" on page 265

CALCulate<n>:MARKer<m>:FUNCtion:POWer:STANdard:SAVE <Standard>

This command saves the current ACLR measurement configuration as a new ACLR standard.

The measurement configuration for power measurements consists of weighting filter, channel bandwidth and spacing, resolution and video bandwidth, detector and sweep time.

Suffix:

<n> Window <m> Marker

Configuring and Performing Measurements

Parameters:

String containing the file name. The file format is xml.

Manual operation: See "User Standards" on page 265

8.6.3.2 Configuring the Channels

The following commands configure channels for channel power and ACLR measurements.

[SENSe:]POWer:ACHannel:ACPairs	551
[SENSe:]POWer:ACHannel:BWIDth:ACHannel	551
[SENSe:]POWer:ACHannel:BANDwidth:ACHannel	551
[SENSe:]POWer:ACHannel:BWIDth:ALTernate <ch></ch>	551
[SENSe:]POWer:ACHannel:BANDwidth:ALTernate <ch></ch>	551
[SENSe:]POWer:ACHannel:BWIDth[:CHANnel <ch>]</ch>	552
[SENSe:]POWer:ACHannel:BANDwidth[:CHANnel <ch>]</ch>	552
[SENSe:]POWer:ACHannel:NAME:ACHannel	552
[SENSe:]POWer:ACHannel:NAME:ALTernate <ch></ch>	552
[SENSe:]POWer:ACHannel:NAME:CHANnel <ch></ch>	553
[SENSe:]POWer:ACHannel:SPACing[:ACHannel]	553
[SENSe:]POWer:ACHannel:SPACing:ALTernate <ch></ch>	553
[SENSe:]POWer:ACHannel:SPACing:CHANnel <ch></ch>	553
[SENSe:]POWer:ACHannel:TXCHannel:COUNt	

[SENSe:]POWer:ACHannel:ACPairs < ChannelPairs >

This command defines the number of pairs of adjacent and alternate channels.

Parameters:

<ChannelPairs> Range: 0 to 12

*RST: 1

Manual operation: See " Number of channels: Tx , Adj " on page 266

[SENSe:]POWer:ACHannel:BWIDth:ACHannel <Bandwidth> [SENSe:]POWer:ACHannel:BANDwidth:ACHannel <Bandwidth>

This command defines the channel bandwidth of the adjacent channels.

Parameters:

<Bandwidth> Range: 100 Hz to 1000 MHz

*RST: 14 kHz

Manual operation: See "Channel Bandwidth" on page 269

[SENSe:]POWer:ACHannel:BWIDth:ALTernate<ch> <Bandwidth> [SENSe:]POWer:ACHannel:BANDwidth:ALTernate<ch> <Bandwidth>

This command defines the channel bandwidth of the alternate channels.

Configuring and Performing Measurements

If you set the channel bandwidth for the first alternate channel, the R&S FPL1000 sets the bandwidth of the other alternate channels to the same value, but not the other way round. The command works hierarchically: to set a bandwidth of the 3rd and 4th channel, you have to set the bandwidth of the 3rd channel first.

Suffix:

<ch> 1 to 11

Alternate channel number

Parameters:

<Bandwidth> Range: 100 Hz to 1000 MHz

*RST: 14 kHz

Manual operation: See "Channel Bandwidth "on page 269

[SENSe:]POWer:ACHannel:BWIDth[:CHANnel<ch>] <Bandwidth> [SENSe:]POWer:ACHannel:BANDwidth[:CHANnel<ch>] <Bandwidth>

This command defines the channel bandwidth of the transmission channels.

Suffix:

<ch> 1 to 18

Tx channel number

Parameters:

<Bandwidth> Range: 100 Hz to 1000 MHz

*RST: 14 kHz

Manual operation: See "Channel Bandwidth" on page 269

See " Channel Bandwidth " on page 282 See " Channel Bandwidth " on page 287

[SENSe:]POWer:ACHannel:NAME:ACHannel < Name >

This command defines a name for the adjacent channel.

Parameters:

<Name> String containing the name of the channel

*RST: ADJ

Manual operation: See " Channel Names " on page 271

[SENSe:]POWer:ACHannel:NAME:ALTernate<ch> <Name>

This command defines a name for an alternate channel.

Suffix:

<ch> 1 to 11

Alternate channel number

Parameters:

<Name> String containing the name of the channel

*RST: ALT<1...11>

Configuring and Performing Measurements

Manual operation: See " Channel Names " on page 271

[SENSe:]POWer:ACHannel:NAME:CHANnel<ch> <Name>

This command defines a name for a transmission channel.

Suffix:

<ch> 1 to 18

Tx channel number

Parameters:

<Name> String containing the name of the channel

*RST: TX<1...12>

Manual operation: See " Channel Names " on page 271

[SENSe:]POWer:ACHannel:SPACing[:ACHannel] < Spacing >

This command defines the distance from transmission channel to adjacent channel.

Parameters:

<Spacing> Range: 100 Hz to 2000 MHz

*RST: 14 kHz

Manual operation: See "Channel Spacings" on page 270

[SENSe:]POWer:ACHannel:SPACing:ALTernate<ch> <Spacing>

This command defines the distance from transmission channel to alternate channels.

If you set the channel spacing for the first alternate channel, the R&S FPL1000 adjusts the spacing of alternate channels of a lower order, but not the other way round. The command works hierarchically: to set a distance from the transmission channel to the 2nd and 3rd alternate channel, you have to define a spacing for the 2nd alternate channel first.

Suffix:

<ch> 1 to 11

Alternate channel number

Parameters:

<Spacing> Range: 100 Hz to 2000 MHz

*RST: 40 kHz (ALT1), 60 kHz (ALT2), 80 kHz (ALT3), ...

Manual operation: See "Channel Spacings" on page 270

[SENSe:]POWer:ACHannel:SPACing:CHANnel<ch> <Spacing>

This command defines the distance between transmission channels.

Configuring and Performing Measurements

If you set the channel spacing for a transmission channel, the R&S FPL1000 sets the spacing of the lower transmission channels to the same value, but not the other way round. The command works hierarchically: to set a distance between the 2nd and 3rd and 3rd and 4th channel, you have to set the spacing between the 2nd and 3rd channel first.

Suffix:

<ch> 1 to 18

Tx channel number

Parameters:

<Spacing> Range: 14 kHz to 2000 MHz

*RST: 20 kHz

Manual operation: See "Channel Spacings" on page 270

[SENSe:]POWer:ACHannel:TXCHannel:COUNt < Number>

This command defines the number of transmission channels.

The command works for measurements in the frequency domain.

Parameters:

<Number> Range: 1 to 18

*RST: 1

Manual operation: See " Number of channels: Tx , Adj " on page 266

8.6.3.3 Defining Weighting Filters

The following commands define weighting filters for ACLR measurements.

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel	554
[SENSe:]POWer:ACHannel:FILTer:ALPHa[:ALL]	. 555
[SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTernate <ch></ch>	. 555
[SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel <ch></ch>	. 555
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel	. 555
[SENSe:]POWer:ACHannel:FILTer[:STATe][:ALL]	. 556
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTernate <ch></ch>	. 556
[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel <ch></ch>	. 556

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel <Alpha>

This command defines the roll-off factor for the adjacent channel weighting filter.

Parameters:

<Alpha> Roll-off factor

Range: 0 to 1 *RST: 0.22

Manual operation: See "Weighting Filters" on page 271

Configuring and Performing Measurements

[SENSe:]POWer:ACHannel:FILTer:ALPHa[:ALL] < Value>

This command defines the alpha value for the weighting filter for all channels.

Parameters:

<Value> <numeric value>

*RST: 0.22

Example: POW:ACH:FILT:ALPH:ALL 0.35

[SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTernate<ch> <Alpha>

This command defines the roll-off factor for the alternate channel weighting filter.

Suffix:

<ch> 1 to 11

Alternate channel number

Parameters:

<Alpha> Roll-off factor

Range: 0 to 1 *RST: 0.22

Manual operation: See "Weighting Filters" on page 271

[SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel<ch> < Alpha>

This command defines the roll-off factor for the transmission channel weighting filter.

Suffix:

<ch> 1 to 18

Tx channel number

Parameters:

<Alpha> Roll-off factor

Range: 0 to 1 *RST: 0.22

Manual operation: See "Weighting Filters " on page 271

[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel <State>

This command turns the weighting filter for the adjacent channel on and off.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Weighting Filters" on page 271

Configuring and Performing Measurements

[SENSe:]POWer:ACHannel:FILTer[:STATe][:ALL] <State>

This command turns the weighting filters for all channels on and off.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTernate<ch> <State>

This command turns the weighting filter for an alternate channel on and off.

Suffix:

<ch> 1 to 11

Alternate channel number

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Weighting Filters" on page 271

[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel<ch> <State>

This command turns the weighting filter for a transmission channel on and off.

Suffix:

<ch> 1 to 18

Tx channel number

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Weighting Filters" on page 271

8.6.3.4 Selecting the Reference Channel

The following commands define the reference channel for relative ACLR measurements.

[SENSe:]POWer:ACHannel:REFerence:	AUTO ONCE	556
[SENSe:]POWer:ACHannel:REFerence:	:TXCHannel:AUTO	557
[SENSe:]POWer:ACHannel:REFerence:	:TXCHannel:MANual	557

[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE

This command sets the channel power as the reference for relative ACLR measurements.

Example: POW:ACH:REF:AUTO ONCE

Usage: Event

Configuring and Performing Measurements

Manual operation: See "Setting a fixed reference for Channel Power measure-

ments (Set CP Reference)" on page 268

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO <RefChannel>

This command selects the reference channel for relative measurements.

You need at least one channel for the command to work.

Parameters:

<RefChannel> MINimum

Transmission channel with the lowest power

MAXimum

Transmission channel with the highest power

LHIGhest

Lowest transmission channel for lower adjacent channels and highest transmission channel for upper adjacent channels

Example: POW:ACH:REF:TXCH:AUTO MAX

Selects the channel with the peak power as reference channel.

Manual operation: See "Reference Channel" on page 267

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual < ChannelNumber>

This command defines a reference channel for relative ACLR measurements.

You need at least one channel for the command to work.

Parameters:

<ChannelNumber> Range: 1 to 18

*RST: 1

Manual operation: See "Reference Channel" on page 267

8.6.3.5 Checking Limits

The following commands configure and query limit checks for channel power and ACLR measurements.



The results of the power limit checks are also indicated in the STAT: QUES: ACPL status registry (see "STATus: QUEStionable: ACPL imit Register" on page 193).

CALCulate <n>:LIMit:ACPower:ACHannel:ABSolute</n>	. 558
CALCulate <n>:LIMit:ACPower:ACHannel:ABSolute:STATe</n>	. 558
CALCulate <n>:LIMit:ACPower:ACHannel[:RELative]</n>	.558
CALCulate <n>:LIMit:ACPower:ACHannel:RESult?</n>	.559
CALCulate <n>:LIMit:ACPower:ACHannel[:RELative]:STATe</n>	.559
CALCulate <n>:LIMit:ACPower:ALTernate<ch>:ABSolute</ch></n>	560
CALCulate <n>:LIMit:ACPower:ALTernate<ch>:ABSolute:STATe</ch></n>	. 560

Configuring and Performing Measurements

CALCulate <n>:LIMit:ACPower:ALTernate<ch>[:RELative]</ch></n>	561
CALCulate <n>:LIMit:ACPower:ALTernate<ch>:RESult?</ch></n>	561
CALCulate <n>:LIMit:ACPower:ALTernate<ch>[:RELative]:STATe</ch></n>	562
CALCulate <n>:LIMit:ACPower[:STATe]</n>	562

CALCulate<n>:LIMit:ACPower:ACHannel:ABSolute <LowerLimit>, <UpperLimit>

This command defines the absolute limit of the adjacent channels.

If you have defined an absolute limit as well as a relative limit, the R&S FPL1000 uses the lower value for the limit check.

Suffix:

<n>, irrelevant

Parameters:

<LowerLimit> The limit of the lower adjacent channel.

Range: -200 dBm to 200 dBm

*RST: -200 dBm

<UpperLimit> The limit of the upper adjacent channel.

Range: -200 dBm to 200 dBm

*RST: -200 dBm

Manual operation: See "Limit Check " on page 270

CALCulate<n>:LIMit:ACPower:ACHannel:ABSolute:STATe

This command turns the absolute limit check for the adjacent channels on and off.

You have to activate the general ACLR limit check before using this command with CALCulate<n>:LIMit:ACPower[:STATe].

Suffix:

<n>, irrelevant

Manual operation: See "Limit Check " on page 270

CALCulate<n>:LIMit:ACPower:ACHannel[:RELative] <LowerLimit>, <UpperLimit>

This command defines the relative limit of the adjacent channels. The reference value for the relative limit is the measured channel power.

If you have defined an absolute limit as well as a relative limit, the R&S FPL1000 uses the lower value for the limit check.

Suffix:

<n> irrelevant irrelevant

Configuring and Performing Measurements

Parameters:

<LowerLimit> The limit of the lower adjacent channel.

Range: 0 dB to 100 dB

*RST: 0 dB Default unit: dB

<UpperLimit> The limit of the upper adjacent channel.

Range: 0 dB to 100 dB

*RST: 0 dB Default unit: dB

Manual operation: See "Limit Check " on page 270

CALCulate<n>:LIMit:ACPower:ACHannel:RESult?

This command queries the state of the limit check for the adjacent channels in an ACLR measurement.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n>, irrelevant

Return values:

<LowerACH>, text value

<UpperACH> The command returns two results. The first is the result for the

lower, the second for the upper adjacent channel.

PASSED

Limit check has passed.

FAIL

Limit check has failed.

Example: INIT:IMM; *WAI;

CALC:LIM:ACP:ACH:RES?

PASSED, PASSED

Usage: Query only

Manual operation: See "Limit Check " on page 270

CALCulate<n>:LIMit:ACPower:ACHannel[:RELative]:STATe <State>,<State>

This command turns the relative limit check for the adjacent channels on and off.

You have to activate the general ACLR limit check before using this command with CALCulate<n>:LIMit:ACPower[:STATe].

Suffix:

<n>, irrelevant

Configuring and Performing Measurements

Parameters:

<State> ON | OFF | 1 | 0

Relative limit check for lower adjacent channel

*RST: 0

<State> ON | OFF | 1 | 0

Relative limit check for upper adjacent channel

*RST: 0

Manual operation: See "Limit Check " on page 270

CALCulate<n>:LIMit:ACPower:ALTernate<ch>:ABSolute <LowerLimit>, <UpperLimit>

*OpperEnnits

This command defines the absolute limit of the alternate channels.

If you have defined an absolute limit as well as a relative limit, the R&S FPL1000 uses the lower value for the limit check.

Suffix:

<n>, irrelevant

<ch>
1 to 11

Alternate channel number

Parameters:

<LowerLimit> The limit of the lower adjacent channel.

Range: -200 dBm to 200 dBm

*RST: -200 dBm

<UpperLimit> The limit of the upper adjacent channel.

Range: -200 dBm to 200 dBm

*RST: -200 dBm

Manual operation: See "Limit Check " on page 270

CALCulate<n>:LIMit:ACPower:ALTernate<ch>:ABSolute:STATe

This command turns the absolute limit check for the alternate channels on and off.

You have to activate the general ACLR limit check before using this command with CALCulate < n > :LIMit :ACPower[:STATe].

Suffix:

<n>, irrelevant
<h>1 to 11</h>

Alternate channel number

Manual operation: See "Limit Check " on page 270

Configuring and Performing Measurements

CALCulate<n>:LIMit:ACPower:ALTernate<ch>[:RELative] <LowerLimit>, <UpperLimit>

This command defines the relative limit of the alternate channels. The reference value for the relative limit is the measured channel power.

If you have defined an absolute limit as well as a relative limit, the R&S FPL1000 uses the lower value for the limit check.

Suffix:

<n>, irrelevant

<ch>
1 to 11

Alternate channel number

Parameters:

<LowerLimit> The limit of the lower alternate channel.

Range: 0 dB to 100 dB

*RST: 0 dB Default unit: dB

<UpperLimit> The limit of the upper alternate channel.

Range: 0 dB to 100 dB

*RST: 0 dB Default unit: dB

Manual operation: See "Limit Check " on page 270

CALCulate<n>:LIMit:ACPower:ALTernate<ch>:RESult?

This command queries the state of the limit check for the adjacent or alternate channels in an ACLR measurement.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n>, irrelevant

<ch>
1 to 11

Alternate channel number

Return values:

<LowerChan>, text value

<UpperChan> The command returns two results. The first is the result for the

lower, the second for the upper adjacent or alternate channel.

PASSED

Limit check has passed.

FAIL

Limit check has failed.

Configuring and Performing Measurements

Example: INIT:IMM; *WAI;

CALC:LIM:ACP:ACH:RES?

PASSED, PASSED

Usage: Query only

CALCulate<n>:LIMit:ACPower:ALTernate<ch>[:RELative]:STATe

This command turns the relative limit check for the alternate channels on and off.

You have to activate the general ACLR limit check before using this command with CALCulate<n>:LIMit:ACPower[:STATe].

Suffix:

<n>, irrelevant

 1 to 11

Alternate channel number

Manual operation: See "Limit Check " on page 270

CALCulate<n>:LIMit:ACPower[:STATe] <State>

This command turns the limit check for ACLR measurements on and off.

Suffix:

<n>, irrelevant

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Limit Check " on page 270

8.6.3.6 Performing an ACLR Measurement

The following commands are required to perform an ACLR measurement:

- CALC:MARK:FUNC:POW:SEL ACP, see CALCulate<n>:MARKer<m>:
 FUNCtion:POWer:SELect on page 547
- CALCulate<n>:MARKer<m>:FUNCtion:POWer[:STATe] on page 547
- INITiate<n>[:IMMediate] on page 543

8.6.3.7 Retrieving and Analyzing Measurement Results

The following commands retrieve and analyze measurement results for ACLR measurements.

Useful commands for channel power measurements described elsewhere

• CALCulate<n>:MARKer<m>:FUNCtion:POWer<sb>:RESult? on page 545

Configuring and Performing Measurements

- TRACe<n>[:DATA] on page 708
- CALCulate<n>:LIMit:ACPower:ACHannel:RESult? on page 559
- CALCulate<n>:LIMit:ACPower:ALTernate<ch>:RESult?on page 561

Remote commands exclusive to channel power measurements

CALCulate <n>:MARKer<m>:FUNCtion:POWer:RESult:PHZ</m></n>	563
[SENSe:]POWer:ACHannel:MODE	. 563

CALCulate<n>:MARKer<m>:FUNCtion:POWer:RESult:PHZ <State>

This command selects the way the R&S FPL1000 returns results for power measurements.

You can query results with CALCulate<n>:MARKer<m>:FUNCtion:POWer<sb>: RESult?.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

ON | 1

Channel power density in dBm/Hz

OFF | 0

Channel power in dBm

*RST: 0

Example: CALC:MARK:FUNC:POW:RES:PHZ ON

Output of results referred to the channel bandwidth.

Manual operation: See "Channel power level and density (Power Unit)"

on page 267

[SENSe:]POWer:ACHannel:MODE < Mode>

This command selects the way the R&S FPL1000 displays the power of adjacent channels.

You need at least one adjacent channel for the command to work.

Parameters:

<Mode> ABSolute

Shows the absolute power of all channels

RELative

Shows the power of adjacent and alternate channels in relation

to the transmission channel

*RST: RELative

Configuring and Performing Measurements

Manual operation: See " Absolute and Relative Values (ACLR Mode) " on page 267

8.6.3.8 Programming Examples for Channel Power Measurements

The following programming examples are meant to demonstrate the most important commands to perform channel power measurements in a remote environment.

Example: Configuring and Performing an ACLR Measurement......564

Example: Configuring and Performing an ACLR Measurement

In this example we will configure and perform an adjacent-channel power measurement. Note that this example is primarily meant to demonstrate the remote control commands, it does not necessarily reflect a useful measurement task. For most common measurement standards, the R&S FPL1000 performs the measurement optimally with the predefined settings, without further configuration.

```
//----Preparing the measurement -----
//Reset the instrument
*RST
//----Preparing the measurement-----
//Activate adjacent-channel power measurement.
CALC:MARK:FUNC:POW:SEL ACP
//Select the user standard "GSM"
CALC:MARK:FUNC:POW:PRES GSM
//----Setting Up Channels-----
//Create one transmission channel.
POW: ACH: TXCH: COUN 1
//Name the first transmission channel 'TX Channel'.
POW:ACH:NAME:CHAN1 'TX Channel'
//Create two adjacent channels - one adjacent channel and one alternate channel.
POW:ACH:ACP 2
//Name the adjacent channel 'ABC'
POW: ACH: NAME: ACH 'ABC'
//Name the first alternate channel 'XYZ'.
POW: ACH: NAME: ALT1 'XYZ'
//Define a bandwidth of 30 kHz for the transmission channel.
POW:ACH:BWID:CHAN1 30kHz
//Define a bandwidth of 30 kHz for the adjacent channel.
POW:ACH:BWID:ACH 30kHz
//Define a bandwidth of 30 kHz for the first alternate channel.
POW:ACH:BWID:ALT1 30kHz
//Define a distance of 33 kHz from the center of the transmission channel to the
//center of the adjacent channel.
//Also adjust the distance to the alternate channels (66 kHz).
POW: ACH: SPAC 33kHz
//Define a distance of 100 kHz from the center of the transmission channel to the
//center of the first alternate channel.
```

Configuring and Performing Measurements

```
POW:ACH:SPAC:ALT1 100kHz
//----Selecting a Reference Channel--
//Select relative display of the channel power.
POW:ACH:MODE REL
//Define transmission channel 1 as the reference channel.
POW:ACH:REF:TXCH:MAN 1
//----Saving the settings as a user standard-----
//Save the user standard with the name "my_aclr_standard".
//Weighting filters can only be defined for user-defined standards.
CALC:MARK:FUNC:POW:STAN:SAVE 'my_aclr_standard'
//-----Defining Weighting Filters----
//Define a roll-off factor of 0.35 for the weighting filter of the first
//transmission channel.
POW:ACH:FILT:ALPH:CHAN1 0.35
//Turn the weighting filter for the first transmission channel on.
POW:ACH:FILT:CHAN1 ON
//Define a roll-off factor of 0.35 for the weighting filter of the adjacent
//channel.
POW:ACH:FILT:ALPH:ACH 0.35
//Turn the weighting filter for the adjacent channel on.
POW: ACH: FILT: ACH ON
//Define a roll-off factor of 0.35 for the weighting filter of the first
//alternate channel.
POW:ACH:FILT:ALPH:ALT1 0.35
//Turn the weighting filter for the first alternate channel on.
POW:ACH:FILT:ALT1 ON
//-----Working with Limits-----
//Define a relative limit of 30 dB below the power of the reference channel
//for both adjacent channels.
CALC:LIM:ACP:ACH 30DB, 30DB
//Define a relative limit of 25 dB below the power of the reference channel
//for the first alternate channels.
CALC:LIM:ACP:ALT1 25DB, 25DB
//Define an absolute limit of -35 dBm for both adjacent channels.
CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM
//Turn the ACLR limit check on.
CALC:LIM:ACP ON
//Turn the relative limit check for adjacent channels on.
CALC:LIM:ACP:ACH:STAT ON
//Turn the absolute limit check for adjacent channels on.
CALC:LIM:ACP:ACH:ABS:STAT ON
//Turn the absolute limit check for the first alternate channel on.
CALC:LIM:ACP:ALT1:ABS:STAT ON
//----Performing the Measurement----
//Determine the ideal ACLR measurement configuration.
```

Configuring and Performing Measurements

```
POW:ACH:PRES ACP;*WAI

//Determine the ideal reference level for the measurement.

POW:ACH:PRES:RLEV;*WAI

//Initiate a new measurement and waits until the sweep has finished.

INIT;*WAI

//-----Limit Check------

//Query the results of the limit check for the adjacent channels.

CALC:LIM:ACP:ACH:RES?

//Query the results of the limit check for the first alternate channels.

CALC:LIM:ACP:ALT1:RES?

//------Retrieving Results------

//Query the results for the ACLR measurement.

CALC:MARK:FUNC:POW:RES? ACP
```

8.6.4 Measuring the Carrier-to-Noise Ratio

The following commands are necessary to perform carrier-to-noise measurements.

```
    CALC:MARK:FUNC:POW:SEL CN | CN0, See CALCulate<n>:MARKer<m>:
FUNCtion:POWer:SELect
```

- CALCulate<n>:MARKer<m>:FUNCtion:POWer[:STATe]
- CALCulate<n>:MARKer<m>:FUNCtion:POWer<sb>:RESult?
- [SENSe:]POWer:ACHannel:BANDwidth[:CHANnel<ch>]
- [SENSe:]POWer:ACHannel:PRESet

Programming example: Measuring the carrier-to-noise ratio

This programming example demonstrates how to perform a Carrier-to-noise measurement in a remote environment.

Configuring and Performing Measurements

```
// Now turn off the carrier signal and repeat the measurement:
INIT;*WAI
//Initiates a new measurement and waits until the sweep has finished.
//-----Retrieving Results-----
CALC:MARK:FUNC:POW:RES? CN
//Returns the carrier-to-noise ratio.
```

8.6.5 Measuring the Occupied Bandwidth

All remote control commands specific to occupied bandwidth measurements are described here.

- 8.6.5.1 Configuring the Measurement

The following commands configure measurements of the occupied bandwidth.

Useful commands for occupied bandwidth measurements described elsewhere

Configuring the channel:

- [SENSe:]POWer:ACHannel:BANDwidth[:CHANnel<ch>]
- [SENSe:] POWer:ACHannel:PRESet
- [SENSe:]POWer:ACHannel:PRESet:RLEVel

Defining search limits:

- CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] on page 724
- CALCulate<n>:MARKer<m>:X:SLIMits:LEFT on page 724
- CALCulate<n>:MARKer<m>:X:SLIMits:RIGHt on page 724

Performing the measurement:

- CALCulate<n>:MARKer<m>:FUNCtion:POWer:SELect on page 547
- CALCulate<n>:MARKer<m>:FUNCtion:POWer[:STATe] on page 547

Retrieving results:

• CALCulate<n>:MARKer<m>:FUNCtion:POWer<sb>:RESult? on page 545

Remote commands exclusive to occupied bandwidth measurements:

[SENSe:]POWer:BWIDth	568
[SENSe:]POWer:BANDwidth	568

Configuring and Performing Measurements

[SENSe:]POWer:BWIDth <Percentage> [SENSe:]POWer:BANDwidth <Percentage>

This command selects the percentage of the total power that defines the occupied bandwidth.

Parameters:

<Percentage> Range: 10 PCT to 99.9 PCT

*RST: 99 PCT

Example: POW:BAND 95PCT

Manual operation: See " % Power Bandwidth " on page 287

8.6.5.2 Programming Example: OBW Measurement

This programming example demonstrates the measurement example described in Chapter 7.2.5.5, "Measurement Example", on page 289 in a remote environment.

```
//----Preparing the measurement -----
//Reset the instrument
*RST
//-----Configuring the Measurement-----
//Set the center frequency to 800 MHz.
FREQ:CENT 800MHz
//{\rm Set} the reference level to -10 dBm.
DISP:TRAC:Y:RLEV -10dBm
//Activate occupied bandwidth measurement.
CALC:MARK:FUNC:POW:SEL OBW
//Set the percentage of power to 99%.
POW:BWID 99PCT
//Set the channel bandwidth to 21 kHz.
POW:ACH:BAND 21kHz
//Optimize the instrument settings according to the channel bandwidth.
POW:ACH:PRES OBW
//Determine the ideal reference level for the measurement.
POW:ACH:PRES:RLEV
//Set the trace detector to positive peak.
//----Performing the Measurement----
//Select single sweep mode.INIT:CONT OFF
//Initiate a new measurement and waits until the sweep has finished.
INIT; *WAI
//-----Retrieving Results-----
//Return the occupied bandwidth.
CALC:MARK:FUNC:POW:RES? OBW
```

Configuring and Performing Measurements

8.6.6 Measuring the Spectrum Emission Mask

All remote control commands specific to spectrum emission mask measurements are described here.



See also Chapter 8.6.2, "Configuring Power Measurements", on page 544.

•	Managing Measurement Configurations	569
	Controlling the Measurement	
	Configuring a Multi-SEM Measurement	
•	Configuring a Sweep List	572
	Configuring the Reference Range	
•	Configuring the Power Classes	587
•	Configuring the List Evaluation	. 592
•	Performing an SEM Measurement	594
•	Retrieving Results	594
•	Example: SEM Measurement	. 594

8.6.6.1 Managing Measurement Configurations

The following commands control measurement configurations for SEM measurements.

CALCulate <n>:LIMit:ESPectrum<sb>:RESTore</sb></n>	569
[SENSe:]ESPectrum <sb>:PRESet[:STANdard]</sb>	569
[SENSe:]ESPectrum <sb>:PRESet:RESTore</sb>	570
[SENSe:]ESPectrum <sb>:PRESet:STORe</sb>	570

CALCulate<n>:LIMit:ESPectrum<sb>:RESTore

This command restores the predefined limit lines for the selected Spectrum Emission Mask standard.

All modifications made to the predefined limit lines are lost and the factory-set values are restored.

Suffix:

<n>, , <sb> irrelevant

Example: CALC:LIM:ESP:REST

Resets the limit lines for the current Spectrum Emission Mask

standard to the default setting.

[SENSe:]ESPectrum<sb>:PRESet[:STANdard] <Standard>

This command loads a measurement configuration.

Standard definitions are stored in an xml file. The default directory for SEM standards is C: $\Documents\Rohde-Schwarz\Analyzer\sem_std$.

Configuring and Performing Measurements

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

Parameters:

<Standard> String containing the file name.

If you have stored the file in a subdirectory of the directory mentioned above, you have to include the relative path to the file.

Return values:

<Standard> The query returns the name of the currently loaded standard.

Manual operation: See "Standard" on page 311

See "Load Standard" on page 315

[SENSe:]ESPectrum<sb>:PRESet:RESTore

This command restores the default configurations of predefined SEM standards.

Note that the command will overwrite customized standards that have the same name as predefined standards.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

Usage: Event

Manual operation: See "Restore Standard Files" on page 316

[SENSe:]ESPectrum<sb>:PRESet:STORe <Standard>

This command saves the current SEM measurement configuration.

Standard definitions are stored in an xml file. The default directory for SEM standards is C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\sem std.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

Parameters:

<Standard> String containing the file name.

You can save the file in a subdirectory of the directory mentioned above. In that case, you have to include the relative path

to the file.

Manual operation: See "Save Standard" on page 315

Configuring and Performing Measurements

8.6.6.2 Controlling the Measurement

The following commands control the measurement itself.

INITiate <n>:ESPectrum</n>	5	7	1
[SENSe:]SWEep:MODE	5	7	1

INITiate<n>:ESPectrum

This command initiates a Spectrum Emission Mask measurement.

Suffix:

<n> irrelevant

Usage: Event

[SENSe:]SWEep:MODE < Mode>

This command selects the spurious emission and spectrum emission mask measurements.

You can select other measurements with

CALCulate<n>:MARKer<m>:FUNCtion:POWer[:STATe]

Parameters:

<Mode> AUTO

Turns on basic spectrum measurements.

ESPectrum

Turns on spectrum emission mask measurements.

LIST

Turns on spurious emission measurements.

*RST: AUTO

8.6.6.3 Configuring a Multi-SEM Measurement

In the Spectrum application only, spectrum emissions can be measured for multiple sub blocks of channels (see "SEM with Multiple Sub Blocks ("Multi-SEM")" on page 300). Up to three sub blocks (with two gaps) can be defined. For each sub block, the familiar configuration settings concerning ranges, limit lines etc. can be defined in individual tabs (select the sub block using the <sb> suffix in the corresponding commands). In addition, settings on the sub blocks themselves must be configured.

Useful commands for multi-SEM measurements described elsewhere:

[SENSe:]ESPectrum<sb>:RANGe<range>:MLCalc on page 583

Remote commands exclusive to multi-SEM measurements

[SENSe:]ESPectrum <sb>:SBCenter</sb>	572
[SENSe:]ESPectrum <sb>:SCENter</sb>	572
[SENSe:]ESPectrum <sb>:SBCount</sb>	
[SENSe:]ESPectrum <sb>:SCOunt</sb>	572

Configuring and Performing Measurements

[SENSe:]ESPectrum<sb>:SBCenter < Frequency>
[SENSe:]ESPectrum<sb>:SCENter < Frequency>

This command defines the center frequency of the selected sub block in a Multi-SEM measurement.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

Parameters:

<Frequency> Frequency within the currently defined global span (see

[SENSe:] FREQuency: SPAN on page 651 and [SENSe:

] FREQuency: CENTer on page 649).

Range: 1 to 3 *RST: 1

Example: ESP1:SCEN 1GHZ

Manual operation: See "Sub Block / Center Freq " on page 311

[SENSe:]ESPectrum<sb>:SBCount<SubBlocks>
[SENSe:]ESPectrum<sb>:SCOunt<SubBlocks>

This command defines the number of sub blocks in the SEM measurement. (<sb> is irrelevant)

Parameters:

<SubBlocks> Number of sub blocks in the SEM measurement.

Range: 1 to 3 *RST: 1

Example: ESP:SCO 2

Manual operation: See "Sub Block Count" on page 310

8.6.6.4 Configuring a Sweep List

The following commands define a sweep list for SEM measurements.



The sweep list cannot be configured using remote commands during an on-going sweep operation.

See also:

• CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>:LIMit[:STATe] on page 590

[SENSe:]ESPectrum <sb>:HSPeed</sb>	573
[SENSe:]ESPectrum <sb>:RANGe<range>:BANDwidth:RESolution</range></sb>	573
[SENSe:]ESPectrum <sb>:RANGe<range>:BANDwidth:VIDeo</range></sb>	574
[SENSe:]ESPectrum <sb>:RANGe<range>:COUNt?</range></sb>	574

Configuring and Performing Measurements

[SENSe:]ESPectrum <sb>:RANGe<range>:DELete</range></sb>	574
[SENSe:]ESPectrum <sb>:RANGe<range>:FILTer:TYPE</range></sb>	575
[SENSe:]ESPectrum <sb>:RANGe<range>[:FREQuency]:STARt</range></sb>	575
[SENSe:]ESPectrum <sb>:RANGe<range>[:FREQuency]:STOP</range></sb>	576
[SENSe:]ESPectrum <sb>:RANGe<range>:INPut:ATTenuation</range></sb>	576
[SENSe:]ESPectrum <sb>:RANGe<range>:INPut:ATTenuation:AUTO</range></sb>	576
[SENSe:]ESPectrum <sb>:RANGe<range>:INPut:GAIN:STATe</range></sb>	577
[SENSe:]ESPectrum <sb>:RANGe<range>:INSert</range></sb>	577
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:ABSolute:STARt</pclass></range></sb>	578
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:ABSolute:STOP</pclass></range></sb>	578
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STARt</pclass></range></sb>	579
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STARt:ABS</pclass></range></sb>	579
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STARt:FUNCtion</pclass></range></sb>	580
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STOP</pclass></range></sb>	580
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STOP:ABS</pclass></range></sb>	581
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STOP:FUNCtion</pclass></range></sb>	582
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:STATe</pclass></range></sb>	582
[SENSe:]ESPectrum <sb>:RANGe<range>:POINts:MINimum[:VALue]</range></sb>	583
[SENSe:]ESPectrum <sb>:RANGe<range>:MLCalc</range></sb>	583
[SENSe:]ESPectrum <sb>:RANGe<range>:RLEVel</range></sb>	584
[SENSe:]ESPectrum <sb>:RANGe<range>:SWEep:TIME</range></sb>	584
[SENSe:]ESPectrum <sb>:RANGe<range>:SWEep:TIME:AUTO</range></sb>	585
[SENSe:]ESPectrum <sb>:RANGe<range>:TRANsducer</range></sb>	585

[SENSe:]ESPectrum<sb>:HSPeed <State>

This command turns high speed mode for SEM measurements on and off.

For more information including restrictions see "Fast SEM Measurements" on page 298.

Suffix:

<sb> 1 | 2 | 3

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: ESP: HSP ON

Manual operation: See "Fast SEM" on page 306

[SENSe:]ESPectrum<sb>:RANGe<range>:BANDwidth:RESolution <RBW>

This command defines the resolution bandwidth for a SEM range.

In case of high speed measurements, the resolution bandwidth has to be identical for all ranges.

Suffix:

<sb> 1 | 2 | 3

Configuring and Performing Measurements

<range> 1...30

Selects the measurement range.

Parameters:

<RBW> Resolution bandwidth.

Refer to the data sheet for available resolution bandwidths.

*RST: 30.0 kHz Default unit: Hz

Manual operation: See " RBW " on page 306

[SENSe:]ESPectrum<sb>:RANGe<range>:BANDwidth:VIDeo <VBW>

This command defines the video bandwidth for a SEM range.

In case of high speed measurements, the video bandwidth has to be identical for all ranges.

Suffix:

<sb> 1 | 2 | 3 <range> 1...30

Selects the measurement range.

Parameters:

<VBW> Video bandwidth.

Refer to the data sheet for available video bandwidths.

*RST: 10.0 MHz Default unit: Hz

Manual operation: See "VBW" on page 306

[SENSe:]ESPectrum<sb>:RANGe<range>:COUNt? <Ranges>

This command queries the number of ranges in the sweep list (<range> is irrelevant).

Suffix:

<sb> 1 | 2 | 3

Return values:

<Ranges> Number of ranges in the sweep list.

Usage: Query only

[SENSe:]ESPectrum<sb>:RANGe<range>:DELete

This command removes a range from the sweep list.

Note that

- you cannot delete the reference range
- a minimum of three ranges is mandatory.

Configuring and Performing Measurements

Suffix:

<sb> 1 | 2 | 3

<range> 1...30

Selects the measurement range.

Usage: Event

Manual operation: See " Delete Range " on page 309

[SENSe:]ESPectrum<sb>:RANGe<range>:FILTer:TYPE <FilterType>

This command selects the filter type for an SEM range.

In case of high speed measurements, the filter has to be identical for all ranges.

Suffix:

<sb> 1 | 2 | 3
<range> 1...30

Selects the measurement range.

Manual operation: See "Filter Type " on page 306

[SENSe:]ESPectrum<sb>:RANGe<range>[:FREQuency]:STARt <Frequency>

This command defines the start frequency of a SEM range.

Make sure to set an appropriate span. If you set a span that is

- smaller than the span the SEM sweep list covers, the R&S FPL1000 will not measure the ranges that are outside the span results may be invalid.
- greater than the span the SEM sweep list covers, the R&S FPL1000 will adjust the start frequency of the first SEM range and the stop frequency of the last SEM range to the span

For more information see "Ranges and Range Settings" on page 294.

Suffix:

<sb> 1 | 2 | 3 < range> 1...30

Selects the measurement range.

Parameters:

<Frequency> Numeric value. Note that the minimum frequency range of a

SEM range is 20 Hz.

*RST: -12.75 MHz (range 1), -2.515 MHz (range 2), 2.515

MHz (range 3)

Default unit: Hz

Manual operation: See "Range Start / Range Stop " on page 305

Configuring and Performing Measurements

[SENSe:]ESPectrum<sb>:RANGe<range>[:FREQuency]:STOP <Frequency>

This command defines the stop frequency of a SEM range.

Make sure to set an appropriate span. If you set a span that is

• smaller than the span the SEM sweep list covers, the R&S FPL1000 will not measure the ranges that are outside the span - results may be invalid.

 greater than the span the SEM sweep list covers, the R&S FPL1000 will adjust the start frequency of the first SEM range and the stop frequency of the last SEM range to the span

For more information see "Ranges and Range Settings" on page 294.

Suffix:

<sb> 1 | 2 | 3 <range> 1...30

Selects the measurement range.

Parameters:

<Frequency> Numeric value.

*RST: -2.52 MHz (range 1), 2.52 MHz (range 2), 250.0

MHz (range 3)

Default unit: Hz

Manual operation: See "Range Start / Range Stop " on page 305

[SENSe:]ESPectrum<sb>:RANGe<range>:INPut:ATTenuation < Attenuation>

This command defines the input attenuation for a SEM range.

In case of high speed measurements, the input attenuation has to be identical for all ranges.

Suffix:

<sb> 1 | 2 | 3 <range> 1...20

Selects the measurement range.

Parameters:

<Attenuation> Numeric value.

Refer to the data sheet for the attenuation range.

*RST: 10 dB Default unit: dB

Manual operation: See " RF Attenuation " on page 307

[SENSe:]ESPectrum<sb>:RANGe<range>:INPut:ATTenuation:AUTO <State>

This command turns automatic selection of the input attenuation for a SEM range on and off.

Configuring and Performing Measurements

In case of high speed measurements, the input attenuation has to be identical for all ranges.

Suffix:

<sb> 1 | 2 | 3 <range> 1..30

Selects the measurement range.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: ESP:RANG2:INP:ATT:AUTO OFF

Deactivates the RF attenuation auto mode for range 2.

Manual operation: See " RF Att Mode " on page 307

[SENSe:]ESPectrum<sb>:RANGe<range>:INPut:GAIN:STATe<State>

This command turns the preamplifier for a SEM range on and off.

In case of high speed measurements, the state of the preamplifier has to be identical for all ranges.

Suffix:

<sb> 1 | 2 | 3 <range> 1..30

Selects the measurement range.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Preamp" on page 307

[SENSe:]ESPectrum<sb>:RANGe<range>:INSert < Mode>

This command inserts a new SEM range and updates the range numbers accordingly.

Suffix:

<sb> 1 | 2 | 3 <range> 1..30

Selects the SEM range.

Parameters:

<Mode> AFTer

Inserts a range after the selected range.

BEFore

Inserts a range before the selected range.

Manual operation: See "Insert before Range / Insert after Range " on page 309

Configuring and Performing Measurements

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:ABSolute:STARt

<Level>

This command defines an absolute limit for a SEM range.

Unlike manual operation, you can define an absolute limit anytime and regardless of the limit check mode.

Suffix:

<sb> 1 | 2 | 3 <range> 1..30

Selects the measurement range.

<PClass> 1..4

Power class for which the limit is defined.

Parameters:

<Level> Absolute limit at the start frequency of a SEM range.

Range: -400 to 400

*RST: -13
Default unit: dBm

Example: SENSe:ESPectrum:RANGe:LIMit:ABSolute:STARt -10

For a detailed example see Chapter 8.6.6.10, "Example: SEM

Measurement", on page 594.

Manual operation: See " Abs Limit Start / Stop <n> " on page 308

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:ABSolute:STOP <Level>

This command defines an absolute limit for a SEM range.

Unlike manual operation, you can define an absolute limit anytime and regardless of the limit check mode.

Suffix:

<sb> 1 | 2 | 3

<range> 1..30

Selects the measurement range.

<PClass> 1..4

Power class for which the limit is defined.

Parameters:

<Level> Absolute limit at the stop frequency of a SEM range.

Range: -400 to 400

*RST: -13
Default unit: dBm

Example: SENSe:ESPectrum:RANGe:LIMit:ABSolute:STOP -15

For a detailed example see Chapter 8.6.6.10, "Example: SEM

Measurement", on page 594.

Manual operation: See " Abs Limit Start / Stop <n> " on page 308

Configuring and Performing Measurements

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STARt <Limit>

This command defines a relative limit for a SEM range.

Unlike manual operation, you can define a relative limit regardless of the limit check mode.

Suffix:

<sb> 1 | 2 | 3 <range> 1..30

Selects the SEM range.

<PClass> 1..4

Power class for which the limit is defined.

Parameters:

<Level> Relative limit at the start frequency of a SEM range.

Range: -400 to 400

*RST: -50 Default unit: dBc

Example: SENS:ESP:RANG:LIM:REL:STAR -10

Manual operation: See "Rel Limit Start / Stop <n> " on page 308

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STARt:ABS <Limit>

This command defines an absolute limit for the MAX function of the relative limit for a SEM range.

For more information see "Relative limit line functions" on page 298.

Suffix:

<sb> 1 | 2 | 3 < range> 1..30

Selects the SEM range.

<PClass> 1..4

Power class for which the limit is defined.

Parameters:

<Level> Absolute limit at the start frequency of a SEM range to be used

in addition to the relative limit if the MAX function is enabled (see

[SENSe:]ESPectrum<sb>:RANGe<range>:
LIMit<PClass>:RELative:STARt:FUNCtion

on page 580).

Range: -400 to 400

*RST: -13 Default unit: dBm

Configuring and Performing Measurements

Example: SENSe:ESPectrum:RANGe:LIMit:RELative:STARt:

ABSolute -10

For a detailed example see Chapter 8.6.6.10, "Example: SEM

Measurement", on page 594.

Manual operation: See "Rel Limit Start / Stop <n> " on page 308

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STARt: FUNCtion <Function>

This command enables the use of a function when defining the relative limit for a SEM range.

Suffix:

<sb> 1 | 2 | 3 <range> 1..30

Selects the SEM range.

<PClass> 1..4

Power class for which the limit is defined.

Parameters:

<Function> Defines the function to be used to determine the relative limit

line start value

MAX

The maximum of the relative and the absolute level is used as the limit start value. Use the [SENSe:]ESPectrum<sb>:
RANGe<range>:LIMit<PClass>:RELative:STARt and

[SENSe:]ESPectrum<sb>:RANGe<range>:

LIMit<PClass>:RELative:STARt:ABS commands to define

these values.

OFF

No function is used, the relative limit line is defined by a fixed relative start value. Use the [SENSe:]ESPectrum<sb>:
RANGe<range>:LIMit<PClass>:RELative:STARt com-

mand to define this value.

*RST: OFF

Example: SENSe:ESPectrum:RANGe:LIMit:RELative:STARt:

FUNCtion MAX

For a detailed example see Chapter 8.6.6.10, "Example: SEM

Measurement", on page 594.

Manual operation: See "Rel Limit Start / Stop <n> " on page 308

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STOP <Limit>

This command defines a relative limit for a SEM range.

Unlike manual operation, you can define a relative limit anytime and regardless of the limit check mode.

Configuring and Performing Measurements

Suffix:

<sb> 1 | 2 | 3

<range> 1..30

Selects the SEM range.

<PClass> 1..4

Power class for which the limit is defined.

Parameters:

<Level> Relative limit at the stop frequency of a SEM range.

Range: -400 to 400

*RST: -50 Default unit: dBc

Example: SENSe:ESPectrum:RANGe:LIMit:RELative:STOP -15

For a detailed example see Chapter 8.6.6.10, "Example: SEM

Measurement", on page 594.

Manual operation: See "Rel Limit Start / Stop <n> " on page 308

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STOP:ABS <Limit>

This command defines an absolute limit for the MAX function of the relative limit for a SEM range.

For more information see "Relative limit line functions" on page 298.

Suffix:

<sb> 1 | 2 | 3 <range> 1..30

Selects the SEM range.

<PClass> 1..4

Power class for which the limit is defined.

Parameters:

<Level> Absolute limit at the stop frequency of a SEM range to be used

in addition to the relative limit if the MAX function is enabled (see

[SENSe:]ESPectrum<sb>:RANGe<range>:
LIMit<PClass>:RELative:STOP:FUNCtion

on page 582).

Range: -400 to 400

*RST: -13 Default unit: dBm

Example: SENSe:ESPectrum:RANGe:LIMit:RELative:STOP:

ABSolute -15

For a detailed example see Chapter 8.6.6.10, "Example: SEM

Measurement", on page 594.

Manual operation: See "Rel Limit Start / Stop <n> " on page 308

Configuring and Performing Measurements

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:RELative:STOP: FUNCtion <Function>

This command enables the use of a function when defining the relative limit for a SEM range.

Suffix:

<sb> 1 | 2 | 3 <range> 1..30

Selects the SEM range.

<PClass> 1..4

Power class for which the limit is defined.

Parameters:

<Function> Defines the function to be used to determine the relative limit

line stop value

MAX

The maximum of the relative and the absolute level is used as the limit stop value. Use the [SENSe:]ESPectrum<sb>:
RANGe<range>:LIMit<PClass>:RELative:STOP and

[SENSe:]ESPectrum<sb>:RANGe<range>:

LIMit<PClass>:RELative:STOP:ABS commands to define

these values.

OFF

No function is used, the relative limit line is defined by a fixed relative stop value. Use the [SENSe:]ESPectrum<sb>:
RANGe<range>:LIMit<PClass>:RELative:STOP command to define this value.

*RST: OFF

Example: SENSe:ESPectrum:RANGe:LIMit:RELative:STOP:

FUNCtion MAX

For a detailed example see Chapter 8.6.6.10, "Example: SEM

Measurement", on page 594.

Manual operation: See "Rel Limit Start / Stop <n> " on page 308

[SENSe:]ESPectrum<sb>:RANGe<range>:LIMit<PClass>:STATe <State>

This command selects the limit check mode for all SEM ranges (<range> is irrelevant).

Suffix:

<sb> 1 | 2 | 3

<PClass> 1..4

Power class for which the limit is defined.

Configuring and Performing Measurements

Parameters:

<State> ABSolute | RELative | AND | OR

ABSolute

Checks only the absolute limits defined.

RELative

Checks only the relative limits. Relative limits are defined as rel-

ative to the measured power in the reference range.

AND

Combines the absolute and relative limit. The limit check fails

when both limits are violated.

OR

Combines the absolute and relative limit. The limit check fails

when one of the limits is violated.

*RST: RELative

Manual operation: See "Limit Check <n> " on page 308

[SENSe:]ESPectrum<sb>:RANGe<range>:POINts:MINimum[:VALue]

<SweepPoint>

Defines the minimum number of sweep points for the range.

Suffix:

<sb> 1 | 2 | 3 < range> 1..30

Selects the measurement range.

Parameters:

<SweepPoints> Minimum number of sweep points per range

Range: 1 to 32001

*RST: 1

Example: SENSe1:ESPectrum:RANGe3:POINts:MIN:VALue 400

Manual operation: See "Min Sweep Points" on page 309

[SENSe:]ESPectrum<sb>:RANGe<range>:MLCalc <Function>

Defines the function used to calculate the limit line for the n-th power class for overlapping ranges in Multi-SEM measurements. For details see "Limit calculation for individual ranges" on page 302.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

<range> 1..30

Selects the measurement range.

Configuring and Performing Measurements

Parameters:

<Function> NONE

(reference ranges only:) the limit of the reference range is used;

Reference ranges always use the function "NONE".

SUM

sum of the two limit lines (calculated for linear powers) is used

MAX

maximum of the two limit lines is used

*RST: SUM (reference range: NONE)

Manual operation: See "Multi-Limit Calc <n> " on page 309

[SENSe:]ESPectrum<sb>:RANGe<range>:RLEVel <RefLevel>

This command defines the reference level for a SEM range.

In case of high speed measurements, the reference level has to be identical for all ranges.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

<range> 1..30

Selects the measurement range.

Parameters:

<RefLevel> Reference level.

Refer to the data sheet for the reference level range.

*RST: 0 dBm

Manual operation: See "Ref Level" on page 307

[SENSe:]ESPectrum<sb>:RANGe<range>:SWEep:TIME <SweepTime>

This command defines the sweep time for a SEM range.

In case of high speed measurements, the sweep time has to be identical for all ranges.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

<range> 1..30

Selects the measurement range.

Parameters:

<SweepTime> Sweep time.

The range depends on the ratios of the span to the RBW and the RBW to the VBW. Refer to the data sheet for more informa-

tion.

Manual operation: See "Sweep Time" on page 307

Configuring and Performing Measurements

[SENSe:]ESPectrum<sb>:RANGe<range>:SWEep:TIME:AUTO <State>

This command turns automatic selection of the sweep time for a SEM range on and off.

In case of high speed measurements, the sweep time has to be identical for all ranges.

Suffix:

<sb> 1 | 2 | 3 <range> 1..30

Selects the measurement range.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: ESP:RANG3:SWE:TIME:AUTO OFF

Deactivates the sweep time auto mode for range 3.

Manual operation: See "Sweep Time Mode" on page 307

[SENSe:]ESPectrum<sb>:RANGe<range>:TRANsducer <Transducer>

This command selects a transducer factor for a SEM range.

Note that

- the transducer must cover at least the span of the range
- the x-axis has to be linear
- the unit has to be dB

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

<range> 1..30

Selects the measurement range.

Parameters:

<Transducer> String containing the transducer file name, including the path

information.

Manual operation: See "Transducer Factor" on page 307

8.6.6.5 Configuring the Reference Range

The following commands define the reference range for the SEM sweep list.

[SENSe:]ESPectrum <sb>:BWID</sb>	586
[SENSe:]ESPectrum <sb>:FILTer[:RRC]:ALPHa</sb>	586
[SENSe:]ESPectrum <sb>:FILTer[:RRC][:STATe]</sb>	586
[SENSe:]ESPectrum <sb>:RRANge?</sb>	586
[SENSe:]ESPectrum <sb>:RTYPe</sb>	587

Configuring and Performing Measurements

[SENSe:]ESPectrum<sb>:BWID <Bandwidth>

This command defines the channel bandwidth of the reference range.

The bandwidth is available if the power reference is the channel power.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

Parameters:

<Bandwidth> minimum span ≤ value ≤ span of reference range

*RST: 3.84 MHz

Manual operation: See "Tx Bandwidth" on page 312

[SENSe:]ESPectrum<sb>:FILTer[:RRC]:ALPHa <Alpha>

This command defines the roll-off factor for the RRC filter.

The RRC filter is available if the power reference is the channel power.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

Parameters:

<Alpha> Range: 0 to 1

*RST: 0.22

Manual operation: See " Alpha: " on page 312

[SENSe:]ESPectrum<sb>:FILTer[:RRC][:STATe] <State>

This command turns the RRC filter in the reference range on and off.

The RRC filter is available if the power reference is the channel power.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Manual operation: See "RRC Filter State " on page 312

[SENSe:]ESPectrum<sb>:RRANge?

This command queries the reference range.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

Configuring and Performing Measurements

Return values:

<RefRange> Number of the current reference range.

Range: 1 to 30

Usage: Query only

[SENSe:]ESPectrum<sb>:RTYPe <Type>

This command defines the type of the power reference.

Suffix:

<sb> 1 | 2 | 3

Sub block in a Multi-SEM measurement

Parameters:

<Type> PEAK

Measures the highest peak within the reference range.

CPOWer

Measures the channel power within the reference range (integral

bandwidth method).

*RST: CPOWer

Manual operation: See "Power Reference Type "on page 312

8.6.6.6 Configuring the Power Classes

The following commands define the power classes for SEM measurements.

CALCulate <n>:LIMit:ESPectrum<sb>:LIMits</sb></n>	587
CALCulate <n>:LIMit:ESPectrum<sb>:MODE</sb></n>	588
CALCulate <n>:LIMit:ESPectrum<sb>:VALue</sb></n>	. 589
CALCulate <n>:LIMit:ESPectrum<sb>:PCLass:COUNt</sb></n>	589
CALCulate <n>:LIMit:ESPectrum<sb>:PCLass<pclass>[:EXCLusive]</pclass></sb></n>	. 590
CALCulate <n>:LIMit:ESPectrum<sb>:PCLass<pclass>:LIMit[:STATe]</pclass></sb></n>	. 590
CALCulate <n>:LIMit:ESPectrum<sb>:PCLass<pclass>:MAXimum</pclass></sb></n>	. 591
CALCulate <n>:LIMit:ESPectrum<sb>:PCLass<pclass>:MINimum</pclass></sb></n>	. 591

CALCulate<n>:LIMit:ESPectrum<sb>:LIMits < Max1>,< Max2>,< Max3>

This command sets or queries up to 4 power classes in one step. You can only define values for the number of power classes defined by CALCulate<n>:LIMitESPectrum<sb>:PCLass:COUNt on page 589.

Suffix:

<n>, irrelevant
4 1 | 2 | 3

Configuring and Performing Measurements

Setting parameters:

<Max1> Defines the value range for power class 1 as -200 to

<Max1>

Only available for CALC:LIM:ESP:PCL:COUNT >=2

If only 2 power classes are defined, the value range for power

class 2 is defined as <Max1> to 200.

Range: -199 to + 199

<Max2> Defines the value range for power class 2 as <Max1> to

<Max2>.

Only available for CALC:LIM:ESP:PCL:COUNT >=3

If only 3 power classes are defined, the value range for power

class 3 is defined as <Max2> to 200.

Range: -199 to + 199, <Max2> must be higher than

<Max1>

<Max3> Defines the value range for power class 3 as <Max2> to

<Max3>.

The value range for power class 4 is defined as <Max3> to

200.

Only available for CALC:LIM:ESP:PCL:COUNT = 4

Range: -199 to + 199, <Max3> must be higher than

<Max2>

Return values:

<RangeLimits> As a result of the query, the range limits including the beginning

of the first power class (-200) and the end of the last power class

(+200) are indicated.

Example: CALC:LIM:ESP:LIM -50,50,70

Defines the following power classes:

<-200, -50> <-50, 50> <50, 70> <70, 200> **Query:**

CALC:LIM:ESP:LIM?

Response:

-200,-50,50,70,200

CALCulate<n>:LIMit:ESPectrum<sb>:MODE < Mode>

Which limit line is to be used for an SEM measurement depends on the power class the input signal power belongs to. This command defines wether the power class is determined automatically or manually.

Suffix:

<n>, irrelevant
1 | 2 | 3

Configuring and Performing Measurements

Parameters:

<Mode> AUTO

The power class (and thus the limit line) is assigned dynamically

according to the currently measured channel power.

MANUAL

One of the specified power classes is selected manually for the

entire measurement. The selection is made with the
CALCulate<n>:LIMit:ESPectrum<sb>:
PCLass<PClass>[:EXCLusive] command.

*RST: AUTO

Example: CALC:LIM:ESP:MODE AUTO

Activates automatic selection of the limit line.

CALCulate<n>:LIMit:ESPectrum<sb>:VALue <Power>

This command activates the manual limit line selection as and specifies the expected power as a value. Depending on the entered value, the associated predefined limit lines is selected.

This command has the same effect as a combination of the CALC:LIM:ESP:MODE MAN and the CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>[:EXCLusive] commands; however, the power class to be used is not defined directly, but via the expected power. As opposed to CALC:LIM:ESP:MODE AUTO, the power class is not re-assigned to the input signal power dynamically, but only once when the command is executed.

Suffix:

<n>, irrelevant

<sb>
1 | 2 | 3

Parameters:

<Power> integer

Range: -200 to 199

*RST: 0

Example: CALC:LIM:ESP:VAL 33

Activates manual selection of the limit line and selects the limit

line for P = 33.

CALCulate<n>:LIMit:ESPectrum<sb>:PCLass:COUNt <NoPowerClasses>

This command sets the number of power classes to be defined.

This command must be executed before any new power class values can be defined using CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>:MAXimum and CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>:MINimum.

Suffix:

<n>, irrelevant

Configuring and Performing Measurements

<sb> 1 | 2 | 3

Parameters:

<NoPowerClasses> 1 to 4

*RST: 1

Example: CALC:LIM:ESP:PCL:COUN 2

Two power classes can be defined.

Manual operation: See " Adding or Removing a Power Class " on page 314

CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>[:EXCLusive] < State>

This command selects the power class used by the measurement if CALCulate<n>: LIMit:ESPectrum<sb>:MODE is set to manual.

Note that:

You can only use power classes for which limits are defined.

Suffix:

<n>, irrelevant

<sb> 1 | 2 | 3

<PClass> 1...4

power class

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:LIM:ESP:PCL1 ON

Activates the first defined power class.

Manual operation: See " Used Power Classes: " on page 313

CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>:LIMit[:STATe] < State>

This command selects the limit check mode for each power class.

Suffix:

<n>, irrelevant
sb> 1 | 2 | 3
PClass> 1...4

power class

Configuring and Performing Measurements

Parameters:

<State> ABSolute

Evaluates only limit lines with absolute power values

RELative

Evaluates only limit lines with relative power values

AND

Evaluates limit lines with relative and absolute power values. A

negative result is returned if both limits fail.

OR

Evaluates limit lines with relative and absolute power values. A

negative result is returned if at least one limit failed.

*RST: REL

Example: CALC:LIM:ESP:PCL:LIM ABS

Manual operation: See "Used Power Classes: " on page 313

CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>:MAXimum<Level>

This command defines the upper limit of a particular power class.

Note:

- The last power class always has an upper limit of 200 dBm.
- The upper limit of a power class must always be the same as the lower limit of the subsequent power class.
- The power class must already exist (see CALCulate<n>:LIMit:ESPectrum<sb>:PCLass:COUNt on page 589).

Suffix:

<n>, irrelevant
sb> 1 | 2 | 3
PClass> 1...4

power class

Parameters:

<Level> Range: -199.9 dBm to 200 dBm

Example: CALC:LIM:ESP:PCL1:MAX -40 dBm

Sets the maximum power value of the first power class to -40

dBm.

Manual operation: See "PMin / PMax " on page 313

CALCulate<n>:LIMit:ESPectrum<sb>:PCLass<PClass>:MINimum <Level>

This command defines the lower limit of a particular power class.

Note:

• The first power class always has a lower limit of -200 dBm.

Configuring and Performing Measurements

 The lower limit of a power class must always be the same as the upper limit of the previous power class.

• The power class must already exist (see CALCulate<n>:LIMit:ESPectrum<sb>:PCLass:COUNt on page 589).

Suffix:

<n>, irrelevant
sb> 1 | 2 | 3
PClass> 1...4

power class

Parameters:

<Level> Range: -200 dBm to 199.9 dBm

Example: CALC:LIM:ESP:PCL2:MIN -40 dBm

Sets the minimum power value of the second power class to -40

dBm.

Manual operation: See "PMin / PMax" on page 313

8.6.6.7 Configuring the List Evaluation

The following commands configure the list evaluation.

Useful commands for SEM measurements described elsewhere

• MMEMory:STORe<n>:LIST on page 817

Remote commands exclusive to SEM measurements

CALCulate <n>:ESPectrum:PSEarch:AUTO</n>	592
CALCulate <n>:ESPectrum:PEAKsearch:AUTO</n>	592
CALCulate <n>:ESPectrum:PSEarch[:IMMediate]</n>	593
CALCulate <n>:ESPectrum:PEAKsearch[:IMMediate]</n>	
CALCulate <n>:ESPectrum:PSEarch:MARGin</n>	593
CALCulate <n>:ESPectrum:PEAKsearch:MARGin</n>	593
CALCulate <n>:ESPectrum:PSEarch:PSHow</n>	593
CALCulate <n>:ESPectrum:PEAKsearch:PSHow</n>	593

CALCulate<n>:ESPectrum:PSEarch:AUTO <State>
CALCulate<n>:ESPectrum:PEAKsearch:AUTO <State>

This command turns the list evaluation on and off.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Configuring and Performing Measurements

Example: CALC:ESP:PSE:AUTO OFF

Deactivates the list evaluation.

Manual operation: See "List Evaluation State (Result Summary)" on page 317

See "List Evaluation State" on page 339

CALCulate<n>:ESPectrum:PSEarch[:IMMediate]
CALCulate<n>:ESPectrum:PEAKsearch[:IMMediate]

This command initiates a list evaluation.

Suffix:

<n> Window <m> Marker Usage: Event

CALCulate<n>:ESPectrum:PSEarch:MARGin <Threshold>
CALCulate<n>:ESPectrum:PEAKsearch:MARGin <Threshold>

This command defines the threshold of the list evaluation.

Suffix:

<n> Window

<m> Marker

Parameters:

<Margin> Range: -200 to 200

*RST: 200 Default unit: dB

Example: CALC:ESP:PSE:MARG 100

Sets the margin to 100 dB.

Manual operation: See "Margin" on page 317

See "Margin" on page 339

CALCulate<n>:ESPectrum:PSEarch:PSHow <State>
CALCulate<n>:ESPectrum:PEAKsearch:PSHow <State>

This command turns the peak labels in the diagram on and off.

Peak labels are blue squares.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Configuring and Performing Measurements

Example: CALC:ESP:PSE:PSH ON

Marks all peaks with blue squares.

Manual operation: See "Show Peaks" on page 317

See "Show Peaks" on page 339

8.6.6.8 Performing an SEM Measurement

The following commands are required to perform an SEM measurement:

- SENS:SWE:MODE ESP, see [SENSe:]SWEep:MODE on page 571
- INITiate<n>[:IMMediate] on page 543

8.6.6.9 Retrieving Results

The following commands analyze and retrieve measurement results for SEM measurements.

- TRACe<n>[:DATA] on page 708
- TRACe<n>[:DATA]:MEMory? on page 709
- TRACe<n>[:DATA]:X? on page 710
- CALCulate<n>:MARKer<m>:FUNCtion:POWer<sb>:RESult? on page 545

8.6.6.10 Example: SEM Measurement

In this example we will configure and perform an SEM measurement. Note that this example is primarily meant to demonstrate the remote control commands, it does not necessarily reflect a useful measurement task. For most common measurement standards, the R&S FPL1000 performs the measurement optimally with the predefined settings, without further configuration.

Configuring and Performing Measurements

```
//---- Defining the Reference Range-----
//Query the current reference range.
ESP:RRAN?
//Select the channel power as the power reference.
ESP:RTYP CPOW
//Define a channel bandwidth of 4 MHz for the power reference.
ESP:BWID 4 MHZ
//Use an RRC filter with a roll-off factor of 0.5 when measuring
//the reference power.
ESP:FILT:RRC ON
ESP:FILT:ALPH 0.5
//---- Configuring Power Classes----
//Define 3 power classes.
CALC:LIM:ESP:PCL:COUN 3
//Define the value ranges of the three power classes as [dBm]:
//power class 1: -200 to -100
//power class 2: -100 to 0
//power class 3: 0 to 200
CALC:LIM:ESP:LIM -100,0
//Define an absolute limit check for class 1.
CALC:LIM:ESP:PCL1:LIM ABS
//Define a relative limit check for class 2.
CALC:LIM:ESP:PCL2:LIM REL
//Define a manual selection of the power class.
CALC:LIM:ESP:MODE MAN
//Activate the use of the second power class for the entire measurement.
CALC:LIM:ESP:PCL2 ON
//---- Configuring a Sweep List-----
//Insert a range after range 2.
ESP:RANG2:INS AFT
//Insert a range before range 1.
ESP:RANG1:INS BEF
//Query the number of measurement ranges in the sweep list (currently 11).
ESP:RANG:COUNt?
//Delete the 11th range.
ESP:RANG5:DEL
//Define a stop frequency of -9 MHz for range 1.
ESP:RANG1:STOP -10000000
//Define a start frequency of -10 MHz for range 2.
ESP:RANG2:STAR -9000000
//Switch off Fast SEM mode so the ranges can be configured individually.
ESP:HSP OFF
```

Configuring and Performing Measurements

```
//Define a resolution bandwidth of 1 MHz for range 2.
ESP:RANG2:BAND:RES 1000000
//Select an RRC filter for range 2.
ESP:RANG2:FILT:TYPE RRC
//Define a video bandwidth of 5 MHz for range 2.
ESP:RANG2:BAND:VID 5000000
//Define a sweep time of 1 second for range 2.
ESP:RANG2:SWE:TIME 1
//Define a reference level of 0 dBm for range 2.
ESP:RANG2:RLEV 0
//Define an input attenuation of 10 dB for range 2.
ESP:RANG2:INP:ATT 10
// Create a transducer that can be used.
// It has to cover the corresponding frequency range
SENSel:CORRection:TRANsducer:SELect 'Transducer'
SENSel:CORRection:TRANsducer:UNIT 'DB'
SENSel:CORRection:TRANsducer:COMMent 'Test Transducer'
// Frequency Span 0 MHz bis 20 Ghz
SENSel:CORRection:TRANsducer:DATA 0e6,5, 20e9,3
//Include a transducer called 'transducer' for range 2.
ESP:RANG2:TRAN 'Transducer'
//---- Configuring the limit check-----
//Check the absolute and relative limits for all ranges in power class 1 and
//fails if both limits are violated. Since power class 2 is set to be used for
//the entire measurement, values for Limit Check 1 are irrelevant. They are
//defined here to demonstrate the use of the MAX function for relative limits.
ESP:RANG:LIM1:STAT AND
//Enable the use of maximum function for relative limit start. If the value
//exceeds the larger of the absolute (-13 \ \mathrm{dBm}) and relative (-10 \ \mathrm{dBc}) start
//values, the check fails.
ESP:RANG2:LIM1:REL:STAR:FUNC MAX
ESP:RANG2:LIM1:REL:STAR -10
ESP:RANG2:LIM1:REL:STAR:ABS -13
ESP:RANG2:LIM1:REL:STOP:FUNC MAX
ESP:RANG2:LIM1:REL:STOP -10
ESP:RANG2:LIM1:REL:STOP:ABS -13
//Check the absolute and relative limits for all ranges in power class 2 and
//fails if either limit is violated. Since power class 2 is set to be used for
//the entire measurement, values for Limit Check 1 are irrelevant.
ESP:RANG:LIM2:STAT OR
//Define an absolute limit of 10 dBm for the entire range 2 for power class 2.
```

Configuring and Performing Measurements

```
ESP:RANG2:LIM2:ABS:STAR 10
ESP:RANG2:LIM2:ABS:STOP 10
//Define a relative limit of -20 dBc for the entire range 2 for power class 2.
ESP:RANG2:LIM2:REL:STAR -20
ESP:RANG2:LIM2:REL:STOP -20
//---- Configuring List Evaluation-----
//Activate list evaluation, i.e. the peak is determined for each range
//after each sweep.
CALC:ESP:PSE:AUTO ON
//Define a peak threshold of 10 dB.
CALC:ESP:PSE:MARG 10dB
//---- Managing Measurement Configurations-----
//Save the current configuration in a new file named '3GPP UL User'
//	ext{in} the same directory so the standard is not overwritten.
ESP:PRES:STOR 'WCDMA\3GPP\UL\3GPP UL User.xml'
//---- Performing the measurement-----
//One sweep
INIT:ESP
//----- Checking the Results-----
//Query the result of the limit check for all ranges.
CALC: LIM: FAIL?
//Query the peak for each range of the SEM measurement as a list.
TRAC:DATA? LIST
```

8.6.7 Measuring Spurious Emissions

All remote control commands specific to spurious emissions measurements are described here.

•	nt597
	598
	Range Definitions607
•	Range Definitions

8.6.7.1 Initializing the Measurement

Note that with the R&S FPL1000, the spurious measurement must be initialized before you can start configuring the sweep list or list evaluation.

Configuring and Performing Measurements

INITiate<n>:SPURious

This command initiates a Spurious Emission measurement.

Suffix:

<n> irrelevant Usage: Event

8.6.7.2 Configuring a Sweep List

The following commands configure the sweep list for spurious emission measurements.



The sweep list cannot be configured using remote commands during an on-going sweep operation.

Useful commands for configuring the sweep described elsewhere:

• [SENSe:] SWEep:MODE on page 571

Remote commands exclusive to spurious measurements:

[SENSe:]LIST:RANGe <range>:BANDwidth:RESolution</range>	598
[SENSe:]LIST:RANGe <range>:BANDwidth:VIDeo</range>	599
[SENSe:]LIST:RANGe <range>:COUNt?</range>	599
[SENSe:]LIST:RANGe <range>:DELete</range>	
[SENSe:]LIST:RANGe <range>:DETector</range>	600
[SENSe:]LIST:RANGe <range>:FILTer:TYPE</range>	
[SENSe:]LIST:RANGe <range>[:FREQuency]:STARt</range>	600
[SENSe:]LIST:RANGe <range>[:FREQuency]:STOP</range>	601
[SENSe:]LIST:RANGe <range>:INPut:ATTenuation</range>	601
[SENSe:]LIST:RANGe <range>:INPut:ATTenuation:AUTO</range>	602
[SENSe:]LIST:RANGe <range>:INPut:GAIN:STATe</range>	602
[SENSe:]LIST:RANGe <range>:INPut:GAIN[:VALue]</range>	602
[SENSe:]LIST:RANGe <range>:LIMit:STARt</range>	602
[SENSe:]LIST:RANGe <range>:LIMit:STATe</range>	603
[SENSe:]LIST:RANGe <range>:LIMit:STOP</range>	603
[SENSe:]LIST:RANGe <range>:POINts[:VALue]</range>	603
[SENSe:]LIST:RANGe <range>:RLEVel</range>	603
[SENSe:]LIST:RANGe <range>:SWEep:TIME</range>	604
[SENSe:]LIST:RANGe <range>:SWEep:TIME:AUTO</range>	604
[SENSe:]LIST:RANGe <range>:TRANsducer</range>	604

[SENSe:]LIST:RANGe<range>:BANDwidth:RESolution <RBW>

This command defines the resolution bandwidth for a spurious emission measurement range.

Configuring and Performing Measurements

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<RBW> Resolution bandwidth.

Refer to the data sheet for available resolution bandwidths.

Default unit: Hz

Manual operation: See " RBW " on page 336

[SENSe:]LIST:RANGe<range>:BANDwidth:VIDeo <VBW>

This command defines the video bandwidth for a spurious emission measurement range.

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<VBW> Video bandwidth.

Refer to the data sheet for available video bandwidths.

Default unit: Hz

Manual operation: See " VBW " on page 336

[SENSe:]LIST:RANGe<range>:COUNt?

This command queries the number of ranges in the sweep list (<range> is irrelevant).

Return values:

<Ranges> Number of ranges in the sweep list.

Usage: Query only

[SENSe:]LIST:RANGe<range>:DELete

This command removes a range from the sweep list.

Note that

you cannot delete the reference range

a minimum of three ranges is mandatory.

Suffix:

<range> 1..30

Selects the measurement range.

Usage: Event

Configuring and Performing Measurements

[SENSe:]LIST:RANGe<range>:DETector < Detector>

This command selects the detector for a spurious emission measurement range.

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<Detector> APEak

Autopeak **NEGative**

minimum peak detector

POSitive peak detector SAMPle

sample detector

RMS

RMS detector **AVERage**average detector

*RST: RMS

Manual operation: See " Detector " on page 336

[SENSe:]LIST:RANGe<range>:FILTer:TYPE <FilterType>

This command selects the filter type for a spurious emission measurement range.

Suffix:

<range> 1..30

Selects the measurement range.

Manual operation: See "Filter Type " on page 336

[SENSe:]LIST:RANGe<range>[:FREQuency]:STARt <Frequency>

This command defines the start frequency of a spurious emission measurement range.

Make sure to set an appropriate span. If you set a span that is

- smaller than the span the sweep list covers, the R&S FPL1000 will not measure the ranges that are outside the span - results may be invalid.
- greater than the span the sweep list covers, the R&S FPL1000 will adjust the start frequency of the first range and the stop frequency of the last range to the span

For more information see Chapter 7.2.7, "Spurious Emissions Measurement", on page 330.

Suffix:

<range> 1..30

Selects the measurement range.

Configuring and Performing Measurements

Parameters:

<Frequency> Numeric value.

*RST: -12.75 MHz (range 1), -2.515 MHz (range 2), 2.515

MHz (range 3)

Default unit: Hz

Manual operation: See "Range Start / Range Stop " on page 335

[SENSe:]LIST:RANGe<range>[:FREQuency]:STOP <Frequency>

This command defines the stop frequency of a spurious emission measurement range.

Make sure to set an appropriate span. If you set a span that is

• smaller than the span the sweep list covers, the R&S FPL1000 will not measure the ranges that are outside the span - results may be invalid.

 greater than the span the sweep list covers, the R&S FPL1000 will adjust the start frequency of the first range and the stop frequency of the last range to the span

For more information seeChapter 7.2.7, "Spurious Emissions Measurement", on page 330 .

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<Frequency> Numeric value.

*RST: -2.52 MHz (range 1), 2.52 MHz (range 2), 250.0

MHz (range 3)

Default unit: Hz

Manual operation: See "Range Start / Range Stop " on page 335

[SENSe:]LIST:RANGe<range>:INPut:ATTenuation < Attenuation>

This command defines the input attenuation for a spurious emission measurement range.

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<Attenuation> Numeric value.

Refer to the data sheet for the attenuation range.

*RST: 10 dB Default unit: dB

Manual operation: See " RF Attenuation " on page 337

Configuring and Performing Measurements

[SENSe:]LIST:RANGe<range>:INPut:ATTenuation:AUTO <State>

This command turns automatic selection of the input attenuation for a spurious emission measurement range on and off.

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Manual operation: See " RF Attenuation Mode " on page 337

[SENSe:]LIST:RANGe<range>:INPut:GAIN:STATe <State>

This command turns the preamplifier for a spurious emission measurement range on and off.

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See " Preamp " on page 337

[SENSe:]LIST:RANGe<range>:INPut:GAIN[:VALue] <Gain>

This command selects the preamplification level for the range.

Suffix:

<range> 1..30

Selects the measurement range.

[SENSe:]LIST:RANGe<range>:LIMit:STARt <Level>

This command defines an absolute limit for a spurious emission measurement range.

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<Level> Absolute limit at the start frequency of a SEM range.

Range: -400 to 400

*RST: 13
Default unit: dBm

Manual operation: See " Abs Limit Start / Abs Limit Stop " on page 338

Configuring and Performing Measurements

[SENSe:]LIST:RANGe<range>:LIMit:STATe

This command turns the limit check for all spurious emission measurement ranges on and off (<range> is irrelevant).

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Limit Check " on page 338

[SENSe:]LIST:RANGe<range>:LIMit:STOP <Level>

This command defines an absolute limit for a spurious emission measurement range.

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<Level> Absolute limit at the stop frequency of a SEM range.

Range: -400 to 400

*RST: 13
Default unit: dBm

Manual operation: See " Abs Limit Start / Abs Limit Stop " on page 338

[SENSe:]LIST:RANGe<range>:POINts[:VALue] <Points>

This command defines the number of sweep points in a spurious emission measurement range.

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<Points> For more information on sweep points see Chapter 7.6.1.8,

"How Much Data is Measured: Sweep Points and Sweep

Count", on page 396. *RST: 1001

Manual operation: See "Sweep Points" on page 337

[SENSe:]LIST:RANGe<range>:RLEVel <RefLevel>

This command defines the reference level for a spurious emission measurement range.

Suffix:

<range> 1..30

Selects the measurement range.

Configuring and Performing Measurements

Parameters:

<RefLevel> Reference level.

Refer to the data sheet for the reference level range.

*RST: 0 dBm

Manual operation: See "Reference Level" on page 337

[SENSe:]LIST:RANGe<range>:SWEep:TIME <SweepTime>

This command defines the sweep time for a spurious emission measurement range.

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<SweepTime> Sweep time.

The range depends on the ratios of the span to the RBW and the RBW to the VBW. Refer to the data sheet for more informa-

tion.

Manual operation: See " Sweep Time " on page 336

[SENSe:]LIST:RANGe<range>:SWEep:TIME:AUTO <State>

This command turns automatic selection of the sweep time for a spurious emission measurement range on and off.

Suffix:

<range> 1..30

Selects the measurement range.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Manual operation: See " Sweep Time Mode " on page 336

[SENSe:]LIST:RANGe<range>:TRANsducer < Transducer>

This command selects a transducer factor for a spurious emission measurement range.

Note that

- the transducer must cover at least the span of the range
- the x-axis has to be linear
- the unit has to be dB

Suffix:

<range> 1..30

Selects the measurement range.

Configuring and Performing Measurements

Parameters:

<Transducer> String containing the transducer file name, including the path

information.

Manual operation: See "Transducer" on page 337

8.6.7.3 Configuring the List Evaluation

The following commands configure the list evaluation.

Useful commands for spurious emission measurements described elsewhere

MMEMory:STORe<n>:LIST on page 817

Remote commands exclusive to spurious emission measurements

CALCulate <n>:PSEarch:AUTO</n>	605
CALCulate <n>:PEAKsearch:AUTO</n>	605
CALCulate <n>:PSEarch:DETails</n>	605
CALCulate <n>:ESPectrum:PEAKsearch:DETails</n>	605
CALCulate <n>:PSEarch:MARGin</n>	606
CALCulate <n>:PEAKsearch:MARGin</n>	606
CALCulate <n>:PSEarch:PSHow</n>	606
CALCulate <n>:PEAKsearch:PSHow</n>	606
CALCulate <n>:PSEarch:SUBRanges</n>	607
CALCulate <n>:PEAKsearch:SUBRanges</n>	607

CALCulate<n>:PSEarch:AUTO <State> CALCulate<n>:PEAKsearch:AUTO <State>

This command turns the list evaluation on and off.

Suffix:

<n> Window

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: CALC:PSE:AUTO OFF

Deactivates the list evaluation.

CALCulate<n>:PSEarch:DETails <State>

CALCulate<n>:ESPectrum:PEAKsearch:DETails <State>

This command configures how detailed the list in the Result Summary is.

Suffix:

<n> Window

Configuring and Performing Measurements

Parameters:

<State> ON | OFF | 1 | 0

ON | 1

Includes all detected peaks (up to a maximum defined by CALCulate<n>: PEAKsearch: SUBRanges on page 607).

OFF | 0

Includes only one peak per range.

*RST: 0

Example: CALC:ESP:PSE:DET ON

CALC:PSE:SUBR 10

Includes up to 10 peaks per range in the list.

Usage: Event

Manual operation: See " Details " on page 340

CALCulate<n>:PSEarch:MARGin <Threshold>
CALCulate<n>:PEAKsearch:MARGin <Threshold>

This command defines the threshold of the list evaluation.

Suffix:

<n> Window

Parameters:

<Margin> Range: -200 to 200

*RST: 200 Default unit: dB

Example: CALC:PSE:MARG 100

Sets the threshold to 100 dB.

CALCulate<n>:PSEarch:PSHow <State>
CALCulate<n>:PEAKsearch:PSHow <State>

This command turns the peak labels in the diagram on and off.

Peak labels are blue squares.

Suffix:

<n> Window

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:PSE:PSH ON

Marks all peaks with blue squares.

Configuring and Performing Measurements

CALCulate<n>:PSEarch:SUBRanges < NumberPeaks> CALCulate<n>:PEAKsearch:SUBRanges < NumberPeaks>

This command defines the number of peaks included in the peak list.

After this number of peaks has been found, the R&S FPL1000 stops the peak search and continues the search in the next measurement range.

Suffix:

<n> Window

Parameters:

<NumberPeaks> Range: 1 to 50

*RST: 25

Example: CALC:PSE:SUBR 10

Sets 10 peaks per range to be stored in the list.

Manual operation: See "Peaks per Range" on page 340

8.6.7.4 Adjusting the X-Axis to the Range Definitions

[SENSe:]LIST:XADJust

Sets the x-axis range for the spurious emission measurement from the start frequency of the first sweep range to the stop frequency of the last sweep range.

Example: SENS:LIST:XADJ

Usage: Event

8.6.7.5 Performing a Spurious Measurement

The following commands are required to perform a Spurious measurement:

```
SENS: SWE: MODE LIST, see [SENSe:] SWEep: MODE on page 571
```

INITiate < n > [:IMMediate] on page 543, see Chapter 8.6.1, "Performing Measurements", on page 541

8.6.7.6 Retrieving and Saving Settings and Results

The following commands analyze and retrieve measurement results for Spurious measurements.

Useful commands for spurious emission measurements described elsewhere

- CALCulate<n>:LIMit:FAIL? on page 789
- TRACe<n>[:DATA] on page 708
- TRACe<n>[:DATA]:MEMory? on page 709
- TRACe<n>[:DATA]:X? on page 710

Configuring and Performing Measurements

8.6.7.7 Programming Example: Spurious Emissions Measurement

In the following example, the Spurious Emissions measurement is configured by defining ranges and parameters to create the following sweep list.

Note that this example is primarily meant to demonstrate the remote control commands, it does not necessarily reflect a useful measurement task.

```
//----Preparing the measurement-----
*RST
//Resets the instrument
SWE:MODE LIST
//Activates spurious emissions measurement
INIT: CONT OFF
//Selects single sweep mode.
//Spurious measurement has to be in single sweep mode to be configured
//and no sweep operation may be running!
// If required, a sweep stop can be ensured by INIT: IMM; *WAI
//-----Configuring a Sweep List-----
LIST: RANG: COUNT?
//Returns the number of measurement ranges in the sweep list.
LIST:RANG4:DEL
//Deletes the fourth range.
LIST:RANG1:STAR 10000000
//Defines a start frequency of 10 MHz for range 1.
LIST:RANG1:STOP 100000000
//Defines a stop frequency of 100 MHz for range 1.
LIST:RANG1:BAND 500000
//Defines a resolution bandwidth of 500 kHz in range 1.
LIST:RANG1:BAND:VID 5000000
//Defines a video bandwidth of 5 MHz for range 1.
LIST:RANG1:INP:ATT:AUTO OFF
//Turns automatic selection of the input attenuation in range 1 off.
LIST:RANG1:INP:ATT 10
//Defines a input attenuation of 10 dBm for range 1.
LIST:RANG1:FILT:TYPE CFILter
//Selects an Channel filter for range 1.
LIST: RANG1: DET SAMP
//Selects a sample detector for range 1.
LIST:RANG1:POIN 601
//Defines 601 sweep points for range 1.
LIST:RANG1:RLEV -20
```

Configuring and Performing Measurements

```
//Defines a reference level of -20 dBm for range 1.
LIST:RANG1:SWE:TIME 5
//Defines a manual sweep time of 5 second for range 1.
// Create a transducer that can be used.
// It has to cover the corresponding frequency range
//
SENSel:CORRection:TRANsducer:SELect 'Test'
SENSel:CORRection:TRANsducer:UNIT 'DB'
SENSel:CORRection:TRANsducer:COMMent 'Test Transducer'
// Frequency Span 0 MHz to 20 Ghz
SENSel:CORRection:TRANsducer:DATA 0e6,5, 20e9,3
SENS:LIST:RANG1:TRAN 'Test'
//Includes a transducer called 'Test' for range 1.
LIST:RANG1:LIM:STAR 10
LIST:RANG1:LIM:STOP 10
//Defines an absolute limit of 10 dBm at the start and stop frequencies of range 1.
LIST:RANG:LIM:STAT ON
//Turns the limit check for all ranges on.
//-----Configuring the List Evaluation-----
CALC: PSE: MARG 100
//Sets the threshold to 100 dB.
CALC:PSE:PSH ON
//Marks all peaks in the diagram with blue squares.
CALC:PSE:SUBR 10
//Sets 10 peaks per range to be stored in the list.
//----Performing the Measurement----
INIT:SPUR; *WAI
//Performs a spurious emission measurement and waits until the sweep has finished.
//-----Retrieving Results-----
CALC:LIM1:FAIL?
//Queries the result of the check for limit line 1.
TRAC? SPUR
//Queries the peak list of the spurious emission measurement.
```

8.6.8 Measuring the Time Domain Power

All remote control commands specific to time domain power measurements are described here.

Configuring and Performing Measurements

•	Configuring the Measurement	.610
	Performing a Time Domain Power Measurement	
•	Retrieving Measurement Results	.613
•	Programming Example: Time Domain Power	. 618

8.6.8.1 Configuring the Measurement

The following remote commands measure the time domain power.

Useful commands for time domain power measurements described elsewhere

- CALCulate<n>:MARKer<m>:X:SLIMits:LEFT
- CALCulate<n>:MARKer<m>:X:SLIMits:RIGHt
- CALCulate<n>:MARKer<m>:X:SLIMits[:STATe]

Remote commands exclusive to time domain power measurements

Culate <n>:MARKer<m>:FUNCtion:SUMMary:AOFF</m></n>	610
Culate <n>:MARKer<m>:FUNCtion:SUMMary:AVERage</m></n>	610
Culate <n>:MARKer<m>:FUNCtion:SUMMary:PHOLd</m></n>	611
Culate <n>:MARKer<m>:FUNCtion:SUMMary[:STATe]</m></n>	611
Culate <n>:MARKer<m>:FUNCtion:SUMMary:MEAN[:STATe]</m></n>	612
Culate <n>:MARKer<m>:FUNCtion:SUMMary:PPEak[:STATe]</m></n>	612
Culate <n>:MARKer<m>:FUNCtion:SUMMary:RMS[:STATe]</m></n>	612
Culate <n>:MARKer<m>:FUNCtion:SUMMary:SDEViation[:STATe]</m></n>	613

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:AOFF

This command turns all time domain power evaluation modes off.

Suffix:

<n> window
<m> Marker
Usage: Event

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:AVERage <State>

This command switches on or off averaging for the active power measurement in zero span in the window specified by the suffix <n>. If activated, a time domain value is calculated from the trace after each sweep; in the end, all values are averaged to calculate the final result.

The number of results required for the calculation of average is defined with [SENSe:] AVERage<n>: COUNt .

Averaging is reset by switching it off and on again.

Synchronization to the end of averaging is only possible in single sweep mode.

Configuring and Performing Measurements

Suffix:

<n> Window

<m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: INIT: CONT OFF

Switches to single sweep mode.

CALC: MARK: FUNC: SUMM: AVER ON

Switches on the calculation of average.

AVER: COUN 200

Sets the measurement counter to 200.

INIT; *WAI

Starts a sweep and waits for the end.

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:PHOLd <State>

This command switches on or off the peak-hold function for the active power measurement in zero span in the window specified by the suffix <n>. If activated, the peak for each sweep is compared to the previously stored peak; the maximum of the two is stored as the current peak.

The peak-hold function is reset by switching it off and on again.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary[:STATe] <State>

This command turns time domain power measurements on and off. This measurement in only available in zero span.

When you turn the measurement on, the R&S FPL1000 activates a marker and positions it on the peak power level in the marker search range.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Configuring and Performing Measurements

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:MEAN[:STATe] <State>

This command turns the evaluation to determine the mean time domain power on and off.

The R&S FPL1000 performs the measurement on the trace marker 1 is positioned on.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Results" on page 345

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:PPEak[:STATe] <State>

This command turns the evaluation to determine the positive peak time domain power on and off.

The R&S FPL1000 performs the measurement on the trace marker 1 is positioned on.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Results" on page 345

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:RMS[:STATe] <State>

This command turns the evaluation to determine the RMS time domain power on and off.

The R&S FPL1000 performs the measurement on the trace marker 1 is positioned on.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Results" on page 345

Configuring and Performing Measurements

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:SDEViation[:STATe] < State>

This command turns the evaluation to determine the standard deviation of the time domain power on and off.

The R&S FPL1000 performs the measurement on the trace marker 1 is positioned on.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

8.6.8.2 Performing a Time Domain Power Measurement

The following commands are required to perform a Time Domain Power measurement:

INITiate<n>[:IMMediate] on page 543

See Chapter 8.6.1, "Performing Measurements", on page 541

8.6.8.3 Retrieving Measurement Results

The following commands query the results for time domain measurements.

Measuring the Mean Power

613	CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:MEAN:AVERage:RESult?</m></n>
614	CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:MEAN:PHOLd:RESult?</m></n>
614	CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:MEAN:RESult?</m></n>

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:MEAN:AVERage:RESult?

This command queries the average mean time domain power. The query is only possible if averaging has been activated previously using CALCulate<n>:MARKer<m>:
FUNCtion:SUMMary:AVERage on page 610.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<MeanPower> Mean power of the signal during the measurement time.

Usage: Query only

Configuring and Performing Measurements

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:MEAN:PHOLd:RESult?

This command queries the maximum mean time domain power. The query is only possible if the peak hold function has been activated previously using CALCulate<n>: MARKer<m>: FUNCtion: SUMMary: PHOLd.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<MeanPower> Mean power of the signal during the measurement time.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:MEAN:RESult?

This command queries the mean time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<MeanPower> Mean power of the signal during the measurement time.

Usage: Query only

Manual operation: See "Results" on page 345

Measuring the Peak Power

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:PPEak:AVERage:RESult?

This command queries the average positive peak time domain power. The query is only possible if averaging has been activated previously using CALCulate<n>: MARKer<m>: FUNCtion: SUMMary: AVERage on page 610.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Configuring and Performing Measurements

Suffix:

<n> Window

<m> Marker

Parameters:

<PeakPower> Peak power of the signal during the measurement time.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:PPEak:PHOLd:RESult?

This command queries the maximum positive peak time domain power. The query is only possible if the peak hold function has been activated previously using CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:PHOLd.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Parameters:

<PeakPower> Peak power of the signal during the measurement time.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:PPEak:RESult?

This command queries the positive peak time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Parameters:

<PeakPower> Peak power of the signal during the measurement time.

Usage: Query only

Manual operation: See "Results" on page 345

Configuring and Performing Measurements

Measuring the RMS Power

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:RMS:AVERage:RESult?

This command queries the average RMS of the time domain power. The query is only possible if averaging has been activated previously using CALCulate<n>: MARKer<m>: FUNCtion: SUMMary: AVERage on page 610.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<RMSPower> RMS power of the signal during the measurement time.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:RMS:PHOLd:RESult?

This command queries the maximum RMS of the time domain power. The query is only possible if the peak hold function has been activated previously using CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:PHOLd.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<RMSPower> RMS power of the signal during the measurement time.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:RMS:RESult?

This command queries the RMS of the time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Configuring and Performing Measurements

Suffix:

<n> Window

<m> Marker

Return values:

<RMSPower> RMS power of the signal during the measurement time.

Usage: Query only

Manual operation: See "Results" on page 345

Measuring the Standard Deviation

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:SDEViation:AVERage:RESult?

This command queries the average standard deviation of the time domain power. The query is only possible if averaging has been activated previously using CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:AVERage on page 610.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<StandardDeviation> Standard deviation of the signal during the measurement time.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:SDEViation:PHOLd:RESult?

This command queries the maximum standard deviation of the time domain power. The query is only possible if the peak hold function has been activated previously using CALCulate<n>: MARKer<m>: FUNCtion: SUMMary: PHOLd.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<StandardDeviation> Standard deviation of the signal during the measurement time.

Usage: Query only

Configuring and Performing Measurements

CALCulate<n>:MARKer<m>:FUNCtion:SUMMary:SDEViation:RESult?

This command queries the standard deviation of the time domain power.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<StandardDeviation> Standard deviation of the signal during the measurement time.

Usage: Query only

8.6.8.4 Programming Example: Time Domain Power

This programming example demonstrates the measurement example described in Chapter 7.2.8.6, "Measurement Example", on page 347 in a remote environment.

```
//----Configuring the Measurement-----
//Resets the instrument
INIT: CONT OFF
//Turns on single sweep mode.
FREQ:CENT 1.8GHz
//Sets the center frequency to 1.8 GHz.
BAND:RES 100kHz
//{\rm Sets} the bandwidth to 100 kHz.
SWE:TIME 10ms
//Sets the sweep time to 640 \mu s.
FREQ:SPAN 0
//Sets the instrument to zero span.
CALC:MARK:FUNC:SUMM:STAT ON
//Turns on time domain power measurements.
CALC:MARK:FUNC:SUMM:MEAN ON
CALC:MARK:FUNC:SUMM:PPE ON
CALC:MARK:FUNC:SUMM:RMS ON
//Turns the evalution of the mean, peak and RMS time domain power.
```

Configuring and Performing Measurements

8.6.9 Measuring the Harmonic Distortion

All remote control commands specific to harmonic distortion measurements are described here.

•	Activating the Measurement	619
	Configuring the Measurement	
	Performing the Measurement	
•	Retrieving Results	621
	Example: Measuring the Harmonic Distortion	

8.6.9.1 Activating the Measurement

The following command activates harmonic distortion measurement.

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics[:STATe]......619

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics[:STATe] <State>

This command turns the harmonic distortion measurement on and off.

Note the following:

- If you perform the measurement in the frequency domain, the search range for the frequency of the first harmonic, whose power is determined, is defined by the last span.
- If you perform the measurement in the time domain, the current center frequency is used as the frequency of the first harmonic. Thus, the frequency search is bypassed. The first harmonic frequency is set by a specific center frequency in zero span before the harmonic measurement is started.

Configuring and Performing Measurements

Suffix:

<n> Window

<m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK:FUNC:HARM ON

Activates the harmonic distortion measurement.

8.6.9.2 Configuring the Measurement

The following commands control the harmonic distortion measurement.

Useful commands for harmonic distortion measurements described elsewhere

- CALCulate<n>:MARKer<m>:FUNCtion:CENTer on page 648
- [SENSe:] SWEep:TIME:AUTO on page 663

Remote commands exclusive to harmonic distortion measurements

620	CALCulate <n>:MARKer<m>:FUNCtion:HARMonics:BANDwidth:AL</m></n>
620	CALCulate <n>:MARKer<m>:FUNCtion:HARMonics:NHARmonics</m></n>
621	CALCulate <n>:MARKer<m>:FUNCtion:HARMonics:PRESet</m></n>

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:BANDwidth:AUTO <State>

This command selects the resolution bandwidth of the harmonic in respect to the bandwidth of the first harmonic.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0 identical ON | 1 a multiple *RST:

Manual operation: See "Harmonic RBW Auto " on page 353

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:NHARmonics < NoHarmonics>

This command selects the number of harmonics that the R&S FPL1000 looks for.

Configuring and Performing Measurements

Suffix:

<n> Window

<m> Marker

Parameters:

<NoHarmonics> Range: 1 to 26

*RST: 10

Manual operation: See " Number of Harmonics " on page 353

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:PRESet

This command initiates a measurement to determine the ideal configuration for the harmonic distortion measurement.

The method depends on the span.

- Frequency domain (span > 0)
 Frequency and level of the first harmonic are determined and used for the measurement list.
- Time domain (span = 0)
 The level of the first harmonic is determined. The frequency remains unchanged.

Suffix:

<n> Window
<m> Marker
Usage: Event

Manual operation: See " Adjust Settings " on page 353

8.6.9.3 Performing the Measurement

The following commands are required to perform a harmonic distortion measurement:

INITiate<n>[:IMMediate] on page 543, see Chapter 8.6.1, "Performing Measurements", on page 541

8.6.9.4 Retrieving Results

The following commands retrieve the results of the harmonic distortion measurement.

CALCulate <n>:MARKer<m>:FUNCtion:HARMonics:DISTortion?</m></n>	621
CALCulate <n>:MARKer<m>:FUNCtion:HARMonics:LIST?</m></n>	622

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:DISTortion? TOTal

This command queries the total harmonic distortion of the signal.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

Configuring and Performing Measurements

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<Result> <Distortion_%>,<Distortion_dB>

Pair of values, one showing the THD in %, one in dB.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:HARMonics:LIST?

This command queries the position of the harmonics.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<Harmonics> Returns one value for every harmonic.

The first value is the absolute power of the first harmonic. The

unit is variable.

The other values are power levels relative to the first harmonic.

The unit for these is dB.

Usage: Query only

8.6.9.5 Example: Measuring the Harmonic Distortion

```
//------Configuring the Measurement-----
*RST

//Resets the instrument.

INIT:CONT OFF

//Turns on single sweep mode.

CALC:MARK:FUNC:HARM ON

//Turns on the harmonic distortion measurement.

CALC:MARK:FUNC:HARM:NHAR 3

//Defines three harmonics to be found.

CALC:MARK:FUNC:HARM:BAND:AUTO OFF

//Turns off automatic bandwidth selection.

CALC:MARK:FUNC:HARM:PRES
```

Configuring and Performing Measurements

8.6.10 Measuring the Third Order Intercept Point

•	Determining the TOI	323
•	Programming Example: Measuring the TOI	325

8.6.10.1 Determining the TOI

All remote control commands specific to TOI measurements are described here.

Useful commands for TOI measurements described elsewhere

- CALCulate<n>:DELTamarker<m>:X on page 719
- CALCulate<n>:DELTamarker<m>:X:RELative? on page 733
- CALCulate<n>:DELTamarker<m>:Y? on page 734
- CALCulate<n>:MARKer<m>:X on page 721
- CALCulate<n>:MARKer<m>:Y? on page 734

Remote commands exclusive to TOI measurements

CALCulate <n>:MARKer<m>:FUNCtion:TOI[:STATe]</m></n>	623
CALCulate <n>:MARKer<m>:FUNCtion:TOI:SEARchsignal ONCE</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:TOI:RESult?</m></n>	624

CALCulate<n>:MARKer<m>:FUNCtion:TOI[:STATe] <State>

This command initiates a measurement to determine the third intercept point.

A two-tone signal with equal carrier levels is expected at the RF input of the instrument. Marker 1 and marker 2 (both normal markers) are set to the maximum of the two signals. Delta marker 3 and delta marker 4 are positioned to the intermodulation products. The delta markers can be modified separately afterwards with the CALCulate<n>: DELTamarker<m>: X command.

The third-order intercept is calculated from the level spacing between the normal markers and the delta markers.

Configuring and Performing Measurements

Suffix:

<n> Window

<m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK:FUNC:TOI ON

Switches on the measurement of the third-order intercept.

CALCulate<n>:MARKer<m>:FUNCtion:TOI:SEARchsignal ONCE

This command initiates a search for signals in the current trace to determine the third intercept point.

Suffix:

<n>, <m> irrelevant

Parameters:

ONCE

Example: CALC:MARK:FUNC:TOI:SEAR ONCE

Executes the search for 2 signals and their intermodulation prod-

uct at the currently available trace.

Usage: Event

Manual operation: See "Search Signals" on page 361

CALCulate<n>:MARKer<m>:FUNCtion:TOI:RESult?

This command queries the results for the third order intercept point measurement.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Parameters:

<TOI> Third order intercept point.

Configuring and Performing Measurements

Example: INIT: CONT OFF

Switches to single sweep mode. CALC: MARK: FUNC: TOI ON

Switches the intercept measurement.

INIT; *WAI

Starts a sweep and waits for the end. CALC: MARK: FUNC: TOI: RES?

Outputs the measured value.

Usage: Query only

8.6.10.2 Programming Example: Measuring the TOI

This example demonstrates how to determine the TOI in a remote environment.

```
//------Configuring the measurement ------
*RST
//Reset the instrument
CALC:MARK:FUNC:TOI ON
//Activate TOI measurement.

//-----Performing the Measurement----
INIT:CONT OFF
//Selects single sweep mode.

CALC:MARK:FUNC:TOI:SEAR ONCE
//Initiates a search for signals in the current trace.

//------Retrieving Results------
CALC:MARK:FUNC:TOI:RES?
//Returns the TOI.
```

8.6.11 Measuring the AM Modulation Depth

All remote control commands specific to AM modulation depth measurements are described here.

•	Configuring and Performing the Measurement	625
•	Example: Measuring the AM Modulation Depth	.627

8.6.11.1 Configuring and Performing the Measurement

The following commands control the measurement.

Useful commands for AM modulation depth described elsewhere

- CALCulate<n>:DELTamarker<m>:X on page 719
- CALCulate<n>:DELTamarker<m>:X:RELative? on page 733
- CALCulate<n>:MARKer<m>:X on page 721

Configuring and Performing Measurements

Remote commands exclusive to AM modulation depth measurements

CALCulate <n>:MARKer<m>:FUNCtion:MDEPth[:STATe]</m></n>	626
CALCulate <n>:MARKer<m>:FUNCtion:MDEPth:SEARchsignal ONCE</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:MDEPth:RESult?</m></n>	.626

CALCulate<n>:MARKer<m>:FUNCtion:MDEPth[:STATe] <State>

This command turns the AM Modulation Depth measurement on and off.

To work correctly, the measurement requires an AM modulated signal.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

CALCulate<n>:MARKer<m>:FUNCtion:MDEPth:SEARchsignal ONCE

This command initiates a search for the signals required for the AM depth measurement.

Note that the command does not perform a new measurement, but looks for the signals on the current trace.

Suffix:

<n> Window <m> Marker

Parameters:

ONCE

Example: CALC:MARK:FUNC:MDEP:SEAR ONCE

Executes the search of an AM modulated signal at the currently

available trace.

Usage: Event

Manual operation: See "Search Signals" on page 366

CALCulate<n>:MARKer<m>:FUNCtion:MDEPth:RESult?

This command queries the results of the AM modulation depth measurement...

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Configuring and Performing Measurements

Suffix:

<n> Window <m> Marker

Return values:

<ModulationDepth> Modulation depth in %.

Usage: Query only

8.6.11.2 Example: Measuring the AM Modulation Depth

This example demonstrates how to determine the AM modulation depth in a remote environment. Note that without a real input signal this measurement will not return useful results.

```
//-----Configuring the measurement ------
//Reset the instrument
FREQ:CENT 100MHz
//Set center frequency
FREQ:SPAN 10KHz
// Set span
CALC:MARK:FUNC:MDEP ON
//Activate AM modulation depth measurement.
//----Performing the Measurement----
INIT: CONT OFF
//Selects single sweep mode.
INIT: IMM
// Perform a single measurement
CALC:MARK:FUNC:MDEP:SEAR ONCE
//Initiates a search for signals in the current trace.
//-----Retrieving Results-----
CALC: MARK: FUNC: MDEP: RES?
//{\tt Queries} the measurement results.
//If the results are not accurate, change the position of the
//the temporary markers manually.
//----Changing the position of the temp markers----
CALC:MARK:X 100MHZ
//Positions the reference marker on 100 MHz.
CALC:DELT2:X 5KHZ
//Positions delta marker 2 and 3 at a distance of 5 kHz to the reference marker.
CALC:DELT3:X 1KHZ
//Corrects the position of delta marker 3 by 1 kHz.
CALC:MARK:FUNC:MDEP:RES?
```

//Queries the measurement results for the repositioned markers.

Configuring and Performing Measurements

8.6.12 List Evaluations

A list evaluation is a multiple power measurement that measures the power at up to 200 frequencies. The measurement itself is a time domain measurement. Note that if you set a span greater than 0, the R&S FPL1000 aborts the list evaluation.

In case of a triggered measurement, a separate trigger event is required for each frequency to initiate that measurement. Note that you have to make changes to the trigger level in the time domain in order for it to take effect for the List Evaluation commands.



The list evaluation is incompatible to other measurement functions (e.g. marker functionality or statistics). If you use a command that controls those functions, the R&S FPL1000 aborts the list evaluation.

The R&S FPL1000 also aborts the list evaluation if you end the remote session.

The commands can be used in two different ways.

- Instrument setup, measurement and querying of the results in a single command line. This method causes the least delay between the measurement and the result output. However, it requires the control computer to wait for the response from the instrument.
- Instrument setup and querying of the result list at the end of the measurement:
 With this method, the control computer may be used for other activities while the
 measurement is being performed. However, more time is needed for synchronization via service request.

8.6.12.1 Performing List Evaluations

All remote control commands specific to list evaluations (which are available via remote control only) are described here.

Remote commands exclusive to list evaluation

[SENSe:]LIST:POWer:RESult?	628
[SENSe:]LIST:POWer[:SEQuence]	
[SENSe:]LIST:POWer:SET	
[SENSe:]LIST:POWer:STATe	

[SENSe:]LIST:POWer:RESult?

This command queries the results of the list evaluation.

This command may be used to obtain measurement results in an asynchronous way, using the service request mechanism for synchronization to the end of the measurement.

If there are no results, the command returns an error.

Configuring and Performing Measurements

Return values:

<PowerLevel> Power level for each frequency included in the measurement.

The command returns up to 3 power levels for each frequency, depending on the number of evaluation modes you have turned

on with [SENSe:]LIST:POWer:SET.

The result is a list of floating point values separated by commas.

The unit depends on CALCulate<n>:UNIT:POWer.

Usage: Query only

[SENSe:]LIST:POWer[:SEQuence]

This command configures and initiates the List Evaluation measurement.

The list can contain up to 200 entries (frequencies). You can define a different instrument setup for each frequency that is in the list.

If you synchronize the measurement with *OPC, the R&S FPL1000 produces a service request when all frequencies have been measured and the number of individual measurements has been performed.

Note that using the command as a query initiates the measurement and returns the results if all frequencies have been measured. For more information on querying the results see [SENSe:]LIST:POWer:RESult?.

Parameters:

<Frequency> Defines the frequency. Each frequency corresponds to one list

entry.

Range: 0 to Fmax

Default unit: Hz

<RefLevel> Defines the reference level for a list entry.

Range: -130 to 30

Increment: 0.01 Default unit: dBm

<RFAttenuation> Defines the RF attenuation for a list entry.

Range: 0 to 70

Increment: 1
Default unit: dB

<FilterType> Selects the filter type for a list entry. For more information see

[SENSe:]BANDwidth[:RESolution]:TYPE.

<RBW> Defines the resolution bandwidth for a list entry.

<VBW> Defines the video bandwidth for a list entry.

<MeasTime> Defines the measurement time for a list entry.

Range: $1 \mu s$ to 16000 s

<TriggerLevel> The trigger level must be 0.

Configuring and Performing Measurements

Return values:

<PowerLevel> Power level for each frequency included in the measurement.

The command returns up to 3 power levels for each frequency, depending on the number of evaluation modes you have turned

on with [SENSe:]LIST:POWer:SET.

The result is a list of floating point values separated by commas.

The unit depends on CALCulate<n>:UNIT:POWer.

[SENSe:]LIST:POWer:SET <PeakPower>, <RMSPower>, <AVGPower>, <TriggerSource>, <TriggerSlope>, <TriggerOffset>, <GateLength>

This command defines global List Evaluation parameters.

These parameters are valid for every frequency you want to measure.

The state of the first three parameters (<PeakPower>, <RMSPower> and <AVG-Power>) define the number of results for each frequency in the list.

Note that you have to set the trigger level after sending this command.

Parameters:

<PeakPower> ON | OFF | 0 | 1

Turns peak power evaluation on and off.

*RST: 1

<RMSPower> ON | OFF | 0 | 1

Turns RMS power evaluation on and off.

*RST: 0

<AVGPower> ON | OFF | 0 | 1

Turns average power evaluation on and off.

*RST: 0

<TriggerSource> Selects a trigger source.

<TriggerSlope> NEGative | POSitive

Selects the trigger slop.

<TriggerOffset> Defines the trigger delay.

Range: negative measurement time to 30 s

*RST: 0
Default unit: s

<GateLength> Defines the gate length for gated measurements.

Setting 0 seconds turns gated measurements off.

To perform gated measurements, the trigger source must be dif-

ferent from IMMediate.

Range: 31.25 ns to 30 s

*RST: 0 s

Configuring and Performing Measurements

[SENSe:]LIST:POWer:STATe <State>

This command turns the List Evaluation off.

Parameters:

<State> OFF | 0

*RST: 0

8.6.12.2 Example: Performing List Evaluation

The following example shows a list evaluation with the following configuration.

No	Freq [MHz]	Ref Level [dBm]	RF Attenu- ation [dB]	EI Attenu- ation [dB]	Filter	RBW	VBW	Meas Time	Trigger Level
1	935.2	0	10		Normal	1 MHz	3 MHz	440 µs	0
2	935.4	0	10	10	Channel	30 kHz	100 kHz	440 µs	0
3	935.6	0	10	20	Channel	30 kHz	100 kHz	440 µs	0

```
----Measurement with synchronization via service request----
*ESE 1
*SRE 32
// Configures the status reporting system to produce a service request.
LIST: POW: SET ON, ON, OFF, EXT, POS, 10us, 434us
//Turns on the list evaluation, configures the global list evaluation settings and
//evaluates the peak and RMS power.
LIST: POW
935.2MHZ, 0, 10, OFF, NORM, 1MHZ, 3MHZ, 440us, 0,
935.4MHZ, 0, 10, 10, CFIL, 30KHZ, 100KHZ, 440us, 0,
935.6MHZ, 0, 10, 20, CFIL, 30KHZ, 100KHZ, 440us, 0;
//Defines a list with 3 entries and initiates the measurement with synchronization to the end
//Analyzer produces a service request
//On service request:
SENS:LIST:POW:RES?
//Returns the results of the measurements, two for each frequency (peak and RMS power).
----Initiliazing the measurement and querying results simultaneously----
LIST: POW?
935.2MHZ, 0, 10, OFF, NORM, 1MHZ, 3MHZ, 440us, 0,
935.4MHZ, 0, 10, 10, CFIL, 30KHZ, 100KHZ, 440us, 0,
935.6MHZ,0,10,20,CFIL,30KHZ,100KHZ,440us,0
//Defines a list with 3 entries, initiates the measurement and queries the results.
//Result example:
-28.3, -30.6, -38.1
```


Configuring and Performing Measurements

8.6.13 Measuring the Pulse Power

All remote control commands specific to measuring the mean or peak pulse power (e.g. bursts in various telecommunications standards) are described here. This measurement is available via remote control only.

The Pulse Power measurement is a gated measurement that determines the power over a particular number of pulses. The measurement is controlled by an external trigger or the video signal. A separate trigger event is required for each burst included in the measurement. In case of an external trigger source, the trigger level corresponds to the TTL level. In case of a video signal, you can define any threshold.

The figure below shows the relations between the available trigger settings.

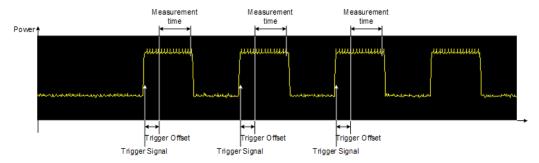

The measurement is always on trace 1, either with the peak detector to determine the peak power or the RMS detector to determine the RMS power. Overall, you can configure the measurement independent of the instrument setup with the commands listed below only, which results in faster measurements.



The Pulse Power measurement is incompatible to other measurement functions (e.g. marker functionality or statistics). If you use a command that controls those functions, the R&S FPL1000 aborts the Pulse Power measurement.

The R&S FPL1000 also aborts the Pulse Power measurement if you end the remote session.

The commands can be used in two different ways.

- Instrument setup, measurement and querying of the results in a single command line. With this method, there is the least delay between the measurement and the result output. However, it requires the control computer to wait for the response from the instrument.
- Instrument setup and querying of the result list at the end of the measurement:
 With this method, the control computer may be used for other activities while the
 measurement is being performed. However, more time is needed for synchronization via service request.

8.6.13.1 Performing Pulse Power Measurements

The following commands control pulse power measurements.

Configuring and Performing Measurements


CALCulate <n>:MARKer<m>:FUNCtion:MSUMmary</m></n>	633
[SENSe:]MPOWer:FTYPe	
[SENSe:]MPOWer:RESult[:LIST]?	
[SENSe:]MPOWer[:SEQuence]	
[SENSe:]MPOWer:RESult:MIN?	

CALCulate<n>:MARKer<m>:FUNCtion:MSUMmary

<TimeOffset>,<MeasTime>,<PulsePeriod>,<#OfPulses>

This command configures power measurements on pulses in the time domain.

To evaluate the pulse power, the R&S FPL1000 uses the data captured during a previous measurement. The data recorded during the set measurement time is combined to a measured value for each pulse according to the detector specified and the indicated number of results is output as a list.

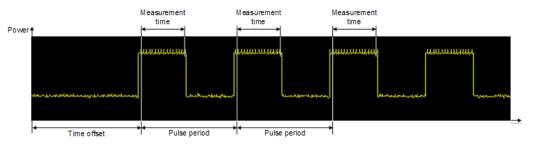

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Parameters:

<TimeOffset> Defines a time offset to start the measurement at the first pulse

of a trace.

*RST: 0
Default unit: s

<MeasTime> Defines the measurement time.

Default unit: s

<PulsePeriod> Defines the pulse period

<#OfPulses> Defines the number of pulses to measure.

Example: CALC:MARK:FUNC:MSUM 50US,450US,576.9US,8

Evaluates data that contains 8 pulses during a measurement time of 450 µs and a pulse period of 576.9 µs. The evaluation

starts with an offset of 50 μ s.

Configuring and Performing Measurements

[SENSe:]MPOWer:FTYPe <FilterType>

This command selects the filter type for pulse power measurements.

Parameters:

<FilterType> CFILter

NORMal

[SENSe:]MPOWer:RESult[:LIST]?

This command queries the results of the pulse power measurement.

This command may be used to obtain measurement results in an asynchronous way, using the service request mechanism for synchronization to the end of the measurement.

If there are no results, the command returns an error.

Return values:

<PulsePower> List of pulse powers.

The number of values depends on the number of pulses you

have been measuring. The unit is dBm.

Usage: Query only

[SENSe:]MPOWer[:SEQuence] < Frequency>, < RBW>, < MeasTime>,

<TriggerSource>, <TriggerLevel>, <TriggerOffset>, <Detector>, <#OfPulses>

This command configures and initiates the pulse power measurement.

The R&S FPL1000 caches all measurement parameters that you can set with this command. If you use the command repeatedly, the R&S FPL1000 only changes those settings that you have actually changed before initiating the measurement. Thus, measurement times are kept as low as possible.

If you synchronize the measurement with $\star \texttt{OPC}$, the R&S FPL1000 produces a service request when all frequencies have been measured and the number of individual measurements has been performed.

Note that using the command as a query initiates the measurement and returns the results if all frequencies have been measured. For more information on querying the results see [SENSe:]LIST:POWer:RESult?.

Parameters:

<Frequency> Defines the pulse frequency.

Range: 0 to Fmax

Default unit: Hz

<RBW> Defines the resolution bandwidth.
<MeasTime> Defines the measurement time.

Range: 1 µs to 30 s

Configuring and Performing Measurements

<TriggerSource> Selects a trigger source.

<TriggerLevel> Defines a trigger level.

The trigger level is available for the video trigger. In that case,

the level is a percentage of the diagram height.

In case of an external trigger, the R&S FPL1000 uses a fix TTL

level.

Range: 0 to 100 Default unit: PCT

<TriggerOffset> Defines the trigger delay.

Range: 0 s to 30 s

*RST: 0 s
Default unit: s

<Detector> Selects the detector and therefore the way the measurement is

evaluated.

MEAN

Calculates the RMS pulse power.

PEAK

Calculates the peak pulse power.

<#OfPulses> Defines the number of pulses included in the measurement.

Range: 1 to 32001

Return values:

<PowerLevel> Pulse power level.

The result is a list of floating point values separated by commas.

The unit is dBm.

[SENSe:]MPOWer:RESult:MIN?

This command queries the lowest pulse power that has been measured during a pulse power measurement.

If there are no results, the command returns an error.

Return values:

<PulsePower> Lowest power level of the pulse power measurement.

The unit is dBm.

Usage: Query only

8.6.13.2 Example: Performing a Pulse Power Measurement

The following example shows a pulse power measurement.

```
----Measurement with synchronization via service request----
*ESE 1
*SRE 32
// Configures the status reporting system to produce a service request.
MPOW:FTYP NORM
```

Configuring and Performing Measurements

```
//Selects a Gaussian filter for the measurement.
MPOW 935.2MHZ, 1MHZ, 434us, VID, 50, 5us, MEAN, 20;
*OPC
//Configures and initiates a measurement on 20 pulses with synchronization to the end.
//Analyzer produces a service request
//On service request:
MPOW: RES?
//Returns the results of the measurements (20 power levels).
MPOW: RES: MIN?
//Returns the lowest of the 20 power level that have been measured.
----Initiliazing the measurement and querying results simultaneously----
MPOW? 935.2MHZ, 1MHZ, 434us, VID, 50, 5us, MEAN, 20
//Configures, initiates and queries the results of the measurement.
//Result example:
-99.96534729, -99.7452468872, -99.6610794067, -100.327224731, -100.96686554, -101.450386047, -100.96686554, -100.96686554, -100.96686554, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.9668654, -100.966864, -100.966864, -100.966864, -100.966864, -100.966864, -100.966864, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -100.96686, -1
-102.150642395, -103.240142822, -105.95476532, -110.583129883, -115.7760849, -126.279388428, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -110.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129883, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.583129884, -100.585129884, -100.585129884, -100.585129884, -100.585129884, -100.585129884, -100.585129884, -100.585129884, -100.585129884, -100.585129884, -100.585129884, -100.58512884, -100.58512884, -100.58512884, -100.58512884, -100.58512884, -100.58512884, -100.
-124.620399475, -116.97366333
```

8.6.14 Programming Example: Performing a Basic Frequency Sweep

This example demonstrates how to configure and perform a basic frequency sweep measurement in a remote environment.

This example assumes a signal is measured at 100 MHz, with a maximum power level of -3 dBm.



Some commands in the following examples may not be necessary as they reflect the default settings; however, they are included to demonstrate the command usage.

Configuring and Performing Measurements

```
BAND:VID 500kHz
//Decouples the VBW from the RBW and decreases it to smooth the trace.
//----Configuring the Sweep-----
SENS:SWE:COUN 10
//Defines 10 sweeps to be performed in each measurement.
SENS:SWE:POIN 500
//During each sweep, 500 trace points will be measured.
SENS:SWE:TIME 50ms
//Decouples the sweep time from the RBW, VBW and span and increases it to
//make the measurement more precise.
//----Configuring Attenuation-----
//Only if electronic attenuator is available:
//INP:EATT:STAT ON
//Switches on the electronic attenuator.
//INP:EATT 5dB
//Sets the electronic attenuation to 5 dB.
//INP:ATT 0dB
//Sets the mechanical attenuation to 0 dB - makes a total of 5 dB attenuation
//otherwise:
INP:ATT 5 dB
//Sets the mechanical attenuation to 40 dB and couples the reference level
//to the attenuation instead of vice versa.
//----Configuring the Amplitude and Scaling-----
DISP:TRAC1:Y:RLEV:OFFS 10dB
//Shifts the trace display in the diagram up by 10 dB.
CALC:UNIT:POW V
//Sets the unit of the y-axis to Volt. The reference level is now 70.711 \, \text{mV}.
DISP:TRAC1:Y:SPAC LOG
//Uses logarithmic scaling with absolute values (V).
DISP:TRAC1:Y 110dB
//Increases the displayed range of the y-axis to 110 dB.
DISP:TRAC1:Y:RPOS 80PCT
//Shifts the display of the reference level down, it is no longer the top line
//in the diagram. The reference level is displayed as a red line.
//----Triggering-----
TRIG:SOUR IFP
TRIG:LEV:IFP -10dBm
TRIG:SLOP POS
TRIG:DTIM 50ms
TRIG:IFP:HYST 5dB
TRIG:HOLD 10ms
//Defines triggering when the second intermediate frequency rises to a level
//of -10 dBm, with a dropout time of 50 ms, a hysteresis of 5 dB and a delay
//of 10 ms.
```

Configuring and Performing Measurements

```
SWE:EGAT ON
SWE:EGAT:TYPE EDGE
SWE:EGAT:LENG 5ms
//Defines gating. Values are measured for 5 ms after triggering.
//-----Configuring the Trace-----
DISP:TRAC2:MODE AVER
DISP:TRAC3:MODE MAXH
//Configures 3 traces: 1 (default): clear/write; 2: average; 3: max hold
SENS:DET1 POS
SENS:DET2 RMS
SENS:DET3 POS
//Configures traces 1 and 3 to use the positive peak detector; trace 2 uses
//the RMS detector.
TRAC: COPY TRACE4, TRACE1
//Copies trace 1 to a new trace 4 which will then be averaged.
SENS:AVER:STAT4 ON
SENS:AVER:COUN 10
SENS:AVER:TYPE LIN
//Configures trace 4 to be averaged linearly over 10 sweeps.
CALC: MATH: STAT ON
CALC:MATH:MODE LIN
CALC:MATH (TRACE1-TRACE2)
CALC:MATH:POS 75
\//\Calculates the linear difference between the measured and average values.
//The resulting trace is displayed at the top of the diagram.
//-----Performing the Measurement-----
INIT; *WAI
//{\rm Initiates} a new measurement and waits until the last sweep has finished.
//-----Retrieving Results-----
TRAC:DATA? TRACE1
TRAC:DATA? TRACE2
TRAC:DATA? TRACE3
TRAC:DATA? TRACE4
//Returns one power value per sweep point for each trace.
//Returns one frequency value per sweep point for each trace.
```

Remote Commands for Result Displays

8.7 Remote Commands for Result Displays

•	Working with Windows in the Display	639
•	Examples: Configuring the Result Display	645

8.7.1 Working with Windows in the Display

The following commands are required to change the evaluation type and rearrange the screen layout for a channel setup as you do using the SmartGrid in manual operation. Since the available evaluation types depend on the selected application, some parameters for the following commands also depend on the selected channel setup.

Note that the suffix <n> always refers to the window in the currently selected channel setup (see INSTrument [:SELect] on page 536).

LAYout:ADD[:WINDow]?	639
LAYout:CATalog[:WINDow]?	640
LAYout:IDENtify[:WINDow]?	640
LAYout:MOVE[:WINDow]	641
LAYout:REMove[:WINDow]	641
LAYout:REPLace[:WINDow]	642
LAYout:SPLitter	642
LAYout:WINDow <n>:ADD?</n>	643
LAYout:WINDow <n>:IDENtify?</n>	644
LAYout:WINDow <n>:REMove</n>	644
LAYout:WINDow <n>:REPLace</n>	644

LAYout:ADD[:WINDow]? <WindowName>, <Direction>, <WindowType>

This command adds a window to the display in the active channel setup.

This command is always used as a query so that you immediately obtain the name of the new window as a result.

To replace an existing window, use the LAYout: REPLace [:WINDow] command.

Query parameters:

<WindowName> String containing the name of the existing window the new win-

dow is inserted next to.

By default, the name of a window is the same as its index. To determine the name and index of all active windows, use the

LAYout: CATalog[:WINDow]? query.

Direction the new window is added relative to the existing win-

dow.

<WindowType> text value

Type of result display (evaluation method) you want to add.

See the table below for available parameter values.

Remote Commands for Result Displays

Return values:

<NewWindowName> When adding a new window, the command returns its name (by

default the same as its number) as a result.

Example: LAY:ADD? '1', LEFT, MTAB

Result:

Adds a new window named '2' with a marker table to the left of

window 1.

Usage: Query only

Manual operation: See " Diagram " on page 255

See " Marker Table " on page 256 See " Marker Peak List " on page 256 See " Result Summary " on page 257 See " Spectrogram " on page 257

LAYout:CATalog[:WINDow]?

This command queries the name and index of all active windows in the active channel setup from top left to bottom right. The result is a comma-separated list of values for each window, with the syntax:

<WindowName 1>,<WindowIndex 1>..<WindowName n>,<WindowIndex n>

Return values:

<WindowName> string

Name of the window.

In the default state, the name of the window is its index.

<WindowIndex> numeric value

Index of the window.

Example: LAY:CAT?

Result:

'2',2,'1',1

Two windows are displayed, named '2' (at the top or left), and '1'

(at the bottom or right).

Usage: Query only

LAYout:IDENtify[:WINDow]? <WindowName>

This command queries the **index** of a particular display window in the active channel setup.

Note: to query the **name** of a particular window, use the LAYout:WINDow<n>: IDENtify? query.

Query parameters:

<WindowName> String containing the name of a window.

Remote Commands for Result Displays

Return values:

<WindowIndex> Index number of the window.

Example: LAY:WIND:IDEN? '2'

Queries the index of the result display named '2'.

Response:

2

Usage: Query only

LAYout:MOVE[:WINDow] <WindowName>, <WindowName>, <Direction>

Setting parameters:

<WindowName> String containing the name of an existing window that is to be

moved.

By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel setup, use the LAYout:CATalog[:WINDow]? query.

<WindowName> String containing the name of an existing window the selected

window is placed next to or replaces.

By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel setup, use the LAYout:CATalog[:WINDow]? query.

<Direction> LEFT | RIGHt | ABOVe | BELow | REPLace

Destination the selected window is moved to, relative to the ref-

erence window.

Example: LAY:MOVE '4', '1', LEFT

Moves the window named '4' to the left of window 1.

Example: LAY:MOVE '1', '3', REPL

Replaces the window named '3' by window 1. Window 3 is

deleted.

Usage: Setting only

LAYout:REMove[:WINDow] <WindowName>

This command removes a window from the display in the active channel setup.

Setting parameters:

<WindowName> String containing the name of the window.

In the default state, the name of the window is its index.

Example: LAY:REM '2'

Removes the result display in the window named '2'.

Usage: Event

Remote Commands for Result Displays

LAYout:REPLace[:WINDow] <WindowName>,<WindowType>

This command replaces the window type (for example from "Diagram" to "Result Summary") of an already existing window in the active channel setup while keeping its position, index and window name.

To add a new window, use the LAYout:ADD[:WINDow]? command.

Setting parameters:

<WindowName> String containing the name of the existing window.

By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel setup, use the LAYout:CATalog[:WINDow]? query.

<WindowType> Type of result display you want to use in the existing window.

See LAYout: ADD[:WINDow]? on page 639 for a list of availa-

ble window types.

Example: LAY:REPL:WIND '1', MTAB

Replaces the result display in window 1 with a marker table.

Usage: Setting only

LAYout:SPLitter < Index1>, < Index2>, < Position>

This command changes the position of a splitter and thus controls the size of the windows on each side of the splitter.

Note that windows must have a certain minimum size. If the position you define conflicts with the minimum size of any of the affected windows, the command will not work, but does not return an error.



Figure 8-1: SmartGrid coordinates for remote control of the splitters

Parameters:

<Index1> The index of one window the splitter controls.

Remote Commands for Result Displays

<Index2> The index of a window on the other side of the splitter.

<Position> New vertical or horizontal position of the splitter as a fraction of

the screen area (without channel and status bar and softkey

menu).

The point of origin (x = 0, y = 0) is in the lower left corner of the screen. The end point (x = 100, y = 100) is in the upper right cor-

ner of the screen. (See Figure 8-1.)

The direction in which the splitter is moved depends on the screen layout. If the windows are positioned horizontally, the splitter also moves horizontally. If the windows are positioned

vertically, the splitter also moves vertically.

Range: 0 to 100

Example: LAY:SPL 1,3,50

Moves the splitter between window 1 ('Frequency Sweep') and 3 ('Marker Table') to the center (50%) of the screen, i.e. in the fig-

ure above, to the left.

Example: LAY:SPL 1,4,70

Moves the splitter between window 1 ('Frequency Sweep') and 3

('Marker Peak List') towards the top (70%) of the screen. The following commands have the exact same effect, as any combination of windows above and below the splitter moves the

splitter vertically.
LAY:SPL 3,2,70
LAY:SPL 4,1,70
LAY:SPL 2,1,70

LAYout:WINDow<n>:ADD? <Direction>,<WindowType>

This command adds a measurement window to the display. Note that with this command, the suffix <n> determines the existing window next to which the new window is added, as opposed to LAYout:ADD[:WINDow]?, for which the existing window is defined by a parameter.

To replace an existing window, use the LAYout:WINDow<n>: REPLace command.

This command is always used as a query so that you immediately obtain the name of the new window as a result.

Suffix:

<n> Window

Parameters:

<WindowType> Type of measurement window you want to add.

See LAYout: ADD [:WINDow]? on page 639 for a list of availa-

ble window types.

Return values:

<NewWindowName> When adding a new window, the command returns its name (by

default the same as its number) as a result.

Remote Commands for Result Displays

Example: LAY:WIND1:ADD? LEFT,MTAB

Result:

Adds a new window named '2' with a marker table to the left of

window 1.

Usage: Query only

LAYout:WINDow<n>:IDENtify?

This command queries the **name** of a particular display window (indicated by the <n> suffix) in the active channel setup.

Note: to query the **index** of a particular window, use the LAYout:IDENtify[: WINDow]? command.

Suffix:

<n> Window

Return values:

<WindowName> String containing the name of a window.

In the default state, the name of the window is its index.

Example: LAY:WIND2:IDEN?

Queries the name of the result display in window 2.

Response:

121

Usage: Query only

LAYout:WINDow<n>:REMove

This command removes the window specified by the suffix <n> from the display in the active channel setup.

The result of this command is identical to the LAYout: REMove [:WINDow] command.

Suffix:

<n> Window

Example: LAY:WIND2:REM

Removes the result display in window 2.

Usage: Event

LAYout:WINDow<n>:REPLace <WindowType>

This command changes the window type of an existing window (specified by the suffix <n>) in the active channel setup.

The effect of this command is identical to the LAYout:REPLace[:WINDow] command.

To add a new window, use the LAYout: WINDow<n>: ADD? command.

Remote Commands for Result Displays

Suffix:

<n> Window

Setting parameters:

<WindowType> Type of measurement window you want to replace another one

with.

See LAYout: ADD [:WINDow]? on page 639 for a list of availa-

ble window types.

Example: LAY:WIND2:REPL MTAB

Replaces the result display in window 2 with a marker table.

Usage: Setting only


8.7.2 Examples: Configuring the Result Display

The following example demonstrates how to configure result displays in a remote environment.

8.7.2.1 Example 1: Adding and Arranging Windows

Starting from the default initial display in the Spectrum application (Frequency Sweep), we will configure the following result displays:

1 Frequency Sweep	3 Marker Table
2 Spectrogram	4 Marker Peak List

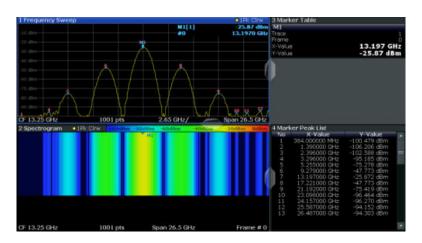

Remote Commands for Result Displays


```
//Add a Marker Peak List window to the right of the Spectrogram window
LAY:WIND2:ADD? RIGH, PEAK
//Result: window number: '4'
//----- Changing the size of individual windows ------
//Move the splitter between the Frequency Sweep window and the Marker Table
//window to enlarge the spectrum display to 60% of the entire width.
LAY:SPL 1,3,60
//Move the splitter between the Spectrogram window and the Marker Peak List
//window to enlarge the Spectrogram display to 60% of the entire width.
LAY:SPL 2,4,60
//---- Querying all displayed windows -----
//Query the name and number of all displayed windows
//(from top left to bottom right)
LAY: CAT?
//Result : '1',1,'2',2,'3',3,'4',4
//---- Maximizing a Window -----
//Maximize the window "2 Spectrogram"
DISP:WIND2:SIZE LARG
//-----Restore multiple window display ------
DISP:WIND2:SIZE SMAL
```

8.7.2.2 Example 2: Replacing and Removing Windows

Starting from the display configured in Example 1: Adding and Arranging Windows, we will remove and replace result displays to obtain the following configuration:

Frequency Sweep	
Marker Table	1

Setting Basic Spectrum RF Measurement Parameters

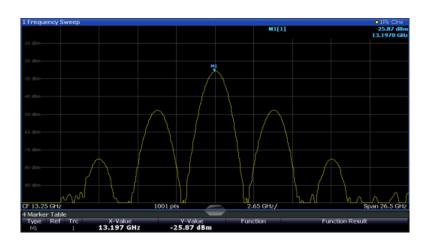

```
//---- Preparing the configuration from example 1 -----
*RST
LAY:ADD? '1',BEL,SGR
LAY:ADD? '1', RIGH, MTAB
LAY:WIND2:ADD? RIGH, PEAK
LAY: CAT?
//Result : '1',1,'2',2,'3',3,'4',4
//Remove Spectrogram
LAY:WIND2:REM //Remove Marker Table window
LAY:REM '3'
//Replace Marker Peak List window by Marker Table
LAY: REPL '4', MTAB
//---- Querying all displayed windows -----
//Query the name and number of all displayed windows (from top left to bottom right)
LAY:CAT?
//Result : '1',1,'4',4
//---- Changing the size of individual windows -----
//Move the splitter between the Frequency Sweep window and the Marker Table window
//to enlarge the spectrum display to 80% of the entire height.
LAY:SPL 1,4,80
```

8.8 Setting Basic Spectrum RF Measurement Parameters

Commands required for common spectrum RF measurements are described here.

•	Defining the Frequency and Span	648
	Configuring Bandwidth and Sweep Settings	
	Configuring the Vertical Axis (Amplitude, Scaling)	
•	Configuring Triggered and Gated Measurements	669
•	Configuring the Data Input and Output	676
•	Zooming into the Display	690

Setting Basic Spectrum RF Measurement Parameters

 Configuring the Trace Display and Retrieving Trace Data. Working with Markers. Configuring Display and Limit Lines. 	715
Defining the Frequency and Span	
The commands required to configure the frequency and span settings in ronment are described here. The tasks for manual operation are described ter 7.4, "Frequency and Span Configuration", on page 376.	
 Defining the Frequency Range. Adjusting Settings Automatically. Configuring Signal Tracking. 	652
Defining the Frequency Range	
CALCulate <n>:MARKer<m>:FUNCtion:CENTer</m></n>	648
CALCulate <n>:MARKer<m>:FUNCtion:CSTep</m></n>	649
[SENSe:]FREQuency:CENTer	649
[SENSe:]FREQuency:CENTer:STEP	649
[SENSe:]FREQuency:CENTer:STEP:AUTO	650
[SENSe:]FREQuency:CENTer:STEP:LINK	650
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor	
[SENSe:]FREQuency:OFFSet	
[SENSe:]FREQuency:SPAN	
[SENSe:]FREQuency:SPAN:FULL	651

CALCulate<n>:MARKer<m>:FUNCtion:CENTer

This command matches the center frequency to the frequency of a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Suffix:

8.8.1

8.8.1.1

<n> Window <m> Marker

Example: CALC:MARK2:FUNC:CENT

Sets the center frequency to the frequency of marker 2.

Usage: Event

Manual operation: See "Center Frequency = Marker Frequency" on page 437

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:MARKer<m>:FUNCtion:CSTep

This command matches the center frequency step size to the current marker frequency.

The command turns delta markers into normal markers.

Suffix:

<n> Window <m> Marker Usage: Event

[SENSe:]FREQuency:CENTer <Frequency>

This command defines the center frequency.

Parameters:

<Frequency> The allowed range and f_{max} is specified in the data sheet.

UP

Increases the center frequency by the step defined using the

[SENSe:] FREQuency: CENTer: STEP command.

DOWN

Decreases the center frequency by the step defined using the

[SENSe:] FREQuency: CENTer: STEP command.

*RST: fmax/2 Default unit: Hz

Example: FREQ:CENT 100 MHz

FREQ:CENT:STEP 10 MHz

FREQ: CENT UP

Sets the center frequency to 110 MHz.

Manual operation: See " Center Frequency " on page 379

See "Frequency" on page 410

[SENSe:]FREQuency:CENTer:STEP <StepSize>

This command defines the center frequency step size.

You can increase or decrease the center frequency quickly in fixed steps using the SENS: FREQ UP AND SENS: FREQ DOWN commands, see [SENSe:] FREQuency: CENTer on page 649.

Parameters:

 $\langle StepSize \rangle$ f_{max} is specified in the data sheet.

Range: 1 to fMAX *RST: 0.1 x span

Default unit: Hz

Setting Basic Spectrum RF Measurement Parameters

Example: //Set the center frequency to 110 MHz.

FREQ:CENT 100 MHz FREQ:CENT:STEP 10 MHz

FREQ:CENT UP

Manual operation: See "Center Frequency Stepsize" on page 380

[SENSe:]FREQuency:CENTer:STEP:AUTO <State>

This command couples or decouples the center frequency step size to the span.

In time domain (zero span) measurements, the center frequency is coupled to the RBW.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: FREQ:CENT:STEP:AUTO ON

Activates the coupling of the step size to the span.

[SENSe:]FREQuency:CENTer:STEP:LINK < Coupling Type>

This command couples and decouples the center frequency step size to the span or the resolution bandwidth.

Parameters:

<CouplingType> SPAN

Couples the step size to the span. Available for measurements

in the frequency domain.

RBW

Couples the step size to the resolution bandwidth. Available for

measurements in the time domain.

OFF

Decouples the step size.

*RST: SPAN

Example: //Couple step size to span

FREQ:CENT:STEP:LINK SPAN

Manual operation: See "Center Frequency Stepsize" on page 380

[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor <Factor>

This command defines a step size factor if the center frequency step size is coupled to the span or the resolution bandwidth.

Parameters:

<Factor> 1 to 100 PCT

*RST: 10

Setting Basic Spectrum RF Measurement Parameters

Example: //Couple frequency step size to span and define a step size fac-

tor

FREQ:CENT:STEP:LINK SPAN
FREQ:CENT:STEP:LINK:FACT 20PCT

Manual operation: See "Center Frequency Stepsize" on page 380

[SENSe:]FREQuency:OFFSet <Offset>

This command defines a frequency offset.

If this value is not 0 Hz, the application assumes that the input signal was frequency shifted outside the application. All results of type "frequency" will be corrected for this shift numerically by the application.

See also "Frequency Offset" on page 381.

Parameters:

<Offset> Range: -100 GHz to 100 GHz

*RST: 0 Hz

Example: FREQ:OFFS 1GHZ

Manual operation: See "Frequency Offset" on page 381

[SENSe:]FREQuency:SPAN

This command defines the frequency span.

If you set a span of 0 Hz in the Spectrum application, the R&S FPL1000 starts a measurement in the time domain.

Parameters:

 The minimum span for measurements in the frequency domain

is 10 Hz.

For SEM and spurious emission measurements, the minimum

span is 20 Hz.

Range: 0 Hz to fmax *RST: Full span

Manual operation: See "Zero Span" on page 235

See " Span " on page 379 See " Zero Span " on page 380 See " Last Span " on page 380

[SENSe:]FREQuency:SPAN:FULL

This command restores the full span.

Usage: Event

Manual operation: See "Full Span" on page 379

Setting Basic Spectrum RF Measurement Parameters

[SENSe:]FREQuency:STARt <Frequency>

This command defines a start frequency for measurements in the frequency domain.

Parameters:

<Frequency> 0 to (fmax - min span)

*RST: 0

Example: FREQ:STAR 20MHz

Manual operation: See "Frequency Sweep " on page 235

See "Start / Stop " on page 379

[SENSe:]FREQuency:STOP <Frequency>

This command defines a stop frequency for measurements in the frequency domain.

Parameters:

<Frequency> min span to fmax

*RST: fmax

Example: FREQ:STOP 2000 MHz

Manual operation: See "Frequency Sweep " on page 235

See "Start / Stop " on page 379

8.8.1.2 Adjusting Settings Automatically

The commands required to adjust settings automatically in a remote environment are described here.

[SENSe:]ADJust:ALL	652
[SENSe:]ADJust:CONFigure[:LEVel]:DURation	653
[SENSe:]ADJust:CONFigure[:LEVel]:DURation:MODE	653
[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer	654
[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer	654
[SENSe:]ADJust:CONFigure:TRIGger	654
[SENSe:]ADJust:FREQuency	655
[SENSe:]ADJust:LEVel	655

[SENSe:]ADJust:ALL

This command initiates a measurement to determine and set the ideal settings for the current task automatically (only once for the current measurement).

This includes:

- Center frequency
- Reference level

Example: ADJ:ALL

Usage: Event

Setting Basic Spectrum RF Measurement Parameters

Manual operation: See " Adjusting all Determinable Settings Automatically (Auto

All)" on page 419

[SENSe:]ADJust:CONFigure[:LEVel]:DURation < Duration>

In order to determine the ideal reference level, the R&S FPL1000 performs a measurement on the current input data. This command defines the length of the measurement if [SENSe:]ADJust:CONFigure[:LEVel]:DURation:MODE is set to MANual.

Parameters:

<Duration> Numeric value in seconds

Range: 0.001 to 16000.0

*RST: 0.001 Default unit: s

Example: ADJ:CONF:DUR:MODE MAN

Selects manual definition of the measurement length.

ADJ:CONF:LEV:DUR 5ms

Length of the measurement is 5 ms.

Manual operation: See " Changing the Automatic Measurement Time (Meastime

Manual)" on page 420

[SENSe:]ADJust:CONFigure[:LEVel]:DURation:MODE < Mode>

In order to determine the ideal reference level, the R&S FPL1000 performs a measurement on the current input data. This command selects the way the R&S FPL1000 determines the length of the measurement.

Parameters:

<Mode> AUTO

The R&S FPL1000 determines the measurement length auto-

matically according to the current input data.

MANual

The R&S FPL1000 uses the measurement length defined by

[SENSe:]ADJust:CONFigure[:LEVel]:DURation

on page 653.

*RST: AUTO

Manual operation: See "Resetting the Automatic Measurement Time (Meastime

Auto)" on page 420

See " Changing the Automatic Measurement Time (Meastime

Manual)" on page 420

Setting Basic Spectrum RF Measurement Parameters

[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer <Threshold>

When the reference level is adjusted automatically using the [SENSe:]ADJust:
LEVel on page 655 command, the internal attenuators and the preamplifier are also adjusted. In order to avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines a lower threshold the signal must fall below (compared to the last measurement) before the reference level is adapted automatically.

Parameters:

<Threshold> Range: 0 dB to 200 dB

*RST: +1 dB Default unit: dB

Example: SENS:ADJ:CONF:HYST:LOW 2

For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level falls below 18 dBm.

Manual operation: See "Lower Level Hysteresis" on page 421

[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer <Threshold>

When the reference level is adjusted automatically using the <code>[SENSe:]ADJust:LEVel</code> on page 655 command, the internal attenuators and the preamplifier are also adjusted. In order to avoid frequent adaptation due to small changes in the input signal, you can define a hysteresis. This setting defines an upper threshold the signal must exceed (compared to the last measurement) before the reference level is adapted automatically.

Parameters:

<Threshold> Range: 0 dB to 200 dB

*RST: +1 dB Default unit: dB

Example: SENS:ADJ:CONF:HYST:UPP 2

Example: For an input signal level of currently 20 dBm, the reference level

will only be adjusted when the signal level rises above 22 dBm.

Manual operation: See "Upper Level Hysteresis " on page 421

[SENSe:]ADJust:CONFigure:TRIGger <State>

Defines the behavior of the measurement when adjusting a setting automatically (using SENS: ADJ: LEV ON, for example).

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<State> ON | 1

The measurement for automatic adjustment waits for the trigger.

OFF I 0

The measurement for automatic adjustment is performed imme-

diately, without waiting for a trigger.

*RST: 1

[SENSe:]ADJust:FREQuency

This command sets the center frequency to the frequency with the highest signal level in the current frequency range.

Example: ADJ: FREQ

Usage: Event

Manual operation: See " Adjusting the Center Frequency Automatically (Auto Fre-

quency)" on page 420

[SENSe:]ADJust:LEVel

This command initiates a single (internal) measurement that evaluates and sets the ideal reference level for the current input data and measurement settings. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the R&S FPL1000 or limiting the dynamic range by an S/N ratio that is too small.

Example: ADJ: LEV

Usage: Event

Manual operation: See " Setting the Reference Level Automatically (Auto Level)"

on page 387

8.8.1.3 Configuring Signal Tracking

When signal tracking is activated, the maximum signal is determined after each frequency sweep and the center frequency is set to the frequency of this signal. Thus with drifting signals the center frequency follows the signal.

For more details see Chapter 7.4.1, "Impact of the Frequency and Span Settings", on page 376..

CALCulate <n>:MARKer<m>:FUNCtion:STRack[:STATe]</m></n>	655
CALCulate <n>:MARKer<m>:FUNCtion:STRack:BANDwidth</m></n>	656
CALCulate <n>:MARKer<m>:FUNCtion:STRack:THReshold</m></n>	656
CALCulate <n>:MARKer<m>:FUNCtion:STRack:TRACe</m></n>	656

CALCulate<n>:MARKer<m>:FUNCtion:STRack[:STATe] <State>

This command turns signal tracking on and off.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n>, <m> irrelevant

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: //Activate signal tracking to keep the center frequency on the signal pea

//After each sweep the maximum on trace 1 is searched within a range of 2

//around the center frequency. It must have a minimum power of -90dBm.

CALC:MARK:FUNC:STR ON

CALC:MARK:FUNC:STR:BAND 20MHz CALC:MARK:FUNC:STR:THR -90dBm CALC:MARK:FUNC:STR:TRAC 1

Manual operation: See "Signal Tracking" on page 381

CALCulate<n>:MARKer<m>:FUNCtion:STRack:BANDwidth <Bandwidth>

This command defines the bandwidth around the center frequency that is included in the signal tracking process.

Note that you have to turn on signal tracking before you can use the command.

Suffix:

<n>, <m> irrelevant

Parameters:

<Bandwidth> Range: 10 Hz to Max span

*RST: (= span/10 on activating the function)

Default unit: Hz

Manual operation: See " Signal Tracking " on page 381

CALCulate<n>:MARKer<m>:FUNCtion:STRack:THReshold <Level>

This command defines the threshold level for the signal tracking process.

Note that you have to turn on signal tracking before you can use the command.

Suffix:

<n>, <m> irrelevant

Parameters:

<Level> The unit depends on CALCulate<n>:UNIT:POWer.

Range: -130 dBm to 30 dBm

*RST: -120 dBm

Manual operation: See "Signal Tracking" on page 381

CALCulate<n>:MARKer<m>:FUNCtion:STRack:TRACe < TraceNumber>

This command selects the trace on which the largest signal is searched for.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n>, <m> irrelevant

Parameters:

<TraceNumber> 1 to 6

Range: 1 to 6

*RST: 1

Manual operation: See "Signal Tracking" on page 381

8.8.2 Configuring Bandwidth and Sweep Settings

The commands required to configure the bandwidth, sweep and filter settings in a remote environment are described here. The tasks for manual operation are described in Chapter 7.6, "Bandwidth, Filter and Sweep Configuration", on page 391.

8.8.2.1 Configuring the Bandwidth and Filter

[SENSe:]BWIDth[:RESolution]	657
[SENSe:]BANDwidth[:RESolution]	657
[SENSe:]BWIDth[:RESolution]:AUTO	658
[SENSe:]BANDwidth[:RESolution]:AUTO	658
[SENSe:]BWIDth[:RESolution]:RATio	658
[SENSe:]BANDwidth[:RESolution]:RATio	658
[SENSe:]BWIDth[:RESolution]:TYPE	658
[SENSe:]BANDwidth[:RESolution]:TYPE	658
[SENSe:]BWIDth:VIDeo	659
[SENSe:]BANDwidth:VIDeo	
[SENSe:]BWIDth:VIDeo:AUTO	659
[SENSe:]BANDwidth:VIDeo:AUTO	
[SENSe:]BWIDth:VIDeo:RATio	659
[SENSe:]BANDwidth:VIDeo:RATio	659
[SENSe:]BWIDth:VIDeo:TYPE	660
[SENSe:]BANDwidth:VIDeo:TYPE	660

[SENSe:]BWIDth[:RESolution] <Bandwidth> [SENSe:]BANDwidth[:RESolution] <Bandwidth>

This command defines the resolution bandwidth and decouples the resolution bandwidth from the span.

For statistics measurements, this command defines the **demodulation** bandwidth.

Parameters:

<Bandwidth> refer to data sheet

*RST: RBW: AUTO is set to ON; DBW: 3MHz

Setting Basic Spectrum RF Measurement Parameters

Example: BAND 1 MHz

Sets the resolution bandwidth to 1 MHz

Manual operation: See " RBW " on page 398

See "RBW" on page 410

[SENSe:]BWIDth[:RESolution]:AUTO <State>
[SENSe:]BANDwidth[:RESolution]:AUTO <State>

This command couples and decouples the resolution bandwidth to the span.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: BAND:AUTO OFF

Switches off the coupling of the resolution bandwidth to the

span.

Manual operation: See " RBW " on page 398

See " Default Coupling " on page 400

[SENSe:]BWIDth[:RESolution]:RATio <Ratio> [SENSe:]BANDwidth[:RESolution]:RATio <Ratio>

This command defines the ratio between the resolution bandwidth (Hz) and the span (Hz).

Note that the ratio defined with this remote command (RBW/span) is reciprocal to that of the coupling ratio (span/RBW).

Parameters:

<Ratio> Range: 0.0001 to 1

*RST: 0.01

Example: BAND:RAT 0.1

Manual operation: See "Span/RBW" on page 399

[SENSe:]BWIDth[:RESolution]:TYPE <FilterType>
[SENSe:]BANDwidth[:RESolution]:TYPE <FilterType>

This command selects the resolution filter type.

When you change the filter type, the command selects the next larger filter bandwidth if the same bandwidth is unavailable for that filter.

Parameters:

<FilterType> CFILter

Channel filters

NORMal

Gaussian filters

*RST: NORMal

Setting Basic Spectrum RF Measurement Parameters

Example: BAND: TYPE NORM

Manual operation: See "Filter Type " on page 400

[SENSe:]BWIDth:VIDeo <Bandwidth> [SENSe:]BANDwidth:VIDeo <Bandwidth>

This command defines the video bandwidth.

The command decouples the video bandwidth from the resolution bandwidths.

Parameters:

<Bandwidth> refer to data sheet

*RST: AUTO is set to ON

Example: BAND: VID 10 kHz

Manual operation: See "VBW" on page 398

[SENSe:]BWIDth:VIDeo:AUTO <State>
[SENSe:]BANDwidth:VIDeo:AUTO <State>

This command couples and decouples the video bandwidth to the resolution bandwidth.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: BAND:VID:AUTO OFF

Manual operation: See "VBW" on page 398

See " RBW/VBW " on page 399 See " Default Coupling " on page 400

[SENSe:]BWIDth:VIDeo:RATio <Ratio> [SENSe:]BANDwidth:VIDeo:RATio <Ratio>

This command defines the coupling ratio of the video bandwidth to the resolution bandwidth (RBW/VBW).

Parameters:

<Ratio> Range: 0,001 to 1000

*RST: 1

Example: BAND:VID:RAT 3

Sets the coupling of video bandwidth to video bandwidth =

3*resolution bandwidth

Manual operation: See "RBW/VBW" on page 399

Setting Basic Spectrum RF Measurement Parameters

[SENSe:]BWIDth:VIDeo:TYPE <Mode> [SENSe:]BANDwidth:VIDeo:TYPE <Mode>

This command selects the position of the video filter in the signal path.

Parameters:

<Mode> LINear

The video filter is applied in front of the logarithmic amplifier. In linear mode, measurements with a logarithmic level scale result in flatter falling edges compared to logarithmic mode. The reason is the conversion of linear power values into logarithmic level values: if you halve the linear power, the logarithmic level

decreases by 3 dB.

LOGarithmic

The video filter is applied after the logarithmic amplifier

*RST: LOGarithmic

Example: BAND:VID:TYPE LIN

Video filter ahead of the logarithmic amplifier

8.8.2.2 Configuring the Sweep

Useful commands for configuring sweeps described elsewhere:

• [SENSe:] AVERage<n>: COUNt on page 695

• [SENSe:]AVERage<n>[:STATe<t>] on page 696

• [SENSe:]AVERage<n>:TYPE on page 696

Remote commands exclusive to configuring sweeps:

[SENSe:]SWEep:COUNt	660
[SENSe:]SWEep:DURation?	
[SENSe:]SWEep:OPTimize	
[SENSe:]SWEep:POINts	662
[SENSe:]SWEep:TIME	
[SENSe:]SWEep:TIME:AUTO	
[SENSe:]SWEep:TYPE:USED	663

[SENSe:]SWEep:COUNt <SweepCount>

This command defines the number of sweeps that the application uses to average traces.

In case of continuous sweep mode, the application calculates the moving average over the average count.

In case of single sweep mode, the application stops the measurement and calculates the average after the average count has been reached.

Suffix:

<n> Window

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<SweepCount> When you set a sweep count of 0 or 1, the R&S FPL1000 per-

forms one single sweep in single sweep mode.

In continuous sweep mode, if the sweep count is set to 0, a

moving average over 10 sweeps is performed.

Range: 0 to 200000

*RST: 0

Example: SWE:COUN 64

Sets the number of sweeps to 64.

INIT: CONT OFF

Switches to single sweep mode.

INIT; *WAI

Starts a sweep and waits for its end.

Manual operation: See "Sweep/Average Count" on page 400

[SENSe:]SWEep:DURation? <Time>

This command provides an estimation of the total time required to capture the data and process it. This time span may be considerably longer than the actual sweep time (see [SENSe:] SWEep:TIME on page 663).

Tip: To determine the necessary timeout for data capturing in a remote control program, double the estimated time and add 1 second.

Return values:

<Time>

Example: SWE:TIME 1s

SWE:DUR?
Reply:

27.9734842578

Usage: Query only

Manual operation: See "Sweep Time" on page 399

See "Data capturing takes too long" on page 863

[SENSe:]SWEep:OPTimize < Mode>

In FFT mode, several FFT analysis steps are required to cover the entire measurement span. The span which is covered by one FFT analysis step is called *partial span*. The partial span cannot be defined directly, but it can be optimized according to measurement requirements.

Setting Basic Spectrum RF Measurement Parameters

Table 8-3: Optimization parameters in FFT mode

Optimization mode	Description
DYNamic	Optimizes the dynamic range by using the narrowest possible partial span (depending on the RBW).
	The autorange function for the internal IF gain calculation is activated to obtain the best control range for the A/D converter.
SPEed	Optimizes the sweep rate by using the widest possible partial span (depending on the RBW).
	The autorange function for the internal IF gain calculation is deactivated. (Note: set the reference level accordingly to optimize the control range for the A/D converter).
	It is recommended that you set the Sweep Time to "Auto" to optimize the sweep rate.
AUTO	Uses a medium-sized partial span to obtain a compromise between a large dynamic range and a fast sweep rate.
	The autorange function for the internal IF gain calculation is activated to obtain the best control range for the A/D converter.

Zero span mode

For zero span measurements, the optimization mode defines the selection of the A/D converter prefilter.

Table 8-4: Optimization parameters in zero span mode

Optimization mode	Description
DYNamic	The narrowest filter possible (depending on the RBW) is used.
SPEed	The widest filter possible (depending on the RBW) is used.
AUTO	A medium-sized prefilter is used.

Parameters:

<Mode> *RST: AUTO

Example: SWE:OPT DYN

Selects optimization for dynamic range.

Manual operation: See "Optimization" on page 401

[SENSe:]SWEep:POINts <SweepPoints>

This command defines the number of sweep points to analyze after a sweep.

Note that the number of sweep points is limited to 10001 when measuring spurious emissions.

Parameters:

<SweepPoints> Range: 101 to 100001

*RST: 1001

Example: SWE:POIN 251

Manual operation: See "Sweep Points" on page 401

Setting Basic Spectrum RF Measurement Parameters

[SENSe:]SWEep:TIME <Time>

This command defines the sweep time. It automatically decouples the time from any other settings.

In the Spectrum application, the command decouples the sweep time from the span and resolution and video bandwidths. Note that this command queries only the time required to capture the data, not to process it. To obtain an estimation of the total capture and processing time, use the [SENSe:]SWEep:DURation? command.

Parameters:

<Time> refer to data sheet

*RST: depends on current settings (determined automati-

cally)

Example: SWE:TIME 10s

Manual operation: See "Sweep Time" on page 268

See "Sweep Time" on page 399 See "Sweep Time" on page 410

[SENSe:]SWEep:TIME:AUTO <State>

This command couples and decouples the sweep time to the span and the resolution and video bandwidths.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: SWE:TIME:AUTO ON

Activates automatic sweep time.

Manual operation: See "Harmonic Sweep Time" on page 353

See " Sweep Time " on page 399 See " Default Coupling " on page 400

[SENSe:]SWEep:TYPE:USED

This command queries the sweep type if you have turned on automatic selection of the sweep type.

Return values:

<Type> SWE

Normal sweep

FFT

FFT mode

Setting Basic Spectrum RF Measurement Parameters

8.8.3 Configuring the Vertical Axis (Amplitude, Scaling)

The following commands are required to configure the amplitude and vertical axis settings in a remote environment.

•	Amplitude Settings	664
	Configuring the Attenuation	
	Configuring a Preamplifier	
	Scaling the Y-Axis.	

8.8.3.1 Amplitude Settings

The tasks for manual configuration are described in Chapter 7.5.2, "Amplitude Settings", on page 385.

Useful commands for amplitude configuration described elsewhere:

• [SENSe:]ADJust:LEVel on page 655

Remote commands exclusive to amplitude configuration:

CALCulate <n>:MARKer<m>:FUNCtion:REFerence</m></n>	664
CALCulate <n>:UNIT:POWer</n>	664
UNIT <n>:POWer</n>	664
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]:RLEVel</t></n>	665
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet</t></n>	

CALCulate<n>:MARKer<m>:FUNCtion:REFerence

This command matches the reference level to the power level of a marker.

If you use the command in combination with a delta marker, that delta marker is turned into a normal marker.

Suffix:

<n> Window <m> Marker

Example: CALC:MARK2:FUNC:REF

Sets the reference level to the level of marker 2.

Usage: Event

Manual operation: See "Reference Level = Marker Level " on page 437

CALCulate<n>:UNIT:POWer <Unit>

UNIT<n>:POWer <Unit>

This command selects the unit of the y-axis.

The unit applies to all power-based measurement windows with absolute values.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> irrelevant

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT |

DBUA | AMPere *RST: dBm

Example: UNIT: POW DBM

Sets the power unit to dBm.

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel <ReferenceLevel>

This command defines the reference level (for all traces in all windows).

With a reference level offset ≠ 0, the value range of the reference level is modified by the offset.

Suffix:

<n>, <t> irrelevant

Parameters:

<ReferenceLevel> The unit is variable.

Range: see datasheet

*RST: 0 dBm

Example: DISP:TRAC:Y:RLEV -60dBm

Manual operation: See "Reference Level" on page 386

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Offset>

This command defines a reference level offset (for all traces in all windows).

Suffix:

<n>, <t> irrelevant

Parameters:

<Offset> Range: -200 dB to 200 dB

*RST: 0dB

Example: DISP:TRAC:Y:RLEV:OFFS -10dB

Manual operation: See " Shifting the Display (Offset)" on page 387

8.8.3.2 Configuring the Attenuation

INPut <ip>:ATTenuation</ip>	666
INPut <ip>:EATT:AUTO</ip>	
INPut <ip>·ATTenuation:AUTO</ip>	666

Setting Basic Spectrum RF Measurement Parameters

INPut<ip>:ATTenuation < Attenuation>

This command defines the total attenuation for RF input.

If you set the attenuation manually, it is no longer coupled to the reference level, but the reference level is coupled to the attenuation. Thus, if the current reference level is not compatible with an attenuation that has been set manually, the command also adjusts the reference level.

Suffix:

<ip> 1 | 2

irrelevant

Parameters:

<Attenuation> Range: see data sheet

Increment: 5 dB (with optional electr. attenuator: 1 dB)

*RST: 10 dB (AUTO is set to ON)

Default unit: DB

Example: INP:ATT 30dB

Defines a 30 dB attenuation and decouples the attenuation from

the reference level.

Manual operation: See " Attenuation Mode / Value " on page 388

INPut<ip>:EATT:AUTO <State>

INPut<ip>:ATTenuation:AUTO <State>

This command couples or decouples the attenuation to the reference level. Thus, when the reference level is changed, the R&S FPL1000 determines the signal level for optimal internal data processing and sets the required attenuation accordingly.

For the R&S FPL1000, these commands are identical.

Suffix:

<ip> 1 | 2 irrelevant

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: INP:ATT:AUTO ON

Couples the attenuation to the reference level.

Manual operation: See " Attenuation Mode / Value " on page 388

8.8.3.3 Configuring a Preamplifier

INPut<ip>:GAIN:STATe <State>

This command turns the preamplifier on and off.

Setting Basic Spectrum RF Measurement Parameters

If activated, the input signal is amplified by 20 dB.

If option R&S FPL1-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FPL1-B24 is installed, the preamplifier is active for all frequencies.

Suffix:

<ip> 1 | 2

irrelevant

Parameters:

<State> ON | OFF | 0 | 1

OFF | 0

Switches the function off

ON | 1

Switches the function on

*RST: 0

Example: INP:GAIN:STAT ON

Switches on 20 dB preamplification.

Manual operation: See "Preamplifier" on page 388

8.8.3.4 Scaling the Y-Axis

DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]</t></n>	667
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]:AUTO ONCE</t></n>	
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]:MODE</t></n>	668
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]:RPOSition</t></n>	668
DISPlay[:WINDow <n>]:TRACe<t>:Y:SPACing</t></n>	669

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe] <Range>

This command defines the display range of the y-axis (for all traces).

Note that the command works only for a logarithmic scaling. You can select the scaling with DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing.

Suffix:

<n> Window <t> irrelevant

Parameters:

<Range> Range: 1 dB to 200 dB

*RST: 100 dB

Example: DISP:TRAC:Y 110dB

Manual operation: See "Range" on page 389

Setting Basic Spectrum RF Measurement Parameters

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:AUTO ONCE

Automatic scaling of the y-axis is performed once, then switched off again (for all traces).

Suffix:

<n> Window <t> irrelevant

Manual operation: See " Auto Scale Once " on page 390

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:MODE < Mode>

This command selects the type of scaling of the y-axis (for all traces).

When the display update during remote control is off, this command has no immediate effect.

Suffix:

<n> Window <t> irrelevant

Parameters:

<Mode> ABSolute

absolute scaling of the y-axis

RELative

relative scaling of the y-axis

*RST: ABSolute

Example: DISP:TRAC:Y:MODE REL

Manual operation: See " Scaling " on page 390

DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe]:RPOSition <Position>

This command defines the vertical position of the reference level on the display grid (for all traces).

The R&S FPL1000 adjusts the scaling of the y-axis accordingly.

Suffix:

<n> Window <t> irrelevant

Parameters:

<Position> 0 PCT corresponds to the lower display border, 100% corre-

sponds to the upper display border.

*RST: 100 PCT = frequency display; 50 PCT = time dis-

play

Example: DISP:TRAC:Y:RPOS 50PCT

Manual operation: See "Ref Level Position" on page 389

Setting Basic Spectrum RF Measurement Parameters

DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing <ScalingType>

This command selects the scaling of the y-axis (for all traces, <t> is irrelevant).

Suffix:

<n> Window <t> Trace

Parameters:

<ScalingType> LOGarithmic

Logarithmic scaling.

LINear

Linear scaling in %.

LDB

Linear scaling in the specified unit.

PERCent

Linear scaling in %.

*RST: LOGarithmic

Example: DISP:TRAC:Y:SPAC LIN

Selects linear scaling in %.

Manual operation: See "Scaling" on page 390

8.8.4 Configuring Triggered and Gated Measurements

The commands required to configure a triggered or gated measurement in a remote environment are described here.

The tasks for manual operation are described in Chapter 7.7, "Trigger and Gate Configuration", on page 406.



*OPC should be used after requesting data. This will hold off any subsequent changes to the selected trigger source, until after the sweep is completed and the data is returned.

Configuring the Triggering Conditions	669
Configuring Coted Massuraments	672

8.8.4.1 Configuring the Triggering Conditions

The following commands are required to configure a triggered measurement.

TRIGger[:SEQuence]:DTIMe	670
TRIGger[:SEQuence]:HOLDoff[:TIME]	670
TRIGger[:SEQuence]:IFPower:HOLDoff	670
TRIGger[:SEQuence]:IFPower:HYSTeresis	671
TRIGger[:SEQuence]:LEVel[:EXTernal <port>]</port>	671
TRIGger[:SEQuence]:LEVel:IFPower	671

Setting Basic Spectrum RF Measurement Parameters

TRIGger[:SEQuence]:LEVel:IQPower	672
TRIGger[:SEQuence]:SLOPe	
TRIGger[:SEQuence]:SOURce	672
TRIGger[:SEQuence]:TIME:RINTerval	673

TRIGger[:SEQuence]:DTIMe < DropoutTime>

Defines the time the input signal must stay below the trigger level before a trigger is detected again.

Parameters:

<DropoutTime> Dropout time of the trigger.

Range: 0 s to 10.0 s

*RST: 0 s

Manual operation: See "Drop-Out Time" on page 412

TRIGger[:SEQuence]:HOLDoff[:TIME] <Offset>

Defines the time offset between the trigger event and the start of the sweep.

A negative offset is possible for time domain measurements.

For the trigger sources "External" or "IF Power", a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger offset as well.

Parameters:

<Offset> For measurements in the frequency domain, the range is 0 s to

30 s.

For measurements in the time domain, the range is the negative

sweep time to 30 s.

*RST: 0 s

Example: TRIG: HOLD 500us

Manual operation: See "Trigger Offset" on page 412

TRIGger[:SEQuence]:IFPower:HOLDoff <Period>

This command defines the holding time before the next trigger event.

Note that this command can be used for **any trigger source**, not just IF Power (despite the legacy keyword).

Note: If you perform gated measurements in combination with the IF Power trigger, the R&S FPL1000 ignores the holding time for frequency sweep, FFT sweep, zero span and I/Q data measurements.

Parameters:

<Period> Range: 0 s to 10 s

*RST: 0 s

Setting Basic Spectrum RF Measurement Parameters

Example: TRIG:SOUR EXT

Sets an external trigger source.

TRIG: IFP: HOLD 200 ns

Sets the holding time to 200 ns.

Manual operation: See "Trigger Holdoff" on page 413

TRIGger[:SEQuence]:IFPower:HYSTeresis < Hysteresis >

This command defines the trigger hysteresis, which is only available for "IF Power" trigger sources.

Parameters:

<Hysteresis> Range: 3 dB to 50 dB

*RST: 3 dB

Example: TRIG:SOUR IFP

Sets the IF power trigger source.

TRIG: IFP: HYST 10DB

Sets the hysteresis limit value.

Manual operation: See "Hysteresis" on page 413

TRIGger[:SEQuence]:LEVel[:EXTernal<port>] <TriggerLevel>

This command defines the level the external signal must exceed to cause a trigger event.

Parameters:

<TriggerLevel> For the R&S FPL1000, the external trigger level is always 1.4 V.

It cannot be changed.

*RST: 1.4 V

Manual operation: See "Trigger Level " on page 412

TRIGger[:SEQuence]:LEVel:IFPower < TriggerLevel>

This command defines the power level at the third intermediate frequency that must be exceeded to cause a trigger event.

Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Parameters:

<TriggerLevel> For details on available trigger levels and trigger bandwidths see

the data sheet.

*RST: -10 dBm

Example: TRIG:LEV:IFP -30DBM

Manual operation: See "Trigger Level " on page 412

Setting Basic Spectrum RF Measurement Parameters

TRIGger[:SEQuence]:LEVel:IQPower < TriggerLevel>

This command defines the magnitude the I/Q data must exceed to cause a trigger event.

Note that any RF attenuation or preamplification is considered when the trigger level is analyzed. If defined, a reference level offset is also considered.

Parameters:

<TriggerLevel> Range: -130 dBm to 30 dBm

*RST: -20 dBm

Example: TRIG:LEV:IQP -30DBM

Manual operation: See "Trigger Level " on page 412

TRIGger[:SEQuence]:SLOPe <Type>

For all trigger sources except time you can define whether triggering occurs when the signal rises to the trigger level or falls down to it.

Parameters:

<Type> POSitive | NEGative

POSitive

Triggers when the signal rises to the trigger level (rising edge).

NEGative

Triggers when the signal drops to the trigger level (falling edge).

*RST: POSitive

Example: TRIG:SLOP NEG

Manual operation: See "Slope" on page 413

TRIGger[:SEQuence]:SOURce <Source>

This command selects the trigger source.

For details on trigger sources see "Trigger Source" on page 411.

Note on external triggers:

If a measurement is configured to wait for an external trigger signal in a remote control program, remote control is blocked until the trigger is received and the program can continue. Make sure this situation is avoided in your remote control programs.

For troubleshooting tips see "Incompleted sequential commands - blocked remote channels" on page 861.

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<Source> IMMediate

Free Run **EXTernal**

Trigger signal from the [Trigger Input] connector.

IFPower

Second intermediate frequency

TIME

Time interval

VIDeo

Video mode is available in the time domain and only in the

Spectrum application.

*RST: IMMediate

Example: TRIG: SOUR EXT

Selects the external trigger input as source of the trigger signal

Manual operation: See "Trigger Source " on page 411

See "Free Run" on page 411

See "External Trigger 1" on page 411

See " Video " on page 411 See " IF Power " on page 411 See " Time " on page 412

TRIGger[:SEQuence]:TIME:RINTerval <Interval>

This command defines the repetition interval for the time trigger.

Parameters:

<Interval> 2.0 ms to 5000

Range: 2 ms to 5000 s

*RST: 1.0 s

Example: TRIG:SOUR TIME

Selects the time trigger input for triggering.

TRIG: TIME: RINT 50

The sweep starts every 50 s.

Manual operation: See "Repetition Interval" on page 412

8.8.4.2 Configuring Gated Measurements

[SENSe:]SWEep:EGATe	674
[SENSe:]SWEep:EGATe:HOLDoff	
[SENSe:]SWEep:EGATe:LENGth	
[SENSe:]SWEep:EGATe:POLarity	675
[SENSe:]SWEep:EGATe:SOURce	
ISENSe:ISWEen:EGATe:TYPE	

Setting Basic Spectrum RF Measurement Parameters

[SENSe:]SWEep:EGATe <State>

This command turns gated measurements on and off.

In case of measurements with an external gate, the measured values are recorded as long as the gate is opened. During a sweep the gate can be opened and closed several times. The synchronization mechanisms with *OPC, *OPC? and *WAI remain completely unaffected.

The measurement ends when a particular number of measurement points has been recorded.

(See [SENSe:] SWEep:POINts on page 662).

Performing gated measurements turns the squelch off.

Parameters:

<State> ON | OFF | 1 | 0

*RST: (

Example: SWE:EGAT ON

Switches on the external gate mode.

SWE: EGAT: TYPE EDGE

Switches on the edge-triggered mode.

SWE:EGAT:HOLD 100US Sets the gate delay to 100 μ s. SWE:EGAT:LEN 500US

Sets the gate opening time to 500 µs.

INIT; *WAI

Starts a sweep and waits for its end.

Manual operation: See " Gated Trigger " on page 417

[SENSe:]SWEep:EGATe:HOLDoff < DelayTime>

This command defines the delay time between the gate signal and the continuation of the measurement.

Note: If you perform gated measurements in combination with the IF Power trigger, the R&S FPL1000 ignores the holding time for frequency sweep, FFT sweep, zero span and I/Q mode measurements.

Parameters:

<DelayTime> Range: 0 s to 30 s

*RST: 0 s

Example: SWE:EGAT:HOLD 100us

Manual operation: See " Gate Delay " on page 417

[SENSe:]SWEep:EGATe:LENGth < GateLength>

This command defines the gate length.

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<GateLength> Range: 125 ns to 30 s

*RST: 400µs

Example: SWE:EGAT:LENG 10ms

Manual operation: See " Gate Length " on page 418

[SENSe:]SWEep:EGATe:POLarity < Polarity>

This command selects the polarity of an external gate signal.

The setting applies both to the edge of an edge-triggered signal and the level of a level-triggered signal.

Parameters:

<Polarity> POSitive | NEGative

*RST: POSitive

Example: SWE:EGAT:POL POS

Manual operation: See "Slope" on page 413

[SENSe:]SWEep:EGATe:SOURce <Source>

This command selects the signal source for gated measurements.

If an IF power signal is used, the gate is opened as soon as a signal at > -20 dBm is detected within the IF path bandwidth (10 MHz).

For more information see "Trigger Source" on page 411.

Parameters:

<Source> EXTernal | IFPower | TIME

*RST: IFPower

Example: SWE:EGAT:SOUR IFP

Switches the gate source to IF power.

Manual operation: See "Trigger Source " on page 411

See "External Trigger 1" on page 411

See "IF Power" on page 411

[SENSe:]SWEep:EGATe:TYPE <Type>

This command selects the way gated measurements are triggered.

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<Type> LEVel

The trigger event for the gate to open is a particular power level. After the gate signal has been detected, the gate remains open until the signal disappears.

Note: If you perform gated measurements in combination with the IF Power trigger, the R&S FPL1000 ignores the holding time for frequency sweep, FFT sweep, zero span and I/Q mode measurements.

EDGE

The trigger event for the gate to open is the detection of the signal edge.

After the gate signal has been detected, the gate remains open until the gate length is over.

*RST: EDGE

Example: SWE:EGAT:TYPE EDGE

Manual operation: See " Gate Mode " on page 417

8.8.5 Configuring the Data Input and Output

The following commands are required to configure data input and output.

•	RF Input	676
•	Working with Power Sensors	678
•	Configuring the Outputs.	687

8.8.5.1 RF Input

INPut <ip>:ATTenuation:PROTection:RESet</ip>	676
INPut <ip>:IMPedance</ip>	677
INPut <ip>:SELect</ip>	
INPut <ip>:UPORt:STATe</ip>	677
INPut <ip>:UPORt[:VALue]</ip>	678

INPut<ip>:ATTenuation:PROTection:RESet

This command resets the attenuator and reconnects the RF input with the input mixer after an overload condition occurred and the protection mechanism intervened. The error status bit (bit 3 in the STAT: QUES: POW status register) and the INPUT OVLD message in the status bar are cleared.

(See STATUS:QUEStionable:POWer[:EVENt]? on page 845 and "STATUS:QUEStionable:POWer Register" on page 197).

The command works only if the overload condition has been eliminated first.

For details on the protection mechanism see "RF Input Protection" on page 368.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<ip> 1 | 2

irrelevant

Setting parameters:

<arg0>

Usage: Event

INPut<ip>:IMPedance < Impedance >

This command selects the nominal input impedance of the RF input. In some applications, only 50 Ω are supported.

Suffix:

<ip> 1 | 2

irrelevant

Parameters:

<Impedance> 50 | 75

*RST: 50 Ω Default unit: OHM

Example: INP:IMP 75

Manual operation: See "Impedance" on page 368

See "Unit" on page 387

INPut<ip>:SELect <Source>

This command selects the signal source for measurements, i.e. it defines which connector is used to input data to the R&S FPL1000.

Suffix:

<ip> 1 | 2

irrelevant

Parameters:

<Source> RF

Radio Frequency ("RF INPUT" connector)

*RST: RF

Manual operation: See "Radio Frequency State" on page 368

INPut<ip>:UPORt:STATe <State>

This command toggles the control lines of the user ports for the **AUX PORT** connector. This 9-pole SUB-D male connector is located on the rear panel of the R&S FPL1000.

See the R&S FPL1000 Getting Started manual for details.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<ip> 1 | 2

irrelevant

Parameters:

<State> ON | 1

User port is switched to INPut

OFF | 0

User port is switched to OUTPut

*RST: 1

INPut<ip>:UPORt[:VALue]

This command queries the control lines of the user ports.

For details see OUTPut:UPORt[:VALue] on page 688.

Suffix:

<ip> 1 | 2

irrelevant

Example: INP:UPOR?

//Result: #B00100100 Pins 5 and 7 are active.

8.8.5.2 Working with Power Sensors

The following commands describe how to work with power sensors.

These commands require the use of a Rohde & Schwarz power sensor. For a list of supported sensors, see the data sheet.



The [Sensor] connector is provided by the "Additional Interfaces" option R&S FPL1-B5. Additionally, the power sensor measurement requires the option R&S FPL1-K9.

•	Configuring Power Sensors	678
	Configuring Power Sensor Measurements	680

Configuring Power Sensors

SYSTem:COMMunicate:RDEVice:PMETer:CONFigure:AUTO[:STATe]678
SYSTem:COMMunicate:RDEVice:PMETer:COUNt?	679
SYSTem:COMMunicate:RDEVice:PMETer:DEFine	679

SYSTem:COMMunicate:RDEVice:PMETer:CONFigure:AUTO[:STATe] <State>

This command turns automatic assignment of a power sensor to the power sensor index on and off.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

1...4

Power sensor index

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: SYST:COMM:RDEV:PMET:CONF:AUTO OFF

Manual operation: See "Select " on page 371

SYSTem:COMMunicate:RDEVice:PMETer:COUNt?

This command queries the number of power sensors currently connected to the R&S FPL1000.

Parameters:

<NumberSensors> Number of connected power sensors.

Example: SYST:COMM:RDEV:PMET:COUN?

Usage: Query only

Manual operation: See "Select " on page 371

SYSTem:COMMunicate:RDEVice:PMETer:DEFine <Placeholder>, <Type>, <Interface>, <SerialNo>

This command assigns the power sensor with the specified serial number to the selected power sensor index (configuration).

The query returns the power sensor type and serial number of the sensor assigned to the specified index.

Suffix:

1...4

Power sensor index

Parameters:

<Placeholder> Currently not used

<Type> Detected power sensor type, e.g. "NRP-Z81".

<Interface> Interface the power sensor is connected to; always "USB"

<SerialNo> Serial number of the power sensor assigned to the specified

index

Setting Basic Spectrum RF Measurement Parameters

Example: SYST:COMM:RDEV:PMET2:DEF '','NRP-Z81','',

'123456'

Assigns the power sensor with the serial number '123456' to the

configuration "Power Sensor 2".
SYST:COMM:RDEV:PMET2:DEF?

Queries the sensor assigned to "Power Sensor 2".

Result:

'','NRP-Z81','USB','123456'

The NRP-Z81 power sensor with the serial number '123456' is

assigned to the "Power Sensor 2".

Manual operation: See "Select " on page 371

Configuring Power Sensor Measurements

CALibration:PMETer:ZERO:AUTO ONCE	680
CALCulate <n>:PMETer:RELative[:MAGNitude]</n>	681
CALCulate <n>:PMETer:RELative[:MAGNitude]:AUTO ONCE</n>	681
CALCulate <n>:PMETer:RELative:STATe</n>	681
FETCh:PMETer?	682
READ:PMETer?	682
[SENSe:]PMETer:DCYCle[:STATe]	682
[SENSe:]PMETer:DCYCle:VALue	682
[SENSe:]PMETer:FREQuency	683
[SENSe:]PMETer:FREQuency:LINK	683
[SENSe:]PMETer:MTIMe	684
[SENSe:]PMETer:MTIMe:AVERage:COUNt	684
[SENSe:]PMETer:MTIMe:AVERage[:STATe]	684
[SENSe:]PMETer:ROFFset[:STATe]	685
[SENSe:]PMETer[:STATe]	685
[SENSe:]PMETer:UPDate[:STATe]	686
UNIT <n>:PMETer:POWer</n>	686
UNIT <n>:PMETer:POWer:RATio</n>	686

CALibration:PMETer:ZERO:AUTO ONCE

This command zeroes the power sensor.

Note that you have to disconnect the signals from the power sensor input before you start to zero the power sensor. Otherwise, results are invalid.

Suffix:

1...4

Power sensor index

Parameters:

ONCE

Example: CAL:PMET2:ZERO:AUTO ONCE; *WAI

Starts zeroing the power sensor 2 and delays the execution of

further commands until zeroing is concluded.

Usage: Event

Setting Basic Spectrum RF Measurement Parameters

Manual operation: See " Zeroing Power Sensor " on page 371

CALCulate<n>:PMETer:RELative[:MAGNitude] <RefValue>

This command defines the reference value for relative measurements.

Suffix:

<n> Window 1...4

Power sensor index

Parameters:

<RefValue> Range: -200 dBm to 200 dBm

*RST: 0

Example: CALC:PMET2:REL -30

Sets the reference value for relative measurements to -30 dBm

for power sensor 2.

Manual operation: See "Reference Value" on page 372

CALCulate<n>:PMETer:RELative[:MAGNitude]:AUTO ONCE

This command sets the current measurement result as the reference level for relative measurements.

Suffix:

<n> Window

1...4

Power sensor index

Parameters:

ONCE

Example: CALC:PMET2:REL:AUTO ONCE

Takes the current measurement value as reference value for rel-

ative measurements for power sensor 2.

Usage: Event

Manual operation: See "Setting the Reference Level from the Measurement Meas -

> Ref " on page 372

CALCulate<n>:PMETer:RELative:STATe <State>

This command turns relative power sensor measurements on and off.

Suffix:

<n> Window

1...4

Power sensor index

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:PMET2:REL:STAT ON

Activates the relative display of the measured value for power

sensor 2.

FETCh:PMETer?

This command queries the results of power sensor measurements.

Suffix:

1...4

Power sensor index

Return values:

<Level> Power level that has been measured by a power sensor.

The unit is either dBm (absolute measurements) or dB (relative

measurements).

Usage: Query only

READ:PMETer?

This command initiates a power sensor measurement and queries the results.

Suffix:

1...4

Power sensor index

Usage: Query only

[SENSe:]PMETer:DCYCle[:STATe] <State>

This command turns the duty cycle correction on and off.

Suffix:

1...4

Power sensor index

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: PMET2:DCYC:STAT ON

Manual operation: See " Duty Cycle " on page 373

[SENSe:]PMETer:DCYCle:VALue <Percentage>

This command defines the duty cycle for the correction of pulse signals.

Setting Basic Spectrum RF Measurement Parameters

The power sensor uses the duty cycle in combination with the mean power to calculate the power of the pulse.

Suffix:

1...4

Power sensor

Parameters:

<Percentage> Range: 0.001 to 99.999

*RST: 99.999
Default unit: %

Example: PMET2:DCYC:STAT ON

Activates the duty cycle correction.

PMET2:DCYC:VAL 0.5

Sets the correction value to 0.5%.

Manual operation: See " Duty Cycle " on page 373

[SENSe:]PMETer:FREQuency <Frequency>

This command defines the frequency of the power sensor.

Suffix:

1...4

Power sensor index

Parameters:

<Frequency> The available value range is specified in the data sheet of the

power sensor in use. *RST: 50 MHz

Example: PMET2:FREQ 1GHZ

Sets the frequency of the power sensor to 1 GHz.

Manual operation: See "Frequency Manual" on page 371

[SENSe:]PMETer:FREQuency:LINK <Coupling>

This command selects the frequency coupling for power sensor measurements.

Suffix:

1...4

Power sensor index

Parameters:

<Coupling> CENTer

Couples the frequency to the center frequency of the analyzer

MARKer1

Couples the frequency to the position of marker 1

OFF

Switches the frequency coupling off

*RST: CENTer

Setting Basic Spectrum RF Measurement Parameters

Example: PMET2:FREQ:LINK CENT

Couples the frequency to the center frequency of the analyzer

Manual operation: See "Frequency Coupling" on page 371

[SENSe:]PMETer:MTIMe <Duration>

This command selects the duration of power sensor measurements.

Suffix:

1...4

Power sensor index

Parameters:

<Duration> SHORt | NORMal | LONG

*RST: NORMal

Example: PMET2:MTIM SHOR

Sets a short measurement duration for measurements of station-

ary high power signals for the selected power sensor.

Manual operation: See "Meas Time/Average " on page 372

[SENSe:]PMETer:MTIMe:AVERage:COUNt <NumberReadings>

This command sets the number of power readings included in the averaging process of power sensor measurements.

Extended averaging yields more stable results for power sensor measurements, especially for measurements on signals with a low power, because it minimizes the effects of noise.

Suffix:

1...4

Power sensor index

Parameters:

<NumberReadings> An average count of 0 or 1 performs one power reading.

Range: 0 to 256

Increment: binary steps (1, 2, 4, 8, ...)

Example: PMET2:MTIM:AVER ON

Activates manual averaging.

PMET2:MTIM:AVER:COUN 8

Sets the number of readings to 8.

Manual operation: See " Average Count (Number of Readings)" on page 373

[SENSe:]PMETer:MTIMe:AVERage[:STATe] <State>

This command turns averaging for power sensor measurements on and off.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

1...4

Power sensor index

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: PMET2:MTIM:AVER ON

Activates manual averaging.

Manual operation: See "Meas Time/Average" on page 372

[SENSe:]PMETer:ROFFset[:STATe] <State>

This command includes or excludes the reference level offset of the analyzer for power sensor measurements.

Suffix:

1...4

Power sensor index

Parameters:

<State> ON | 1

Includes the reference level offset in the results.

OFF | 0

Ignores the reference level offset.

*RST: 1

Example: PMET2:ROFF OFF

Takes no offset into account for the measured power.

Manual operation: See "Use Ref Level Offset "on page 372

[SENSe:]PMETer[:STATe] <State>

This command turns a power sensor on and off.

Suffix:

1...4

Power sensor index

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: PMET1 ON

Switches the power sensor measurements on.

Manual operation: See "State" on page 370

See "Select" on page 371

Setting Basic Spectrum RF Measurement Parameters

[SENSe:]PMETer:UPDate[:STATe] <State>

This command turns continuous update of power sensor measurements on and off.

If on, the results are update even if a single sweep is complete.

Suffix:

1...4

Power sensor index

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: PMET1:UPD ON

The data from power sensor 1 is updated continuously.

Manual operation: See " Continuous Value Update " on page 371

UNIT<n>:PMETer:POWer <Unit>

This command selects the unit for absolute power sensor measurements.

Suffix:

<n> irrelevant

1...4

Power sensor index

Parameters:

<Unit> DBM | WATT | W

*RST: DBM

Example: UNIT: PMET: POW DBM

Manual operation: See "Unit/Scale" on page 372

UNIT<n>:PMETer:POWer:RATio <Unit>

This command selects the unit for relative power sensor measurements.

Suffix:

<n> irrelevant

1...4

Power sensor index

Parameters:

<Unit> DB | PCT

*RST: DB

Example: UNIT: PMET: POW: RAT DB

Manual operation: See "Unit/Scale" on page 372

Setting Basic Spectrum RF Measurement Parameters

8.8.5.3 Configuring the Outputs

The following commands are required to provide output from the R&S FPL1000.

Output functions require the option R&S FPL1-B5 to be installed on the R&S FPL1000.

DIAGnostic:SERVice:NSOurce	ÖΙ
OUTPut:IF[:SOURce]	87
OUTPut:IF:IFFRequency	
OUTPut:UPORt:STATe	
OUTPut:UPORt[:VALue]	
OUTPut:UPORt:WTRigger:POLarity	
SYSTem:SPEaker[:STATe]	
SYSTem:SPEaker:VOLume	

DIAGnostic:SERVice:NSOurce <State>

This command turns the 28 V supply of the BNC connector labeled [noise source control] on the R&S FPL on and off.

Suffix:

<n> Window

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: DIAG:SERV:NSO ON

Manual operation: See "Noise Source Control" on page 376

OUTPut:IF[:SOURce] <Source>

Defines the type of signal available at the IF/VIDEO connector of the R&S FPL.

Parameters:

<Source> IF

The measured IF value is available at the IF/VIDEO output con-

nector.

The frequency at which the IF value is provided is defined using

the OUTPut: IF: IFFRequency command.

VIDeo

The displayed video signal (i.e. the filtered and detected IF signal, 200mV) is available at the IF/VIDEO output connector. This setting is required to provide demodulated audio frequen-

cies at the output.

*RST: IF

Example: OUTP:IF VID

Selects the video signal for the IF/VIDEO output connector.

Manual operation: See "Data Output" on page 375

Setting Basic Spectrum RF Measurement Parameters

OUTPut:IF:IFFRequency < Frequency >

This command defines the frequency for the IF output of the R&S FPL. The IF frequency of the signal is converted accordingly.

This command is available in the time domain and if the IF/VIDEO output is configured for IF.

Parameters:

<Frequency> *RST: 50.0 MHz

Manual operation: See "Data Output" on page 375

OUTPut:UPORt:STATe <State>

This command toggles the control lines of the user ports for the **AUX PORT** connector. This 9-pole SUB-D male connector is located on the rear panel of the R&S FPL1000.

Parameters:

<State> ON | 1

User port is switched to OUTPut

OFF | 0

User port is switched to INPut

*RST: 0

OUTPut:UPORt[:VALue] <Value>

This command sets the control lines of the user ports.

The assignment of the pin numbers to the bits is as follows:

Bit	7	6	5	4	3	2	1	0
Pin	N/A	N/A	5	3	4	7	6	2

Bits 7 and 6 are not assigned to pins and must always be 0.

The user port is written to with the given binary pattern. If the user port is programmed to input instead of output (see INPut<ip>:UPORt:STATe on page 677), the output value is temporarily stored.

Parameters:

<Value> bit values in hexadecimal format

TTL type voltage levels (max. 5V)

Range: #B00000000 to #B00111111

Example: OUTP:UPOR #B00100100

Sets pins 5 and 7 to 5 V.

Setting Basic Spectrum RF Measurement Parameters

OUTPut:UPORt:WTRigger:POLarity <State>

Defines the signal polarity that indicates the trigger availability at the optional [AUX PORT] connector of the R&S FPL1000.

Parameters:

<State> HIGH | LOW

LOW

A low signal (= 0 V) indicates the instrument is ready to receive

a trigger.

HIGH

A high signal (= 5 V) indicates the instrument is ready to receive

a trigger.

Example: OUTP:UPOR:WTR:POL HIGH

The R&S FPL1000 waits for a 5-V-signal at the AUX PORT con-

nector before accepting a trigger signal.

SYSTem:SPEaker[:STATe] <State>

This command switches the built-in loudspeaker on or off for demodulated signals. This setting applies only to the current application.

The command is available in the time domain in Spectrum mode and in Analog Demodulation mode.

To set the volume, use the SYSTem: SPEaker: VOLume command.

Parameters:

<State> ON | OFF

*RST: OFF

Example: SYST:SPE ON

SYST:SPE:VOL 0.5

Sets the loudspeaker to half the full volume.

Manual operation: See "Data Output" on page 375

See "Loudspeaker" on page 453

SYSTem:SPEaker:VOLume < Volume >

This command defines the volume of the built-in loudspeaker for demodulated signals. This setting is maintained for all applications.

The command is available in the time domain in Spectrum mode and in Analog Demodulation mode.

Note that you must switch the loudspeaker on first, using the SYSTem: SPEaker[: STATe] command.

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<Volume> Percentage of the maximum possible volume.

Range: 0 to 1 *RST: 0.5

Example: SYST:SPE:VOL 0

Switches the loudspeaker to mute.

Manual operation: See "Data Output" on page 375

See "Audio Output Volume" on page 453

8.8.6 Zooming into the Display


8.8.6.1 Using the Single Zoom

DISPlay[:WINDow <n>]:ZOOM:AREA.</n>	690
DISPlay[:WINDow <n>]:ZOOM[:STATe</n>]691

DISPlay[:WINDow<n>]:ZOOM:AREA <x1>,<y1>,<x2>,<y2>

This command defines the zoom area.

To define a zoom area, you first have to turn the zoom on.

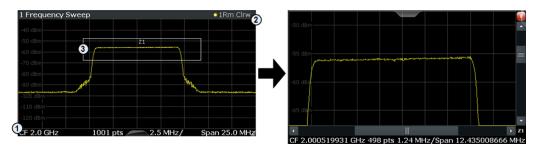

1 = origin of coordinate system (x1 = 0, y1 = 0)

2 = end point of system (x2 = 100, y2 = 100)

3 = zoom area (e.g. x1 = 60, y1 = 30, x2 = 80, y2 = 75)

Suffix:

<n> Window

Parameters:

<x1>,<y1>, Diagram coordinates in % of the complete diagram that define

<x2>,<y2> the zoom area.

The lower left corner is the origin of coordinate system. The

upper right corner is the end point of the system.

Range: 0 to 100 Default unit: PCT

Manual operation: See "Single Zoom" on page 510

Setting Basic Spectrum RF Measurement Parameters

DISPlay[:WINDow<n>]:ZOOM[:STATe] <State>

This command turns the zoom on and off.

Suffix:

<n> Window

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: DISP: ZOOM ON

Activates the zoom mode.

Manual operation: See "Single Zoom" on page 510

See "Restore Original Display" on page 511


8.8.6.2 Using the Multiple Zoom

DISPlay[:WINDow <n>]:ZOOM:MULTiple<zoom></zoom></n>	:AREA691
DISPlay[:WINDow <n>]:ZOOM:MULTiple<zoom></zoom></n>	[:STATe]692

DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>:AREA <x1>,<y1>,<x2>,<y2>

This command defines the zoom area for a multiple zoom.

To define a zoom area, you first have to turn the zoom on.

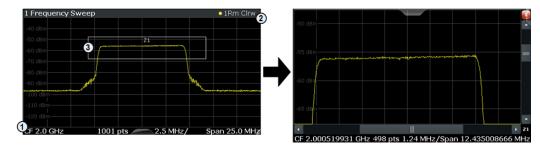

- 1 = origin of coordinate system (x1 = 0, y1 = 0)
- 2 = end point of system (x2 = 100, y2 = 100)
- 3 = zoom area (e.g. x1 = 60, y1 = 30, x2 = 80, y2 = 75)

Suffix:

<n> Window <zoom> 1...4

Selects the zoom window.

Parameters:

<x1>,<y1>, Diagram coordinates in % of the complete diagram that define

<x2>,<y2> the zoom area.

The lower left corner is the origin of coordinate system. The

upper right corner is the end point of the system.

Range: 0 to 100 Default unit: PCT

Setting Basic Spectrum RF Measurement Parameters

Manual operation: See " Multi-Zoom " on page 510

DISPlay[:WINDow<n>]:ZOOM:MULTiple<zoom>[:STATe] <State>

This command turns the multiple zoom on and off.

Suffix:

<n> Window <zoom> 1...4

Selects the zoom window.

If you turn off one of the zoom windows, all subsequent zoom

windows move up one position.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See " Multi-Zoom " on page 510

See "Restore Original Display" on page 511

8.8.7 Configuring the Trace Display and Retrieving Trace Data

The commands required to work with traces are described here.



Commands required to export traces (and other result data) are described in Chapter 8.9.5, "Storing Measurement Results", on page 816.

•	Configuring Standard Traces	692
	Configuring Spectrograms	
	Using Trace Mathematics	
	Retrieving Trace Results	
	Formats for Returned Values: ASCII Format and Binary Format	
	Importing and Exporting Traces	
	Programming Example: Configuring a Spectrogram	

8.8.7.1 Configuring Standard Traces

Useful commands for trace configuration described elsewhere

- DISPlay[:WINDow<n>]:TRACe<t>:Y:SPACing on page 669
- DISPlay[:WINDow<n>]:TRACe<t>:Y[:SCALe] on page 667

Remote commands exclusive to trace configuration

DISPlay[:WINDow <n>]:TRACe<t>:MODE</t></n>	693
DISPlay[:WINDow <n>]:TRACe<t>:MODE:HCONtinuous</t></n>	694
DISPlay[:WINDow <n>]:TRACe<t>[:STATe]</t></n>	694

Setting Basic Spectrum RF Measurement Parameters

DISPlay[:WINDow <n>]:TRACe<t>:SMOothing:APERture</t></n>	695
DISPlay[:WINDow <n>]:TRACe<t>:SMOothing[:STATe]</t></n>	
[SENSe:]AVERage <n>:COUNt</n>	695
[SENSe:]AVERage <n>[:STATe<t>]</t></n>	696
[SENSe:]AVERage <n>:TYPE</n>	696
[SENSe:][WINDow <n>:]DETector<t>[:FUNCtion]</t></n>	697
[SENSe:][WINDow <n>:]DETector<t>[:FUNCtion]:AUTO</t></n>	697
TRACe <n>:COPY</n>	698

DISPlay[:WINDow<n>]:TRACe<t>:MODE < Mode>

This command selects the trace mode. If necessary, the selected trace is also activated.

In case of max hold, min hold or average trace mode, you can set the number of single measurements with [SENSe:]SWEep:COUNt. Note that synchronization to the end of the measurement is possible only in single sweep mode.

Suffix:

<n> Window <t> Trace

Parameters:

<Mode> WRITe

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

AVERage

The average is formed over several sweeps. The "Sweep/Average Count" determines the number of averaging procedures.

MAXHold

The maximum value is determined over several sweeps and displayed. The R&S FPL1000 saves the sweep result in the trace memory only if the new value is greater than the previous one.

MINHold

The minimum value is determined from several measurements and displayed. The R&S FPL1000 saves the sweep result in the trace memory only if the new value is lower than the previous one.

VIEW

The current contents of the trace memory are frozen and displayed.

BLANk

Hides the selected trace.

*RST: Trace 1: WRITe, Trace 2-6: BLANk

Setting Basic Spectrum RF Measurement Parameters

Example: INIT: CONT OFF

Switching to single sweep mode.

SWE: COUN 16

Sets the number of measurements to 16.

DISP:TRAC3:MODE WRIT

Selects clear/write mode for trace 3.

INIT; *WAI

Starts the measurement and waits for the end of the measure-

ment.

Manual operation: See "Trace Mode" on page 467

DISPlay[:WINDow<n>]:TRACe<t>:MODE:HCONtinuous <State>

This command turns an automatic reset of a trace on and off after a parameter has changed.

The reset works for trace modes min hold, max hold and average.

Note that the command has no effect if critical parameters like the span have been changed to avoid invalid measurement results

Suffix:

<n> Window <t> Trace

Parameters:

<State> ON | 1

The automatic reset is off.

OFF | 0

The automatic reset is on.

*RST: 0

Example: DISP:WIND:TRAC3:MODE:HCON ON

Switches off the reset function.

Manual operation: See "Hold "on page 468

DISPlay[:WINDow<n>]:TRACe<t>[:STATe] <State>

This command turns a trace on and off.

The measurement continues in the background.

Suffix:

<n> Window <t> Trace

Parameters:

<State> ON | OFF | 1 | 0

*RST: 1 for TRACe1, 0 for TRACe 2 to 6

Example: DISP:TRAC3 ON

Setting Basic Spectrum RF Measurement Parameters

Manual operation: See " Trace 1 / Trace 2 / Trace 3 / Trace 4 / Trace 5 / Trace 6 "

on page 467

See "Trace 1 / Trace 2 / Trace 3 / Trace 4 (Softkeys)"

on page 470

DISPlay[:WINDow<n>]:TRACe<t>:SMOothing:APERture <Percentage>

This command defines the degree (aperture) of the trace smoothing, if DISPlay[:WINDow<n>]:TRACe<t>:SMOothing[:STATe] TRUE.

Suffix:

<n> Window <t> Trace

Parameters:

<Percentage> Range: 1 to 50

*RST: 2
Default unit: PCT

Example: DISP3:TRAC2:SMO:APER 5

Defines an aperture of 5% for trace 2 in window 3

Manual operation: See "Smoothing" on page 469

DISPlay[:WINDow<n>]:TRACe<t>:SMOothing[:STATe] <State>

This command turns trace smoothing for a particular trace on and off.

If enabled, the trace is smoothed by the value specified using DISPlay[: WINDow<n>]: TRACe<t>: SMOothing: APERture on page 695.

For more information see "Trace Smoothing" on page 465.

Suffix:

<n> Window <t> Trace

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: DISP3:TRAC2:SMO ON

Turns on trace smoothing for trace 2 in window 3

Manual operation: See "Smoothing" on page 469

[SENSe:]AVERage<n>:COUNt <AverageCount>

This command defines the number of sweeps that the application uses to average traces.

Setting Basic Spectrum RF Measurement Parameters

In case of continuous sweep mode, the application calculates the moving average over the average count.

In case of single sweep mode, the application stops the measurement and calculates the average after the average count has been reached.

Suffix:

<n> irrelevant

Parameters:

<AverageCount> If you set an average count of 0 or 1, the application performs

one single sweep in single sweep mode.

In continuous sweep mode, if the average count is set to 0, a

moving average over 10 sweeps is performed.

Range: 0 to 200000

*RST: 0

Manual operation: See "Sweep/Average Count" on page 400

See " Average Count " on page 469

[SENSe:]AVERage<n>[:STATe<t>] <State>

This command turns averaging for a particular trace in a particular window on and off.

Suffix:

<n> Window <t> Trace

Parameters:

<State> ON | OFF | 1 | 0

[SENSe:]AVERage<n>:TYPE <Mode>

This command selects the trace averaging mode.

Suffix:

<n> Window

Parameters:

<Mode> VIDeo

The logarithmic power values are averaged.

LINear

The power values are averaged before they are converted to

logarithmic values.

POWer

The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into

its original unit.

*RST: VIDeo

Example: AVER: TYPE LIN

Switches to linear average calculation.

Setting Basic Spectrum RF Measurement Parameters

Manual operation: See "Average Mode" on page 469

[SENSe:][WINDow<n>:]DETector<t>[:FUNCtion] < Detector>

Defines the trace detector to be used for trace analysis.

For details see "Mapping Samples to sweep Points with the Trace Detector" on page 460.

Suffix:

<n> Window <t> Trace

Parameters:

<Detector> APEak

Autopeak

NEGative

Negative peak

POSitive

Positive peak

SAMPle

First value detected per trace point

RMS value AVERage Average

*RST: APEak

Example: DET POS

Sets the detector to "positive peak".

Manual operation: See " Detector " on page 468

[SENSe:][WINDow<n>:]DETector<t>[:FUNCtion]:AUTO <State>

This command couples and decouples the detector to the trace mode.

Suffix:

<n> Window <t> Trace

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: DET:AUTO OFF

The selection of the detector is not coupled to the trace mode.

Manual operation: See " Detector " on page 468

Setting Basic Spectrum RF Measurement Parameters

TRACe<n>:COPY <TraceNumber>, <TraceNumber>

This command copies data from one trace to another.

Suffix:

<n> Window

Parameters:

<TraceNumber>,
<TraceNumber>

TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6

The first parameter is the destination trace, the second parame-

ter is the source.

(Note the 'e' in the parameter is required!)

Example: TRAC:COPY TRACE1, TRACE2

Copies the data from trace 2 to trace 1.

Manual operation: See "Copy Trace " on page 470

8.8.7.2 Configuring Spectrograms

In addition to the standard "level versus frequency" or "level versus time" spectrum traces, the R&S FPL1000 also provides a spectrogram display of the measured data. A spectrogram shows how the spectral density of a signal varies over time. The x-axis shows the frequency, the y-axis shows the time. The commands required to configure spectrograms in a remote environment are described here. For details and manual operation see Chapter 7.10.2.2, "Spectrogram Settings", on page 479.



When configuring spectrograms, the window suffix is irrelevant. The settings are always applied to the spectrogram window, or to all spectrogram windows, if several are active for the same channel setup.

For commands to set markers in spectrograms, see Chapter 8.8.8.6, "Marker Search (Spectrograms)", on page 735.

Configuring a Spectrogram Measurement	698
Configuring the Color Man	703

Configuring a Spectrogram Measurement

CALCulate <n>:SGRam:CLEar[:IMMediate]</n>	699
CALCulate <n>:SPECtrogram:CLEar[:IMMediate]</n>	699
CALCulate <n>:SGRam:CONTinuous</n>	699
CALCulate <n>:SPECtrogram:CONTinuous</n>	699
CALCulate <n>:SGRam:FRAMe:COUNt</n>	699
CALCulate <n>:SPECtrogram:FRAMe:COUNt</n>	699
CALCulate <n>:SGRam:FRAMe:SELect</n>	700
CALCulate <n>:SPECtrogram:FRAMe:SELect</n>	700
CALCulate <n>:SGRam:HDEPth</n>	700
CALCulate <n>:SPECtrogram:HDEPth</n>	700
CALCulate <n>:SGRam:LAYout</n>	701
CALCulate <n>:SPECtrogram:LAYout</n>	701

Setting Basic Spectrum RF Measurement Parameters

CALCulate <n>:SGRam[:STATe]</n>	701
CALCulate <n>:SPECtrogram[:STATe]</n>	
CALCulate <n>:SGRam:TSTamp:DATA?</n>	701
CALCulate <n>:SPECtrogram:TSTamp:DATA?</n>	701
CALCulate <n>:SGRam:TSTamp[:STATe]</n>	702
CALCulate <n>:SPECtrogram:TSTamp[:STATe]</n>	

CALCulate<n>:SGRam:CLEar[:IMMediate] CALCulate<n>:SPECtrogram:CLEar[:IMMediate]

This command resets the spectrogram and clears the history buffer.

Suffix:

<n> irrelevant

Example: CALC:SGR:CLE

Resets the result display and clears the memory.

Usage: Event

Manual operation: See " Clear Spectrogram " on page 404

CALCulate<n>:SGRam:CONTinuous <State> CALCulate<n>:SPECtrogram:CONTinuous <State>

This command determines whether the results of the last measurement are deleted before starting a new measurement in single sweep mode.

This setting applies to all spectrograms in the channel setup.

Suffix:

<n> irrelevant

Parameters:

<State> 1 | 0 | ON | OFF

1 | ON 0 | OFF

*RST: 0

Example: INIT: CONT OFF

Selects single sweep mode.

INIT; *WAI

Starts the sweep and waits for the end of the sweep.

CALC:SGR:CONT ON

Repeats the single sweep measurement without deleting the

results of the last measurement.

Manual operation: See "Continue Frame "on page 403

CALCulate<n>:SGRam:FRAMe:COUNt <Frames>
CALCulate<n>:SPECtrogram:FRAMe:COUNt <Frames>

This command defines the number of frames to be recorded in a single sweep.

Setting Basic Spectrum RF Measurement Parameters

This value applies to all spectrograms in the channel setup.

Suffix:

<n> irrelevant

Parameters:

<Frames> The maximum number of frames depends on the history depth.

Range: 1 to history depth

Increment: 1 *RST: 1

Example: INIT: CONT OFF

Selects single sweep mode.
CALC:SGR:FRAM:COUN 200
Sets the number of frames to 200.

Manual operation: See "Frame Count" on page 404

CALCulate<n>:SGRam:FRAMe:SELect <Frame> | <Time> CALCulate<n>:SPECtrogram:FRAMe:SELect <Frame> | <Time>

This command selects a specific frame for further analysis.

The command is available if no measurement is running or after a single sweep has ended.

Suffix:

<n> irrelevant

Parameters:

<Frame> Selects a frame directly by the frame number. Valid if the time

stamp is off.

The range depends on the history depth.

<Time> Selects a frame via its time stamp. Valid if the time stamp is on.

The number is the distance to frame 0 in seconds. The range

depends on the history depth.

Example: INIT:CONT OFF

Stop the continuous sweep. CALC:SGR:FRAM:SEL -25 Selects frame number -25.

Manual operation: See "Select Frame" on page 403

CALCulate<n>:SGRam:HDEPth <History>

CALCulate<n>:SPECtrogram:HDEPth <History>

This command defines the number of frames to be stored in the R&S FPL1000 memory.

Suffix:

<n> irrelevant

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<History> The maximum number of frames depends on the number of

sweep points.

Range: 781 to 20000

Increment: 1 3000 *RST:

Example: CALC:SGR:SPEC 1500

Sets the history depth to 1500.

Manual operation: See "History Depth" on page 480

CALCulate<n>:SGRam:LAYout <State> CALCulate<n>:SPECtrogram:LAYout <State>

This command selects the state and size of spectrograms.

The command is available for result displays that support spectrograms.

Suffix:

Window <n>

Parameters:

ON <State>

Spectrogram and trace diagram share a window.

Only the trace diagram is displayed, the spectrogram is not.

*RST: OFF

Example: CALC4:SPEC:LAY FULL

Shows the spectrogram in window 4. The corresponding trace

diagram is hidden.

CALCulate<n>:SGRam[:STATe] <State> **CALCulate<n>:SPECtrogram[:STATe]** <State>

This command turns the spectrogram on and off.

Parameters:

<State> ON | OFF | 1 | 0

> *RST: 0

CALC:SGR ON

Example:

Activates the Spectrogram result display.

CALCulate<n>:SGRam:TSTamp:DATA? <Frames> CALCulate<n>:SPECtrogram:TSTamp:DATA? <Frames>

This command queries the starting time of the frames.

Setting Basic Spectrum RF Measurement Parameters

The return values consist of four values for each frame. If the Spectrogram is empty, the command returns '0,0,0,0'. The times are given as delta values, which simplifies evaluating relative results; however, you can also calculate the absolute date and time as displayed on the screen.

The frame results themselves are returned with TRAC: DATA? SGR

See TRACe<n>[:DATA] on page 708.

Suffix:

<n> irrelevant

Query parameters:

<Frames> CURRent

Returns the starting time of the current frame.

ALL

Returns the starting time for all frames. The results are sorted in

descending order, beginning with the current frame.

Return values:

<Seconds> Number of seconds that have passed since 01.01.1970 till the

frame start

<Nanoseconds> Number of nanoseconds that have passed in addition to the

<Seconds> since 01.01.1970 till the frame start.

<Reserved> The third and fourth value are reserved for future uses.

Example: CALC:SGR:TST ON

Activates the time stamp.
CALC:SGR:TST:DATA? ALL

Returns the starting times of all frames sorted in a descending

order.

Usage: Query only

Manual operation: See "Time Stamp" on page 481

CALCulate<n>:SGRam:TSTamp[:STATe] <State>
CALCulate<n>:SPECtrogram:TSTamp[:STATe] <State>

This command activates and deactivates the time stamp.

If the time stamp is active, some commands do not address frames as numbers, but as (relative) time values:

- CALCulate<n>:DELTamarker<m>:SPECtrogram:FRAMe on page 741
- CALCulate<n>:MARKer<m>:SPECtrogram:FRAMe on page 736
- CALCulate<n>:SPECtrogram:FRAMe:SELect on page 700

Suffix:

<n> irrelevant

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:SGR:TST ON

Activates the time stamp.

Manual operation: See "Time Stamp" on page 481

Configuring the Color Map

DISPlay[:WINDow <n>]:SGRam:COLor:DEFault</n>	703
DISPlay[:WINDow <n>]:SPECtrogram:COLor:DEFault</n>	703
DISPlay[:WINDow <n>]:SGRam:COLor:LOWer</n>	703
DISPlay[:WINDow <n>]:SPECtrogram:COLor:LOWer</n>	703
DISPlay[:WINDow <n>]:SGRam:COLor:SHAPe</n>	704
DISPlay[:WINDow <n>]:SPECtrogram:COLor:SHAPe</n>	704
DISPlay[:WINDow <n>]:SGRam:COLor:UPPer</n>	704
DISPlay[:WINDow <n>]:SPECtrogram:COLor:UPPer</n>	704
DISPlay[:WINDow <n>]:SGRam:COLor[:STYLe]</n>	704
DISPlay[:WINDow <n>]:SPECtrogram:COLor[:STYLe]</n>	704

DISPlay[:WINDow<n>]:SGRam:COLor:DEFault DISPlay[:WINDow<n>]:SPECtrogram:COLor:DEFault

This command restores the original color map.

Suffix:

<n> Window
Usage: Event

Manual operation: See "Set to Default" on page 483

DISPlay[:WINDow<n>]:SGRam:COLor:LOWer <Percentage>
DISPlay[:WINDow<n>]:SPECtrogram:COLor:LOWer <Percentage>

This command defines the starting point of the color map.

Suffix:

<n> Window

Parameters:

<Percentage> Statistical frequency percentage.

Range: 0 to 66 *RST: 0
Default unit: %

Example: DISP:WIND:SGR:COL:LOW 10

Sets the start of the color map to 10%.

Manual operation: See "Start / Stop " on page 483

Setting Basic Spectrum RF Measurement Parameters

DISPlay[:WINDow<n>]:SGRam:COLor:SHAPe <Shape>
DISPlay[:WINDow<n>]:SPECtrogram:COLor:SHAPe <Shape>

This command defines the shape and focus of the color curve for the spectrogram result display.

Suffix:

<n> Window

Parameters:

<Shape> Shape of the color curve.

Range: -1 to 1 *RST: 0

Manual operation: See "Shape " on page 483

DISPlay[:WINDow<n>]:SGRam:COLor:UPPer <Percentage>
DISPlay[:WINDow<n>]:SPECtrogram:COLor:UPPer <Percentage>

This command defines the end point of the color map.

Suffix:

<n> Window

Parameters:

<Percentage> Statistical frequency percentage.

Range: 0 to 66 *RST: 0 Default unit: %

Example: DISP:WIND:SGR:COL:UPP 95

Sets the start of the color map to 95%.

Manual operation: See "Start / Stop " on page 483

DISPlay[:WINDow<n>]:SGRam:COLor[:STYLe] <ColorScheme>
DISPlay[:WINDow<n>]:SPECtrogram:COLor[:STYLe] <ColorScheme>

This command selects the color scheme.

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<ColorScheme> HOT

Uses a color range from blue to red. Blue colors indicate low lev-

els, red colors indicate high ones.

COLD

Uses a color range from red to blue. Red colors indicate low lev-

els, blue colors indicate high ones.

RADar

Uses a color range from black over green to light turquoise with

shades of green in between.

GRAYscale

Shows the results in shades of gray.

*RST: HOT

Example: DISP:WIND:SPEC:COL GRAY

Changes the color scheme of the spectrogram to black and

white.

Manual operation: See " Hot / Cold / Radar / Grayscale " on page 483

8.8.7.3 Using Trace Mathematics

The following commands control trace mathematics.

CALCulate <n>:MATH[:EXPRession][:DEFine]</n>	705
CALCulate <n>:MATH:MODE</n>	
CALCulate <n>:MATH:POSition</n>	706
CALCulate <n>:MATH:STATe</n>	707

CALCulate<n>:MATH[:EXPRession][:DEFine] <Expression>

This command selects the mathematical expression for trace mathematics.

Before you can use the command, you have to turn trace mathematics on.

Suffix:

<n> Window

Parameters:

<Expression> (TRACE1-TRACE2)

Subtracts trace 2 from trace 1.

(TRACE1-TRACE3)

Subtracts trace 3 from trace 1.

(TRACE1-TRACE4)

Subtracts trace 4 from trace 1.

(TRACE1-TRACE5)

Subtracts trace 5 from trace 1.

(TRACE1-TRACE6)

Subtracts trace 6 from trace 1.

Setting Basic Spectrum RF Measurement Parameters

Example: CALC:MATH:STAT ON

Turns trace mathematics on.

CALC:MATH:EXPR:DEF (TRACE1-TRACE3)

Subtracts trace 3 from trace 1.

Manual operation: See "Trace Math Function" on page 488

CALCulate<n>:MATH:MODE < Mode>

This command selects the way the R&S FPL1000 calculates trace mathematics.

Suffix:

<n> Window

Parameters:

<Mode> For more information on the way each mode works see Trace

Math Mode.

LINear

Linear calculation.

LOGarithmic

Logarithmic calculation.

POWer

Linear power calculation.

*RST: LOGarithmic

Example: CALC:MATH:MODE LIN

Selects linear calculation.

Manual operation: See "Trace Math Mode " on page 489

CALCulate<n>:MATH:POSition < Position>

This command defines the position of the trace resulting from the mathematical operation.

Suffix:

<n> Window

Parameters:

<Position> Vertical position of the trace in % of the height of the diagram

area.

100 PCT corresponds to the upper diagram border.

Range: -100 to 200

*RST: 50
Default unit: PCT

Example: CALC:MATH:POS 100

Moves the trace to the top of the diagram area.

Manual operation: See "Trace Math Position" on page 488

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:MATH:STATe <State>

This command turns the trace mathematics on and off.

Suffix:

<n> Window

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MATH:STAT ON

Turns on trace mathematics.

Manual operation: See "Trace Math Function" on page 488

See "Trace Math Off " on page 488

8.8.7.4 Retrieving Trace Results

This chapter describes how to retrieve data from standard traces.

For spectrograms see also Chapter 8.8.8.6, "Marker Search (Spectrograms)", on page 735.

For details on the format of the retrieved trace data see also Chapter 8.8.7.5, "Formats for Returned Values: ASCII Format and Binary Format", on page 710.



Commands required to export traces (and other result data) are described in Chapter 8.9.5, "Storing Measurement Results", on page 816.

FORMat[:DATA]	707
TRACe <n>[:DATA]</n>	
TRACe <n>[:DATA]:MEMory?</n>	
TRACe <n>I:DATAI:X?</n>	

FORMat[:DATA] <Format>

This command selects the data format that is used for transmission of trace data from the R&S FPL1000 to the controlling computer.

Note that the command has no effect for data that you send to the R&S FPL1000. The R&S FPL1000 automatically recognizes the data it receives, regardless of the format.

For details on data formats see Chapter 8.8.7.5, "Formats for Returned Values: ASCII Format and Binary Format", on page 710.

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<Format> ASCii

ASCii format, separated by commas.

This format is almost always suitable, regardless of the actual data format. However, the data is not as compact as other for-

mats may be.

REAL,32

32-bit floating-point numbers (according to IEEE 754) in the

"definite length block format".

In the Spectrum application, the format setting \mathtt{REAL} is used for

the binary transmission of trace data.

For I/Q data, 8 bytes per sample are returned for this format set-

ting.

*RST: ASCII

Example: FORM REAL, 32

TRACe<n>[:DATA] <Trace>,<Data> TRACe<n>[:DATA]? <ResultType>

This command queries current trace data and measurement results.

The data format depends on FORMat [:DATA].

Suffix:

<n> Window

Parameters:

<Trace> Selects the trace to write the data to.

TRACE1 | ... | TRACE6

<Data> Contains the data to transfer.

Query parameters:

<ResultType> Selects the type of result to be returned.

TRACE1 | ... | TRACE6

Returns the trace data for the corresponding trace.

For details see Table 8-5.

LIST

Returns the results of the peak list evaluation for Spurious Emis-

sion and Spectrum Emission Mask measurements.

For SEM measurements, one peak per range is returned.

For details see Table 8-6.

SPURious

Returns the peak list of Spurious Emission measurements.

SPECtrogram | SGRam

Returns the results of the spectrogram result display.

For details see Table 8-7.

Return values:

<TraceData> For more information see tables below.

Setting Basic Spectrum RF Measurement Parameters

Example: TRAC TRACE1, +A\$

Transfers trace data ('+A\$') to trace 1.

Example: TRAC? TRACE3

Queries the data of trace 3.

Manual operation: See " Diagram " on page 255

See "List Evaluation State (Result Summary)" on page 317

See "List Evaluation State " on page 339

Table 8-5: Return values for TRACE1 to TRACE6 parameter

The trace data consists of a list of power levels that have been measured. The number of power levels in the list depends on the currently selected number of sweep points. The unit depends on the measurement and on the unit you have currently set.

If you are measuring with the auto peak detector, the command returns positive peak values only. (To retrieve negative peak values, define a second trace with a negative peak detector.)

For SEM or Spurious Emission measurement results, the x-values should be queried as well, as they are not equidistant (see TRACe<n>[:DATA]:X? on page 710).

Table 8-6: Return values for LIST parameter

For each peak, the command returns 11 values in the following order:

<No>,<StartFreq>,<StopFreq>,<RBW>,<PeakFreq>,<PowerAbs>,<PowerRel>,<PowerDelta>,<LimitCheck>,<Unused1>,<Unused2>

- <No>: range number
- StartFreq>,<StopFreq>: start and stop frequency of the range
- <RBW>: resolution bandwidth
- <PeakFreq>: frequency of the peak in a range
- <PowerAbs>: absolute power of the peak in dBm
- PowerRel>: power of the peak in relation to the channel power in dBc
- PowerDelta>: distance from the peak to the limit line in dB, positive values indicate a failed limit check
- <LimitCheck>: state of the limit check (0 = PASS, 1 = FAIL)
- <Unused1>,<Unused2>: reserved (0.0)

Table 8-7: Return values for SPECtrogram parameter

For every frame in the spectrogram, the command returns the power levels that have been measured, one for each sweep point. The number of frames depends on the size of the history depth. The power level depends on the unit you have currently set.

TRACe<n>[:DATA]:MEMory? <Trace>, <OffsSwPoint>, <NoOfSwPoints>

This command queries the previously captured trace data for the specified trace from the memory. As an offset and number of sweep points to be retrieved can be specified, the trace data can be retrieved in smaller portions, making the command faster than the TRAC: DATA? command. This is useful if only specific parts of the trace data are of interest.

If no parameters are specified with the command, the entire trace data is retrieved; in this case, the command returns the same results as TRAC: DATA? TRACE1.

For details on the returned values see the TRAC: DATA? <TRACE...> command.

Suffix:

<n> Window

Setting Basic Spectrum RF Measurement Parameters

Query parameters:

<Trace> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6

<OffsSwPoint> The offset in sweep points related to the start of the measure-

ment at which data retrieval is to start.

<NoOfSwPoints> Number of sweep points to be retrieved from the trace.

Example: TRAC:DATA:MEM? TRACE1,25,100

Retrieves 100 sweep points from trace 1, starting at sweep point

25.

Usage: Query only

TRACe<n>[:DATA]:X? <TraceNumber>

This command queries the horizontal trace data for each sweep point in the specified window, for example the frequency in frequency domain or the time in time domain measurements.

This is especially useful for traces with non-equidistant x-values, e.g. for SEM or Spurious Emissions measurements.

Suffix:

<n> Window

Query parameters:

<TraceNumber> Trace number.

TRACE1 | ... | TRACE6

Example: TRAC3:X? TRACE1

Returns the x-values for trace 1 in window 3.

Usage: Query only

8.8.7.5 Formats for Returned Values: ASCII Format and Binary Format

When trace data is retrieved using the TRAC: DATA or TRAC: IQ: DATA command, the data is returned in the format defined using the FORMat[:DATA]. The possible formats are described here.

ASCII Format (FORMat ASCII):

The data is stored as a list of comma-separated values (CSV) of the measured values in floating point format.

Binary Format (FORMat REAL,32):

The data is stored as binary data (Definite Length Block Data according to IEEE 488.2), each measurement value being formatted in 32-Bit IEEE 754 Floating-Point-Format.

The schema of the result string is as follows:

#41024<value1><value2>...<value n> with

Setting Basic Spectrum RF Measurement Parameters

#4	Number of digits (= 4 in the example) of the following number of data bytes
1024	Number of following data bytes (= 1024 in the example)
<value></value>	4-byte floating point value



Reading out data in binary format is quicker than in ASCII format. Thus, binary format is recommended for large amounts of data.

8.8.7.6 Importing and Exporting Traces

FORMat:DEXPort:FORMat	711
FORMat:DEXPort:TRACes	711
FORMat:DIMPort:TRACes	712
MMEMory:LOAD <n>:TRACe</n>	712
MMEMory:STORe <n>:TRACe</n>	712

FORMat:DEXPort:FORMat <FileFormat>

Determines the format of the ASCII file to be imported or exported. Depending on the external program in which the data file was created or will be evaluated, a comma-separated list (CSV) or a plain data format (DAT) file may be required.

Parameters:

<FileFormat> CSV | DAT

*RST: DAT

Example: FORM:DEXP:FORM CSV

Manual operation: See "File Type " on page 113

FORMat:DEXPort:TRACes <Selection>

This command selects the data to be included in a data export file (see MMEMory: STORe<n>: TRACe on page 712).

For details on exporting data see Chapter 7.13.2, "Trace/Data Ex/Import", on page 517.

Parameters:

<Selection> SINGle

Only a single trace is selected for export, namely the one specified by the MMEMory: STORe<n>: TRACe command.

ALL

Selects all active traces and result tables (e.g. Result Summary, marker peak list etc.) in the current application for export to an

The <trace> parameter for the MMEMory: STORe <n>: TRACe command is ignored.

*RST: SINGle

Setting Basic Spectrum RF Measurement Parameters

Manual operation: See "Export all Traces and all Table Results" on page 517

FORMat:DIMPort:TRACes <Selection>

This command selects the data to be included in a data import file (see MMEMory: LOAD<n>: TRACe on page 712).

For details on importing data see Chapter 7.13.3, "How to Import Traces", on page 520.

Parameters:

<Selection> **SINGle**

Only a single trace is selected for import, namely the one speci-

fied by the MMEMory: LOAD<n>: TRACe command.

ALL

Imports several traces at once, overwriting the existing trace data for any active trace in the result display with the same trace number. Data from the import file for currently not active traces

is not imported.

The <trace> parameter for the MMEMory:LOAD<n>:TRACe

command is ignored.

SINGle

See "Import All Traces / Import to Trace "on page 520

See "Import ASCII File to Trace "on page 520

MMEMory:LOAD<n>:TRACe <Trace>, <FileName>

*RST:

This command imports trace data from the specified window to an ASCII file.

Suffix:

<n> Window

Parameters:

Manual operation:

Number of the trace to be stored <Trace>

(This parameter is ignored for FORMat: DIMPort: TRACes

ALL).

<FileName> String containing the path and name of the import file.

MMEMory:STORe<n>:TRACe <Trace>, <FileName>

This command exports trace data from the specified window to an ASCII file.

For details on the file format see Chapter 7.13.6, "Reference: ASCII File Export Format", on page 522.

Suffix:

<n> Window

Setting Basic Spectrum RF Measurement Parameters

Setting parameters:

<Trace> Number of the trace to be stored

(This parameter is ignored if the option "Export all Traces and all Table Results" is activated in the Export configuration settings,

see FORMat: DEXPort: TRACes on page 711).

<FileName> String containing the path and name of the target file.

Example: MMEM:STOR1:TRAC 1, 'C:\TEST.ASC'

Stores trace 1 from window 1 in the file TEST.ASC.

Usage: Setting only

Manual operation: See "Export Trace to ASCII File "on page 112

8.8.7.7 Programming Example: Configuring a Spectrogram

This example demonstrates how to configure a spectrogram for a basic frequency sweep in a remote environment. The spectrogram is displayed in addition to the spectrum display, in a new window. In addition, the usage of special spectrogram markers is demonstrated (see Chapter 8.8.8.6, "Marker Search (Spectrograms)", on page 735).



Basic trace settings are demonstrated in the Chapter 8.6.14, "Programming Example: Performing a Basic Frequency Sweep", on page 636.

```
//----Preparing the Measurement -----
*RST
//Resets the instrument
LAY:ADD? '1', BEL, SGR
//Displays a new window below window 1 and activates spectrogram display.
//The new window name is returned as a result: '2'.
//The spectrogram is updated with each new sweep.
INIT: CONT OFF
//Selects single sweep mode.
//----Configuring the Spectrogram-----
CALC:SGR:CLE
//Clears the displayed spectrogram to start a new one.
CALC:SGR:CONT ON
//Configures a continuous spectrogram for a series of measurements.
//The display is not cleared when a new measurement is started.
CALC:SGR:FRAM:COUN 100
//Sets the number of frames to be recorded per sweep to 100.
CALC:SGR:HDEP 1000
//Sets the number of frames to be stored to 1000 (=10 sweeps)
CALC:SGR:TST ON
//Activates a time stamp for each frame.
//-----Configuring the Color Map-----
DISP:WIND:SGR:COL GRAY
```

Setting Basic Spectrum RF Measurement Parameters

```
//Defines a gray-scaled coloring: low values light gray, high values dark gray.
DISP:WIND:SGR:COL:LOW 30
DISP:WIND:SGR:COL:UPP 70
DISP:WIND:SGR:COL:SHAP 0.8
//Defines a color map for a range that comprises 40% of the measurement range,
//excluding 30% at each end. The colors are not scaled linearly; the light gray
//colors are stretched to distinguish low values better.
//----Performing the Measurement-----
SWE: COUN 10
//Defines 10 sweeps to be performed per measurement.
INIT; *WAI
//Initiates a new measurement and waits until the sweeps have finished.
//The spectrogram is updated with each new sweep.
//----Positioning Markers-----
CALC:MARK:SGR:SAR MEM
//Includes all frames in the memory in the search area
CALC:MARK1:SGR:FRAM -1s
//Sets marker 1 to the frame 1 second after measurement begin. (Note the
//negative value!
CALC:MARK1:MIN
//Sets marker 1 to the minimum level in this frame.
CALC:MARK1:SGR:Y:MIN
//Sets marker 1 to the minimum level for the same frequency the marker is
//currently positioned at in all frames.
CALC:MARK2:SGR:XY:MAX
//Sets marker 2 to the maximum level in the entire spectrogram.
CALC: DELT1: SGR: FRAM 3s
//{
m Sets} the deltamarker 1 to the frame captured 3 seconds after marker 1. By default
//it is set to the peak of that frame and displays the level difference to marker 1.
//Note the positive value!
CALC: DELT1:MIN
//Sets deltamarker 1 to the minimum level in this frame.
CALC:DELT3:SGR:XY:MAX
//Sets deltamarker 3 to the maximum level in the entire spectrogram. By default
//its value is the difference to marker 1. We will change it to refer to marker 2.
CALC:DELT3:MREF 2
//Deltamarker 3 now refers to marker 2, both are positioned on the maximum of the
//spectrogram. Thus, D3=0. We will move deltamarker 3 to the next peak level
//for the same frequency.
CALC: DELT3: SGR: Y: MAX: NEXT
//-----Retrieving Results-----
CALC:MARK1:X?
```

Setting Basic Spectrum RF Measurement Parameters

```
CALC:MARK1:Y?
CALC:MARK1:SGR:FRAM?
//Queries the frequency (x), level (y) and frame values of marker 1.
CALC:MARK2:X?
CALC:MARK2:Y?
CALC:MARK2:SGR:FRAM?
//Queries the frequency (x), level (y) and frame values of marker 2.
CALC: DELT1: X?
CALC: DELT1: Y?
CALC: DELT1: SGR: FRAM?
//Queries the frequency (x), level (y) and frame values of deltamarker 1.
CALC:DELT3:X?
CALC:DELT3:Y?
CALC: DELT3: SGR: FRAM?
//Queries the frequency (x), level (y) and frame values of deltamarker 3.
CALC:SGR:TST:DATA? ALL
//Queries the time stamps of all stored frames.
CALC:SGR:FRAM:SEL -1
//Selects the frame that was captured 1 second after measurement start (Note the
//negative value!). This frame is displayed in the Spectrum window.
TRAC:DATA? SGR
//Retrieves the trace data for the spectrogram. For each frame, the power level
//and frequency at each sweep point are returned.
TRAC:DATA? TRACE1
//Retrieves the trace data for the selected frame only.
```

8.8.8 Working with Markers

The commands required to work with markers and marker functions in a remote environment are described here. The tasks for manual operation are described in Chapter 7.9, "Marker Usage", on page 421.



In the Spectrum application, markers are identical in all windows. Thus, the suffix <n> for the window is generally irrelevant.

Setting Basic Spectrum RF Measurement Parameters

Phase Noise Measurement Marker	751
Band Power Marker	754
n dB Down Marker	
Signal Count Marker	761
Marker Demodulation	
Programming Examples for Using Markers and Marker Functions	
Setting Up Individual Markers	
The following commands define the position of markers in the diagram.	
CALCulate <n>:DELTamarker<m>:AOFF</m></n>	716
CALCulate <n>:DELTamarker<m>:LINK</m></n>	716
CALCulate <n>:DELTamarker<m>:LINK:TO:MARKer<m></m></m></n>	717
CAI Culate <n>:DEI Tamarker<m>:MODE</m></n>	

 CALCulate<n>:DELTamarker<m>:MREF
 718

 CALCulate<n>:DELTamarker<m>:STATe]
 718

 CALCulate<n>:DELTamarker<m>:TRACe
 718

 CALCulate<n>:DELTamarker<m>:X
 719

 CALCulate<n>:MARKer<m>:AOFF
 719

 CALCulate<n>:MARKer<m>:LINK:TO:MARKer<m>
 719

 CALCulate<n>:MARKer<m>:STATe]
 720

 CALCulate<n>:MARKer<m>:TRACe
 720

 CALCulate<n>:MARKer<m>:X
 721

CALCulate<n>:DELTamarker<m>:AOFF

This command turns off all delta markers.

Suffix:

8.8.8.1

<n> Window <m> irrelevant

Example: CALC:DELT:AOFF

Turns off all delta markers.

Usage: Event

CALCulate<n>:DELTamarker<m>:LINK <State>

This command links delta marker <m> to marker 1.

If you change the horizontal position (x-value) of marker 1, delta marker <m> changes its horizontal position to the same value.

Tip: to link any marker to a different marker than marker 1, use the CALCulate<n>: DELTamarker<m>: LINK: TO: MARKer<m> or CALCulate<n>: MARKer<m>: LINK: TO: MARKer<m> commands.

Suffix:

<n> Window

Setting Basic Spectrum RF Measurement Parameters

<m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:DELT2:LINK ON

Manual operation: See "Linking to Another Marker" on page 427

CALCulate<n>:DELTamarker<m>:LINK:TO:MARKer<m> <State>

This command links delta marker <m1> to any active normal marker <m2>.

If you change the horizontal position of marker <m2>, delta marker <m1> changes its horizontal position to the same value.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:DELT4:LINK:TO:MARK2 ON

Links the delta marker 4 to the marker 2.

Manual operation: See "Linking to Another Marker" on page 427

CALCulate<n>:DELTamarker<m>:MODE < Mode>

This command defines whether the position of a delta marker is provided as an absolute value or relative to a reference marker.

Note that when the position of a delta marker is *queried*, the result is always an absolute value (see CALCulate<n>: DELTamarker<m>: X on page 719)!

Suffix:

<n> Window <m> irrelevant

Parameters:

<Mode> ABSolute

Delta marker position in absolute terms.

RELative

Delta marker position in relation to a reference marker.

*RST: RELative

Example: CALC: DELT: MODE ABS

Absolute delta marker position.

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:DELTamarker<m>:MREF <Reference>

This command selects a reference marker for a delta marker other than marker 1.

The reference may be another marker or the fixed reference.

Suffix:

<n> Window <m> Marker

Parameters:

<Reference> FIXed

Selects the fixed reference as the reference.

Example: CALC:DELT3:MREF 2

Specifies that the values of delta marker 3 are relative to marker

2.

Manual operation: See "Reference Marker" on page 426

CALCulate<n>:DELTamarker<m>[:STATe] <State>

This command turns delta markers on and off.

If necessary, the command activates the delta marker first.

No suffix at DELTamarker turns on delta marker 1.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC: DELT2 ON

Turns on delta marker 2.

Manual operation: See "Marker State" on page 426

See " Marker Type " on page 426 See " Select Marker " on page 427

CALCulate<n>:DELTamarker<m>:TRACe <Trace>

This command selects the trace a delta marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

Suffix:

<n> Window <m> Marker

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<Trace> Trace number the marker is assigned to.

Example: CALC:DELT2:TRAC 2

Positions delta marker 2 on trace 2.

CALCulate<n>:DELTamarker<m>:X <Position>

This command moves a delta marker to a particular coordinate on the x-axis.

If necessary, the command activates the delta marker and positions a reference marker to the peak power.

Suffix:

<m> Marker <n> Window

Parameters:

<Position> Numeric value that defines the marker position on the x-axis.

The position is relative to the reference marker.

To select an absolute position you have to change the delta marker mode with CALCulate<n>:DELTamarker<m>:MODE

on page 717.

A query returns the absolute position of the delta marker.

Range: The value range and unit depend on the measure-

ment and scale of the x-axis.

Example: CALC: DELT: X?

Outputs the absolute x-value of delta marker 1.

Manual operation: See " Marker 1 / Marker 2 / Marker 3 / Marker 4 " on page 360

See " Marker 1 / Marker 2 / Marker 3 " on page 365

See "Marker Position X-value" on page 426

CALCulate<n>:MARKer<m>:AOFF

This command turns off all markers.

Suffix:

<n> Window <m> Marker

Example: CALC:MARK:AOFF

Switches off all markers.

Usage: Event

Manual operation: See " All Marker Off " on page 428

CALCulate<n>:MARKer<m>:LINK:TO:MARKer<m> < State>

This command links normal marker <m1> to any active normal marker <m2>.

Setting Basic Spectrum RF Measurement Parameters

If you change the horizontal position of marker <m2>, marker <m1> changes its horizontal position to the same value.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK4:LINK:TO:MARK2 ON

Links marker 4 to marker 2.

Manual operation: See "Linking to Another Marker" on page 427

CALCulate<n>:MARKer<m>[:STATe] <State>

This command turns markers on and off. If the corresponding marker number is currently active as a delta marker, it is turned into a normal marker.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK3 ON

Switches on marker 3.

Manual operation: See "Marker State" on page 426

See " Marker Type " on page 426 See " Select Marker " on page 427

CALCulate<n>:MARKer<m>:TRACe <Trace>

This command selects the trace the marker is positioned on.

Note that the corresponding trace must have a trace mode other than "Blank".

If necessary, the command activates the marker first.

Suffix:

<n> Window <m> Marker

Parameters:

<Trace> 1 to 6

Trace number the marker is assigned to.

Setting Basic Spectrum RF Measurement Parameters

Example: //Assign marker to trace 1

CALC:MARK3:TRAC 2

Manual operation: See "Assigning the Marker to a Trace "on page 427

CALCulate<n>:MARKer<m>:X <Position>

This command moves a marker to a specific coordinate on the x-axis.

If necessary, the command activates the marker.

If the marker has been used as a delta marker, the command turns it into a normal marker.

Suffix:

<m> Marker
<n> Window

Parameters:

<Position> Numeric value that defines the marker position on the x-axis.

The unit depends on the result display.

Range: The range depends on the current x-axis range.

Example: CALC:MARK2:X 1.7MHz

Positions marker 2 to frequency 1.7 MHz.

Manual operation: See "Marker Table " on page 256

See "Marker Peak List" on page 256

See " Marker 1 / Marker 2 / Marker 3 / Marker 4 " on page 360

See "Marker 1 / Marker 2 / Marker 3 " on page 365 See "Marker Position X-value " on page 426

8.8.8.2 General Marker Settings

The following commands control general marker functionality.

Remote commands exclusive to general marker functionality

DISPlay[:WINDow <n>]:MTABle</n>	/21
DISPlay:MINFo[:STATe]	722
CALCulate <n>:MARKer<m>:X:SSIZe</m></n>	722

DISPlay[:WINDow<n>]:MTABle <DisplayMode>

This command turns the marker table on and off.

Suffix:

<n> irrelevant

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<DisplayMode> ON | 1

Turns on the marker table.

OFF | 0

Turns off the marker table.

AUTO

Turns on the marker table if 3 or more markers are active.

*RST: AUTO

Example: DISP:MTAB ON

Activates the marker table.

Manual operation: See "Marker Table Display "on page 428

DISPlay:MINFo[:STATe] < DisplayMode>

This command turns the marker information in all diagrams on and off.

Parameters:

<DisplayMode> ON | 1

Displays the marker information in the diagrams.

OFF | 0

Hides the marker information in the diagrams.

*RST: 1

Example: DISP:MINF OFF

Hides the marker information.

Manual operation: See "Marker Info" on page 429

CALCulate<n>:MARKer<m>:X:SSIZe <StepSize>

This command selects the marker step size mode for all markers in all windows.

The step size defines the distance the marker moves when you move it with the rotary knob.

It therefore takes effect in manual operation only.

Suffix:

<n>, <m> irrelevant

Parameters:

<StepSize> STANdard

the marker moves from one pixel to the next

POINts

the marker moves from one sweep point to the next

*RST: POINts

Example: CALC:MARK:X:SSIZ STAN

Sets the marker step size to one pixel.

Manual operation: See "Marker Stepsize" on page 429

Setting Basic Spectrum RF Measurement Parameters

8.8.8.3 Configuring and Performing a Marker Search

The following commands control the marker search.

CALCulate <n>:MARKer<m>:LOEXclude</m></n>	723
CALCulate <n>:MARKer<m>:PEXCursion</m></n>	723
CALCulate <n>:MARKer<m>:X:SLIMits[:STATe]</m></n>	724
CALCulate <n>:MARKer<m>:X:SLIMits:LEFT</m></n>	
CALCulate <n>:MARKer<m>:X:SLIMits:RIGHt</m></n>	724
CALCulate <n>:MARKer<m>:X:SLIMits:ZOOM[:STATe]</m></n>	725
CALCulate <n>:THReshold</n>	725
CALCulate <n>:THReshold:STATe</n>	726

CALCulate<n>:MARKer<m>:LOEXclude <State>

This command turns the suppression of the local oscillator during automatic marker positioning on and off (for *all* markers in *all* windows).

Suffix:

<n>, <m> irrelevant

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: CALC:MARK:LOEX ON

Manual operation: See "Exclude LO" on page 431

CALCulate<n>:MARKer<m>:PEXCursion < Excursion>

This command defines the peak excursion (for all markers in all windows).

The peak excursion sets the requirements for a peak to be detected during a peak search.

The unit depends on the measurement.

Application/Result display	Unit
Spectrum	dB

Suffix:

<n>, <m> irrelevant

Parameters:

<Excursion> The excursion is the distance to a trace maximum that must be

attained before a new maximum is recognized, or the distance to a trace minimum that must be attained before a new minimum is

recognized

*RST: 6 dB in the Spectrum application and RF displays

Example: CALC:MARK:PEXC 10dB

Defines peak excursion as 10 dB.

Setting Basic Spectrum RF Measurement Parameters

Manual operation: See "Peak Excursion" on page 431

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>

This command turns marker search limits on and off for all markers in all windows.

If you perform a measurement in the time domain, this command limits the range of the trace to be analyzed.

Suffix:

<n>, <m> irrelevant

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK:X:SLIM ON

Switches on search limitation.

Manual operation: See "Search Limits (Left / Right)" on page 288

See " Deactivating All Search Limits " on page 288

See "Limit State" on page 346

CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <SearchLimit>

This command defines the left limit of the marker search range for *all* markers in *all* windows.

If you perform a measurement in the time domain, this command limits the range of the trace to be analyzed.

Suffix:

<n>, <m> irrelevant

Parameters:

<SearchLimit> The value range depends on the frequency range or sweep.

time.

The unit is Hz for frequency domain measurements and s for

time domain measurements.

*RST: left diagram border

Example: CALC:MARK:X:SLIM ON

Switches the search limit function on. CALC:MARK:X:SLIM:LEFT 10MHz

Sets the left limit of the search range to 10 MHz.

Manual operation: See "Search Limits (Left / Right)" on page 288

See "Left Limit / Right Limit " on page 346

CALCulate<n>:MARKer<m>:X:SLIMits:RIGHt <SearchLimit>

This command defines the right limit of the marker search range for *all* markers in *all* windows.

Setting Basic Spectrum RF Measurement Parameters

If you perform a measurement in the time domain, this command limits the range of the trace to be analyzed.

Suffix:

<n>, <m> irrelevant

Parameters:

<Limit> The value range depends on the frequency range or sweep

time.

The unit is Hz for frequency domain measurements and s for

time domain measurements.

*RST: right diagram border

Example: CALC:MARK:X:SLIM ON

Switches the search limit function on. CALC:MARK:X:SLIM:RIGH 20MHz

Sets the right limit of the search range to 20 MHz.

Manual operation: See "Search Limits (Left / Right)" on page 288

See "Left Limit / Right Limit " on page 346

CALCulate<n>:MARKer<m>:X:SLIMits:ZOOM[:STATe] <State>

This command adjusts the marker search range to the zoom area for *all* markers in *all* windows.

Suffix:

<n>, <m> irrelevant

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK:X:SLIM:ZOOM ON

Switches the search limit function on. CALC:MARK:X:SLIM:RIGH 20MHz

Sets the right limit of the search range to 20 MHz.

Manual operation: See "Use Zoom Limits" on page 432

CALCulate<n>:THReshold <Level>

This command defines a threshold level for the marker peak search (for *all* markers in *all* windows).

Suffix:

<n> irrelevant

Parameters:

<Level> Numeric value. The value range and unit are variable.

*RST: -120 dBm

Example: CALC:THR -82DBM

Sets the threshold value to -82 dBm.

Setting Basic Spectrum RF Measurement Parameters

Manual operation: See "Search Threshold" on page 432

CALCulate<n>:THReshold:STATe <State>

This command turns a threshold for the marker peak search on and off (for *all* markers in *all* windows).

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:THR:STAT ON

Switches on the threshold line.

Manual operation: See " Deactivating All Search Limits " on page 288

8.8.8.4 Positioning the Marker

This chapter contains remote commands necessary to position the marker on a trace.

•	Positioning Normal Markers	726
•	Positioning Delta Markers	730

Positioning Normal Markers

The following commands position markers on the trace.

CALCulate <n>:MARKer<m>:MAXimum:AUTO</m></n>	726
CALCulate <n>:MARKer<m>:MAXimum:LEFT</m></n>	727
CALCulate <n>:MARKer<m>:MAXimum:NEXT</m></n>	727
CALCulate <n>:MARKer<m>:MAXimum[:PEAK]</m></n>	727
CALCulate <n>:MARKer<m>:MAXimum:RIGHt</m></n>	728
CALCulate <n>:MARKer<m>:MINimum:AUTO</m></n>	728
CALCulate <n>:MARKer<m>:MINimum:LEFT</m></n>	728
CALCulate <n>:MARKer<m>:MINimum:NEXT</m></n>	729
CALCulate <n>:MARKer<m>:MINimum[:PEAK]</m></n>	729
CALCulate <n>:MARKer<m>:MINimum:RIGHt</m></n>	729

CALCulate<n>:MARKer<m>:MAXimum:AUTO <State>

This command turns an automatic marker peak search for a trace maximum on and off. The R&S FPL1000 performs the peak search after each sweep.

Suffix:

<n> Window <m> Marker

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK:MAX:AUTO ON

Activates the automatic peak search function for marker 1 at the

end of each particular sweep.

Manual operation: See " Auto Max Peak Search / Auto Min Peak Search "

on page 431

CALCulate<n>:MARKer<m>:MAXimum:LEFT

This command moves a marker to the next lower peak.

The search includes only measurement values to the left of the current marker position.

In the spectrogram, the command moves a marker horizontally to the maximum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> Window
<m> Marker
Usage: Event

Manual operation: See "Search Next Peak" on page 436

CALCulate<n>:MARKer<m>:MAXimum:NEXT

This command moves a marker to the next lower peak.

In the spectrogram, the command moves a marker horizontally to the maximum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See "Search Next Peak" on page 436

CALCulate<n>:MARKer<m>:MAXimum[:PEAK]

This command moves a marker to the highest level.

In the spectrogram, the command moves a marker horizontally to the maximum level in the currently selected frame. The vertical marker position remains the same.

If the marker is not yet active, the command first activates the marker.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See "Peak Search" on page 436

CALCulate<n>:MARKer<m>:MAXimum:RIGHt

This command moves a marker to the next lower peak.

The search includes only measurement values to the right of the current marker position.

In the spectrogram, the command moves a marker horizontally to the maximum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See "Search Next Peak" on page 436

CALCulate<n>:MARKer<m>:MINimum:AUTO <State>

This command turns an automatic marker peak search for a trace minimum on and off. The R&S FPL1000 performs the peak search after each sweep.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK:MIN:AUTO ON

Activates the automatic minimum value search function for

marker 1 at the end of each particular sweep.

Manual operation: See " Auto Max Peak Search / Auto Min Peak Search "

on page 431

CALCulate<n>:MARKer<m>:MINimum:LEFT

This command moves a marker to the next minimum value.

The search includes only measurement values to the right of the current marker position.

Setting Basic Spectrum RF Measurement Parameters

In the spectrogram, the command moves a marker horizontally to the minimum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See "Search Next Minimum" on page 437

CALCulate<n>:MARKer<m>:MINimum:NEXT

This command moves a marker to the next minimum value.

In the spectrogram, the command moves a marker horizontally to the minimum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See " Search Next Minimum " on page 437

CALCulate<n>:MARKer<m>:MINimum[:PEAK]

This command moves a marker to the minimum level.

In the spectrogram, the command moves a marker horizontally to the minimum level in the currently selected frame. The vertical marker position remains the same.

If the marker is not yet active, the command first activates the marker.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See "Search Minimum" on page 437

CALCulate<n>:MARKer<m>:MINimum:RIGHt

This command moves a marker to the next minimum value.

The search includes only measurement values to the right of the current marker position.

In the spectrogram, the command moves a marker horizontally to the minimum level in the currently selected frame. The vertical marker position remains the same.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See " Search Next Minimum " on page 437

Positioning Delta Markers

The following commands position delta markers on the trace.

CALCulate <n>:DELTamarker<m>:MAXimum:LEFT</m></n>	730
CALCulate <n>:DELTamarker<m>:MAXimum:NEXT</m></n>	730
CALCulate <n>:DELTamarker<m>:MAXimum[:PEAK]</m></n>	731
CALCulate <n>:DELTamarker<m>:MAXimum:RIGHt</m></n>	731
CALCulate <n>:DELTamarker<m>:MINimum:LEFT</m></n>	731
CALCulate <n>:DELTamarker<m>:MINimum:NEXT</m></n>	732
CALCulate <n>:DELTamarker<m>:MINimum[:PEAK]</m></n>	732
CALCulate <n>:DELTamarker<m>:MINimum:RIGHt</m></n>	

CALCulate<n>:DELTamarker<m>:MAXimum:LEFT

This command moves a delta marker to the next higher value.

The search includes only measurement values to the left of the current marker position.

In the spectrogram, the command moves a marker horizontally to the maximum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See "Search Next Peak" on page 436

CALCulate<n>:DELTamarker<m>:MAXimum:NEXT

This command moves a marker to the next higher value.

In the spectrogram, the command moves a marker horizontally to the maximum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See "Search Next Peak" on page 436

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK]

This command moves a delta marker to the highest level.

In the spectrogram, the command moves a marker horizontally to the maximum level in the currently selected frame. The vertical marker position remains the same.

If the marker is not yet active, the command first activates the marker.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See "Peak Search" on page 436

CALCulate<n>:DELTamarker<m>:MAXimum:RIGHt

This command moves a delta marker to the next higher value.

The search includes only measurement values to the right of the current marker position.

In the spectrogram, the command moves a marker horizontally to the maximum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See "Search Next Peak" on page 436

CALCulate<n>:DELTamarker<m>:MINimum:LEFT

This command moves a delta marker to the next higher minimum value.

The search includes only measurement values to the right of the current marker position.

In the spectrogram, the command moves a marker horizontally to the minimum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See " Search Next Minimum " on page 437

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:DELTamarker<m>:MINimum:NEXT

This command moves a marker to the next higher minimum value.

In the spectrogram, the command moves a marker horizontally to the minimum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> Window</br>
<m> Marker

Usage:
Event

Manual operation: See " Search Next Minimum " on page 437

CALCulate<n>:DELTamarker<m>:MINimum[:PEAK]

This command moves a delta marker to the minimum level.

In the spectrogram, the command moves a marker horizontally to the minimum level in the currently selected frame. The vertical marker position remains the same.

If the marker is not yet active, the command first activates the marker.

Suffix:

<n> Window
<m> Marker
Usage: Event

Manual operation: See "Search Minimum" on page 437

CALCulate<n>:DELTamarker<m>:MINimum:RIGHt

This command moves a delta marker to the next higher minimum value.

The search includes only measurement values to the right of the current marker position.

In the spectrogram, the command moves a marker horizontally to the minimum level in the currently selected frame. The vertical marker position remains the same.

Suffix:

<n> window
<m> Marker
Usage: Event

Manual operation: See " Search Next Minimum " on page 437

8.8.8.5 Retrieving Marker Results

The following commands are used to retrieve the results of markers.

Setting Basic Spectrum RF Measurement Parameters



You can use the marker values to position the center frequency or reference level directly using the following commands:

- CALCulate<n>:MARKer<m>:FUNCtion:CENTer on page 648
- CALCulate<n>:MARKer<m>:FUNCtion:REFerence on page 664

Useful commands for retrieving results described elsewhere:

- CALCulate<n>:DELTamarker<m>:X on page 719
- CALCulate<n>:MARKer<m>:X on page 721
- CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:COUNt? on page 748
- CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:X? on page 750
- CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:Y? on page 750
- CALCulate<n>:MARKer<m>:FUNCtion:NOISe:RESult? on page 751
- CALCulate<n>: DELTamarker<m>: FUNCtion: PNOise: RESult? on page 752
- CALCulate<n>:DELTamarker<m>:FUNCtion:BPOWer:RESult? on page 757
- CALCulate<n>:MARKer<m>:FUNCtion:BPOWer:RESult? on page 755
- CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:RESult? on page 759
- CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency? on page 759
- CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:QFACtor? on page 759
- CALCulate<n>:MARKer<m>:COUNt:FREQuency? on page 762

Remote commands exclusive to retrieving marker results

CALCulate <n>:DELTamarker<m>:X:RELative?</m></n>	733
CALCulate <n>:DELTamarker<m>:Y?</m></n>	734
CAI Culate <n>·MARKer<m>·Y?</m></n>	734

CALCulate<n>:DELTamarker<m>:X:RELative?

This command queries the relative position of a delta marker on the x-axis.

If necessary, the command activates the delta marker first.

Suffix:

<n> Window <m> Marker

Return values:

<Position> Position of the delta marker in relation to the reference marker.

Example: CALC:DELT3:X:REL?

Outputs the frequency of delta marker 3 relative to marker 1 or

relative to the reference position.

Usage: Query only

Setting Basic Spectrum RF Measurement Parameters

Manual operation: See " Marker 1 / Marker 2 / Marker 3 / Marker 4 " on page 360

See " Marker 1 / Marker 2 / Marker 3 " on page 365

CALCulate<n>:DELTamarker<m>:Y?

This command queries the relative position of a delta marker on the y-axis.

If necessary, the command activates the delta marker first.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

The unit depends on the application of the command.

Table 8-8: Base unit

Parameter, measuring function or result display	Output unit
DBM DBPW DBUV DBMV DBUA	dB (lin/log)
WATT VOLT AMPere	dB (lin), % (log)

Suffix:

<m> Marker
<n> Window

Return values:

<Result> Result at the position of the delta marker.

The unit is variable and depends on the one you have currently

set.

Example: INIT: CONT OFF

Switches to single sweep mode.

INIT; *WAI

Starts a sweep and waits for its end.

CALC: DELT2 ON

Switches on delta marker 2.

CALC: DELT2: Y?

Outputs measurement value of delta marker 2.

Usage: Query only

CALCulate<n>:MARKer<m>:Y?

This command queries the position of a marker on the y-axis.

If necessary, the command activates the marker first.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

Setting Basic Spectrum RF Measurement Parameters

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<Result> Result at the marker position.

The unit is variable and depends on the one you have currently

set.

Example: INIT:CONT OFF

Switches to single measurement mode.

CALC: MARK2 ON Switches marker 2. INIT: *WAI

Starts a measurement and waits for the end.

CALC:MARK2:Y?

Outputs the measured value of marker 2.

Usage: Query only

Manual operation: See "Marker Table " on page 256

See "Marker Peak List" on page 256

8.8.8.6 Marker Search (Spectrograms)

The following commands automatically define the marker and delta marker position in the spectrogram.



The usage of these markers is demonstrated in Chapter 8.8.7.7, "Programming Example: Configuring a Spectrogram", on page 713.

Using Markers

The following commands control spectrogram markers.

Useful commands for spectrogram markers described elsewhere

The following commands define the horizontal position of the markers.

- CALCulate<n>:MARKer<m>:MAXimum:LEFT on page 727
- CALCulate<n>:MARKer<m>:MAXimum:NEXT on page 727
- CALCulate<n>:MARKer<m>:MAXimum[:PEAK] on page 727
- CALCulate<n>:MARKer<m>:MAXimum:RIGHt on page 728
- CALCulate<n>:MARKer<m>:MINimum:LEFT on page 728
- CALCulate<n>:MARKer<m>:MINimum:NEXT on page 729
- CALCulate<n>:MARKer<m>:MINimum[:PEAK] on page 729
- CALCulate<n>:MARKer<m>:MINimum:RIGHt on page 729

Setting Basic Spectrum RF Measurement Parameters

Remote commands exclusive to spectrogram markers

CALCulate <n>:MARKer<m>:SGRam:FRAMe</m></n>	736
CALCulate <n>:MARKer<m>:SPECtrogram:FRAMe</m></n>	736
CALCulate <n>:MARKer<m>:SGRam:SARea</m></n>	737
CALCulate <n>:MARKer<m>:SPECtrogram:SARea</m></n>	737
CALCulate <n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]</m></n>	737
CALCulate <n>:MARKer<m>:SPECtrogram:XY:MAXimum[:PEAK]</m></n>	737
CALCulate <n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]</m></n>	
CALCulate <n>:MARKer<m>:SPECtrogram:XY:MINimum[:PEAK]</m></n>	
CALCulate <n>:MARKer<m>:SGRam:Y:MAXimum:ABOVe</m></n>	
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MAXimum:ABOVe</m></n>	
CALCulate <n>:MARKer<m>:SGRam:Y:MAXimum:BELow</m></n>	
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MAXimum:BELow</m></n>	
CALCulate <n>:MARKer<m>:SGRam:Y:MAXimum:NEXT</m></n>	
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MAXimum:NEXT</m></n>	738
CALCulate <n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]</m></n>	
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MAXimum[:PEAK]</m></n>	
CALCulate <n>:MARKer<m>:SGRam:Y:MINimum:ABOVe</m></n>	
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MINimum:ABOVe</m></n>	739
CALCulate <n>:MARKer<m>:SGRam:Y:MINimum:BELow</m></n>	
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MINimum:BELow</m></n>	739
CALCulate <n>:MARKer<m>:SGRam:Y:MINimum:NEXT</m></n>	
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MINimum:NEXT</m></n>	
CALCulate <n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]</m></n>	
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MINimum[:PEAK]</m></n>	
G L J	

CALCulate<n>:MARKer<m>:SGRam:FRAMe <Frame> | <Time> CALCulate<n>:MARKer<m>:SPECtrogram:FRAMe <Frame> | <Time>

This command positions a marker on a particular frame.

Suffix:

<n> Window <m> Marker

Parameters:

<Frame> Selects a frame directly by the frame number. Valid if the time

stamp is off.

The range depends on the history depth.

<Time> Selects a frame via its time stamp. Valid if the time stamp is on.

The number is the (negative) distance to frame 0 in seconds.

The range depends on the history depth.

Example: CALC:MARK:SGR:FRAM -20

Sets the marker on the 20th frame before the present.

CALC:MARK2:SGR:FRAM -2s

Sets second marker on the frame 2 seconds ago.

Manual operation: See "Frame (Spectrogram only)" on page 426

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:MARKer<m>:SGRam:SARea <SearchArea>
CALCulate<n>:MARKer<m>:SPECtrogram:SARea <SearchArea>

This command defines the marker search area for all spectrogram markers in the channel setup.

Suffix:

<n>, <m> irrelevant

Parameters:

<SearchArea> VISible

Performs a search within the visible frames.

Note that the command does not work if the spectrogram is not

visible for any reason (e.g. if the display update is off).

MEMory

Performs a search within all frames in the memory.

*RST: VISible

Manual operation: See "Marker Search Area" on page 434

CALCulate<n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]
CALCulate<n>:MARKer<m>:SPECtrogram:XY:MAXimum[:PEAK]

This command moves a marker to the highest level of the spectrogram.

Suffix:

<n> window
<m> Marker

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]
CALCulate<n>:MARKer<m>:SPECtrogram:XY:MINimum[:PEAK]

This command moves a marker to the minimum level of the spectrogram.

Suffix:

<n> Window <m> Marker Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:ABOVe CALCulate<n>:MARKer<m>:SPECtrogram:Y:MAXimum:ABOVe

This command moves a marker vertically to the next lower peak level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See " Search Mode for Next Peak in Y-Direction " on page 433

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:BELow CALCulate<n>:MARKer<m>:SPECtrogram:Y:MAXimum:BELow

This command moves a marker vertically to the next lower peak level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See " Search Mode for Next Peak in Y-Direction " on page 433

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum:NEXT CALCulate<n>:MARKer<m>:SPECtrogram:Y:MAXimum:NEXT

This command moves a marker vertically to the next lower peak level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See " Search Mode for Next Peak in Y-Direction " on page 433

CALCulate<n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK] CALCulate<n>:MARKer<m>:SPECtrogram:Y:MAXimum[:PEAK]

This command moves a marker vertically to the highest level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command looks for the peak level in the whole spectrogram.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> Window

<m> Marker

Usage: Event

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:ABOVe CALCulate<n>:MARKer<m>:SPECtrogram:Y:MINimum:ABOVe

This command moves a marker vertically to the next higher minimum level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> window
<m> Marker
Usage: Event

Manual operation: See " Search Mode for Next Peak in Y-Direction " on page 433

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:BELow CALCulate<n>:MARKer<m>:SPECtrogram:Y:MINimum:BELow

This command moves a marker vertically to the next higher minimum level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See " Search Mode for Next Peak in Y-Direction " on page 433

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum:NEXT CALCulate<n>:MARKer<m>:SPECtrogram:Y:MINimum:NEXT

This command moves a marker vertically to the next higher minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> Window <m> Marker

Setting Basic Spectrum RF Measurement Parameters

Usage: Event

Manual operation: See " Search Mode for Next Peak in Y-Direction " on page 433

CALCulate<n>:MARKer<m>:SGRam:Y:MINimum[:PEAK] CALCulate<n>:MARKer<m>:SPECtrogram:Y:MINimum[:PEAK]

This command moves a marker vertically to the minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command first looks for the peak level for all frequencies and moves the marker vertically to the minimum level.

Suffix:

<n> Window <m> Marker Usage: Event

Using Delta Markers

The following commands control spectrogram delta markers.

Useful commands for spectrogram markers described elsewhere

The following commands define the horizontal position of the delta markers.

- CALCulate<n>:DELTamarker<m>:MAXimum:LEFT on page 730
- CALCulate<n>:DELTamarker<m>:MAXimum:NEXT on page 730
- CALCulate<n>:DELTamarker<m>:MAXimum[:PEAK] on page 731
- CALCulate<n>:DELTamarker<m>:MAXimum:RIGHt on page 731
- CALCulate<n>:DELTamarker<m>:MINimum:LEFT on page 731
- CALCulate<n>:DELTamarker<m>:MINimum:NEXT on page 732
- CALCulate<n>:DELTamarker<m>:MINimum[:PEAK] on page 732
- CALCulate<n>:DELTamarker<m>:MINimum:RIGHt on page 732

Remote commands exclusive to spectrogram markers

CALGUIATE <n>:DELTAMARKEI<m>:5GRAM:FRANIE</m></n>	/ 4
CALCulate <n>:DELTamarker<m>:SPECtrogram:FRAMe</m></n>	741
CALCulate <n>:DELTamarker<m>:SGRam:SARea</m></n>	741
CALCulate <n>:DELTamarker<m>:SPECtrogram:SARea</m></n>	741
CALCulate <n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK]</m></n>	742
CALCulate <n>:DELTamarker<m>:SPECtrogram:XY:MAXimum[:PEAK]</m></n>	742
CALCulate <n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK]</m></n>	742
CALCulate <n>:DELTamarker<m>:SPECtrogram:XY:MINimum[:PEAK]</m></n>	742
CALCulate <n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVe</m></n>	742
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:ABOVe</m></n>	742

Setting Basic Spectrum RF Measurement Parameters

CALCulate <n>:DELTamarker<m>:SGRam:Y:MAXimum:BELow</m></n>	743
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:BELow</m></n>	743
CALCulate <n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT</m></n>	743
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:NEXT</m></n>	743
CALCulate <n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK]</m></n>	743
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MAXimum[:PEAK]</m></n>	743
CALCulate <n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVe</m></n>	744
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MINimum:ABOVe</m></n>	744
CALCulate <n>:DELTamarker<m>:SGRam:Y:MINimum:BELow</m></n>	744
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MINimum:BELow</m></n>	744
CALCulate <n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT</m></n>	
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MINimum:NEXT</m></n>	
CALCulate <n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK]</m></n>	745
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MINimum[:PEAK]</m></n>	

CALCulate<n>:DELTamarker<m>:SGRam:FRAMe <Frame> | <Time> CALCulate<n>:DELTamarker<m>:SPECtrogram:FRAMe <Frame> | <Time>

This command positions a delta marker on a particular frame. The frame is relative to the position of marker 1.

The command is available for the spectrogram.

Suffix:

<n> Window <m> Marker

Parameters:

<Frame> Selects a frame directly by the frame number. Valid if the time

stamp is off.

The range depends on the history depth.

<Time> Selects a frame via its time stamp. Valid if the time stamp is on.

The number is the distance to frame 0 in seconds. The range

depends on the history depth.

Example: CALC:DELT4:SGR:FRAM -20

Sets fourth deltamarker 20 frames below marker 1.

CALC:DELT4:SGR:FRAM 2 s

Sets fourth deltamarker 2 seconds above the position of marker

1.

Manual operation: See "Frame (Spectrogram only)" on page 426

CALCulate<n>:DELTamarker<m>:SGRam:SARea <SearchArea>
CALCulate<n>:DELTamarker<m>:SPECtrogram:SARea <SearchArea>

This command defines the marker search area for *all* spectrogram markers in the channel setup.

Suffix:

<n>, <m> irrelevant

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<SearchArea> VISible

Performs a search within the visible frames.

Note that the command does not work if the spectrogram is not

visible for any reason (e.g. if the display update is off).

MEMory

Performs a search within all frames in the memory.

*RST: VISible

Manual operation: See "Marker Search Area" on page 434

CALCulate<n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK] CALCulate<n>:DELTamarker<m>:SPECtrogram:XY:MAXimum[:PEAK]

This command moves a marker to the highest level of the spectrogram over all frequencies.

Suffix:

<n> Window <m> Marker Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK] CALCulate<n>:DELTamarker<m>:SPECtrogram:XY:MINimum[:PEAK]

This command moves a delta marker to the minimum level of the spectrogram over all frequencies.

Suffix:

<n> Window <m> Marker Usage: Event

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVe CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:ABOVe

This command moves a marker vertically to the next higher level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> Window <m> Marker Usage: Event

Manual operation: See " Search Mode for Next Peak in Y-Direction " on page 433

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:BELow CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:BELow

This command moves a marker vertically to the next higher level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> window
<m> Marker
Usage: Event

Manual operation: See "Search Mode for Next Peak in Y-Direction "on page 433

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:NEXT

This command moves a delta marker vertically to the next higher level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> Window
<m> Marker
Usage: Event

Manual operation: See " Search Mode for Next Peak in Y-Direction " on page 433

CALCulate<n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK] CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MAXimum[:PEAK]

This command moves a delta marker vertically to the highest level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command looks for the peak level in the whole spectrogram.

Suffix:

<n> Window <m> Marker Usage: Event

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVe CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MINimum:ABOVe

This command moves a delta marker vertically to the next minimum level for the current frequency.

The search includes only frames above the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> window
<m> Marker
Usage: Event

Manual operation: See "Search Mode for Next Peak in Y-Direction "on page 433

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:BELow CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MINimum:BELow

This command moves a delta marker vertically to the next minimum level for the current frequency.

The search includes only frames below the current marker position. It does not change the horizontal position of the marker.

Suffix:

<n> Window

<m> Marker

Usage: Event

Manual operation: See " Search Mode for Next Peak in Y-Direction " on page 433

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MINimum:NEXT

This command moves a delta marker vertically to the next minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

Suffix:

<n> window
<m> Marker

Usage: Event

Manual operation: See " Search Mode for Next Peak in Y-Direction " on page 433

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK] CALCulate<n>:DELTamarker<m>:SPECtrogram:Y:MINimum[:PEAK]

This command moves a delta marker vertically to the minimum level for the current frequency.

The search includes all frames. It does not change the horizontal position of the marker.

If the marker hasn't been active yet, the command first looks for the peak level in the whole spectrogram and moves the marker vertically to the minimum level.

Suffix:

<n> Window <m> Marker Usage: Event

8.8.8.7 Fixed Reference Marker Settings

The following commands configure a fixed reference marker.

CALCulate <n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[:PEAK]</m></n>	745
CALCulate <n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X</m></n>	745
CALCulate <n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y</m></n>	746
CALCulate <n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y:OFFSet</m></n>	746
CALCulate <n>:DELTamarker<m>:FUNCtion:FIXed[:STATe]</m></n>	746

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[:PEAK]

This command moves the fixed reference marker to the peak power.

Suffix:

<n> Window <m> Marker

Example: CALC:DELT:FUNC:FIX:RPO:MAX

Sets the reference point level for delta markers to the peak of

the selected trace.

Usage: Event

Manual operation: See "Defining a Fixed Reference" on page 429

See " Defining Reference Point " on page 445

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X <RefPoint>

This command defines the horizontal position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

Suffix:

<n> Window <m> Marker

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<RefPoint> Numeric value that defines the horizontal position of the refer-

ence.

For frequency domain measurements, it is a frequency in Hz. For time domain measurements, it is a point in time in s.

*RST: Fixed Reference: OFF

Example: CALC:DELT:FUNC:FIX:RPO:X 128 MHz

Sets the frequency reference to 128 MHz.

Manual operation: See "Defining a Fixed Reference" on page 429

See " Defining Reference Point " on page 445

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y <RefPointLevel>

This command defines the vertical position of the fixed delta marker reference point. The coordinates of the reference may be anywhere in the diagram.

Suffix:

<n> Window <m> Marker

Parameters:

<RefPoint> Numeric value that defines the vertical position of the reference.

The unit and value range is variable.

*RST: Fixed Reference: OFF

Example: CALC:DELT:FUNC:FIX:RPO:Y -10dBm

Sets the reference point level for delta markers to -10 dBm.

Manual operation: See "Defining a Fixed Reference" on page 429

See " Defining Reference Point " on page 445

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y:OFFSet <Offset>

This command defines a level offset for the fixed delta marker reference point.

Suffix:

<m>

<n> Window

Parameters:

<Offset> Numeric value

*RST: 0
Default unit: dB

Marker

CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed[:STATe] <State>

This command activates or deactivates a marker that defines a fixed reference point for relative marker analysis.

Setting Basic Spectrum RF Measurement Parameters

If necessary, the command activates a marker and positions it on the peak power.

Subsequently, you can change the coordinates of the fixed reference independent of the marker. The fixed reference is independent of the trace and is applied to all active delta markers.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:DELT:FUNC:FIX ON

Switches on the measurement with fixed reference value for all

delta markers.

CALC: DELT: FUNC: FIX: RPO: X 128 MHZ

Sets the frequency reference to 128 MHz.

CALC: DELT: FUNC: FIX: RPO: Y 30 DBM

Sets the reference level to +30 dBm.

Manual operation: See "Defining a Fixed Reference" on page 429

8.8.8.8 Marker Peak Lists

Useful commands for peak lists described elsewhere

- CALCulate<n>:MARKer<m>:PEXCursion on page 723
- MMEMory:STORe<n>:PEAK on page 817
- Chapter 8.8.8.3, "Configuring and Performing a Marker Search", on page 723

Remote commands exclusive to peak lists

CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:ANNotation:LABel[:STATe]</m></n>	747
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:COUNt?</m></n>	748
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks[:IMMediate]</m></n>	748
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE</m></n>	749
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:SORT</m></n>	749
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:STATe</m></n>	749
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:X?</m></n>	750
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:Y?</m></n>	750

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:ANNotation:LABel[:STATe] <State>

This command turns labels for peaks found during a peak search on and off.

The labels correspond to the marker number in the marker peak list.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> Window

<m> Marker

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: CALC:MARK:FUNC:FPE:ANN:LAB:STAT OFF

Removes the peak labels from the diagram

Manual operation: See "Display Marker Numbers" on page 456

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:COUNt?

This command queries the number of peaks that have been found during a peak search.

The actual number of peaks that have been found may differ from the number of peaks you have set to be found because of the peak excursion.

Suffix:

<n>, <m> irrelevant

Return values: <NumberOfPeaks>

Example: CALC:MARK:FUNC:FPE:COUN?

Queries the number of peaks.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks[:IMMediate] <Peaks>

This command initiates a peak search.

Suffix:

<n> Window <m> Marker

Parameters:

<Peaks> This parameter defines the number of peaks to find during the

search.

Note that the actual number of peaks found during the search also depends on the peak excursion you have set with

CALCulate<n>:MARKer<m>:PEXCursion.

D------ 4 t- 000

Range: 1 to 200

Example: CALC:MARK:PEXC 5

Defines a peak excursion of 5 dB, i.e. peaks must be at least 5

dB apart to be detected as a peak.

CALC:MARK:FUNC:FPE 10

Initiates a search for 10 peaks on the current trace.

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE < MaxNoPeaks>

This command defines the maximum number of peaks that the R&S FPL1000 looks for during a peak search.

Suffix:

<n> Window <m> Marker

Parameters:

<MaxNoPeaks> Maximum number of peaks to be determined.

Range: 1 to 200 *RST: 50

Example: CALC:MARK:FUNC:FPE:LIST:SIZE 10

The marker peak list will contain a maximum of 10 peaks.

Manual operation: See " Maximum Number of Peaks " on page 456

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:SORT <SortMode>

This command selects the order in which the results of a peak search are returned.

Suffix:

<n> Window <m> Marker

Parameters:

<SortMode> X

Sorts the peaks according to increasing position on the x-axis.

Y

Sorts the peaks according to decreasing position on the y-axis.

*RST: X

Example: CALC:MARK:FUNC:FPE:SORT Y

Sets the sort mode to decreasing y values

Manual operation: See " Sort Mode " on page 456

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:STATe <State>

This command turns a peak search on and off.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Setting Basic Spectrum RF Measurement Parameters

Example: CALC:MARK:FUNC:FPE:STAT ON

Activates marker peak search

Manual operation: See "Peak List State " on page 456

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:X?

This command gueries the position of the peaks on the x-axis.

The order depends on the sort order that has been set with CALCulate<n>: MARKer<m>: FUNCtion: FPEaks: SORT.

Suffix:

<n>, <m> irrelevant

Return values:

<PeakPosition> Position of the peaks on the x-axis. The unit depends on the

measurement.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:FPEaks:Y?

This command queries the position of the peaks on the y-axis.

The order depends on the sort order that has been set with CALCulate<n>: MARKer<m>: FUNCtion: FPEaks: SORT.

Suffix:

<n>, <m> irrelevant

Return values:

<PeakPosition> Position of the peaks on the y-axis. The unit depends on the

measurement.

Usage: Query only

8.8.8.9 Noise Measurement Marker

The following commands control the noise measurement marker function.

CALCulate <n>:MARKer<m>:FUNCtion:NOISe:AOFF</m></n>	750
CALCulate <n>:MARKer<m>:FUNCtion:NOISe:RESult?</m></n>	751
CALCulate <n>:MARKer<m>:FUNCtion:NOISe[:STATe]</m></n>	751

CALCulate<n>:MARKer<m>:FUNCtion:NOISe:AOFF

Removes all noise markers in the specified window.

Suffix:

<n> Window <m> irrelevant

Example: CALC:MARK:FUNC:NOIS:AOFF

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:MARKer<m>:FUNCtion:NOISe:RESult?

This command queries the result of the noise measurement.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Return values:

<NoiseLevel> Current noise level. The unit is the one currently active.

Example: INIT:CONT OFF

Switches to single sweep mode.

CALC: MARK2 ON Switches on marker 2.

CALC:MARK2:FUNC:NOIS ON

Switches on noise measurement for marker 2.

INIT; *WAI

Starts a sweep and waits for the end. CALC: MARK2: FUNC: NOIS: RES?

Outputs the noise result of marker 2.

Usage: Query only

Manual operation: See "Noise Measurement State " on page 442

CALCulate<n>:MARKer<m>:FUNCtion:NOISe[:STATe] <State>

This command turns the noise measurement at the marker position on and off.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK:FUNC:NOIS ON

Switches on the noise measurement.

Manual operation: See " Noise Measurement State " on page 442

See "Switching All Noise Measurement Off" on page 442

8.8.8.10 Phase Noise Measurement Marker

The following commands control the phase noise measurement marker function.

Setting Basic Spectrum RF Measurement Parameters

Useful commands for phase noise markers described elsewhere

- CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[: PEAK]
- CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X
- CALCulate<n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y

Remote commands exclusive to phase noise markers

CALCulate <n>:MARKer<m>:FUNCtion:PNOise:AOFF</m></n>	752
CALCulate <n>:DELTamarker<m>:FUNCtion:PNOise:AUTO</m></n>	
CALCulate <n>:DELTamarker<m>:FUNCtion:PNOise:RESult?</m></n>	752
CALCulate <n>:DELTamarker<m>:FUNCtion:PNOise[:STATe]</m></n>	753
CALCulate <n>:MARKer<m>:FUNCtion:PNOise:RESult?</m></n>	753
CALCulate <n>:MARKer<m>:FUNCtion:PNOise[:STATe]</m></n>	754

CALCulate<n>:MARKer<m>:FUNCtion:PNOise:AOFF

Removes all phase noise markers in the specified window.

Suffix:

<n> Window <m> irrelevant

Example: CALC:MARK:FUNC:PNO:AOFF

CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise:AUTO <State>

This command turns an automatic peak search for the fixed reference marker at the end of a sweep on and off.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:DELT:FUNC:PNO:AUTO ON

Activates an automatic peak search for the reference marker in

a phase-noise measurement.

Manual operation: See " Defining Reference Point " on page 445

CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise:RESult?

This command queries the result of a phase noise measurement.

If necessary, the command activates the measurement first.

This command is only available in the Spectrum application.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

Window <n>

<m> Marker

Return values:

<PhaseNoise> numeric value

> The difference in level between the reference point and the noise power density at the position of the specified delta marker.

CALC: DELT2: FUNC: PNO: RES? **Example:**

Outputs the result of phase-noise measurement of the delta-

marker 2.

Usage: Query only

Manual operation: See "Phase Noise Measurement State" on page 444

CALCulate<n>:DELTamarker<m>:FUNCtion:PNOise[:STATe] <State>

This command turns the phase noise measurement at the delta marker position on and

The reference marker for phase noise measurements is either a normal marker or a fixed reference. If necessary, the command turns on the reference marker.

The correction values for the bandwidth and the log amplifier are taken into account in the measurement.

Suffix:

Window <n>

<m> Marker

Parameters:

<State> ON | OFF | 1 | 0

> *RST: 0

Example: CALC: DELT: FUNC: PNO ON

Switches on the phase-noise measurement with all delta mark-

CALC: DELT: FUNC: FIX: RPO: X 128 MHZ Sets the frequency reference to 128 MHz. CALC:DELT:FUNC:FIX:RPO:Y 30 DBM Sets the reference level to +30 dBm

Manual operation: See "Phase Noise Measurement State" on page 444

See " Switching All Phase Noise Measurements Off "

on page 445

CALCulate<n>:MARKer<m>:FUNCtion:PNOise:RESult?

This command queries the result of a phase noise measurement.

If necessary, the command activates the measurement first.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> Window <m> Marker

Return values:

<PhaseNoise> numeric value

The difference between the measured carrier power and the noise power at the position of the specified (normal) marker.

Example: CALC:MARK2:FUNC:PNO:RES?

Outputs the result of phase-noise measurement of the marker 2.

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:PNOise[:STATe] <State>

This command turns the phase noise measurement at the marker position on and off.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK2:FUNC:PNO ON

Switches on the phase-noise measurement for the marker 2.

8.8.8.11 Band Power Marker

The following commands control the marker for band power measurements.

Using Markers

	CALCulate <n>:MARKer<m>:FUNCtion:BPOWer:AOFF</m></n>
755	CALCulate <n>:MARKer<m>:FUNCtion:BPOWer:MODE</m></n>
755	CALCulate <n>:MARKer<m>:FUNCtion:BPOWer:RESult?</m></n>
755	CALCulate <n>:MARKer<m>:FUNCtion:BPOWer:SPAN</m></n>
756	CALCulate <n>:MARKer<m>:FUNCtion:BPOWer[:STATe]</m></n>

CALCulate<n>:MARKer<m>:FUNCtion:BPOWer:AOFF

Removes all band power markers in the specified window.

Suffix:

<n> Window <m> irrelevant

Example: CALC:MARK:FUNC:BPOW:AOFF

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:MARKer<m>:FUNCtion:BPOWer:MODE < Mode>

This command selects the way the results for a band power marker are displayed.

(Note: relative power results are only available for delta markers, see CALCulate<n>: DELTamarker<m>: FUNCtion: BPOWer: MODE on page 756.

Suffix:

<n> Window <m> Marker

Parameters:

<Mode> POWer

Result is displayed as an absolute power. The power unit depends on the CALCulate<n>:UNIT:POWer setting.

setting. **DENSity**

Result is displayed as a density in dBm/Hz.

*RST: POWer

Example: CALC:MARK4:FUNC:BPOW:MODE DENS

Configures marker 4 to show the measurement results in

dBm/Hz.

Manual operation: See "Power Mode" on page 451

CALCulate<n>:MARKer<m>:FUNCtion:BPOWer:RESult?

This command queries the results of the band power measurement.

Suffix:

<n> Window <m> Marker

Return values:

<Power> Signal power over the marker bandwidth.

Example: Activate the band power marker:

CALC:MARK:FUNC:BPOW:STAT ON
Select the density mode for the result:
CALC:MARK:FUNC:BPOW:MODE DENS

Query the result:

CALC:MARK:FUNC:BPOW:RES?

Response: 20dBm/Hz

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:BPOWer:SPAN

This command defines the bandwidth around the marker position.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> Window <m> Marker

Parameters:

 Frequency. The maximum span depends on the marker position

and R&S FPL1000 model.

*RST: 5% of current span

Default unit: Hz

Example: CALC:MARK:FUNC:BPOW:SPAN 2MHz

Measures the band power over 2 MHz around the marker.

Manual operation: See "Span" on page 450

CALCulate<n>:MARKer<m>:FUNCtion:BPOWer[:STATe] <State>

This command turns markers for band power measurements on and off.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK4:FUNC:BPOW:STAT ON

Activates or turns marker 4 into a band power marker.

Manual operation: See "Band Power Measurement State" on page 450

See " Switching All Band Power Measurements Off "

on page 451

Using Delta Markers

CALCulate <n>:DELTamarker<m>:FUNCtion:BPOWer:MODE</m></n>	756
CALCulate <n>:DELTamarker<m>:FUNCtion:BPOWer:RESult?</m></n>	757
CALCulate <n>:DELTamarker<m>:FUNCtion:BPOWer:SPAN</m></n>	757
CAL Culate <n>:DELTamarker<m>:EUNCtion:BPOWer[:STATe]</m></n>	758

CALCulate<n>:DELTamarker<m>:FUNCtion:BPOWer:MODE < Mode>

This command selects the way the results for a band power delta marker are displayed.

Suffix:

<n> Window <m> Marker

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<Mode> POWer

Result is displayed as an absolute power. The power unit depends on the CALCulate<n>:UNIT:POWer setting.

DENSity

Result is displayed as a density in dBm/Hz.

RPOWer

This setting is only available for a delta band power marker. The result is the difference between the absolute power in the band around the delta marker and the absolute power for the reference marker. The powers are subtracted logarithmically, so the result is a dB value.

[Relative band power (Delta2) in dB] = [absolute band power (Delta2) in dBm] - [absolute (band) power of reference marker in

dBm]

For details see "Relative band power markers" on page 448.

*RST: POWer

Manual operation: See "Power Mode" on page 451

CALCulate<n>:DELTamarker<m>:FUNCtion:BPOWer:RESult?

This command queries the results of the band power measurement.

Suffix:

<n> Window <m> Marker

Return values:

<Power> Signal power over the delta marker bandwidth.

Usage: Query only

CALCulate<n>:DELTamarker<m>:FUNCtion:BPOWer:SPAN

This command defines the bandwidth around the delta marker position.

Suffix:

<n> Window <m> Marker

Parameters:

 Frequency. The maximum span depends on the marker position

and R&S FPL1000 model.

*RST: 5% of current span

Default unit: Hz

Manual operation: See "Span" on page 450

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:DELTamarker<m>:FUNCtion:BPOWer[:STATe] <State>

This command turns delta markers for band power measurements on and off.

If neccessary, the command also turns on a reference marker.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Band Power Measurement State" on page 450

See " Switching All Band Power Measurements Off "

on page 451

8.8.8.12 n dB Down Marker

The following commands control the n dB down markers.

CALCulate <n>:MARKer<m>:FUNCtion:NDBDown</m></n>	758
CALCulate <n>:MARKer<m>:FUNCtion:NDBDown:FREQuency?</m></n>	759
CALCulate <n>:MARKer<m>:FUNCtion:NDBDown:QFACtor?</m></n>	759
CALCulate <n>:MARKer<m>:FUNCtion:NDBDown:RESult?</m></n>	759
CALCulate <n>:MARKer<m>:FUNCtion:NDBDown:STATe</m></n>	760
CALCulate <n>:MARKer<m>:FUNCtion:NDBDown:TIME?</m></n>	760

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown < Distance>

This command defines the distance of the n dB down markers to the reference marker.

Suffix:

<n> Window <m> Marker

Parameters:

<Distance> Distance of the temporary markers to the reference marker in

dB.

For a positive offset, the markers T1 and T2 are placed below

the active reference point.

For a negative offset (for example for notch filter measurements), the markers T1 and T2 are placed *above* the active ref-

erence point.

*RST: 6dB

Example: CALC:MARK:FUNC:NDBD 3dB

Sets the distance to the reference marker to 3 dB.

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:FREQuency?

This command queries the position of the n dB down markers on the x-axis when measuring in the frequency domain.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n>, <m> irrelevant

Return values:

<Frequency> <frequency 1>

absolute frequency of the n dB marker to the left of the reference

marker in Hz <frequency 2>

absolute frequency of the n dB marker to the right of the refer-

ence marker in Hz.

Example: INIT:CONT OFF

Switches to single sweep mode.

CALC: MARK: FUNC: NDBD ON

Switches on the n dB down function.

INIT; *WAI

Starts a sweep and waits for the end. CALC:MARK:FUNC:NDBD:FREQ?

This command would return, for example, 100000000, 200000000, meaning that the first marker position is at 100

MHz, the second marker position is at 200 MHz

Usage: Query only

Manual operation: See "n dB down Value" on page 447

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:QFACtor?

This command queries the Q factor of n dB down measurements.

Suffix:

<n>, <m> irrelevant

Return values: <QFactor>

Usage: Query only

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:RESult?

This command queries the distance of the n dB down markers from each other.

Setting Basic Spectrum RF Measurement Parameters

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n>, <m> irrelevant

Return values:

<Distance> The result depends on the span.

In case of frequency domain measurements, the command returns the bandwidth between the two n dB down markers in

Hz.

In case of time domain measurements, the command returns the pulse width between the two n dB down markers in seconds.

Example: INIT:CONT OFF

Switches to single sweep mode.

CALC: MARK: FUNC: NDBD ON

Switches on the n dB down function.

INIT; *WAI

Starts a sweep and waits for the end. CALC: MARK: FUNC: NDBD: RES?

Outputs the measured value.

Usage: Query only

Manual operation: See " n dB down Marker State " on page 447

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:STATe <State>

This command turns the n dB Down marker function on and off.

Suffix:

<n>, <m> irrelevant

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK:FUNC:NDBD:STAT ON

Turns the n dB Down marker on.

Manual operation: See " n dB down Marker State " on page 447

CALCulate<n>:MARKer<m>:FUNCtion:NDBDown:TIME?

This command queries the position of the n dB down markers on the x-axis when measuring in the time domain.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

Setting Basic Spectrum RF Measurement Parameters

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n>, <m> irrelevant

Return values:

<TimeX1> absolute position in time of the n dB marker to the left of the ref-

erence marker in seconds

<TimeX2> absolute position in time of the n dB marker to the right of the

reference marker in seconds

Example: INIT:CONT OFF

Switches to single sweep mode
CALC: MARK: FUNC: NDBD ON
Switches on the n dB down function.

INIT; *WAI

Starts a sweep and waits for the end. CALC:MARK:FUNC:NDBD:TIME?

Outputs the time values of the temporary markers.

Usage: Query only

Manual operation: See "n dB down Value" on page 447

8.8.8.13 Signal Count Marker

The following commands control the frequency counter.

761	CALCulate <n>:MARKer<m>:COUNt</m></n>
y?762	CALCulate <n>:MARKer<m>:COUNt:FREQuency</m></n>
762	CALCulate <n>:MARKer<m>:COUNt:RESolution</m></n>

CALCulate<n>:MARKer<m>:COUNt <State>

This command turns the frequency counter at the marker position on and off.

The frequency counter works for one marker only. If you perform a frequency count with another marker, the R&S FPL1000 deactivates the frequency count of the first marker.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Setting Basic Spectrum RF Measurement Parameters

Example: INIT: CONT OFF

Switches to single sweep mode.

CALC: MARK ON

Switches on marker 1.

CALC: MARK: COUN ON

Switches on the frequency counter for marker 1.

INIT; *WAI

Starts a sweep and waits for the end.

CALC: MARK: COUN: FREQ?

Outputs the measured value.

Manual operation: See "Signal Count Marker State" on page 439

CALCulate<n>:MARKer<m>:COUNt:FREQuency?

This command queries the frequency at the marker position.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Before you can use the command, you have to turn on the frequency counter.

Suffix:

<n> Window <m> Marker

Return values:

<Frequency> Frequency at the marker position.

Example: INIT:CONT OFF

Switches to single sweep mode.

CALC:MARK ON

Switches on marker 2.

CALC:MARK:COUN ON

Activates the frequency counter for marker 1.

INIT; *WAI

Starts a sweep and waits for the end.

CALC:MARK:COUN:FREQ?

Outputs the measured value of marker 1.

Usage: Query only

Manual operation: See " Signal Count Marker State " on page 439

CALCulate<n>:MARKer<m>:COUNt:RESolution < Resolution>

This command defines the resolution of the frequency counter.

Suffix:

<n> Window

Setting Basic Spectrum RF Measurement Parameters

<m> Marker

Parameters:

<Resolution> 0.001 | 0.01 | 0.1 | 1 | 10 | 100 | 1000 | 10000 Hz

*RST: 0.1 Hz

Example: CALC:MARK:COUN:RES 1kHz

Sets the resolution of the frequency counter to 1 kHz.

Manual operation: See "Resolution" on page 439

8.8.8.14 Marker Demodulation

The following commands control the demodulation of AM and FM signals at the marker position.

Useful commands for marker demodulation described elsewhere:

- SYSTem:SPEaker[:STATe] on page 689
- SYSTem: SPEaker: VOLume on page 689

Remote commands exclusive to marker demodulation:

CALCulate <n>:MARKer<m>:FUNCtion:DEModulation:CONTinuous</m></n>	763
CALCulate <n>:MARKer<m>:FUNCtion:DEModulation:HOLDoff</m></n>	764
CALCulate <n>:MARKer<m>:FUNCtion:DEModulation:SELect</m></n>	764
CALCulate <n>:MARKer<m>:FUNCtion:DEModulation[:STATe]</m></n>	764
[SENSe:]DEMod:SQUelch:LEVel	765
[SENSe:]DEMod:SQUelch[:STATe]	765

CALCulate<n>:MARKer<m>:FUNCtion:DEModulation:CONTinuous <State>

This command turns continuous demodulation of the signal at the marker position in the frequency domain on and off.

In the time domain continuous demodulation is always on.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC2:MARK3:FUNC:DEM:CONT ON

Switches on the continuous demodulation.

Manual operation: See " Continuous Demodulation " on page 452

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:MARKer<m>:FUNCtion:DEModulation:HOLDoff < Duration>

This command defines for how long the the signal at the marker position is demodulated.

In the time domain continuous demodulation is always on.

Suffix:

<n> Window <m> Marker

Parameters:

<Duration> Range: 10 ms to 1000 s

*RST: Marker demodulation = OFF

Example: CALC:MARK:FUNC:DEM:HOLD 3s

Manual operation: See "Marker Stop Time" on page 452

CALCulate<n>:MARKer<m>:FUNCtion:DEModulation:SELect < DemodMode>

This command selects the demodulation mode at the marker position.

Suffix:

<n> Window <m> Marker

Parameters:

<DemodMode> AM

AM demodulation

FM

FM demodulation *RST: AM

Example: CALC:MARK:FUNC:DEM:SEL FM

Manual operation: See " Modulation " on page 453

CALCulate<n>:MARKer<m>:FUNCtion:DEModulation[:STATe] <State>

This command turns the audio demodulator on and off when the measurement reaches a marker position.

Suffix:

<n> Window <m> Marker

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:MARK3:FUNC:DEM ON

Switches on the demodulation for marker 3.

Setting Basic Spectrum RF Measurement Parameters

Manual operation: See "Marker Demodulation State" on page 452

[SENSe:]DEMod:SQUeIch:LEVeI <Threshold>

This command defines the threshold for selective demodulation.

All signals below the threshold are not demodulated.

Parameters:

<Threshold> Percentage of the display height.

Range: 0 to 100

*RST: 50

Example: DEM:SQU:LEV 80

Sets the squelch level to 80% of the displayed signal.

[SENSe:]DEMod:SQUelch[:STATe] <State>

This command turns selective demodulation at the marker position on and off.

For selective demodulation, the R&S FPL1000 turns on a video trigger whose level correponds to the squelch level. Therefore it turns other triggers or gates off.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: DEM:SQU ON

Signals below the level threshold are not sent to the audio out-

put.

8.8.8.15 Programming Examples for Using Markers and Marker Functions

Various programming examples on how to use markers and the special marker functions are provided here.



The use of spectrogram markers is demonstrated in Chapter 8.8.7.7, "Programming Example: Configuring a Spectrogram", on page 713.

•	Example: Basic Markers	. 766
•	Example: Marker Search in Spectrograms	. 767
•	Basic Frequency Sweep Measurement for Marker Function Examples	. 768
•	Example: Using a Fixed Reference Marker	. 768
•	Example: Obtaining a Marker Peak List	.769
•	Example: Measuring Noise Density	. 769
•	Example: Measuring Phase Noise	.770
•	Example: Measuring the Power in a Channel Using Band Power Markers	. 771

Setting Basic Spectrum RF Measurement Parameters

•	Example: Measuring Characteristic Bandwidths (Using the n dB Down Marker)	
		771
•	Examples: Demodulating Marker Values and Providing Audio Output	772
•	Example: Performing a Highly Accurate Frequency Measurement Using the Sign	nal
	Count Marker.	773

Example: Basic Markers

This example demonstrates how to configure and define markers for a basic spectrum measurement in a remote environment. It assumes that the basic frequency sweep described in Chapter 8.6.14, "Programming Example: Performing a Basic Frequency Sweep", on page 636 has been performed and thus does not begin by presetting the instrument.

```
//-----Configuring marker behavior -----
DISP:MTAB ON
//Marker information is always displayed in a separate table.
CALC:MARK:X:SSIZ STAN
//The marker moves from one pixel to the next instead of sweep points in manual op.
CALC:MARK:PEXC 6dB
//Defines a peak excursion of 6 dB.
CALC:MARK:X:SLIM ON
CALC:MARK:X:SLIM:LEFT 50MHz
CALC:MARK:X:SLIM:RIGH 150MHz
//Restricts the search area for peaks to the frequencies between 50\ \mathrm{and}\ 150\ \mathrm{MHz}.
CALC:THR -100dBm
CALC: THR: STAT ON
//Configures a threshold level for peak searches at -100 dBm.
//-----Defining and positioning markers -----
CALC:MARK1 ON
//Activates marker 1 and sets it to the peak of trace 1.
CALC:MARK2:TRAC 2
//Activates marker 2 and sets it to the peak of trace 2.
CALC:MARK3:X 150MHz
//Activates marker 3 and sets it to the freq. 150 MHz on trace 1.
CALC:MARK4:TRAC 4
//Activates marker 4 and sets it to the peak of trace 4.
CALC:MARK1:MAX:AUTO ON
//Moves M1 to the current peak of trace 1 after each sweep.
CALC:MARK2:MAX:NEXT
//Moves M2 to the next lower peak of trace 2.
CALC: DELT5 ON
CALC: DELT5: LINK ON
//Activates delta marker 5 and links it to marker 1. If M1 moves, so does D5.
CALC:DELT5:MREF 4
//Changes the reference for D5 to marker 4. D5 now shows the difference between
//the peak of trace 1 after each sweep and the value at the same position in
```

Setting Basic Spectrum RF Measurement Parameters

```
//trace 4, which is a copy of trace 1, averaged over 10 sweeps.
CALC: DELT5: MODE REL
//Shows the difference as relative values.
CALC: DELT6 ON
CALC: DELT6: MAX: NEXT
//Activates delta marker 6 and sets it to the next lower maximum of trace 1.
//Thus it shows the difference between the two highest peaks in trace 1.
//-----Retrieving marker values -----
CALC:MARK1:Y?
CALC:MARK2:Y?
CALC:MARK3:Y?
CALC: MARK4: Y?
CALC: DELT5:Y?
CALC:DELT6:Y?
//Retrieves the marker levels of each active normal and delta marker.
CALC:DELT5:X:REL?
CALC: DELT6:X:REL?
//Retrieves the frequency difference between the delta marker and marker 1.
//-----Deactivating all markers ------
//CALC:MARK:AOFF
//CALC:DELT:AOFF
```

Example: Marker Search in Spectrograms

This example demonstrates how to search for peak values in spectrograms in a remote environment. It assumes a spectrogram is already available (see Chapter 8.8.7.7, "Programming Example: Configuring a Spectrogram", on page 713) and thus does not begin by presetting the instrument.

```
//---- Analyzing the results using markers -----
//Set marker1 on the peak power in the most recent spectrum and query
//its position
CALC2:SPEC:FRAM:SEL 0
CALC2:MARK1 ON
CALC2:MARK1:X?
CALC2:MARK1:Y?
//{
m Set} marker2 on the peak power in frame at -324{
m ms} and query its position
CALC2:MARK2 ON
CALC2:MARK2:SGR:FRAM -324ms
CALC2:MARK2:X?
CALC2:MARK2:Y?
//Set marker3 on peak power level in the entire spectrogram in memory and
//query its position
CALC2:MARK3 ON
CALC2:MARK:SPEC:SAR MEM
CALC2:MARK3:SPEC:XY:MAX
```

Setting Basic Spectrum RF Measurement Parameters

```
CALC2:MARK3:X?

CALC2:MARK3:Y?

//Move marker 3 to the next lower peak level for the same frequency

CALC2:MARK3:SPEC:Y:MAX:NEXT

CALC2:MARK3:X?

CALC2:MARK3:Y?

//Set marker 4 to the highest level in the (visible) spectrogram.

CALC2:MARK:SPEC:SAR VIS

CALC2:MARK4:SPEC:XY:MAX

//Move marker 4 to the next higher level in the frames above its current position.

CALC2:MARK4:SPEC:Y:MAX:ABOV
```

Basic Frequency Sweep Measurement for Marker Function Examples

Since markers can only be placed on an existing trace, the following example provides a simple frequency sweep measurement to be used as a basis for the subsequent marker function scripts.

Example: Using a Fixed Reference Marker

This example demonstrates how to configure and use reference markers in a basic spectrum measurement in a remote environment. It assumes that the basic frequency sweep described in "Basic Frequency Sweep Measurement for Marker Function Examples" on page 768 has been performed and thus does not begin by presetting the instrument.

```
//------
//Activate a fixed reference marker. It is set to the current maximum of trace 1.

CALC:DELT:FUNC:FIX ON
//Set the reference frequency to 128 MHz.

CALC:DELT:FUNC:FIX:RPO:X 128 MHZ
//Set the reference level to +30 dBm.

CALC:DELT:FUNC:FIX:RPO:Y 30 DBM
```

Setting Basic Spectrum RF Measurement Parameters

```
//Use the fixed reference marker as a reference for deltamarker 2
CALC:DELT2:MREF FIX

//Reset the reference marker to the current maximum of trace 1
CALC:DELT:FUNC:FIX:RPO:MAX
//Query the new position of the reference marker
CALC:DELT:FUNC:FIX:RPO:X?
CALC:DELT:FUNC:FIX:RPO:Y?
```

Example: Obtaining a Marker Peak List

This example demonstrates how to obtain a marker peak list in a basic spectrum measurement in a remote environment. It assumes that the basic frequency sweep described in "Basic Frequency Sweep Measurement for Marker Function Examples" on page 768 has been performed and thus does not begin by presetting the instrument.

In this example, the peak search is restricted to the frequency range of 50 MHz to 150 MHz. The top 5 power levels with a peak excursion of 10dB and a minimum of -100 dBm are to be determined and displayed with their marker numbers. The results are sorted by frequency values. The resulting peak list is then exported to a file.

```
//---- Configuring the peak search -----
CALC:MARK:X:SLIM ON
CALC:MARK:X:SLIM:LEFT 50MHz
CALC:MARK:X:SLIM:RIGH 150MHz
CALC:MARK:PEXC 10DB
CALC:THR -100DBM
CALC: THR: STAT ON
CALC:MARK:FUNC:FPE:STAT ON
CALC:MARK:FUNC:FPE:LIST:SIZE 5
CALC:MARK:FUNC:FPE:SORT X
CALC:MARK:FUNC:FPE:ANN:LAB ON
//---- Retrieving results -----
CALC:MARK:FUNC:FPE:COUN?
CALC:MARK:FUNC:FPE:X?
CALC:MARK:FUNC:FPE:Y?
//---- Exporting the peak list -----
MMEM:STOR:PEAK 'PeakList'
```

Example: Measuring Noise Density

This example demonstrates how to measure noise density using noise markers in a basic spectrum measurement in a remote environment. It assumes that the basic frequency sweep described in "Basic Frequency Sweep Measurement for Marker Function Examples" on page 768 has been performed and thus does not begin by presetting the instrument.

Setting Basic Spectrum RF Measurement Parameters

```
CALC:MARK1:FUNC:NOIS ON

//Switches on noise measurement at marker 1.

INIT;*WAI

//Performs a measurement and waits for it to end

CALC:MARK1:FUNC:NOIS:RES?

//Queries the measured noise level (per Hz bandwidth)
```

Example: Measuring Phase Noise

This example demonstrates how to measure phase noise using markers in a basic spectrum measurement in a remote environment. It assumes that the basic frequency sweep described in "Basic Frequency Sweep Measurement for Marker Function Examples" on page 768 has been performed and thus does not begin by presetting the instrument.

```
//----- Configuring the phase noise marker -----
DET SAMP
//Switches to Sample detector
CALC: MARK1 ON
//Activates marker1 and sets it to the maximum power level
CALC:DELT:FUNC:PNO ON
//Activates phase noise marker function
CALC:DELT1 ON
CALC:DELT1:X 100kHz
CALC: DELT2 ON
CALC:DELT2:X 500kHz
CALC:DELT3 ON
CALC:DELT3:X 1MHz
CALC:DELT4 ON
CALC:DELT4:X 1.5MHz
//Activates the phase noise measurement function for offsets 100kHz/500kHz/1MHz/1.5MHz.
BAND: VID?
//Queries the used VBW (= 0.1*RBW)
//---- Querying the phase noise results -----
CALC:DELT1:FUNC:PNO:RES?
CALC: DELT2: FUNC: PNO: RES?
CALC: DELT3: FUNC: PNO: RES?
```

CALC: DELT4: FUNC: PNO: RES?

Setting Basic Spectrum RF Measurement Parameters

```
//Queries the difference in level between the peak and the noise power density //measured at the deltamarkers, referred to the carrier power level (dBc)
```

Example: Measuring the Power in a Channel Using Band Power Markers

This example demonstrates how to measure the power in a specific channel or band using markers in a basic spectrum measurement in a remote environment. It assumes that the basic frequency sweep described in "Basic Frequency Sweep Measurement for Marker Function Examples" on page 768 has been performed and thus does not begin by presetting the instrument.

```
//---- Configuring the band power marker -----
CALC:MARK1 ON
//Activates marker1 and sets it to the maximum power level
CALC:MARK1:FUNC:BPOW:STAT ON
//Activates the band power measurement for the band around marker 1
CALC:MARK1:FUNC:BPOW:SPAN 30MHz
//Sets the bandwidth to be measured to 30 MHz
CALC:MARK1:FUNC:BPOW:MODE DENS
//Sets the result to be a density (power per Hz bandwidth)
CALC: DELT2 ON
//Activates deltamarker2
CALC: DELT2: FUNC: BPOW: STAT ON
//Activates the band power measurement for the band around deltamarker 2
CALC:DELT2:FUNC:BPOW:SPAN 30MHz
//Sets the bandwidth to be measured to 30 MHz
CALC:DELT2:FUNC:BPOW:MODE DENS
//Sets the result to be a density (power per Hz bandwidth)
CALC: DELT3 ON
//Activates deltamarker3
CALC: DELT3: FUNC: BPOW: STAT ON
//Activates the band power measurement for the band around deltamarker 3
CALC:DELT3:FUNC:BPOW:SPAN 30MHz
//Sets the bandwidth to be measured to 30 MHz
CALC:DELT3:FUNC:BPOW:MODE DENS
//Sets the result to be a density (power per Hz bandwidth)
//-----Retrieving Results-----
CALC:MARK1:FUNC:BPOW:RES?
//Returns the power sum for the specified bandwidth around marker 1.
CALC: DELT2: FUNC: BPOW: RES?
//Returns the power sum for the specified bandwidth around deltamarker 2.
CALC: DELT3: FUNC: BPOW: RES?
//Returns the power sum for the specified bandwidth around deltamarker 3.
```

Example: Measuring Characteristic Bandwidths (Using the n dB Down Marker)

This example demonstrates how to measure a characteristic bandwidth using markers in a basic spectrum measurement in a remote environment. It assumes that the basic

Setting Basic Spectrum RF Measurement Parameters

frequency sweep described in Chapter 8.6.14, "Programming Example: Performing a Basic Frequency Sweep", on page 636 has been performed and thus does not begin by presetting the instrument.

Examples: Demodulating Marker Values and Providing Audio Output

The following examples demonstrate how to demodulate markers and provide audio output in a remote environment.

Example: Providing Audio Output for Individual Marker Values

This example demonstrates how to demodulate markers and provide audio output in a basic spectrum measurement in a remote environment. It assumes that the basic frequency sweep described in Chapter 8.6.14, "Programming Example: Performing a Basic Frequency Sweep", on page 636 has been performed and thus does not begin by presetting the instrument.

Audio output is provided for 5s each time the signal reaches its initial maximum, however only if it is higher than -90 dBm (10% of the total y-axis range) in order to ignore noise.

```
//------ Configuring the marker demodulation ------
CALC:MARK1 ON

//Activates marker1 and sets it to the maximum power level

CALC:MARK1:FUNC:DEM:SEL FM

//Selects FM demodulation

CALC:MARK1:FUNC:DEM:HOLD 5s

//Defines an output duration of 5s

DEM:SQU:LEV 10

//Sets a squelch level for noise

DEM:SQU ON

//Activates squelching

CALC:MARK1:FUNC:DEM ON

//Activates demodulation
```

Setting Basic Spectrum RF Measurement Parameters

Example: Demodulating and Providing Audio Output Continuously

This example demonstrates how to demodulate markers and provide audio output in a basic spectrum measurement in a remote environment. It assumes that the basic frequency sweep described in Chapter 8.6.14, "Programming Example: Performing a Basic Frequency Sweep", on page 636 has been performed and thus does not begin by presetting the instrument.

```
//---- Configuring the marker demodulation -----
CALC:MARK1 ON
//Activates marker1
CALC:MARK1:FUNC:DEM:SEL FM
//Selects FM demodulation
DEM:SQU:LEV 10
//Sets a squelch level for noise
DEM:SQU ON
//Activates squelching
CALC:MARK1:FUNC:DEM:CONT ON
//Activates continuous demodulation
//---- Performing the measurement -----
INIT: CONT ON
//Performs a measurement and provides continuous audio output
//-----Retrieving Results-----
//Results are only provided as audio output!
```

Example: Performing a Highly Accurate Frequency Measurement Using the Signal Count Marker

This example demonstrates how to determine highly accurate frequency values using signal count markers in a basic spectrum measurement in a remote environment. It assumes that the basic frequency sweep described in Chapter 8.6.14, "Programming Example: Performing a Basic Frequency Sweep", on page 636 has been performed and thus does not begin by presetting the instrument.

```
//----- Configuring the signal count marker ------
CALC:MARK1 ON
//Activates marker1
CALC:MARK1:COUN ON
//Switches on the frequency counter for marker 1.
CALC:MARK1:COUN:RES 1kHz
//Sets the resolution of the frequency counter to 1kHz
```

Setting Basic Spectrum RF Measurement Parameters

// Performing the measurement	
INIT; *WAI	
//Performs a measurement and waits for it to end	
//Retrieving Results	
CALC:MARK1:COUN:FREQ?	
//Returns the signal counter value as the precise marker f	requency.

8.8.9 Configuring Display and Limit Lines

The commands required to configure display and limit lines in a remote environment are described here.

•	Configuring Display Lines	77	'4
•	Defining Limit Checks.	77	'6

8.8.9.1 Configuring Display Lines

The following commands configure vertical and horizontal display lines.

CALCulate <n>:DLINe<dl></dl></n>	774
CALCulate <n>:DLINe<dl>:STATe</dl></n>	774
CALCulate <n>:FLINe<fi></fi></n>	775
CALCulate <n>:FLINe<fl>:STATe</fl></n>	775
CALCulate <n>:TLINe<tl></tl></n>	775
CALCulate <n>:TLINe<tl>:STATe</tl></n>	776

CALCulate<n>:DLINe<dl> <Position>

This command defines the (vertical) position of a display line.

Suffix:

<n> Window <dl> 1 | 2

Parameters:

<Position> The value range is variable.

You can use any unit you want, the R&S FPL1000 then converts the unit to the currently selected unit. If you omit a unit, the

R&S FPL1000 uses the currently selected unit.

*RST: (state is OFF)

Example: CALC:DLIN2 -20dBm

Positions the second display line at -20 dBm.

Manual operation: See "Horizontal Line 1 / Horizontal Line 2 " on page 491

CALCulate<n>:DLINe<dl>:STATe <State>

This command turns a display line on and off

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> Window

<dl> 1 | 2

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:DLIN2:STAT ON

Turns on display line 2.

CALCulate<n>:FLINe<fl> <Frequency>

This command defines the position of a frequency line.

Suffix:

<n> Window <fl> 1 | 2

Parameters:

<Frequency> Note that you can not set a frequency line to a position that is

outside the current span.

Range: 0 Hz to Fmax

*RST: U Hz to Fmax *RST: (STATe to OFF)

Example: CALC:FLIN2 120MHz

Sets frequency line 2 to a frequency of 120 MHz.

Manual operation: See "Vertical Line 1 / Vertical Line 2 " on page 491

CALCulate<n>:FLINe<fl>:STATe <State>

This command turns a frequency line on and off

Suffix:

<n> Window

<fl> 1 | 2

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:FLIN2:STAT ON

Turns frequency line 2 on.

CALCulate<n>:TLINe<tl> <Time>

This command defines the position of a time line.

Suffix:

<n> Window

Setting Basic Spectrum RF Measurement Parameters

<tl> 1 | 2

Parameters:

<Time> Note that you can not set a time line to a position that is higher

than the current sweep time.

Range: 0 s to 1600 s *RST: (STATe to OFF)

Example: CALC:TLIN 10ms

Sets the first time line to 10 ms.

Manual operation: See "Vertical Line 1 / Vertical Line 2 " on page 491

CALCulate<n>:TLINe<tl>:STATe<State>

This command turns a time line on and off

Suffix:

<n> Window <tl> 1 | 2

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:TLIN:STAT ON

Turns the first time line on.

8.8.9.2 Defining Limit Checks

Note that in remote control, upper and lower limit lines are configured using separate commands. Thus, you must decide in advance which you want to configure. The x-values for both upper and lower limit lines are defined as a common control line. This control line is the reference for the y-values for both upper and lower limit lines.

•	Configuring Limit Lines	776
•	Managing Limit Lines	786
•	Checking the Results of a Limit Check	788
•	Programming Example: Using Limit Lines	789

Configuring Limit Lines

CAI	LCulate <n>:LIMit:COMMent</n>	777
CAI	.LCulate <n>:LIMit:CONTrol[:DATA]</n>	777
CAI	.LCulate <n>:LIMit:CONTrol:DOMain</n>	778
CAI	LCulate <n>:LIMit:CONTrol:MODE</n>	778
CAI	.LCulate <n>:LIMit:CONTrol:OFFSet</n>	778
CAI	.LCulate <n>:LIMit:CONTrol:SHIFt</n>	779
CAI	.LCulate <n>:LIMit:CONTrol:SPACing</n>	779
CAI	.LCulate <n>:LIMit:LOWer[:DATA]</n>	779
CAI	.LCulate <n>:LIMit:LOWer:MARGin</n>	780
CAI	J Culate <n>:I IMitI OWer:MODE</n>	780

Setting Basic Spectrum RF Measurement Parameters

CALCulate <n>:LIMit:LOWer:OFFSet</n>	780
CALCulate <n>:LIMit:LOWer:SHIFt</n>	781
CALCulate <n>:LIMit:LOWer:SPACing</n>	781
CALCulate <n>:LIMit:LOWer:STATe</n>	781
CALCulate <n>:LIMit:LOWer:THReshold</n>	782
CALCulate <n>:LIMit:NAME</n>	782
CALCulate <n>:LIMit:UNIT</n>	782
CALCulate <n>:LIMit:UPPer[:DATA]</n>	783
CALCulate <n>:LIMit:UPPer:MARGin</n>	783
CALCulate <n>:LIMit:UPPer:MODE</n>	784
CALCulate <n>:LIMit:UPPer:OFFSet</n>	784
CALCulate <n>:LIMit:UPPer:SHIFt</n>	784
CALCulate <n>:LIMit:UPPer:SPACing</n>	785
CALCulate <n>:LIMit:UPPer:STATe</n>	785
CALCulate <n>:LIMit:UPPer:THReshold</n>	785

CALCulate<n>:LIMit:COMMent <Comment>

This command defines a comment for a limit line.

Suffix:

<n> irrelevant Limit line

Parameters:

<Comment> String containing the description of the limit line.

Manual operation: See " Comment " on page 500

CALCulate<n>:LIMit:CONTrol[:DATA] <LimitLinePoints>

This command defines the horizontal definition points of a limit line.

Suffix:

<n> irrelevant Limit line

Parameters:

<LimitLinePoints> Variable number of x-axis values.

Note that the number of horizontal values has to be the same as

the number of vertical values set with CALCulate<n>:

LIMit:LOWer[:DATA] or CALCulate<n>:LIMit:UPPer[:DATA]. If not, the R&S FPL1000 either adds missing

values or ignores surplus values.

The unit is Hz or s.

*RST: -

Manual operation: See " Data Points " on page 501

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:LIMit:CONTrol:DOMain <Type>

This command selects the domain of the limit line.

Suffix:

<n> irrelevant Limit line

Parameters:

<Type> FREQuency | TIME

FREQuency

For limit lines that apply to a range of frequencies.

TIME

For limit lines that apply to a period of time.

*RST: FREQuency

Example: CALC:LIM:CONT:DOM FREQ

Select a limit line in the frequency domain.

Manual operation: See " X-Axis " on page 501

CALCulate<n>:LIMit:CONTrol:MODE < Mode>

This command selects the horizontal limit line scaling.

Suffix:

<n> irrelevant Limit line

Parameters:

<Mode> ABSolute

Limit line is defined by absolute physical values (Hz or s).

RELative

Limit line is defined by relative values related to the center frequency (frequency domain) or the left diagram border (time

domain).

*RST: ABSolute

CALCulate<n>:LIMit:CONTrol:OFFSet <Offset>

This command defines an offset for a complete limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n> irrelevant Limit line

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<Offset> Numeric value.

The unit depends on the scale of the x-axis.

*RST: 0

Manual operation: See " X-Offset " on page 498

CALCulate<n>:LIMit:CONTrol:SHIFt <Distance>

This command moves a complete limit line horizontally.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> irrelevant Limit line

Parameters:

<Distance> Numeric value.

The unit depends on the scale of the x-axis.

Manual operation: See "Shift x " on page 502

CALCulate<n>:LIMit:CONTrol:SPACing <InterpolMode>

This command selects linear or logarithmic interpolation for the calculation of limit lines from one horizontal point to the next.

Suffix:

<n> Window <i> Limit line

Parameters:

<InterpolMode> LINear | LOGarithmic

*RST: LIN

Example: CALC:LIM:CONT:SPAC LIN

Manual operation: See " X-Axis " on page 501

CALCulate<n>:LIMitI) - LimitLinePoints>

This command defines the vertical definition points of a lower limit line.

Suffix:

<n> irrelevant Limit line

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<LimitLinePoints> Variable number of level values.

Note that the number of vertical values has to be the same as the number of horizontal values set with ${\tt CALCulate} < n >$:

LIMit:CONTrol[:DATA]. If not, the R&S FPL1000 either

adds missing values or ignores surplus values.

The unit depends on CALCulate<n>:LIMit:UNIT

on page 782.

*RST: Limit line state is OFF

Manual operation: See " Data Points " on page 501

CALCulate<n>:LIMit:LOWer:MARGin < Margin>

This command defines an area around a lower limit line where limit check violations are still tolerated.

Suffix:

<n> irrelevant Limit line

Parameters:

<Margin> numeric value

*RST: 0
Default unit: dB

Manual operation: See "Margin" on page 501

CALCulate<n>:LIMit:LOWer:MODE < Mode>

This command selects the vertical limit line scaling.

Suffix:

<n> Window <i> Limit line

Parameters:

<Mode> ABSolute

Limit line is defined by absolute physical values.

The unit is variable.

RELative

Limit line is defined by relative values related to the reference

level (dB).

*RST: ABSolute

Manual operation: See "X-Axis" on page 501

CALCulate<n>:LIMit:LOWer:OFFSet <Offset>

This command defines an offset for a complete lower limit line.

Setting Basic Spectrum RF Measurement Parameters

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n> Window Limit line

Parameters:

<Offset> Numeric value.

*RST: 0
Default unit: dB

Manual operation: See "Y-Offset" on page 499

CALCulate<n>:LIMit:LOWer:SHIFt <Distance>

This command moves a complete lower limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> Window <i> Limit line

Parameters:

<Distance> Defines the distance that the limit line moves.

The unit depends on CALCulate<n>:LIMit:UNIT

on page 782.

Manual operation: See "Shift y" on page 502

CALCulate<n>:LIMit:LOWer:SPACing <InterpolType>

This command selects linear or logarithmic interpolation for the calculation of a lower limit line from one horizontal point to the next.

Suffix:

<n> Window Limit line

Parameters:

<InterpolType> LINear | LOGarithmic

*RST: LIN

Manual operation: See "Y-Axis" on page 501

CALCulate<n>:LIMit:LOWer:STATe <State>

This command turns a lower limit line on and off.

Setting Basic Spectrum RF Measurement Parameters

Before you can use the command, you have to select a limit line with CALCulate < n >: LIMit : NAME on page 782.

Suffix:

<n> irrelevant Limit line

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Visibility" on page 498

CALCulate<n>:LIMit:LOWer:THReshold <Threshold>

This command defines a threshold for relative limit lines.

The R&S FPL1000 uses the threshold for the limit check, if the limit line violates the threshold.

Suffix:

<n> irrelevant Limit line

Parameters:

<Threshold> Numeric value.

The unit depends on CALCulate<n>:LIMit:UNIT

on page 782.

*RST: -200 dBm

Manual operation: See "Threshold " on page 500

CALCulate<n>:LIMit:NAME <Name>

This command selects a limit line that already exists or defines a name for a new limit line.

Suffix:

<n> Window <i>i> Limit line

Parameters:

<Name> String containing the limit line name.

*RST: REM1 to REM8 for lines 1 to 8

Manual operation: See "Name" on page 500

CALCulate<n>:LIMit:UNIT <Unit>

This command defines the unit of a limit line.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> irrelevant Limit line

Parameters:

<Unit> DBM | DBPW | WATT | DBUV | DBMV | VOLT | DBUA |

AMPere | DB | DBUV_M | DBUA_M | (unitless)

If you select dB as the limit line unit, the command automatically

turns the limit line into a relative limit line.

*RST: DBM

Manual operation: See "Y-Axis" on page 501

CALCulate<n>:LIMit:UPPer[:DATA] <LimitLinePoints>

This command defines the vertical definition points of an upper limit line.

Suffix:

<n> irrelevant Limit line

Parameters:

<LimitLinePoints> Variable number of level values.

Note that the number of vertical values has to be the same as the number of horizontal values set with CALCulate < n >:

LIMit:CONTrol[:DATA]. If not, the R&S FPL1000 either

adds missing values or ignores surplus values.

The unit depends on CALCulate<n>:LIMit:UNIT

on page 782.

*RST: Limit line state is OFF

Manual operation: See " Data Points " on page 501

CALCulate<n>:LIMit!UPPer:MARGin < Margin>

This command defines an area around an upper limit line where limit check violations are still tolerated.

Suffix:

<n> irrelevant Limit line

Parameters:

<Margin> numeric value

Default unit: dB

Manual operation: See "Margin" on page 501

Setting Basic Spectrum RF Measurement Parameters

CALCulate<n>:LIMit:UPPer:MODE < Mode>

This command selects the vertical limit line scaling.

Suffix:

<n> Window Limit line

Parameters:

<Mode> ABSolute

Limit line is defined by absolute physical values.

The unit is variable.

RELative

Limit line is defined by relative values related to the reference

level (dB).

*RST: ABSolute

Manual operation: See " X-Axis " on page 501

CALCulate<n>:LIMit:UPPer:OFFSet <Offset>

This command defines an offset for a complete upper limit line.

Compared to shifting the limit line, an offset does not actually change the limit line definition points.

Suffix:

<n> irrelevant Limit line

Parameters:

<Offset> Numeric value.

*RST: 0
Default unit: dB

Manual operation: See "Y-Offset" on page 499

CALCulate<n>:LIMit:UPPer:SHIFt < Distance>

This command moves a complete upper limit line vertically.

Compared to defining an offset, this command actually changes the limit line definition points by the value you define.

Suffix:

<n> irrelevant Limit line

Parameters:

<Distance> Defines the distance that the limit line moves.

The unit depends on CALCulate<n>:LIMit:UNIT

on page 782.

Setting Basic Spectrum RF Measurement Parameters

Usage: Event

Manual operation: See " Shift y " on page 502

CALCulate<n>:LIMit:UPPer:SPACing <InterpolType>

This command selects linear or logarithmic interpolation for the calculation of an upper limit line from one horizontal point to the next.

Suffix:

<n> Window Limit line

Parameters:

<InterpolType> LINear | LOGarithmic

*RST: LIN

Manual operation: See " Y-Axis " on page 501

CALCulate<n>:LIMit:UPPer:STATe <State>

This command turns an upper limit line on and off.

Before you can use the command, you have to select a limit line with CALCulate<n>: LIMit: NAME on page 782.

Suffix:

<n> irrelevant Limit line

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Visibility" on page 498

CALCulate<n>:LIMit:UPPer:THReshold <Limit>

This command defines an absolute limit for limit lines with a relative scale.

The R&S FPL1000 uses the threshold for the limit check, if the limit line violates the threshold.

Suffix:

<n> irrelevant Limit line

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<Limit> Numeric value.

The unit depends on CALCulate<n>:LIMit:UNIT

on page 782.

*RST: -200 Default unit: dBm

Manual operation: See "Threshold " on page 500

Managing Limit Lines

Useful commands for managing limit lines described in the R&S FPL1000 User Manual:

• MMEM:SEL[:ITEM]:LIN:ALL

• MMEM:STOR:TYPE

Remote commands exclusive to managing limit lines:

CALCulate <n>:LIMit:ACTive?</n>	786
CALCulate <n>:LIMit:COPY</n>	786
CALCulate <n>:LIMit:DELete</n>	787
CALCulate <n>:LIMit:STATe</n>	787
CALCulate <n>:LIMit:TRACe<t>:CHECk</t></n>	787
MMEMory:LOAD <n>:LIMit</n>	788
MMEMory:STORe <n>:LIMit</n>	

CALCulate<n>:LIMit:ACTive?

This command queries the names of all active limit lines.

Suffix:

<n>, irrelevant

Return values:

<LimitLines> String containing the names of all active limit lines in alphabeti-

cal order.

Example: CALC:LIM:ACT?

Queries the names of all active limit lines.

Usage: Query only

Manual operation: See "Visibility" on page 498

CALCulate<n>:LIMit:COPY <Line>

This command copies a limit line.

Suffix:

<n> Window <i> Limit line

Setting Basic Spectrum RF Measurement Parameters

Parameters:

<Line> 1 to 8

number of the new limit line

<name>

String containing the name of the limit line.

Example: CALC:LIM1:COPY 2

Copies limit line 1 to line 2. CALC:LIM1:COPY 'FM2'

Copies limit line 1 to a new line named FM2.

Manual operation: See "Copy Line" on page 499

CALCulate<n>:LIMit:DELete

This command deletes a limit line.

Suffix:

<n> Window Limit line

Usage: Event

Manual operation: See " Delete Line " on page 499

CALCulate<n>:LIMit:STATe <State>

This command turns the limit check for a specific limit line on and off.

To query the limit check result, use CALCulate<n>:LIMit:FAIL?.

Note that a new command exists to activate the limit check and define the trace to be checked in one step (see CALCulate<n>:LIMit:TRACe<t>:CHECk on page 787).

Suffix:

<n> irrelevant Limit line

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:LIM:STAT ON

Switches on the limit check for limit line 1.

Manual operation: See "Disable All Lines" on page 499

CALCulate<n>:LIMit:TRACe<t>:CHECk <State>

This command turns the limit check for a specific trace on and off.

To query the limit check result, use CALCulate<n>:LIMit:FAIL?.

Setting Basic Spectrum RF Measurement Parameters

Suffix:

<n> Window
Limit line
<t> Trace

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: CALC:LIM3:TRAC2:CHEC ON

Switches on the limit check for limit line 3 on trace 2.

Manual operation: See "Traces to be Checked " on page 498

MMEMory:LOAD<n>:LIMit <FileName>

Loads the limit line from the selected file in .CSV format.

Parameters:

<FileName> String containing the path and name of the CSV import file.

Example: MMEM:LOAD:LIM 'C:\TEST.CSV'

Manual operation: See "Import" on page 502

MMEMory:STORe<n>:LIMit <FileName>,<LimitLineName>

This command exports limit line data to an ASCII (CSV) file.

For details on the file format see Chapter 7.11.2.4, "Reference: Limit Line File Format", on page 507.

Suffix:

<n> irrelevant

Parameters:

<FileName> String containing the path and name of the target file.

<LimitLineName> Name of the limit line to be exported.

Example: MMEM:STOR:LIM 'C:\TEST', 'UpperLimitLine'

Stores the limit line named "UpperLimitLine" in the file

TEST.CSV.

Manual operation: See "Export " on page 502

Checking the Results of a Limit Check

CALCulate <n>:LIMit:CLEar[:IMMediate]</n>	788
CALCulate <n>:LIMit:FAIL?</n>	789

CALCulate<n>:LIMit:CLEar[:IMMediate]

This command deletes the result of the current limit check.

Setting Basic Spectrum RF Measurement Parameters

The command works on *all* limit lines in *all* measurement windows at the same time.

Suffix:

<n>, irrelevant

Example: CALC:LIM:CLE

Deletes the result of the limit check.

CALCulate<n>:LIMit:FAIL?

This command queries the result of a limit check in the specified window.

Note that for SEM measurements, the limit line suffix is irrelevant, as only one specific SEM limit line is checked for the currently relevant power class.

To get a valid result, you have to perform a complete measurement with synchronization to the end of the measurement before reading out the result. This is only possible for single sweep mode.

See also INITiate<n>: CONTinuous on page 543.

Suffix:

<n> Window Limit line

Return values:

<Result> 0

PASS 1 FAIL

Example: INIT; *WAI

Starts a new sweep and waits for its end.

CALC2:LIM3:FAIL?

Queries the result of the check for limit line 3 in window 2.

Usage: Query only

Manual operation: See "Limit Check <n> " on page 308

See "Limit Check " on page 338

Programming Example: Using Limit Lines

The following examples demonstrate how to work with limit lines in a remote environment.

•	Example: Configuring Limit Lines
•	Example: Performing a Limit Check

Example: Configuring Limit Lines

This example demonstrates how to configure 2 limit lines - an upper and a lower limit - for a measurement in a remote environment.

Setting Basic Spectrum RF Measurement Parameters

```
//---- Configuing the limit lines -----
CALC:LIM1:NAME 'FM1'
//Names limit line 1 'FM1'.
CALC:LIM1:CONT:MODE ABS
//Selects absolute scaling for the horizontal axis.
CALC:LIM1:CONT 1 MHz, 50MHz, 100 MHz, 150MHz, 200MHz
//Defines 5 horizontal definition points for limit line 1.
CALC:LIM1:UPP:MODE ABS
//Selects an absolute vertical scale for limit line 1.
CALC:LIM1:UNIT DBM
//Selects the unit dBm for limit line 1.
CALC:LIM1:UPP -10,-5,0,-5,-10
//Defines 5 definition points for limit line 1.
CALC:LIM1:UPP:MARG 5dB
//Defines an area of 5 dB around limit line 1 where limit check violations
//are still tolerated.
CALC:LIM1:UPP:SHIF -10DB
//Shifts the limit line 1 by -10 \text{ dB}.
CALC:LIM1:UPP:OFFS -3dB
//Defines an additional -3 dB offset for limit line 1.
CALC:LIM3:NAME 'FM3'
//Names limit line 3 'FM3'.
CALC:LIM3:LOW:MODE REL
//Selects a relative vertical scale for limit line 3.
CALC:LIM3:UNIT DB
CALC:LIM3:CONT 1 MHz,50MHz,100 MHz,150MHz,200MHz
//Defines 5 horizontal definition points for limit line 3.
CALC:LIM3:LOW -90,-60,-40,-60,-90
//Defines 5 definition points relative to the reference level for limit line 3.
CALC:LIM3:LOW:SHIF 2
//Shifts the limit line 3 by 2dB.
CALC:LIM3:LOW:OFFS 3
//Defines an additional 3 dB offset for limit line 3.
CALC:LIM3:LOW:THR -200DBM
//Defines a power threshold of -200 dBm that must be exceeded for limit to be checked
CALC:LIM3:LOW:MARG 5dB
//Defines an area of 5dB around limit line 3 where limit check violations
//are still tolerated.
//---- Storing the limit lines -----
MMEM:SEL:CHAN:LIN:ALL ON
```

Setting Basic Spectrum RF Measurement Parameters

```
MMEM:STOR:TYPE CHAN
MMEM:STOR:STAT 1,'LimitLines FM1 FM3'
```

Example: Performing a Limit Check

This example demonstrates how to perform a limit check during a basic frequency sweep measurement in a remote environment. The limit lines configured in "Example: Configuring Limit Lines" on page 789 are assumed to exist and be active.

```
//----Preparing the instrument -----
*RST
//Resets the instrument
INIT: CONT OFF
//Selects single sweep mode.
//-----Configuring the measurement -----
FREQ:CENT 100MHz
//Defines the center frequency
FREQ:SPAN 200MHz
//Sets the span to 100 MHz on either side of the center frequency.
SENS:SWE:COUN 10
//Defines 10 sweeps to be performed in each measurement.
DISP:TRAC1:Y:RLEV 0dBm
//Sets the reference level to 0 dBm.
TRIG:SOUR IFP
TRIG:LEV:IFP -10dBm
//Defines triggering when the second intermediate frequency rises to a level
//of -10 dBm.
//----Configuring the Trace-----
DISP:TRAC2 ON
DISP:TRAC2:MODE AVER
DISP:TRAC3 ON
DISP:TRAC3:MODE MAXH
//Configures 3 traces: 1 (default): clear/write; 2: average; 3: max hold
//----- Configuring the limit check ------
MMEM:LOAD:TYPE REPL
MMEM:LOAD:STAT 1,'LimitLines_FM1_FM3'
//Loads the limit lines stored in 'LimitLines FM1 FM3'
CALC:LIM1:NAME 'FM1'
CALC:LIM1:UPP:STAT ON
//Activates upper limit FM1 as line 1.
CALC:LIM3:NAME 'FM3'
CALC:LIM3:LOW:STAT ON
//Activates lower limit line FM3 as line 3.
CALC:LIM:ACT?
//Queries the names of all active limit lines
//Result: 'FM1,FM3'
CALC:LIM1:TRAC3:CHEC ON
//Activates the upper limit to be checked against trace3 (maxhold trace)
```

Managing Settings and Results

8.9 Managing Settings and Results

The commands required to store and load instrument settings and import and export measurement results in a remote environment are described here.

Addressing drives

The various drives can be addressed via the "mass storage instrument specifier" <msis> using the conventional Windows syntax. The internal hard disk is addressed by "C:".

For details on storage locations refer to "Storage Location and Filename" on page 105.

The file names (<FileName> parameter) are given as string parameters enclosed in quotation marks. They also comply with Windows conventions. Windows file names do not distinguish between uppercase and lowercase notation.

Wildcards

The two characters "*" and "?" can be used as "wildcards", i.e., they are variables for a selection of several files. The question mark "?" replaces exactly one character, the asterisk replaces any of the remaining characters in the file name. "*.*" thus means all files in a directory.

Path names

Storage locations can be specified either as absolute (including the entire path) or relative paths (including only subfolders of the current folder). Use the MMEM: CDIR? query to determine the current folder.

•	General Data Storage and Loading Commands	793
•	Selecting the Items to Store	799
•	Storing and Loading Instrument Settings	302

Managing Settings and Results

•	Storing or Printing Screenshots	. 806
	Storing Measurement Results	
•	Examples: Managing Data	818

8.9.1 General Data Storage and Loading Commands

The following commands are available for all applications.

See also:

• FORMat[:DATA] on page 707

FORMat:DEXPort:DSEParator	793
MMEMory:CATalog?	794
MMEMory:CATalog:LONG?	794
MMEMory:CDIRectory	795
MMEMory:COMMent	795
MMEMory:COPY	795
MMEMory:DATA	796
MMEMory:DELete	796
MMEMory:MDIRectory	796
MMEMory:MOVE	797
MMEMory:MSIS	
MMEMory:NAME	797
MMEMory:NETWork:DISConnect	797
MMEMory:NETWork:MAP	798
MMEMory:NETWork:UNUSeddrives?	798
MMEMory:NETWork:USEDdrives?	
MMEMory:RDIRectory	799

FORMat:DEXPort:DSEParator < Separator >

This command selects the decimal separator for data exported in ASCII format.

Parameters:

<Separator> COMMa

Uses a comma as decimal separator, e.g. 4,05.

POINt

Uses a point as decimal separator, e.g. 4.05.

*RST: *RST has no effect on the decimal separator.

Default is POINt.

Example: FORM: DEXP: DSEP POIN

Sets the decimal point as separator.

Manual operation: See " Decimal Separator " on page 113

See "Saving the Result Summary (Evaluation List) to a File "

on page 317

See " Save Evaluation List " on page 340 See " Export Peak List " on page 456

Managing Settings and Results

MMEMory:CATalog? <Path>

This command returns the contents of a particular directory.

Query parameters:

<Path> String containing the path and directory

If you leave out the path, the command returns the contents of

the directory selected with MMEMory: CDIRectory.

The path may be relative or absolute. Using wildcards ('*') is

possible to query a certain type of files only.

If you use a specific file as a parameter, the command returns the name of the file if the file is found in the specified directory, or an error if the file is not found ("-256, "File name not

found").

Return values:

<FileNames> List of file and directory names, separated by commas

If no files are found, an error is displayed: "-256, "File name

not found"

Example: MMEM:CAT? 'C:

\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\SPOOL?

Returns all files in

C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user

whose names start with SPOOL, have 6 letters and the exten-

sion . PNG, e.g.:

SPOOL1.PNG, SPOOL2.PNG, SPOOL3.PNG

Example: MMEM:CAT? 'C:

\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\SPOOL6

Query whether the file 'SPOOL6.PNG' also exists in the directory;

Result:

-256, "File name not found;:MMEMory:CATalog?

'C:\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\SPOOL6.PNG'

Usage: Query only

Manual operation: See "Selecting Storage Location - Drive/ Path/ Files"

on page 106

MMEMory:CATalog:LONG? <Path>

This command returns the contents of a particular directory with additional information about the files.

Query parameters:

<Path> String containing the path and directory.

If you leave out the path, the command returns the contents of

the directory selected with MMEMory: CDIRectory.

The path may be relative or absolute. Using wildcards ('*') is

possible to query a certain type of files only.

Managing Settings and Results

Return values:

<UsedDiskSpace> Byte size of all files in the directory.

<FreeDiskSpace> Remaining disk space in bytes.

<FileInfo> <NameFileN>,<SuffixFileN>,<SizeFileN>

Describes the individual file.

<NameFileN>
Name of the file.
<SuffixFileN>

Type of the file. Possible suffixes are: ASCii, BINary, DIRectory,

STAT

<SizeFileN>

Size of the file in bytes.

Usage: Query only

MMEMory: CDIRectory < Directory>

This command changes the current directory.

Parameters:

<Directory> String containing the path to another directory.

The path may be relative or absolute.

MMEMory: COMMent < Comment>

This command defines a comment for the stored settings.

Parameters:

<Comment> String containing the comment.

Example: MMEMory: COMMent "ACP measurement with Standard

Tetra from 23.05."

MMEMory::MMEMory:STORe1:STATe 1, "ACP T"

As a result, in the selection list for recall settings, the comment

"ACP measurement with Standard Tetra from

23.05." is added to the ACP entry.

Manual operation: See " Comment " on page 107

MMEMory: COPY < SourceFile>, < DestinationFile>

This command copies one or more files to another directory.

Parameters:

<SourceFile> String containing the path and file name of the source file.

<DestinationFile> String containing the path and name of the target file.

The path may be relative or absolute.

Managing Settings and Results

MMEMory:DATA <FileName>, [<Block>]

This command writes block data into a file. The delimiter must be set to EOI to obtain error-free data transfer.

When you query the contents of a file, you can save them in a file on the remote control computer.

The command is useful for reading stored settings files or trace data from the instrument or for transferring them to the instrument

Parameters:

<FileName> String containing the path and name of the target file.

<Block> Data block with the following structure.

#

Hash sign. <number>

Length of the length information.

<number>

Length information of the binary data (number of bytes).

<data>

Binary data with the indicated <number> of bytes.

Example: MMEM:NAME '\Public\User\Testfile.txt'

Creates a new file called 'testfile.txt'.

MMEM:DATA 'Testfile.txt', #220Contents of the

file

The parameter means:

#2: hash sign and length of the length information (20 bytes = 2

digits)

20: indicates the number of subsequent binary data bytes.

Contents of the file: store 20 binary bytes (characters) to the file.

MMEMory: DELete < File Name >

This command deletes a file.

Parameters:

<FileName> String containing the path and file name of the file to delete.

The path may be relative or absolute.

Usage: Event

MMEMory:MDIRectory < Directory>

This command creates a new directory.

Parameters:

<Directory> String containing the path and new directory name

The path may be relative or absolute.

Usage: Event

Managing Settings and Results

MMEMory:MOVE <SourceFile>,<NewFileName>

This command moves a file to another directory.

The command also renames the file if you define a new name in the target directory. If you do not include a path for <NewFileName>, the command just renames the file.

Parameters:

<SourceFile> String containing the path and file name of the source file.

<NewFileName> String containing the path and name of the target file.

Example: MMEM:MOVE 'C:\TEST01.CFG', 'SETUP.CFG'

Renames TEST01.CFG in SETUP.CFG in directory C:\.

Usage: Event

MMEMory: MSIS < Device>

This command selects the default storage device used by all MMEMory commands.

Parameters:

<Device> 'A:' | 'C:' | ... | 'Z:'

String containing the device drive name

*RST: n.a.

MMEMory:NAME <FileName>

This command has several purposes, depending on the context it is used in.

- It creates a new and empty file.
- It defines the file name for screenshots taken with HCOPy[: IMMediate<device>]. Note that you have to route the printer output to a file.

Parameters:

<FileName> String containing the path and name of the target file.

Example: MMEM:NAME 'C:

\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\PRINT1

Selects the file name.

MMEMory:NETWork:DISConnect <Drive>[, <Force>]

This command disconnects a network drive.

Parameters:

<Drive> String containing the drive name.

Managing Settings and Results

<Force> 1 | 0 | ON | OFF

Optional: determines whether disconnection is forced or not

1 | ON

Disconnection is forced.

0 | OFF

Disconnect only if not in use.

*RST: 0

Usage: Event

MMEMory:NETWork:MAP <Drive>, <HostName> [, <UserName>, <Password>][, <Reconnect>]

This command maps a drive to a server or server directory of the network.

Note that you have to allow sharing for a server or folder in Microsoft networks first.

Parameters:

<Drive> String containing the drive name or path of the directory you

want to map.

<HostName> String containing the host name of the computer or the IP

address and the share name of the drive. '<\host name or IP address\share name>'

<UserName> String containing a user name in the network.

The user name is optional.

<Password> String containing the password corresponding to the <User-

Name>.

The password is optional.

<Reconnect> ON | OFF | 1 | 0

ON | 1

Reconnects at logon with the same user name.

OFF | 0

Does not reconnect at logon.

Usage: Event

MMEMory:NETWork:UNUSeddrives?

This command returns a list of unused network drives.

Return values:

<DriveName> List of network drives in alphabetically descending order, e.g.

'W:,V:,U:,...'

Usage: Query only

Managing Settings and Results

MMEMory:NETWork:USEDdrives? <State>

This command returns a list of all network drives in use.

Parameters:

<State> You do not have to use the parameter. If you do not include the

parameter, the command returns a list of all drives in use. This is the same behavior as if you were using the parameter OFF.

ON | 1

Returns a list of all drives in use including the folder information.

OFF | 0

Returns a list of all drives in use.

Usage: Query only

MMEMory:RDIRectory < Directory>

This command deletes the indicated directory.

Parameters:

<Directory> String containing the path of the directory to delete.

Note that the directory you want to remove must be empty.

Usage: Event

8.9.2 Selecting the Items to Store

The following commands select the items to be included in the configuration file.

Depending on the used command, either the items from the entire instrument (MMEMory: Select[:ITEM]...), or only those from the currently selected channel setup (MMEM: Select: CHANnel[:ITEM]...) are stored.

MMEMory:SELect:CHANnel[:ITEM]:ALL	800
MMEMory:SELect[:ITEM]:ALL	800
MMEMory:SELect:CHANnel[:ITEM]:DEFault	800
MMEMory:SELect[:ITEM]:DEFault	800
MMEMory:SELect:CHANnel[:ITEM]:HWSettings	
MMEMory:SELect[:ITEM]:HWSettings	800
MMEMory:SELect:CHANnel[:ITEM]:LINes:ALL	801
MMEMory:SELect[:ITEM]:LINes:ALL	801
MMEMory:SELect:CHANnel[:ITEM]:NONE	801
MMEMory:SELect[:ITEM]:NONE	801
MMEMory:SELect:CHANnel[:ITEM]:SPECtrogram	
MMEMory:SELect:CHANnel[:ITEM]:SGRam	801
MMEMory:SELect[:ITEM]:SPECtrogram	
MMEMory:SELect[:ITEM]:SGRam	
MMEMory:SELect:CHANnel[:ITEM]:TRACe[:ACTive]	
MMEMory:SELect[:ITEM]:TRACe[:ACTive]	802

Managing Settings and Results

MMEMory:SELect:CHANnel[:ITEM]:TRANsducer:ALL	. 802
MMFMorv:SFI ect[:ITFM]:TRANsducer:ALI	802

MMEMory:SELect:CHANnel[:ITEM]:ALL MMEMory:SELect[:ITEM]:ALL

This command includes all items when storing or loading a configuration file.

The items are:

- Hardware configuration: MMEMory:SELect[:ITEM]:HWSettings
- Limit lines: MMEMory: SELect[:ITEM]:LINes:ALL
- Spectrogram data: MMEMory: SELect[:ITEM]: SGRam
- Trace data: MMEMory: SELect[:ITEM]:TRACe[:ACTive]
- Transducers: MMEMory: SELect[:ITEM]:TRANsducer:ALL

Example: MMEM:SEL:ALL

Usage: Event

Manual operation: See "Items: " on page 107

MMEMory:SELect:CHANnel[:ITEM]:DEFault MMEMory:SELect[:ITEM]:DEFault

This command selects the current settings as the only item to store to and load from a configuration file.

Usage: Event

Manual operation: See "Items: " on page 107

MMEMory:SELect:CHANnel[:ITEM]:HWSettings <State> MMEMory:SELect[:ITEM]:HWSettings <State>

This command includes or excludes measurement (hardware) settings when storing or loading a configuration file.

Measurement settings include:

- general channel configuration
- measurement hardware configuration including markers
- limit lines

Note that a configuration may include no more than 8 limit lines. This number includes active limit lines as well as inactive limit lines that were used last. Therefore the combination of inactivate limit lines depends on the sequence of use with MMEMory:LOAD:STATE.

- color settings
- configuration for the hardcopy output

Managing Settings and Results

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: MMEM:SEL:HWS ON

Manual operation: See "Items: " on page 107

MMEMory:SELect:CHANnel[:ITEM]:LINes:ALL <State>
MMEMory:SELect[:ITEM]:LINes:ALL <State>

This command includes or excludes all limit lines (active and inactive) when storing or loading a configuration file.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: MMEM: SEL: LIN: ALL ON

Manual operation: See "Items: " on page 107

MMEMory:SELect:CHANnel[:ITEM]:NONE MMEMory:SELect[:ITEM]:NONE

This command does not include any of the following items when storing or loading a configuration file.

- Hardware configuration: MMEMory: SELect[:ITEM]: HWSettings
- Limit lines: MMEMory: SELect[:ITEM]:LINes:ALL
- Spectrogram data: MMEMory:SELect[:ITEM]:SGRam
- Trace data: MMEMory: SELect[:ITEM]:TRACe[:ACTive]
- Transducers: MMEMory: SELect[:ITEM]: TRANsducer: ALL

Example: MMEM:SEL:NONE

Usage: Event

Manual operation: See "Items: " on page 107

MMEMory:SELect:CHANnel[:ITEM]:SPECtrogram <State>
MMEMory:SELect:CHANnel[:ITEM]:SGRam <State>
MMEMory:SELect[:ITEM]:SPECtrogram <State>
MMEMory:SELect[:ITEM]:SGRam <State>

This command includes or excludes spectrogram data when storing or loading a configuration file.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Managing Settings and Results

Example: MMEM:SEL:SGR ON

Adds the spectrogram data to the list of data subsets.

Manual operation: See "Items: " on page 107

MMEMory:SELect:CHANnel[:ITEM]:TRACe[:ACTive] <State>
MMEMory:SELect[:ITEM]:TRACe[:ACTive] <State>

This command includes or excludes trace data when storing or loading a configuration file.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0, i.e. no traces are stored

Example: MMEM:SEL:TRAC ON

Manual operation: See " Items: " on page 107

MMEMory:SELect:CHANnel[:ITEM]:TRANsducer:ALL <State>
MMEMory:SELect[:ITEM]:TRANsducer:ALL <State>

This command includes or excludes transducer factors when storing or loading a configuration file.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: MMEM: SEL: TRAN: ALL ON

Manual operation: See "Items: " on page 107

See "Save on page 156

8.9.3 Storing and Loading Instrument Settings

See also:

• INSTrument [: SELect] on page 536 to select the channel setup.

MMEMory:CLEar:ALL	803
MMEMory:CLEar:STATe	803
MMEMory:LOAD:AUTO	
MMEMory:LOAD:STATe	
MMEMory:STORe <n>:STATe</n>	
MMEMory:STORe <n>:STATe:NEXT</n>	
MMEMory:STORe <n>:TYPE</n>	805
SYSTem:PRESet	
SYSTem:PRESet:CHANnel[:EXEC]	806

Managing Settings and Results

MMEMory:CLEar:ALL

This command deletes all instrument configuration files in the current directory.

You can select the directory with MMEMory: CDIRectory.

Example: MMEM:CLE:ALL

Usage: Event

MMEMory:CLEar:STATe 1,<FileName>

This command deletes an instrument configuration file.

Parameters:

1

<FileName> String containing the path and name of the file to delete.

The string may or may not contain the file's extension.

Example: MMEM:CLE:STAT 1, 'TEST'

Usage: Event

MMEMory:LOAD:AUTO 1, 'Factory' | <FileName>

This command restores an instrument configuration and defines that configuration as the default state.

The default state is restored after a preset (*RST) or after you turn on the R&S FPL1000.

Parameters:

1

'Factory' | 'Factory'

<FileName> Restores the factory settings as the default state.

'<file name>

String containing the path and name of the configuration file. Note that only *instrument* settings files can be selected for the startup recall function; channel setup files cause an error.

Example: MMEM:LOAD:AUTO 1,'C:

\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\TEST'

Usage: Event

Manual operation: See "Startup Recall" on page 108

MMEMory:LOAD:STATe 1, <FileName>

This command restores and activates the instrument configuration stored in a *.dfl file.

Note that files with other formats cannot be loaded with this command.

Managing Settings and Results

The contents that are reloaded from the file are defined by the last selection made either in the "Save/Recall" dialogs (manual operation) or through the MMEMory: SELect[:ITEM] commands (remote operation; the settings are identical in both cases).

By default, the selection is limited to the user settings ("User Settings" selection in the dialogs, HWSettings in SCPI). The selection is not reset by [Preset] or *RST.

As a consequence, the results of a SCPI script using the MMEMory:LOAD:STATe command without a previous MMEMory:SELect[:ITEM] command may vary, depending on previous actions in the GUI or in previous scripts, even if the script starts with the *RST command.

It is therefore recommended that you use the appropriate MMEMory: SELect[:ITEM] command before using MMEMory:LOAD:STATe.

Parameters:

1

<FileName> String containing the path and name of the file to load.

The string may or may not include the file's extension.

Example: MMEM:SEL:ALL

//Save all items (User Settings, All Traces, All Limit Lines) from

the R&S FPL1000.

MMEM:LOAD:STAT 1, 'C:

\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\TEST01

//Reloads all items

In the "Recall" dialog, select only "User Settings" and "All Limit

Lines".

MMEM:LOAD:STAT 1, 'C:

\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\TEST01

//Reloads user settings and all limit lines.

*RST

//Reset instrument.

MMEM:LOAD:STAT 1, 'C:

\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\TEST01

//Selected items are retained. Reloads user settings and all limit

lines.

Restart the instrument.

(Switch the [ON/OFF] key off and on).

MMEM:LOAD:STAT 1, 'C:

\Users\Public\Documents\Rohde-Schwarz\Analyzer\user\TEST01

// Selected items are set to default. Reloads only the user set-

tings.

Manual operation: See "Recall " on page 104

See "Recall in New Channel / Recall in Current Channel "

on page 107

MMEMory:STORe<n>:STATe 1,<FileName>

This command saves the current instrument configuration in a *.dfl file.

Managing Settings and Results

Suffix:

<n> irrelevant

Parameters:

1

<FileName> String containing the path and name of the target file.

The file extension is .dfl.

Example: MMEM:STOR:STAT 1, 'Save'

Saves the current instrument settings in the file Save.dfl.

Usage: Event

Manual operation: See "Save File "on page 107

See "Save" on page 156

MMEMory:STORe<n>:STATe:NEXT

This command saves the current instrument configuration in a *.dfl file.

The file name depends on the one you have set with MMEMory:STORe<n>:STATe.

This command adds a consecutive number to the file name.

Suffix:

<n> irrelevant

Example: MMEM:STOR:STAT 1, 'Save'

Saves the current instrument settings in the file Save.dfl.

MMEM:STOR:STAT:NEXT

Saves the current instrument settings in the file Save_001.dfl

MMEM:STOR:STAT:NEXT

Saves the current instrument settings in the file Save 002.dfl

Usage: Event

Manual operation: See "Save File "on page 107

MMEMory:STORe<n>:TYPE <Mode>

This command defines whether the data from the entire instrument or only from the current channel setup is stored with the subsequent MMEM: STOR... command.

Suffix:

<n> irrelevant

Parameters:

<Mode> INSTrument | CHANnel

INSTrument

Stores data from the entire instrument.

CHANnel

Stores data from an individual channel setup.

*RST: INST

Managing Settings and Results

Example: INST:SEL 'SPECTRUM2'

Selects channel setup 'SPECTRUM2'.

MMEM:STOR:TYPE CHAN

Specifies that channel setup data is to be stored.

SYSTem:PRESet

This command presets the R&S FPL1000.

Example: SYST: PRES

Usage: Event

SYSTem:PRESet:CHANnel[:EXEC]

This command restores the default instrument settings in the current channel setup.

Use INST: SEL to select the channel setup.

For details see Chapter 6.2.1, "Restoring the Default Instrument Configuration (Preset)", on page 100.

Example: INST:SEL 'Spectrum2'

Selects the channel setup for "Spectrum2".

SYST: PRES: CHAN: EXEC

Restores the factory default settings to the "Spectrum2" channel

setup.

Usage: Event

Manual operation: See "Preset Channel Setup" on page 233

8.9.4 Storing or Printing Screenshots

Useful commands to configure screenshots described elsewhere

MMEMory:NAME on page 797

Remote commands exclusive to configuring screenshots

DISPlay:LOGO	807
HCOPy:ABORt	
HCOPy:CONTent	807
HCOPy:CMAP <item>:DEFault<colors></colors></item>	808
HCOPy:DESTination <device></device>	809
HCOPy:DEVice:COLor	809
HCOPy:DEVice:LANGuage <device></device>	
HCOPy[:IMMediate <device>]</device>	810
HCOPy[:IMMediate <device>]:NEXT</device>	810
HCOPy:ITEM:WINDow:TEXT	810
HCOPy:PAGE:COLINT:STATe	811

Managing Settings and Results

HCOPy:PAGE:MARGin <device>:BOTTom</device>	811
HCOPy:PAGE:MARGin <device>:LEFT</device>	811
HCOPy:PAGE:MARGin <device>:RIGHt</device>	812
HCOPy:PAGE:MARGin <device>:TOP</device>	812
HCOPy:PAGE:MARGin <device>:UNIT</device>	812
HCOPy:PAGE:ORIentation <device></device>	813
HCOPy:PAGE:WINDow <device>:CHANnel:STATe</device>	
HCOPy:PAGE:WINDow <device>:COUNt</device>	814
HCOPy:PAGE:WINDow <device>:SCALe</device>	814
HCOPy:PAGE:WINDow <device>:STATe</device>	814
HCOPy:TDSTamp:STATe <device></device>	815
SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?	
SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?	816
SYSTem:COMMunicate:PRINter:SELect <device></device>	

DISPlay:LOGO <State>

Activates/deactivates the printout of the Rohde & Schwarz company logo at the top of each page.

Parameters:

<State> 1 | 0 | ON | OFF

1 | ON

Logo is printed.

0 | OFF

Logo is not printed.

*RST: 1

Example: DISP:LOGO OFF

Manual operation: See " Print Logo " on page 116

HCOPy:ABORt

This command aborts a running hardcopy output.

Example: HCOP:ABOR

Usage: Event

HCOPy:CONTent <ContType>

This command determines the type of content included in the printout.

Managing Settings and Results

Parameters:

<ContType> WINDows | HCOPy

WINDows

Includes only the selected windows in the printout. All currently active windows for the current channel setup (or "MultiView") are available for selection. How many windows are printed on a each page of the printout is defined by HCOPY: PAGE:

WINDow<device>: COUNt on page 814.

This option is not available when copying to the clipboard (HCOP:DEST 'SYST:COMM:CLIP' or an image file (see HCOPy:DEVice:LANGuage<device> on page 809).

If the destination is currently set to an image file or the clipboard, it is automatically changed to be a PDF file.

HCOPy

Selects all measurement results displayed on the screen for the current channel setup (or "MultiView"): diagrams, traces, markers, marker lists, limit lines, etc., including the channel setup bar and status bar, for printout on a single page. Displayed items belonging to the software user interface (e.g. softkeys) are not included. The size and position of the elements in the printout is identical to the screen display.

*RST: HCOPy

Example: HCOP:DEST1 'SYST:COMM:CLIP'

HCOP:CONT WIND
HCOP:DEST1?
//Result: 'MMEM'
HCOP:DEV:LANG1?
//Result: 'PDF'

"Print to clipboard" is automatically switched to "print to PDF file"

when the contents are switched to "multiple windows".

Manual operation: See "Print Screenshot" on page 116

See "Print Multiple Windows" on page 116

HCOPy:CMAP<item>:DEFault<colors>

This command defines the color scheme for print jobs.

Suffix:

<item> Irrelevant.

<colors> 1...4

1

Current colors with a white background and a black grid.

2

Optimized colors.

4

Current screen colors (setting for hardcopies).

Managing Settings and Results

Example: HCOP:CMAP:DEF2

Selects the optimized color set for the color settings of a printout

or a hardcopy.

Usage: Event

Manual operation: See " Print Colors " on page 135

HCOPy:DESTination<device> < Destination>

This command selects the destination of a print job.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<Destination> 'MMEM'

Sends the hardcopy to a file.

You can select the file name with MMEMory: NAME.
You can select the file format with HCOPY: DEVice:

LANGuage<device>.

'SYST:COMM:PRIN'

Sends the hardcopy to a printer.

You can select the printer with SYSTem: COMMunicate:

PRINter:SELect<device>.

'SYST:COMM:CLIP'

Sends the hardcopy to the clipboard.

The format should be WEMF.

*RST: 'SYST:COMM:CLIP'

Manual operation: See " Destination " on page 119

HCOPy:DEVice:COLor <State>

This command turns color printing on and off.

Parameters:

<State> ON | 1

Color printing

OFF | 0

Black and white printing

*RST:

Example: HCOP:DEV:COL ON

HCOPy:DEVice:LANGuage<device> <Format>

This command selects the file format for a print job.

Managing Settings and Results

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<Format> GDI

Graphics Device Interface

Default format for output to a printer configured under Windows.

Must be selected for output to the printer interface.

Can be used for output to a file. The printer driver configured under Windows is used to generate a printer-specific file format.

BMP, JPG, PNG

Data format for output to files only.

Example: HCOP:DEV:LANG1 PNG

Manual operation: See " Destination " on page 119

HCOPy[:IMMediate<device>]

This command initiates a print job.

If you are printing to a file, the file name depends on MMEMory: NAME.

Suffix:

<device> 1 | 2

Irrelevant.

Usage: Event

Manual operation: See "Print" on page 118

HCOPy[:IMMediate<device>]:NEXT

This command initiates a print job.

If you are printing to a file, the file name depends on MMEMory: NAME. This command adds a consecutive number to the file name.

Suffix:

<device> 1 | 2

Irrelevant. Suffix 2 is not allowed

Usage: Event

Manual operation: See "Print" on page 118

HCOPy:ITEM:WINDow:TEXT < Comment>

This command defines a comment to be added to the printout.

Parameters:

<Comment> String containing the comment.
Manual operation: See " Comment " on page 116

Managing Settings and Results

HCOPy:PAGE:COUNt:STATe <State>

This command includes or excludes the page number for printouts consisting of multiple pages (HCOP:CONT WIND).

Parameters:

<State> 1 | 0 | ON | OFF

1 | ON

The page number is printed.

0 | OFF

The page number is not printed.

*RST: 1

Example: HCOP:PAGE:COUN:STAT ON

Manual operation: See "Print Page Count" on page 116

HCOPy:PAGE:MARGin<device>:BOTTom <Margin>

This command defines the margin at the bottom of the printout page on which no elements are printed. The margins are defined according to ${\tt HCOPy:PAGE:}$

MARGin<device>:UNIT on page 812.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<Margin> numeric value

*RST: 4.23 mm

Example: HCOP:PAGE:MARG2:BOTT 2

Manual operation: See "Margins" on page 122

HCOPy:PAGE:MARGin<device>:LEFT <Margin>

This command defines the margin at the left side of the printout page on which no elements are printed. The margins are defined according to HCOPy: PAGE:

MARGin<device>:UNIT on page 812.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<Margin> numeric value

*RST: 4.23 mm

Example: HCOP:PAGE:MARG2:LEFT 2

Manual operation: See "Margins" on page 122

Managing Settings and Results

HCOPy:PAGE:MARGin<device>:RIGHt < Margin>

This command defines the margin at the right side of the printout page on which no elements are printed. The margins are defined according to HCOPY: PAGE: MARGin<device>:UNIT on page 812.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<Margin> numeric value

*RST: 4.23 mm

Example: HCOP: PAGE: MARG2: RIGH 2

Manual operation: See " Margins " on page 122

HCOPy:PAGE:MARGin<device>:TOP <Margin>

This command defines the margin at the top of the printout page on which no elements are printed. The margins are defined according to HCOPy:PAGE:MARGin<device>:
UNIT on page 812.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<Margin> numeric value

*RST: 4.23 mm

Example: HCOP:PAGE:MARG2:TOP 2

Manual operation: See "Margins" on page 122

HCOPy:PAGE:MARGin<device>:UNIT <Unit>

This command defines the unit in which the margins for the printout page are configured.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<Unit> MM | IN

MM

millimeters

IN inches

*RST: MM

Managing Settings and Results

Example: HCOP:PAGE:MARG2:BOTT 2

Manual operation: See " Margins " on page 122

HCOPy:PAGE:ORlentation<device> < Orientation>

The command selects the page orientation of the printout.

The command is only available if the output device is a printer or a PDF file.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<Orientation> LANDscape | PORTrait

*RST: PORTrait

Example: HCOP:DEV:LANG1 PDF

HCOP: PAGE: ORI2 LAND

Manual operation: See "Orientation" on page 121

HCOPy:PAGE:WINDow<device>:CHANnel:STATe <ChannelName>, <State>

This command selects all windows of the specified channel setup to be included in the printout for HCOP: CONT WIND.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<ChannelName> String containing the name of the channel setup.

For a list of available channel setup types use INSTrument:

LIST? on page 535.

<State> 1 | 0 | ON | OFF

1 | ON

The channel setup windows are included in the printout.

0 | OFF

The channel setup windows are not included in the printout.

*RST: 1

Example: HCOP:CONT WIND

HCOP:PAGE:WIND2:CHAN 'IQ Analyzer',0
HCOP:PAGE:WIND2:STAT 'IQ Analyzer','1',1
Prints only window 1 in the IQ Analyzer channel setup.

Manual operation: See " Print Multiple Windows " on page 116

Managing Settings and Results

HCOPy:PAGE:WINDow<device>:COUNt <WinPerPage>

This command defines how many windows are displayed on a single page of the printout for HCOP: CONT WIND.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<WinPerPage> integer

*RST: 1

Example: HCOP:PAGE:WIND2:COUN 2

Manual operation: See "Windows Per Page" on page 121

HCOPy:PAGE:WINDow<device>:SCALe < Mode>

This command determines the scaling of the windows in the printout for HCOP: CONT WIND.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<Mode> 1 | 0 | ON | OFF

1 | ON

Each window is scaled to fit the page size optimally, not regarding the aspect ratio of the original display. If more than one win-

dow is printed on one page (see HCOPy:PAGE:

WINDow<device>: COUNt on page 814), each window is prin-

ted in equal size. ("Size to fit")

0 | OFF

Each window is printed as large as possible while maintaining

the aspect ratio of the original display.

("Maintain aspect ratio")

*RST: 1

Example: HCOP:PAGE:WIND2:SCAL 0

Manual operation: See "Scaling" on page 122

HCOPy:PAGE:WINDow<device>:STATe <ChannelName>, <WindowName>,<State>

This command selects the windows to be included in the printout for $\mbox{HCOP}:\mbox{CONT}$ WIND.

Managing Settings and Results

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<ChannelName> String containing the name of the channel setup.

For a list of available channel setup types use INSTrument:

LIST? on page 535.

<WindowName> String containing the name of the existing window.

By default, the name of a window is the same as its index. To determine the name and index of all active windows in the active channel setup, use the LAYout:CATalog[:WINDow]?

query.

<State> 1 | 0 | ON | OFF

1 | ON

The window is included in the printout.

0 | OFF

The window is not included in the printout.

*RST: 1

Example: HCOP:PAGE:WIND2:STAT 'IQ Analyzer','1',1

Manual operation: See " Print Multiple Windows " on page 116

HCOPy:TDSTamp:STATe<device> <State>

This command includes or excludes the time and date in the printout.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<State> 1 | 0 | ON | OFF

1 | ON

The time and date are printed.

0 | OFF

The time and date are not printed.

*RST: 1

Manual operation: See " Print Date and Time " on page 117

SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?

This command queries the name of the first available printer.

To query the name of other installed printers, use SYSTem:COMMunicate:PRINter: ENUMerate[:NEXT]?.

Managing Settings and Results

Return values:

<PrinterName> String containing the name of the first printer as defined in Win-

dows.

If the command cannot find a printer, it returns an empty string

(' ').

Usage: Query only

Manual operation: See "Printer Name" on page 120

SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?

This command queries the name of available printers.

You have to use SYSTem: COMMunicate: PRINter: ENUMerate: FIRSt? for this command to work properly.

Return values:

<PrinterName> String containing the name of one printer as defined in Windows.

To get a complete list of printers you have to send this query several times until no more printers could be found. In that case, the return value is an empty string (' '). Further queries after the

empty string result in an error.

Usage: Query only

Manual operation: See "Printer Name" on page 120

SYSTem:COMMunicate:PRINter:SELect<device> < PrinterName>

This command selects the printer that processes jobs sent by the R&S FPL1000.

Use HCOPy:DESTination<device> to select another output destination.

Suffix:

<device> 1 | 2

Irrelevant.

Parameters:

<PrinterName> String containing the printer name.

Use

• SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt? and • SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?

to query all available printers.

*RST: NONE

Manual operation: See "Printer Name" on page 120

8.9.5 Storing Measurement Results

The following commands can be used to store the results of a measurement.

Managing Settings and Results

Useful commands for storing results described elsewhere:

• FORMat[:DATA] on page 707

Remote commands exclusive to storing results:

FORMat:DEXPort:HEADer	817
MMEMory:STORe <n>:LIST</n>	817
MMEMory:STORe <n>:PEAK</n>	817
MMEMory:STORe <n>:SGRam</n>	818
MMEMory:STORe <n>:SPECtrogram</n>	
MMEMory:STORe <n>:SPURious</n>	

FORMat:DEXPort:HEADer <State>

If enabled, additional instrument and measurement settings are included in the header of the export file for result data. If disabled, only the pure result data from the selected traces and tables is exported.

See Chapter 7.13.6, "Reference: ASCII File Export Format", on page 522 for details.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Manual operation: See "Include Instrument & Measurement Settings" on page 518

MMEMory:STORe<n>:LIST <FileName>

This command exports the SEM and spurious emission list evaluation to a file.

The file format is *.dat.

Suffix:

<n> Window

Parameters:

<FileName> String containing the path and name of the target file.

Example: MMEM:STOR:LIST 'test'

Stores the current list evaluation results in the test.dat file.

Manual operation: See "Saving the Result Summary (Evaluation List) to a File "

on page 317

See "Save Evaluation List" on page 340

MMEMory:STORe<n>:PEAK <FileName>

This command exports the marker peak list to a file.

Suffix:

<n> Window

Parameters:

<FileName> String containing the path,name and extension of the target file.

Managing Settings and Results

Example: MMEM:STOR:PEAK 'test.dat'

Saves the current marker peak list in the file test.dat.

Usage: Event

Manual operation: See "Export Peak List" on page 456

MMEMory:STORe<n>:SGRam <FileName>
MMEMory:STORe<n>:SPECtrogram <FileName>

This command exports spectrogram data to an ASCII file.

The file contains the data for every frame in the history buffer. The data corresponding to a particular frame begins with information about the frame number and the time that frame was recorded.

Note that, depending on the size of the history buffer, the process of exporting the data can take a while.

Suffix:

<n> Window

Parameters:

<FileName> String containing the path and name of the target file.

Example: MMEM:STOR:SGR 'Spectrogram'

Copies the spectrogram data to a file.

Manual operation: See "Export Trace to ASCII File "on page 112

MMEMory:STORe<n>:SPURious <FileName>

This command exports the marker peak list available for spurious emission measurements to a file.

Suffix:

<n> irrelevant

Parameters:

<FileName> String containing the path and name of the target file.

Example: MMEM:STOR:SPUR 'test'

Saves the current marker peak list in the file test.dat.

Usage: Event

8.9.6 Examples: Managing Data

•	Storing Data	819
	Loading Data	
	Storing Instrument Settings	
	Loading Instrument Settings	820

Managing Settings and Results

8.9.6.1 Storing Data

```
MMEM:MSIS 'C:'
//Selects drive C: as the default storage device.
//----Connecting a network drive-----
MMEM:NETW:USED?
//Returns a list of all drives in use in the network.
MMEM: NETW: UNUS?
//Returns a list of free drive names in the network.
MMEM:NETW:MAP 'Q:','Server\ACLRTest'
//Maps drive Q: to the directory 'Server\ACLRTest'
//----Saving data on the instrument----
MMEM:MDIR 'C:\R S\INSTR\USER\Results'
//Creates a directory called 'Results' on drive C:
MMEM:NAME 'C:\R_S\INSTR\USER\Results\Test001.txt'
//Defines a file called 'Test001.txt'
MMEM:COMM 'ACLR test results'
//Creates a comment for the settings to be displayed in gui.
MMEM:DATA 'Test001.txt', #212FileContents
//Creates the file 'Test001.txt'and writes 12 characters to it
//----Copying the data to another location---
MMEM:COPY 'C:\R S\INSTR\USER\Results\Test001.txt','Q:'
//Copies the specified file to network drive Q:.
MMEM:DEL 'C:\R S\INSTR\USER\Results\Test001.txt'
//Deletes the specified file from the instrument hard disk.
//MMEM:MOVE 'C:\R S\INSTR\USER\Results\Test001.xml','Q:\TestResults.txt'//
//Moves the file 'Test001.txt' to drive Q:, renames it to 'Testresults.txt'
//and removes it from the instrument hard disk.
MMEM:RDIR 'C:\R S\INSTR\USER\Results'
//Deletes the directory called 'Results' from drive C:, unless it still contains any content.
//----Disconnecting the network drive---
MMEM:NETW:DISC 'Q:'
//Disconnect drive Q:.
```

8.9.6.2 Loading Data

```
MMEM:CDIR?
//Returns the path of the current directory.
//e.g.
C:\R_S\Instr\user\
MMEM:CDIR 'C:\R_S\INSTR\USER\Results'
//Changes the current directory.
MMEM:CAT? 'C:\R_S\INSTR\USER\Results\*.xml'
//or
```

Configuring the R&S FPL1000

```
MMEM:CAT? '*.xml'

//Returns a list of all xml files in the directory 'C:\R_S\INSTR\USER\Results'.

MMEM:CAT:LONG? '*.xml'

//Returns additional information about the xml files in the directory 'C:\R S\INSTR\USER\Resu
```

8.9.6.3 Storing Instrument Settings

In this example we will store the instrument settings for the "Spectrum" channel setup.

```
INST:SEL 'SPECTRUM'
//Selects measurement channel 'SPECTRUM'.
MEMM:STOR:TYPE CHAN
//Specifies that channel-specific data is to be stored.
MMEM:STOR:STAT 1, 'C:\R_S\Instr\user\Spectrum'
//Stores the channel settings from the 'Spectrum' channel
// to the file 'Spectrum.dfl'.
```

8.9.6.4 Loading Instrument Settings

In this example we will load the hardware settings from the configuration file Spectrum.dfl to a new "Spectrum2" channel setup.

```
MEMM:LOAD:TYPE NEW

//Specifies that settings will be loaded to a new channel besides the existing

//'Spectrum' channel.

MMEM:SEL:CHAN:HWS ON

//Selects only hardware settings to be loaded.

MMEM:LOAD:STAT 1, 'C:\R_S\Instr\user\Spectrum'

//Loads the channel-specific settings from the file 'C:\R_S\Instr\user\Spectrum.dfl'

//to a new channel. The new channel is named 'Spectrum2' to avoid a naming conflict

//with the existing 'Spectrum' channel.

INST:REN 'Spectrum2', 'Spectrum3'

//Renames the loaded channel to 'Spectrum3'.
```

8.10 Configuring the R&S FPL1000

The remote commands required to set up the R&S FPL1000 are described here.

Configuring the R&S FPL1000

8.10.1 Configuring the Reference Frequency

SENSe:	ROSCillator:SOURce	82	2.
--------	--------------------	----	----

[SENSe:]ROSCillator:SOURce <Source>

This command selects the reference oscillator.

If you want to select the external reference, it must be connected to the R&S FPL1000.

Parameters:

<Source> INTernal

The internal reference is used (10 MHz)

EXTernal

The external reference from the [REF INPUT 10 MHZ] connector is used; if none is available, an error flag is displayed in the sta-

tus bar

Example: ROSC:SOUR EXT

8.10.2 Calibration and Checks

The following commands control calibration and checks on the R&S FPL1000.

CALibration[:ALL]?	821
CALibration:RESult?	
DIAGnostic:SERVice:INPut:PULSed:CFRequency	822
DIAGnostic:SERVice:INPut:RF[:SPECtrum]	
DIAGnostic:SERVice:INPut[:SELect]	
DIAGnostic:SERVice:STESt:RESult?	
SOURce:TEMPerature:FRONtend?	

CALibration[:ALL]?

This command initiates a calibration (self-alignment) routine and queries if calibration was successful.

During the acquisition of correction data the instrument does not accept any remote control commands.

In order to recognize when the acquisition of correction data is completed, the MAV bit in the status byte can be used. If the associated bit is set in the Service Request Enable (SRE) register, the instrument generates a service request after the acquisition of correction data has been completed.

Return values:

<CalibrationState>

The command returns a '0' if calibration was successful.

Configuring the R&S FPL1000

Example: *CLS

Resets the status management.

*SRE 16

Enables MAV bit in the Service Request Enable register.

*CAL?

Starts the correction data recording, and then a service request

is generated.

Usage: Query only

Manual operation: See "Start Self Alignment" on page 162

CALibration: RESult?

This command returns the results collected during calibration.

Return values:

<CalibrationData> String containing the calibration data.

Example: CAL:RES?

would return, e.g.

Total Calibration Status:

PASSED, Date (dd/mm/yyyy): 12/07/2004,

Time: 16:24:54, Runtime: 00.06

Usage: Query only

Manual operation: See "Alignment Results: " on page 163

DIAGnostic:SERVice:INPut:PULSed:CFRequency < Frequency >

This command defines the frequency of the calibration signal.

Before you can use the command, you have to feed in a calibration signal with DIAGnostic:SERVice:INPut[:SELect].

Parameters:

<Frequency> Possible frequencies of the calibration signal are fix.

If you define a frequency that is not available, the R&S FPL1000 uses the next available frequency. Example: a frequency of 20 MHz is rounded up to the next available frequency (25 MHz).

*RST: 50 MHz Default unit: Hz

Manual operation: See " Calibration Frequency RF " on page 147

DIAGnostic:SERVice:INPut:RF[:SPECtrum] <Bandwidth>

This command selects the bandwidth of the calibration signal.

Configuring the R&S FPL1000

Parameters:

<Bandwidth> NARRowband

Narrowband signal for power calibration of the frontend.

BROadband

Broadband signal for calibration of the IF filter.

DIAGnostic:SERVice:INPut[:SELect] <Signal>

This command activates or deactivates the use of an internal calibration signal as input for the R&S FPL1000.

Parameters:

<Signal> CALibration

Uses the calibration signal as RF input.

RF

Uses the signal from the RF input.

*RST: RF

Example: DIAG:SERV:INP CAL

Uses the calibration signal as RF input.

Manual operation: See "NONE" on page 147

See " Calibration Frequency RF " on page 147

DIAGnostic:SERVice:STESt:RESult?

This command queries the self-test results.

Return values:

<Results> String of data containing the results.

The rows of the self-test result table are separated by commas.

Example: DIAG:SERV:STES:RES?

would return, e.g.

"Total Selftest Status:

PASSED", "Date (dd/mm/yyyy): 09/07/2004 TIME:

16:24:54", "Runtime: 00:06", "...

Usage: Query only

SOURce:TEMPerature:FRONtend?

This command queries the current frontend temperature of the R&S FPL1000.

During self-alignment, the instrument's (frontend) temperature is also measured (as soon as the instrument has warmed up completely). This temperature is used as a reference for a continuous temperature check during operation. If the current temperature deviates from the stored self-alignment temperature by a certain degree, a warning is displayed in the status bar indicating the resulting deviation in the measured power levels. A status bit in the STATUS:QUEStionable:TEMPerature register indicates a possible deviation.

Configuring the R&S FPL1000

Return values:

<Temperature> Temperature in degrees Celsius.

Example: SOUR: TEMP: FRON?

Queries the temperature of the frontend sensor.

Usage: Query only

8.10.3 Working with Transducers

The following commands configure and control transducer factors.

Useful commands for transducer management described elsewhere

• MMEMory:SELect[:ITEM]:TRANsducer:ALL on page 802

Remote commands exclusive to transducer management

[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe]	824
[SENSe:]CORRection:TRANsducer:CATalog?	824
[SENSe:]CORRection:TRANsducer:COMMent	825
[SENSe:]CORRection:TRANsducer:DATA	825
[SENSe:]CORRection:TRANsducer:DELete	826
[SENSe:]CORRection:TRANsducer:SCALing	826
[SENSe:]CORRection:TRANsducer:SELect	826
[SENSe:]CORRection:TRANsducer[:STATe]	826
[SENSe:]CORRection:TRANsducer:UNIT	827
MMEMory:LOAD <n>:TFACtor</n>	827
MMEMory:STORe <n>:TFACtor</n>	827

[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe] <State>

This command turns an automatic adjustment of the reference level to the transducer on and off.

Before you can use the command, you have to select and turn on a transducer.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Manual operation: See "Adjust Ref Level " on page 153

[SENSe:]CORRection:TRANsducer:CATalog?

This command queries all transducer factors stored on the R&S FPL1000.

After general data for the transducer storage directory, data for the individual files is listed.

The result is a comma-separated list of values with the following syntax:

<UsedMem>,<FreeMem>,<FileSize>,<FileName>[,<FileSize>,<FileName>]

Configuring the R&S FPL1000

Return values:

<UsedMem> numeric value in bytes

Amount of storage space required by all transducers files in the C:\ProgramData\Rohde-Schwarz\ZNL-FPL\trd directory

(= sum of all individual <FileSize> values)

<FreeMem> numeric value in bytes

Amount of free storage space on the R&S FPL1000

<FileSize> numeric value in bytes

Size of a single transducer file

<FileName> string

Name of a single transducer file

Example: SENSE: CORR: TRAN: CAT?

//Result: 2743,2312620544,720,'FactorGSM.TDF',2023,'FactorBTS.TDF'

Usage: Query only

[SENSe:]CORRection:TRANsducer:COMMent < Comment>

This command defines the comment for the selected transducer factor.

Before you can use the command, you have to select and turn on a transducer.

Parameters:

<Comment> *RST: (empty comment)

Manual operation: See " Comment " on page 155

[SENSe:]CORRection:TRANsducer:DATA

<Frequency>,<Level>[,<Frequency>,<Level>]

This command configures transducer factors for specific trace points. A set of transducer factors defines an interpolated transducer line and can be stored on the instrument.

Parameters:

<Frequency> The unit for <Frequency> is Hz, which may or may not be omit-

ted. Frequencies have to be sorted in ascending order.

<Level> The unit for <Level> depends on [SENSe:] CORRection:

TRANsducer:UNIT.

Example: SENSel:CORRection:TRANsducer:UNIT 'DB'

// Frequency Span 0 Hz to 4 Ghz

SENSel:CORRection:TRANsducer:DATA 0,8,2e6,5,4GHz,3

Creates the transducer points:

Manual operation: See " Data Points " on page 155

Configuring the R&S FPL1000

Frequency	Level
0 Hz	8 dB
2 GHz	5 dB
4 GHz	3 dB

[SENSe:]CORRection:TRANsducer:DELete

This command deletes the currently selected transducer factor.

Before you can use the command, you have to select a transducer.

Example: CORR:TRAN:DEL

Usage: Event

Manual operation: See " Delete Line " on page 154

[SENSe:]CORRection:TRANsducer:SCALing <ScalingType>

This command selects the frequency scaling of the transducer factor.

Parameters:

<ScalingType> LINear | LOGarithmic

*RST: LINear

Manual operation: See "X-Axis Scaling " on page 155

[SENSe:]CORRection:TRANsducer:SELect <Name>

This command selects a transducer factor.

Parameters:

<Name> String containing the name of the transducer factor.

If the name does not exist yet, the R&S FPL1000 creates a

transducer factor by that name.

Example: CORR:TRAN:SEL 'FACTOR1'

Manual operation: See " Activating / Deactivating " on page 153

See " Create New Line " on page 153

See "Name" on page 155

[SENSe:]CORRection:TRANsducer[:STATe] <State>

This command turns the selected transducer factor on or off.

Before you can use the command, you have to select a transducer.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Configuring the R&S FPL1000

Manual operation: See " Activating / Deactivating " on page 153

[SENSe:]CORRection:TRANsducer:UNIT <Unit>

This command selects the unit of the transducer factor.

Before you can use the command, you have to select and turn on a transducer.

Parameters:

<Unit> string as defined in table below

*RST: DB

Example: CORR:TRAN:UNIT 'DBUV'

Manual operation: See "Unit" on page 155

String	Unit
'DB'	dB
'DBM'	dBm
'DBMV'	dBmV
'DBUV'	dΒμV
'DBUV/M'	dBμV/m
'DBUA'	dBμA
'DBUA/M'	dBμA/m
'DBPW'	dBpW
'DBPT'	dBpT

MMEMory:LOAD<n>:TFACtor <FileName>

Loads the transducer factor from the selected file in .CSV format.

Suffix:

<n> irrelevant

Parameters:

<FileName> String containing the path and name of the CSV import file.

Example: MMEM:LOAD:TFAC 'C:\TEST.CSV'

Manual operation: See "Import" on page 156

MMEMory:STORe<n>:TFACtor <FileName>,<TransdName>

This command exports transducer factor data to an ASCII (CSV) file.

For details on the file format see Chapter 6.3.6.3, "Reference: Transducer Factor File Format", on page 156.

Configuring the R&S FPL1000

Suffix:

<n> irrelevant

Parameters:

<FileName> String containing the path and name of the target file.

<TransdName> Name of the transducer factor to be exported.

Example: MMEM:STOR:TFAC 'C:\TEST', 'Transducer1'

Stores the transducer factor named "Transducer1" in the file

TEST.CSV.

Manual operation: See "Export " on page 156

8.10.4 Customizing the Screen Layout

The remote commands required to set up the display of the R&S FPL1000 are described here.

8.10.4.1 General Display Settings and Items

The following commands add, remove or customize general display and screen elements.

Useful commands for general display settings described elsewhere

DISPlay[:WINDow<n>]:MTABle on page 721

Remote commands exclusive to general display settings

DISPlay:ANNotation:CBAR	828
DISPlay:BLIGhting	829
DISPlay:ANNotation:FREQuency	829
DISPlay:SBAR[:STATe]	829
DISPlay:SKEYs[:STATe]	829
DISPlay:TBAR[:STATe]	830
DISPlay:TOUChscreen[:STATe]	830
DISPlay[:WINDow]:TIME	830
DISPlay[:WINDow]:TIME:FORMat	830
SYSTem:DISPlay:FPANel[:STATe]	831

DISPlay:ANNotation:CBAR <State>

This command hides or displays the channel bar information.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Configuring the R&S FPL1000

Example: DISP:ANN:CBAR OFF

Manual operation: See " Channel Bar " on page 132

DISPlay:BLIGhting < Brightness>

Changes the brightness of the display in eight steps.

Parameters:

<Brightness> integer

Range: 0 to 7 *RST: 3

Example: DISP:BLIG 3

Reduces the brightness of the display.

Manual operation: See "Background Lighting" on page 130

DISPlay: ANNotation: FREQuency < State>

This command turns the label of the x-axis on and off.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: DISP:ANN:FREQ OFF

Manual operation: See " Diagram Footer (Annotation) " on page 132

DISPlay:SBAR[:STATe] <State>

This command turns the status bar on and off.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: DISP:SBAR:OFF

Manual operation: See "Status Bar" on page 132

DISPlay:SKEYs[:STATe] <State>

This command turns the softkey bar on and off.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Example: DISP:SKEY:OFF

Manual operation: See "Softkey Bar" on page 132

Configuring the R&S FPL1000

DISPlay:TBAR[:STATe] <State>

This command turns the toolbar on or off.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: DISP:TBAR ON

Manual operation: See "Toolbar" on page 131

DISPlay:TOUChscreen[:STATe] <State>

This command controls the touch screen functionality.

Parameters:

<State> ON | 1

Touch screen is active for entire screen

OFF | 0

Touch screen is inactivate for entire screen

FRAMe

Touch screen is inactivate for the diagram area of the screen,

but active for softkeys, toolbars and menus.

*RST: 1

Example: DISP:TOUC:STAT ON

Manual operation: See " Deactivating and Activating the Touchscreen "

on page 129

DISPlay[:WINDow]:TIME <State>

This command adds or removes the date and time from the display.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: DISP:TIME ON

Manual operation: See " Date and Time " on page 132

DISPlay[:WINDow]:TIME:FORMat <Format>

This command selects the time and date format.

Configuring the R&S FPL1000

Parameters:

<Format> **DE**

dd.mm.yyyy hh:mm:ss

24 hour format.

US

mm/dd/yyyy hh:mm:ss

12 hour format. *RST: DE

Example: DISP:TIME ON

Switches the screen display of date and time on.

DISP:TIME:FORM US

Switches the date and time format to US.

Manual operation: See " Date and Time Format " on page 130

SYSTem:DISPlay:FPANel[:STATe] <State>

This command includes or excludes the front panel keys when working with the remote desktop.

Parameters:

<State> ON | OFF | 0 | 1

*RST: 1

Manual operation: See "Front Panel" on page 133

See "Mini Front Panel" on page 133

8.10.4.2 Colors and Themes

Useful commands to customize display colors described elsewhere

The HCOPY commands define the print colors and thus only take effect on the display colors, if the display shows the printing colors.

HCOPy:CMAP<item>:DEFault<colors> on page 808

Remote commands exclusive to customize the display colors and themes

DISPlay:CMAP <item>:DEFault<colors></colors></item>	831
DISPlay:THEMe:CATalog?	832
DISPlay:THEMe:SELect	832

DISPlay:CMAP<item>:DEFault<colors>

This command resets the color scheme for the display.

Suffix:

<item> Irrelevant.

Configuring the R&S FPL1000

<colors> 1...4

1

Current colors with a white background and a black grid.

2

Optimized colors.

4

Current screen colors (setting for hardcopies).

Example: DISP:CMAP:DEF2

Selects default setting 2 for setting the colors.

Usage: Event

DISPlay:THEMe:CATalog?

This command queries all available display themes.

Return values:

<Themes> String containing all available display themes.

Example: DISP:THEMe:CAT?

Usage: Query only

DISPlay:THEMe:SELect <Theme>

This command selects the display theme.

Parameters:

<Theme> String containing the name of the theme.

*RST: SPL

Example: DISP:THEM:SEL "OceanBlue"

Manual operation: See "Theme" on page 135

8.10.5 Remote Commands for Language Settings

SYSTem:DISPlay:LANGuage.......832

SYSTem:DISPlay:LANGuage < Language >

Defines the language of the software-defined interface elements (such as softkeys, dialog boxes, diagram texts etc.).

Configuring the R&S FPL1000

Parameters:

<Language> 'EN' | 'ZH_CH' | 'ZH_TW' | 'JA' | 'KO' | 'RU'

'ZH_CH'

Simplified Chinese

'ZH TW'

Traditional Chinese *RST: 'EN'

Example: SYST:DISP:LANG 'JA'

Switches the language of the instrument to Japanese.

8.10.6 Configuring the Network and Remote Control

The following commands are required to configure a network or remote control for the R&S FPL1000.

Remote commands exclusive to configuring a network and remote control

SYSTem:COMMunicate:GPIB[:SELF]:ADDRess	833
SYSTem:COMMunicate:GPIB[:SELF]:RTERminator	833
SYSTem:DISPlay:UPDate	834
SYSTem:ERRor:DISPlay	834
SYSTem:IDENtify:FACTory	834
SYSTem:IDENtify[:STRing]	835
SYSTem:KLOCk	835
SYSTem:LANGuage	835
SYSTem:LXI:INFO?	835
SYSTem:LXI:LANReset	836
SYSTem:LXI:MDEScription	836
SYSTem:LXI:PASSword	
SYSTem:REVision:FACTory	836

SYSTem:COMMunicate:GPIB[:SELF]:ADDRess <Address>

This command sets the GPIB address of the R&S FPL1000.

Parameters:

<Address> Range: 0 to 30

*RST: (no influence on this parameter, factory default 20)

Example: SYST:COMM:GPIB:ADDR 18

Manual operation: See "GPIB Address" on page 205

SYSTem:COMMunicate:GPIB[:SELF]:RTERminator < Terminator >

This command selects the GPIB receive terminator.

Output of binary data from the instrument to the control computer does not require such a terminator change.

Configuring the R&S FPL1000

Parameters:

<Terminator> LFEOI | EOI

LFEOI

According to the standard, the terminator in ASCII is <LF>

and/or <EOI>.

EOI

For binary data transfers (e.g. trace data) from the control computer to the instrument, the binary code used for <LF> might be included in the binary data block, and therefore should not be interpreted as a terminator in this particular case. This can be availed by using only the receive terminator FOT.

avoided by using only the receive terminator EOI.

*RST: LFEOI

Example: SYST:COMM:GPIB:RTER EOI

Manual operation: See "GPIB Terminator" on page 206

SYSTem:DISPlay:UPDate <State>

This command turns the display during remote operation on and off.

If on, the R&S FPL1000 updates the diagrams, traces and display fields only.

The best performance is obtained if the display is off during remote control operation.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: SYST:DISP:UPD ON

Manual operation: See "Remote Display Update" on page 206

SYSTem: ERRor: DISPlay < State>

This command the error display during remote operation on and off.

If activated, the R&S FPL1000 displays a message box at the bottom of the screen that contains the most recent type of error and the command that caused the error.

Parameters:

<State> ON | OFF | 1 | 0

*RST: 0

Example: SYST:ERR:DISP ON

Manual operation: See "Display Remote Errors" on page 206

SYSTem:IDENtify:FACTory

This command resets the query to *IDN? to its default value.

Usage: Event

Configuring the R&S FPL1000

Manual operation: See "Reset to Factory String" on page 205

SYSTem:IDENtify[:STRing] <String>

This command defines the response to *IDN?.

Parameters:

<String> String containing the description of the instrument.

Manual operation: See "Identification String" on page 205

SYSTem:KLOCk <State>

This command activates the local lockout (remote control) or returns to the local mode.

Parameters:

<State> ON

LLO (local lockout)

OFF

GTL (go to local)
*RST: OFF

Example: SYST: KLOK ON

Activates LLO (remote control)

Manual operation: See "Local" on page 211

SYSTem:LANGuage < Language >

This function is used to emulate previous R&S signal and spectrum analyzers.

Parameters:

<Language> "FSV" | "SCPI"

*RST: SCPI

Example: SYST:LANG FSV

The commands and settings for the R&S FSV instrument are

used.

Manual operation: See "Language" on page 207

SYSTem:LXI:INFO?

This command queries the LXI settings.

Configuring the R&S FPL1000

Return values:

<MAC adress> | <IP adress> | <Auto MDIX> String containing the current LXI parameters.

<version><LXIClass>

<ComputerName><MACAddress><IPAddress><AutoMDIX>

Usage: Query only

Manual operation: See "Current LXI Configuration" on page 209

SYSTem:LXI:LANReset

This command resets the LAN configuration as required by the LXI standard. The command also resets the LXI password and instrument description.

Usage: Event

Manual operation: See "LAN Reset" on page 209

SYSTem:LXI:MDEScription < Description >

This command defines the LXI instrument description.

Parameters:

<Description> String containing the instrument description.

Manual operation: See "LXI Manufacturer Description" on page 209

SYSTem:LXI:PASSword < Password>

This command defines the LXI password.

Parameters:

<Password> String containing the password.

Return values:

<Password> The query returns the current password.

Manual operation: See "LXI Password" on page 209

SYSTem:REVision:FACTory

Resets the response to the REV? query for the revision number to the factory default.

Configuring the R&S FPL1000

8.10.7 Checking the System Configuration

The following commands are required to check the system configuration on the R&S FPL1000.

Useful commands for obtaining system information described elsewhere:

• DIAGnostic:SERVice:SINFo? on page 842

Remote commands exclusive to obtaining system information:

DIAGnostic:SERVice:BATTery:LEVel?	837
DIAGnostic:SERVice:BIOSinfo?	837
DIAGnostic:SERVice:HWINfo?	837
DIAGnostic:SERVice:VERSinfo?	838
SYSTem:ERRor:CLEar:ALL	838
SYSTem:ERRor:CLEar:REMote	838
SYSTem:ERRor:EXTended?	839
SYSTem:ERRor:LIST?	839
SYSTem:ERRor[:NEXT]?	840
SYSTem:FIRMware:UPDate	840
SYSTem:FORMat:IDENt	840
SYSTem:PRESet:COMPatible	841

DIAGnostic:SERVice:BATTery:LEVel?

Queries the current charge state of the optional battery packs.

Return values:

<ChargeState> numeric value

Charge state in percent Range: 0 to 100

Example: DIAG:SERV:BATT:LEV?

Usage: Query only

DIAGnostic:SERVice:BIOSinfo?

This command queries the BIOS version of the CPU board.

Return values:

<BiosInformation> String containing the BIOS version.

Example: DIAG:SERV:BIOS?

Returns the BIOS version.

Usage: Query only

DIAGnostic:SERVice:HWINfo?

This command queries hardware information.

Configuring the R&S FPL1000

Return values:

<Hardware> String containing the following information for every hardware

component.

<component>: name of the hardware component

<serial#>: serial number of the component
<order#>: order number of the component

<model>: model of the component <code>: code of the component <revision>: revision of the component

<subrevision>: subrevision of the component

Example: DIAG:SERV:HWIN?

Queries the hardware information.

"FRONTEND|100001/003|1300.3009|03|01|00|00",
"MOTHERBOARD|123456/002|1300.3080|02|00|00|00",

. . .

Usage: Query only

DIAGnostic:SERVice:VERSinfo?

This command queries information about the hardware and software components.

Return values:

<Information>
String containing the version of hardware and software compo-

nents including the types of licenses for installed options.

Example: DIAG:SERV:VERS?

Queries the version information.

Response:

Usage: Query only

SYSTem:ERRor:CLEar:ALL

This command deletes all contents of the "System Messages" table.

Example: SYST:ERR:CLE:ALL

Usage: Event

SYSTem:ERRor:CLEar:REMote

This command deletes all contents of the "Remote Errors" table.

Note: The remote error list is automatically cleared when the R&S FPL1000 is shut

down.

Example: SYST:ERR:CLE:REM

Usage: Event

Manual operation: See "Display Remote Errors" on page 206

See "Clear Error List" on page 211

Configuring the R&S FPL1000

SYSTem:ERRor:EXTended? </pre

This command queries all system messages, or all messages of a defined type, displayed in the status bar for a specific channel setup (application).

Note: This command queries the strings displayed for manual operation. For remote programs, do not define processing steps depending on these results. Instead, query the results of the STATus:QUEStionable:EXTended:INFO status register, which indicates whether messages of a certain type have occurred (see "STATus:QUEStionable:EXTended:INFO Register" on page 194).

Query parameters:

<MessageType> ALL | INFO | WARNing | ERRor | FATal | MESSage

<ChannelName> String containing the name of the channel setup.

The parameter is optional. If you omit it, the command works for

the currently active channel setup.

Return values:

<Messages> String containing all messages of the selected type for the speci-

fied channel setup. Each message is separated by a comma and inserted in parentheses. If no messages are available,

empty parentheses are returned.

Example: SYST:ERR:EXT? ALL

Returns all messages for the currently active application, e.g.

"Message 1", "Message 2".

Example: SYST:ERR:EXT? FAT, 'Spectrum2'

Queries fatal errors in the 'Spectrum2' application. If none have

occurred, the result is: " ".

Usage: Query only

SYSTem:ERRor:LIST? [<MessType>]

This command queries the error messages that occur during R&S FPL1000 operation.

Query parameters:

<MessType> SMSG

(default) Queries the system messages which occurred during

manual operation.

REMote

Queries the error messages that occurred during remote opera-

tion.

Note: The remote error list is automatically cleared when the

R&S FPL1000 is shut down.

Return values:

<SystemMessages> String containing all messages in the "System Messages" table.

Configuring the R&S FPL1000

<RemoteErrors> <Error no> | <Description> | <Command> | <Date> | <Time>

Comma-separated list of errors from the "Remote Errors" table,

where:

<Error_no>: device-specific error code
<Description>: brief description of the error
<Command>: remote command causing the error
<Date>|<Time>: date and time the error occurred

Example: SYST:ERR:LIST?

Usage: Query only

SYSTem:ERRor[:NEXT]?

This command queries the most recent error queue entry and deletes it.

Positive error numbers indicate device-specific errors, negative error numbers are error messages defined by SCPI. If the error queue is empty, the error number 0, "No error", is returned.

For details on error queues see Chapter 6.4.1.7, "Status Reporting System", on page 185.

Usage: Query only

SYSTem:FIRMware:UPDate

This command starts a firmware update using the *.msi files in the selected directory. The default path is D:\FW_UPDATE. The path is changed via the MMEMory:COMMent command. To store the update files the MMEMory:DATA command is used.

Only user accounts with administrator rights can perform a firmware update.

Example: SYST:FIRM:UPD 'D:\FW UPDATE'

Starts the firmware update from directory "D:\FW_UPDATE".

Usage: Event

SYSTem:FORMat:IDENt <IDNFormat>

This command selects the response format to the *IDN? query.

Parameters:

<IDNFormat> LEGacy

Format is compatible to R&S FSP/FSU/FSQ/FSG family.

NEW | FSL

R&S FPL1000 format

Format is also compatible to the R&S FSL and R&S FSV family

*RST: not reset!

Configuring the R&S FPL1000

Example: SYST:FORM:IDEN LEG

Adapts the return value of *IDN? to the R&S FSP/FSU/FSQ fam-

ily.

SYSTem:PRESet:COMPatible <OpMode>

This command defines the operating mode that is activated when you switch on the R&S FPL1000 or press the [PRESET] key.

Parameters:

<OpMode> SANalyzer

(Default:)

Defines Signal and Spectrum Analyzer operating mode as the

presetting.

Manual operation: See "Preset Mode" on page 144

8.10.8 Using Service Functions

DIAGnostic:SERVice:SFUNction	841
DIAGnostic:SERVice:SFUNction:LASTresult?	842
DIAGnostic:SERVice:SFUNction:RESults:DELete	842
DIAGnostic:SERVice:SFUNction:RESults:SAVE	842
DIAGnostic:SERVice:SINFo?	
SYSTem:PASSword[:CENable]	843
SYSTem:PASSword:RESet	

DIAGnostic:SERVice:SFUNction <ServiceFunction>

This command starts a service function.

The service functions are available after you have entered the level 1 or level 2 system password.

Parameters:

<ServiceFunction> String containing the ID of the service function.

The ID of the service function is made up out of five numbers,

separated by a point.

• function group number

board number

function number

• parameter 1 (see the Service Manual)

• parameter 2 (see the Service Manual)

Usage: Event

Manual operation: See "Service Function" on page 148

See "Send" on page 149

Configuring the R&S FPL1000

DIAGnostic:SERVice:SFUNction:LASTresult?

This command gueries the results of the most recent service function you have used.

Usage: Query only

DIAGnostic:SERVice:SFUNction:RESults:DELete

This command deletes the results of the most recent service function you have used.

Usage: Event

Manual operation: See " Clear Results " on page 149

DIAGnostic:SERVice:SFUNction:RESults:SAVE <FileName>

This command saves the results of the most recent service function you have used.

Parameters:

<FileName> String containing the file name.

Manual operation: See "Save Results" on page 149

DIAGnostic:SERVice:SINFo? <FileName>

This command creates a *.zip file with important support information. The *.zip file contains the system configuration information ("device footprint"), the current eeprom data and a screenshot of the screen display (if available).

As a result of this command, the created file name (including the drive and path) is returned.

If you contact the Rohde&Schwarz support to get help for a certain problem, send this file to the support in order to identify and solve the problem faster.

Return values:

<FileName> String containing the drive, path and file name of the created

support file, where the file name consists of the following ele-

ments:

<R&S Device ID>: The unique R&S device ID indicated in the

"Versions + Options" information

<CurrentDate>: The date on which the file is created

(<YYYYMMDD>)

<CurrentTime>: The time at which the file is created

(<HHMMSS>)

Example: DIAG:SERV:SINF?

Result:

Usage: Query only

Manual operation: See " Create R&S Support Information " on page 146

Using the Status Register

SYSTem:PASSword[:CENable] < Password>

Provides a password for subsequent service functions.

Parameters:

<Password> string

Example: SYST: PASS: CEN '894129'

Manual operation: See " Password " on page 149

SYSTem:PASSword:RESet

Clears any previously provided password and returns to the most restrictive service level.

Usage: Setting only

Manual operation: See "Password" on page 149

8.11 Using the Status Register

For more information on the contents of the status registers see:

- "STATus:OPERation Register" on page 191
- "STATus:QUEStionable:ACPLimit Register" on page 193
- "STATus:QUEStionable:EXTended Register" on page 194
- "STATus:QUEStionable:FREQuency Register" on page 195
- "STATus:QUEStionable:LIMit Register" on page 195
- "STATus:QUEStionable:LMARgin Register" on page 196
- "STATus:QUEStionable:POWer Register" on page 197
- "STATus:QUEStionable:TIMe Register" on page 197

•	General Status Register Commands	843
	Reading Out the CONDition Part	
	Reading Out the EVENt Part	
	Controlling the ENABle Part	
	Controlling the Negative Transition Part	
	Controlling the Positive Transition Part	
	Service Request.	

8.11.1 General Status Register Commands

STATus:PRESet	844
STATus:QUEue[:NEXT]?	844

Using the Status Register

STATus:PRESet

This command resets the edge detectors and ENABle parts of all registers to a defined value. All PTRansition parts are set to FFFFh, i.e. all transitions from 0 to 1 are detected. All NTRansition parts are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected. The ENABle part of the STATUS: OPERation and STATUS: QUEStionable registers are set to 0, i.e. all events in these registers are not passed on.

Usage: Event

STATus:QUEue[:NEXT]?

This command queries the most recent error queue entry and deletes it.

Positive error numbers indicate device-specific errors, negative error numbers are error messages defined by SCPI. If the error queue is empty, the error number 0, "No error", is returned.

This command is identical to the SYSTem: ERROr [: NEXT]? command.

Usage: Query only

8.11.2 Reading Out the CONDition Part

For more information on the condition part see "Structure of a SCPI Status Register" on page 187.

STATus:OPERation:CONDition? STATus:QUEStionable:CONDition?

STATus:QUEStionable:ACPLimit:CONDition? <ChannelName>
STATus:QUEStionable:EXTended:CONDition? <ChannelName>
STATus:QUEStionable:EXTended:INFO:CONDition? <ChannelName>
STATus:QUEStionable:FREQuency:CONDition? <ChannelName>
STATus:QUEStionable:LIMit<n>:CONDition? <ChannelName>
STATus:QUEStionable:LMARgin<n>:CONDition? <ChannelName>
STATus:QUEStionable:POWer:CONDition? <ChannelName>
STATus:QUEStionable:TIME:CONDition? <ChannelName>

These commands read out the CONDition section of the status register.

The commands do not delete the contents of the CONDition section.

Suffix:

<n> Window

Query parameters:

<ChannelName> String containing the name of the channel.

The parameter is optional. If you omit it, the command works for

the currently active channel.

Usage: Query only

Using the Status Register

8.11.3 Reading Out the EVENt Part

For more information on the event part see "Structure of a SCPI Status Register" on page 187.

STATus:OPERation[:EVENt]? STATus:QUEStionable[:EVENt]?

STATus:QUEStionable:ACPLimit[:EVENt]? <ChannelName>
STATus:QUEStionable:EXTended[:EVENt]? <ChannelName>
STATus:QUEStionable:EXTended:INFO[:EVENt]? <ChannelName>
STATus:QUEStionable:FREQuency[:EVENt]? <ChannelName>
STATus:QUEStionable:LIMit<n>[:EVENt]? <ChannelName>
STATus:QUEStionable:LMARgin<n>[:EVENt]? <ChannelName>
STATus:QUEStionable:POWer[:EVENt]? <ChannelName>
STATus:QUEStionable:TIME[:EVENt]? <ChannelName>

These commands read out the EVENt section of the status register.

At the same time, the commands delete the contents of the EVENt section.

Suffix:

<n> Window

Query parameters:

<ChannelName> String containing the name of the channel.

The parameter is optional. If you omit it, the command works for

the currently active channel.

Usage: Query only

8.11.4 Controlling the ENABle Part

For more information on the enable part see "Structure of a SCPI Status Register" on page 187.

STATus:OPERation:ENABle <SumBit> STATus:QUEStionable:ENABle <SumBit>

STATus:QUEStionable:ACPLimit:ENABle <SumBit>,<ChannelName>
STATus:QUEStionable:EXTended:ENABle <SumBit>,<ChannelName>
STATus:QUEStionable:EXTended:INFO:ENABle <SumBit>,<ChannelName>
STATus:QUEStionable:FREQuency:ENABle <SumBit>,<ChannelName>
STATus:QUEStionable:LIMit<n>:ENABle <SumBit>,<ChannelName>
STATus:QUEStionable:LMARgin<n>:ENABle <SumBit>,<ChannelName>
STATus:QUEStionable:POWer:ENABle <SumBit>,<ChannelName>
STATus:QUEStionable:TIME:ENABle <SumBit>,<ChannelName>

These commands control the ENABle part of a register.

The ENABle part allows true conditions in the EVENt part of the status register to bereported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Using the Status Register

Suffix:

<n> Window

Parameters:

<SumBit> Range: 0 to 65535

<ChannelName> String containing the name of the channel.

The parameter is optional. If you omit it, the command works for

the currently active channel.

8.11.5 Controlling the Negative Transition Part

For more information on the positive transition part see "Structure of a SCPI Status Register" on page 187.

STATus:OPERation:NTRansition <SumBit> **STATus:QUEStionable:NTRansition** <SumBit>

STATus:QUEStionable:ACPLimit:NTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:EXTended:NTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:EXTended:INFO:NTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:FREQuency:NTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:LIMit<n>:NTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:LMARgin<n>:NTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:POWer:NTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:POWer:NTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:TIME:NTRansition <SumBit>,<ChannelName>

These commands control the Negative TRansition part of a register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENt register.

Suffix:

<n> Window

Parameters:

<SumBit> Range: 0 to 65535

<ChannelName> String containing the name of the channel.

The parameter is optional. If you omit it, the command works for

the currently active channel.

8.11.6 Controlling the Positive Transition Part

For more information on the negative transition part see "Structure of a SCPI Status Register" on page 187.

STATus:OPERation:PTRansition <SumBit>
STATus:QUEStionable:PTRansition <SumBit>

STATus:QUEStionable:ACPLimit:PTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:EXTended:PTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:EXTended:INFO:PTRansition <SumBit>,<ChannelName>

Using the Status Register

STATus:QUEStionable:FREQuency:PTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:LIMit<n>:PTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:LMARgin<n>:PTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:POWer:PTRansition <SumBit>,<ChannelName>
STATus:QUEStionable:TIME:PTRansition <SumBit>,<ChannelName>

These commands control the Positive TRansition part of a register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENt register.

Suffix:

<n> Window

Parameters:

<SumBit> Range: 0 to 65535

<ChannelName> String containing the name of the channel.

The parameter is optional. If you omit it, the command works for

the currently active channel.

8.11.7 Service Request

The service request routine requires an extended initialization of the instrument in which the relevant bits of the transition and enable registers are set. In addition the service request event must be enabled in the VISA session.

8.11.7.1 Initiate Service Request

```
REM ---- Example of initialization of the SRQ in the case
' of errors -----
PUBLIC SUB SetupSRQ()
CALL InstrWrite (analyzer, "*CLS") 'Reset status reporting system
CALL InstrWrite (analyzer, "*SRE 168") 'Enable service request for
'STAT: OPER, STAT: QUES and ESR
'register
CALL InstrWrite (analyzer, "*ESE 60") 'Set event enable bit for
'command, execution, device-
'dependent and query error
CALL InstrWrite (analyzer, "STAT:OPER:ENAB 32767")
'Set OPERation enable bit for
'all events
CALL InstrWrite (analyzer, "STAT:OPER:PTR 32767")
'Set appropriate OPERation
'Ptransition bits
CALL InstrWrite (analyzer, "STAT:QUES:ENAB 32767")
'Set questionable enable bits
'for all events
CALL InstrWrite (analyzer, "STAT:QUES:PTR 32767")
'Set appropriate questionable
```

Using the Status Register

```
'Ptransition bits
CALL viEnableEvent(analyzer, VI EVENT SERVICE REQ, VI QUEUE, 0)
'Enable the event for service
'request
Status = viWaitOnEvent(analyzer, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, VI_NULL,
VI NULL)
IF (status = VI SUCCESS) THEN CALL Srq
'If SRO is recognized =>
'subroutine for evaluation
END SUB
Private mbSession As MessageBasedSession
Sub Main()
   Console.WriteLine("Example of initialization
              of the SRQ in the case of errors.")
   Dim SRQWaitTimeout = 4000 ' Timeout As Integer for WaitOnEvent
   'Opening session
   Try
       'FSW is alias, instead of use resource string.
              'For example on TCP use TCPIP0::192.168.1.2::inst0::INSTR
       mbSession = CType(ResourceManager.GetLocalManager().Open("FSW"), _
                                  MessageBasedSession)
       mbSession.TerminationCharacterEnabled = True
       Trv
          mbSession.Write("*CLS") 'Reset status reporting system
          mbSession.Write("*SRE 168") 'Enable service request for
          'STAT: OPER, STAT: QUES and ESR register
          mbSession.Write("*ESE 60") 'Set event enable bit for
           'command, execution, device-dependent and query error
          mbSession.Write("STAT:OPER:ENAB 32767")
          'Set OPERation enable bit for all events
          mbSession.Write("STAT:OPER:PTR 32767")
           'Set appropriate OPERation Ptransition bits
          mbSession.Write("STAT:QUES:ENAB 32767")
          'Set questionable enable bits for all events
          mbSession.Write("STAT:QUES:PTR 32767")
          'Set appropriate questionable Ptransition bits
          Console.WriteLine("Wait on event - Blocking")
          mbSession.EnableEvent(MessageBasedSessionEventType.ServiceRequest,
                                            EventMechanism.Queue)
           'Enable the event for service request
           ·-----
           ' Your command plase use here
           ' mbSession.Write("Your command")
           ' _______
          Dim Status = mbSession.WaitOnEvent( _
```

Using the Status Register

```
MessageBasedSessionEventType.ServiceRequest, SRQWaitTimeout)
            If (Status.EventType() = _
                                 {\tt MessageBasedSessionEventType.ServiceRequest)} \ \ {\tt Then}
                Console.WriteLine("SRQ is recognized")
                'If SRQ is recognized => subroutine for evaluation
            End If
        Catch exp As Exception
            Console.WriteLine(exp.Message)
        End Trv
    Catch exp As InvalidCastException
        Console.WriteLine("Resource selected must be a message-based session")
    Catch exp As Exception
        Console.WriteLine(exp.Message)
   End Try
    ' Close session
   mbSession.Dispose()
    ' Wait for end
   Console.WriteLine("Press any key to end")
   Console.ReadKey()
End Sub
```

8.11.7.2 Waiting for the Arrival of a Service Request

There are basically two methods of waiting for the arrival of a service request:

Blocking (user inputs not possible):

This method is appropriate if the waiting time until the event to be signaled by an SRQ is short (shorter than the selected timeout), if no response to user inputs is required during the waiting time, and if – as the main criterion – the event is absolutely certain to occur.

Reason:

From the time the viWaitOnEvent() function is called until the occurrence of the expected event, it does not allow the program to respond to mouse clicks or key entries during the waiting time. Moreover, it returns an error if the SRQ event does not occur within the predefined timeout period.

The method is, therefore, in many cases not suitable for waiting for measurement results, especially when using triggered measurements.

The following function calls are required:

```
Status = viWaitOnEvent(analyzer, VI_EVENT_SERVICE_REQ, SRQWaitTimeout, VI_NULL,
    VI_NULL)
'Wait for service request user
'inputs are not possible during
'the waiting time!
IF (status = VI_SUCCESS) THEN CALL Srq
```

Using the Status Register

Non-blocking (user inputs possible):

This method is recommended if the waiting time until the event to be signaled by an SRQ is long (longer than the selected timeout), and user inputs should be possible during the waiting time, or if the event is not certain to occur. This method is, therefore, the preferable choice for waiting for the end of measurements, i.e. the output of results, especially in the case of triggered measurements.

The method necessitates a waiting loop that checks the status of the SRQ line at regular intervals and returns control to the operating system during the time the expected event has not yet occurred. In this way, the system can respond to user inputs (mouse clicks, key entries) during the waiting time.

It is advisable to employ the Hold() auxiliary function, which returns control to the operating system for a selectable waiting time (see section Waiting Without Blocking the Keyboard and Mouse), so enabling user inputs during the waiting time.

```
result% = 0
For i = 1 To 10 'Abort after max. 10 loop
Status = viWaitOnEvent(analyzer, VI EVENT SERVICE REQ, VI TMO IMMEDIATE, VI NULL,
VI NULL)
'Check event queue
If (status = VI SUCCESS) Then
result% = 1
CALL Srq 'If SRQ is recognized =>
'subroutine for evaluation
CALL Hold(20) 'Call hold function with
'20 ms 'waiting time. User inputs
'are possible.
Endif
If result% = 0 Then
Debug.Print "Timeout Error; Program aborted"'Output error message
STOP 'Stop software
Endif
```

Using the Status Register

8.11.7.3 Waiting Without Blocking the Keyboard and Mouse

A frequent problem with remote control programs using Visual Basic is to insert waiting times without blocking the keyboard and the mouse.

If the program is to respond to user inputs also during a waiting time, control over the program events during this time must be returned to the operating system. In Visual Basic, this is done by calling the <code>DoEvents</code> function. This function causes keyboard-or mouse-triggered events to be executed by the associated elements. For example, it allows the operation of buttons and input fields while the user waits for an instrument setting to be completed.

The following programming example describes the <code>Hold()</code> function, which returns control to the operating system for the period of the waiting time selectable in milliseconds.

The waiting procedure is activated simply by calling Hold(<Waiting time in milliseconds>).

8.11.7.4 Service Request Routine

A service request is processed in the service request routine.



The variables userN% and userM% must be pre-assigned usefully!

```
REM ------ Service request routine ------
Public SUB Srq()
ON ERROR GOTO noDevice 'No user existing
CALL viReadSTB(analyzer, STB%) 'Serial poll, read status byte
IF STB% > 0 THEN 'This instrument has bits set in
'the STB
```

Using the Status Register

```
SRQFOUND% = 1
IF (STB% AND 16) > 0 THEN CALL Outputqueue
IF (STB% AND 4) > 0 THEN CALL ErrorQueueHandler
IF (STB% AND 8) > 0 THEN CALL Questionablestatus
IF (STB% AND 128) > 0 THEN CALL Operationstatus
IF (STB% AND 32) > 0 THEN CALL Esrread
END IF
noDevice:
END SUB 'End of SRQ routine
REM ----- Subroutine for evaluation Service Request Routine -----
Public Sub Srg()
   Try
        Dim mySTB As Short = mbSession.ReadStatusByte()
                                'Serial poll, read status byte
        Console.WriteLine("Reading Service Request Routine:" + mySTB.ToString())
        If mySTB > 0 Then 'This instrument has bits set in the STB
            If (mySTB And 16) > 0 Then Call Outputqueue()
            If (mySTB And 4) > 0 Then Call ErrorQueueHandler()
           If (mySTB And 8) > 0 Then Call Questionablestatus()
           If (mySTB And 128) > 0 Then Call Operationstatus()
            If (mySTB And 32) > 0 Then Call Esrread()
       End If
    Catch exp As Exception
        Console.WriteLine(exp.Message)
    End Try
End Sub 'End of SRQ routine
```

Reading out the status event registers, the output buffer and the error/event queue is effected in subroutines.

8.11.7.5 Reading Out the Output Buffer

Using the Status Register

```
End Try
End Sub
```

8.11.7.6 Reading Error Messages

```
REM ----- Subroutine for reading the error queue -----
Public SUB ErrorQueueHandler()
ERROR$ = SPACE$(100) 'Make space for error variable
CALL InstrWrite (analyzer, "SYSTEM:ERROR?")
CALL InstrRead(analyzer, ERROR$)
Debug.Print "Error Description:"; ERROR$
END SUB
REM ----- Subroutine for reading the error queue ------
Sub ErrorQueueHandler()
   Dim result As String
   Dim hasErr As Boolean = True
      mbSession.Write("SYST:ERR?")
      result = mbSession.ReadString()
      Dim parts As String() = result.Split(",")
      If parts(0) = 0 Then
          hasErr = False
          Console.WriteLine(result)
      Else
          Console.WriteLine(result)
      End If
   Loop While hasErr
End Sub
```

8.11.7.7 Evaluation of SCPI Status Registers

```
REM ----- Subroutine for evaluating Questionable Status Register ------
Public SUB Questionablestatus()
Ques$ = SPACE$(20)
'Preallocate blanks to text
'variable
CALL InstrWrite (analyzer, "STATus:QUEStionable:EVENt?")
CALL InstrRead(analyzer, Ques$)
Debug.Print "Questionable Status:"; Ques$
END SUB
REM ----- Subroutine for evaluating Operation Status Register ------
Public SUB Operationstatus()
Oper$ = SPACE$(20) 'Preallocate blanks to text
'variable
CALL InstrWrite (analyzer, "STATus:OPERation:EVENt?")
CALL InstrRead(analyzer, Oper$)
```

Using the Status Register

```
Debug.Print "Operation Status:"; Oper$
END SUB
REM *************************
REM ----- Subroutine for evaluating Questionable Status Register ------
Public Sub Questionablestatus()
   Dim myQSR As String = Nothing
   Try
       myQSR = mbSession.Query("STATus:QUEStionable:EVENt?") 'Read QSR
       Console.WriteLine("Questionable Status:" + myQSR)
   Catch exp As Exception
       Console.WriteLine(exp.Message)
   End Try
End Sub
REM ----- Subroutine for evaluating Operation Status Register ------
Public Sub Operationstatus()
   Dim myOSR As String = Nothing
   Trv
       myOSR = mbSession.Query("STATus:OPERation:EVENt?") 'Read OSR
       Console.WriteLine("Operation Status:" + myOSR)
   Catch exp As Exception
      Console.WriteLine(exp.Message)
   End Try
End Sub
```

8.11.7.8 Evaluation of Event Status Register

```
REM ----- Subroutine for evaluating the Event Status Register ------
Public SUB Esrread()
Esr$ = SPACE$(20) 'Preallocate blanks to text
'variable
CALL InstrWrite (analyzer, "*ESR?") 'Read ESR
CALL InstrRead(analyzer, Esr$)
IF (VAL(Esr\$) AND 1) > 0 THEN Debug.Print "Operation complete"
IF (VAL(Esr$) AND 2) > 0 THEN Debug.Print "Request Control"
IF (VAL(Esr\$) AND 4) > 0
THEN Debug. Print "Query Error"
IF (VAL(Esr\$) AND 8) > 0
THEN Debug. Print "Device dependent error"
IF (VAL(Esr\$) AND 16) > 0
THEN Debug.Print "Execution Error; Program aborted"'Output error message
STOP 'Stop software
END IF
IF (VAL(Esr\$) AND 32) > 0
THEN Debug.Print "Command Error; Program aborted"'Output error message
STOP 'Stop software
END IF
IF (VAL(Esr$) AND 64) > 0 THEN Debug.Print "User request"
```

Deprecated Commands

```
IF (VAL(Esr$) AND 128) > 0 THEN Debug.Print "Power on"END SUB
REM ----- Subroutine for evaluating the Event Status Register ------
Public Sub Esrread()
       Dim myESR As Short = mbSession.Query("*ESR?") 'Read ESR
       If (myESR And 1) > 0 Then Console. WriteLine ("Operation complete")
       If (myESR And 2) > 0 Then Console.WriteLine("Request Control")
       If (myESR And 4) > 0 Then Console.WriteLine("Query Error")
       If (myESR And 8) > 0 Then Console.WriteLine("Device dependent error")
       If (myESR And 16) > 0 Then
           Console.WriteLine("Execution Error; Program aborted") 'Output error message
           Stop 'Stop software
       End If
       If (myESR And 32) > 0 Then
           Console.WriteLine("Command Error; Program aborted") 'Output error message
          Stop 'Stop software
       End If
       If (myESR And 64) > 0 Then Console.WriteLine("User request")
       If (myESR And 128) > 0 Then Console.WriteLine("Power on")
   Catch exp As Exception
       Console.WriteLine(exp.Message)
End Sub
```

8.12 Deprecated Commands

The following commands are provided for compatibility to other signal analyzers only. For new remote control programs use the specified alternative commands.

CALCulate <n>:LIMit:TRACe</n>	855
DISPlay[:WINDow <n>]:STATe</n>	856
DISPlay[:WINDow <n>]:TYPE</n>	
HCOPy:ITEM:ALL	

CALCulate<n>:LIMit:TRACe <TraceNumber>

This command links a limit line to one or more traces.

Note that this command is maintained for compatibility reasons only. Limit lines no longer need to be assigned to a trace explicitly. The trace to be checked can be defined directly (as a suffix) in the new command to activate the limit check (see

CALCulate<n>:LIMit:TRACe<t>:CHECk on page 787).

Suffix:

<n> Window Limit line

Deprecated Commands

Parameters:

<TraceNumber> 1 to 6

*RST: 1

Example: CALC:LIM2:TRAC 3

Assigns limit line 2 to trace 3.

DISPlay[:WINDow<n>]:STATe <State>

This command changes the display state of the selected measurement window.

Note that this command is maintained for compatibility reasons only. Use the LAYout commands for new remote control programs

(See Chapter 8.7.1, "Working with Windows in the Display", on page 639).

Suffix:

<n> Window

Parameters:

<State> ON | OFF | 1 | 0

OFF | 0

The window is closed.

*RST: 0

DISPlay[:WINDow<n>]:TYPE <WindowType>

This command selects the results displayed in a measurement window.

Note that this command is maintained for compatibility reasons only. Use the LAYout commands for new remote control programs (see Chapter 8.7.1, "Working with Windows in the Display", on page 639).

The parameter values are the same as for LAYout:ADD[:WINDow]? on page 639.

Suffix:

<n> Window

HCOPy:ITEM:ALL

This command is maintained for compatibility reasons only. It has no effect.

Usage: Setting only

R&S®FPL1000 Maintenance

Cleaning

9 Maintenance

The R&S FPL1000 does not require regular maintenance. Maintenance is essentially restricted to cleaning the R&S FPL1000. It is, however, recommended that you check the nominal data from time to time.

The data sheet specifies the storage temperature range for the R&S FPL1000. Protect the instrument against dust if it is to be stored for a long period.

9.1 Cleaning

MARNING

Risk of electric shock

If moisture enters the casing, for example if you clean the instrument using a moist cloth, contact with the instrument can lead to electric shock. Before cleaning the instrument other than with a dry cloth, make sure that the instrument is switched off and disconnected from all power supplies.

NOTICE

Instrument damage caused by cleaning agents

Cleaning agents contain substances such as solvents (thinners, acetone, etc.), acids, bases, or other substances. Solvents can damage the front panel labeling, plastic parts, or screens, for example.

Never use cleaning agents to clean the outside of the instrument. Use a soft, dry, lint-free dust cloth instead.

NOTICE

Risk of instrument damage due to obstructed fans

If the instrument is operated in dusty areas, the fans become obstructed by dust or other particles over time. Check and clean the fans regularly to ensure that they always operate properly. If the instrument is run with obstructed fans for a longer period, the instrument overheats, which can disturb the operation and even cause damage.

- 1. Clean the outside of the instrument using a soft, dry, lint-free dust cloth.
- 2. Check and clean the fans regularly to ensure that they always operate properly.
- 3. Clean the touchscreen as follows:
 - a) Apply a small amount of standard screen cleaner to a soft cloth.
 - b) Wipe the screen gently with the moist, but not wet, cloth.

R&S®FPL1000 Maintenance

Cleaning

c) If necessary, remove any excess moisture with a dry, soft cloth.

Error Information

10 Troubleshooting

If the results do not meet your expectations, the following sections may contain helpful hints and information.

•	Error Information	859
•	Error Messages in Remote Control Mode	.860
	Troubleshooting Remote Operation	
	Miscellaneous Troubleshooting Hints	
	Collecting Information for Technical Support	

10.1 Error Information

If errors or irregularities are detected, a keyword and an error message, if available, are displayed in the status bar.



Depending on the type of message, the status message is indicated in varying colors.

Table 10-1: Status bar information - color coding

Color	Туре	Description
Red	Error	An error occurred at the start or during a measurement, e.g. due to missing data or wrong settings, so that the measurement cannot be started or completed correctly.
Orange	Warning	An irregular situation occurred during measurement, e.g. the settings no longer match the displayed results, or the connection to an external device was interrupted temporarily.
Gray	Information	Information on the status of individual processing steps.
No color	No errors	No message displayed - normal operation.
Green	Measurement successful	Some applications visualize that the measurement was successful by showing a message.



If any error information is available for a channel setup, an exclamation mark is displayed next to the channel setup name (1). This is particularly useful when the Multi-View tab is displayed, as the status bar in the Multi-View tab always displays the information for the currently selected measurement only.

Table 10-2: List of keywords

IF OVLD	Overload of the IF signal path in the A/D converter or in the digital IF. Increase the reference level.
INPUT OVLD	The signal level at the RF input connector exceeds the maximum. The RF input is disconnected from the input mixer to protect the device. To re-enable measurement, decrease the level at the RF input connector and reconnect the RF input to the mixer input.

Error Messages in Remote Control Mode

LOUNL	Error in the instrument's frequency processing hardware was detected.
NO REF	Instrument was set to an external reference but no signal was detected on the reference input.
RF OVLD	Overload of the input mixer or of the analog IF path. Increase the RF attenuation (for RF input). Reduce the input level (for digital input)
UNCAL	One of the following conditions applies: Correction data has been switched off. No correction values are available, for example after a firmware update. Record the correction data by performing a self alignment
WRONG_FW	The firmware version is out-of-date and does not support the currently installed hardware. Until the firmware version is updated, this error message is displayed and self-alignment fails.

10.2 Error Messages in Remote Control Mode

In remote control mode error messages are entered in the error/event queue of the status reporting system and can be queried with the command SYSTem: ERROr?. The answer format of R&S FPL1000 to the command is as follows:

<error code>, "<error text with queue query>; <remote control
command concerned>"

The indication of the remote control command with prefixed semicolon is optional.

Example:

The command ${\tt TEST:COMMAND}$ generates the following answer to the query ${\tt SYSTem:ERRor?}$

-113, "Undefined header; TEST: COMMAND"

There are two types of error messages:

- Error messages defined by SCPI are marked by negative error codes. These messages are defined and described in the SCPI standard and not listed here.
- Device-specific error messages use positive error codes. These messages are described below.

Table 10-3: Device-specific error messages

Error code	Error text in the case of queue poll Error explanation
1052	Frontend LO is Unlocked
	This message is displayed when the phase regulation of the local oscillator fails in the RF front-end.
1060	Trigger-Block Gate Delay Error- gate length < Gate Delay
	This message is displayed when the gate signal length is not sufficient for the pull-in delay with a predefined gate delay.

Troubleshooting Remote Operation

Error code	Error text in the case of queue poll
	Error explanation
1064	Tracking LO is Unlocked
	This message is displayed when the phase regulation of the local oscillator fails on the external generator module.
2028	Hardcopy not possible during measurement sequence
	This message is displayed when a printout is started during scan sequences that cannot be interrupted. Such sequences are for example: Recording the system error correction data (alignment) Instrument self-test
	In such cases synchronization to the end of the scan sequence should be performed prior to starting the printout.
2033	Printer Not Available
	This message is displayed when the selected printer is not included in the list of available output devices. A possible cause is that the required printer driver is missing or incorrectly installed.
2034	CPU Temperature is too high
	This message is displayed when the temperature of the processor exceeds 70 °C.

10.3 Troubleshooting Remote Operation

If problems arise during measurement in remote operation, try the following methods to solve them.

Incompleted sequential commands - blocked remote channels

If a sequential command cannot be completed, for example because a triggered sweep never receives a trigger, the remote control program will never finish and the remote channel to the R&S FPL1000 is blocked for further commands. In this case, you must interrupt processing on the remote channel in order to abort the measurement.

To regain control over a blocked remote channel

Usually, if you wait a minute for the VISA connection to detect the lost connection and clear the control channel by itself, you can then re-establish the connection again. If this fails, try the following:

- 1. Press "Local" on the front panel of the R&S FPL to return to manual operation (if not disabled). Then re-establish the connection.
- Send a "Device Clear" command from the control instrument to the R&S FPL1000 to clear all currently active remote channels. Depending on the used interface and protocol, send the following commands:
 - **Visa**: viClear()

The remote channel currently processing the incompleted command is then ready to receive further commands again.

Miscellaneous Troubleshooting Hints

3. On the remote channel performing the measurement, send the SCPI command ABORt to abort the current measurement and reset the trigger system.

4. If the R&S FPL still does not react to the remote commands, switch it off and back

Ignored commands

When a remote command attempts to define incompatible settings, the command is ignored and the instrument status remains unchanged, i.e. other settings are not automatically adapted. Therefore, control programs should always define an initial instrument status (e.g. using the *RST command) and then implement the required settings.

Detecting false commands

If a remote program does not provide the expected results and you are using a GPIB connection, you can log the commands and any errors that may occur. To activate the SCPI error log function, in the "Network + Remote" dialog box, in the "GPIB" tab, select "I/O Logging".

All remote control commands received by the R&S FPL1000 are recorded in the following log file:

C:\ProgramData\Rohde-Schwarz\ZNL-FPL\ScpiLogging\ScpiLog.txt

Logging the commands may be extremely useful for debug purposes, e.g. in order to find misspelled keywords in control programs. However, remember to turn off the logging function after debugging to avoid unnecessary access to the hard drive and use of storage space.

10.4 Miscellaneous Troubleshooting Hints

Invalid trace display86	2
Data capturing takes too long	
Multiple user access to one instrument86	
Web browser access to instrument fails86	3
The transducer factors/limit lines applied to my measurement are different to those dis	<u>;</u> —
played in the Transducer / Lines dialog box86	3

Power levels for low frequency signals not correct

By default, the R&S FPL1000 uses AC coupling for RF input. For very low frequencies, the input signal may be distorted with this setting. In this case, use DC coupling instead. To change the setting, select [INPUT/OUPUT] > "Input Source Config" > "Radio Frequency" > "Input Coupling" > "DC".

Invalid trace display

If output to the [IF 2 GHz OUT] connector is activated, the measured values are no longer sent to the display; thus, the trace data currently displayed on the R&S FPL1000 becomes invalid. A message in the status bar indicates this situation.

R&S®FPL1000 Troubleshooting

Miscellaneous Troubleshooting Hints

Data capturing takes too long

Particularly for FFT sweeps, the time required to process the data may be considerably longer than the time required to capture the data. Thus, if you only consider the defined sweep time, you may assume an error has occurred if the measurement takes longer than expected.

However, while the sweep time only defines the time in which data is actually captured, the total sweep *duration* includes the time required for capturing *and processing* the data. Thus, for FFT sweeps in the Spectrum application, the sweep duration is now also indicated in the channel bar, behind the sweep time. In remote operation, the estimated sweep duration can be queried for all sweep modes (also zero span and frequency sweeps).

Tip: To determine the necessary timeout for data capturing in a remote control program, double the estimated time and add 1 second.

Remote command:

[SENSe:] SWEep: DURation? on page 661

Multiple user access to one instrument

Using the R&S FPL1000's LXI browser interface, several users can access *and operate* the same instrument simultaneously. This is useful for troubleshooting or training purposes.

Type the instrument's host name or IP address in the address field of the browser on your PC, for example "http://10.113.10.203". The instrument home page (welcome page) opens.

Note: This function can be deactivated for the instrument. After a firmware update, it is automatically activated again.

Web browser access to instrument fails

If an error message ("Failed to connect to server (code. 1006)") is displayed in the web browser instead of the instrument's user interface then the LXI web browser interface was probably deactivated.

(See Chapter 6.4.3.6, "How to Deactivate the Web Browser Interface", on page 223).

The transducer factors/limit lines applied to my measurement are different to those displayed in the Transducer / Lines dialog box

If a transducer file was in use when the save set was stored (with the save item "Current Settings" only) it is anticipated that these transducer values should remain valid after every recall of that save set. Thus, even if the transducer file is changed and the original save set file is recalled later, the *originally stored* transducer values are recalled and applied to the measurement. In the "Transducer" dialog box, however, the *changed* transducer file values are displayed as no updated transducer file was loaded.

The same applies to limit line settings.

R&S®FPL1000 Troubleshooting

Collecting Information for Technical Support

If you want to apply the changed transducer values after recalling the save set you must force the application to reload the transducer file. To do so, simply open the "Edit Transducer" dialog box (see Chapter 6.3.6.2, "Transducer Settings", on page 151) and toggle the "X-Axis" option from "Lin" to "Log" and back. Due to that change, the transducer file is automatically reloaded, and the changed transducer values are applied to the current measurement. Now you can create a new save set with the updated transducer values.

Similarly, if you want to apply the changed limit values after recalling the save set you must force the application to reload the limit file. To do so, simply open the "Edit Limit Line" dialog box (see Chapter 7.11.2.2, "Limit Line Settings and Functions", on page 496) and toggle the "Y-Axis" unit. Due to that change, the limit line file is automatically reloaded, and the changed limit values are applied to the current measurement. Now a new save set with the updated limit values can be created.

10.5 Collecting Information for Technical Support

If problems occur, the instrument generates error messages which in most cases will be sufficient for you to detect the cause of an error and find a remedy.

Error messages are described in Chapter 10.1, "Error Information", on page 859.

In addition, our customer support centers are there to assist you in solving any problems that you may encounter with your R&S FPL1000. We will find solutions more quickly and efficiently if you provide us with the information listed below.

- **System Configuration:** The "System Configuration" dialog box (in the "Setup" menu) provides information on:
 - Hardware Info: hardware assemblies
 - Versions and Options: the status of all software and hardware options installed on your instrument
 - System Messages: messages on any errors that may have occurred

An .xml file with information on the system configuration ("Device Footprint") can be created automatically (using the DIAGnostic: SERVice: SINFo command or as described in "To collect the support information" on page 864).

- Error Log: The RSError.log file (in the
 C:\ProgramData\Rohde-Schwarz\ZNL-FPL\log directory) contains a chronological record of errors.
- Support file: a *.zip file with important support information can be created automatically (in the C:\ProgramData\Rohde-Schwarz\ZNL-FPL\user directory).

 The *.zip file contains the system configuration information ("Device Footprint"), the current eeprom data and a screenshot of the screen display.

See also Chapter 6.3.5.1, "R&S Support Information", on page 145.

To collect the support information

- 1. Press the [SETUP] key.
- 2. Select "Service" > "R&S Support" and then "Create R&S Support Information".

R&S®FPL1000 Troubleshooting

Collecting Information for Technical Support

The file is stored as

C:\ProgramData\Rohde-Schwarz\ZNL-FPL\user\
<inst_model>_<serial-no>_<date_and_time>.zip
For example
C:\ProgramData\Rohde-Schwarz\ZNL-FPL\user\
FPL1003__20160803_145113.zip

Collect the error information and attach it to an email in which you describe the problem. Send the email to the customer support address for your region as listed on the Internet (http://www.customersupport.rohde-schwarz.com).



Packing and transporting the instrument

If the instrument needs to be transported or shipped, observe the notes described in Chapter 4.1.1.1, "Unpacking and Checking the Instrument", on page 13.

List of Commands (Spectrum mode)

[SENSe:][WINDow <n>:]DETector<t>[:FUNCtion]</t></n>	697
[SENSe:][WINDow <n>:]DETector<t>[:FUNCtion]:AUTO</t></n>	697
[SENSe:]ADJust:ALL	652
[SENSe:]ADJust:CONFigure:HYSTeresis:LOWer	654
[SENSe:]ADJust:CONFigure:HYSTeresis:UPPer	654
[SENSe:]ADJust:CONFigure:TRIGger	654
[SENSe:]ADJust:CONFigure[:LEVel]:DURation	653
[SENSe:]ADJust:CONFigure[:LEVel]:DURation:MODE	653
[SENSe:]ADJust:FREQuency	655
[SENSe:]ADJust:LEVel	655
[SENSe:]AVERage <n>:COUNt</n>	695
[SENSe:]AVERage <n>:TYPE</n>	696
[SENSe:]AVERage <n>[:STATe<t>]</t></n>	696
[SENSe:]BANDwidth:VIDeo	659
[SENSe:]BANDwidth:VIDeo:AUTO	659
[SENSe:]BANDwidth:VIDeo:RATio	659
[SENSe:]BANDwidth:VIDeo:TYPE	660
[SENSe:]BANDwidth[:RESolution]	657
[SENSe:]BANDwidth[:RESolution]:AUTO	658
[SENSe:]BANDwidth[:RESolution]:RATio	658
[SENSe:]BANDwidth[:RESolution]:TYPE	658
[SENSe:]BWIDth:VIDeo	659
[SENSe:]BWIDth:VIDeo:AUTO	659
[SENSe:]BWIDth:VIDeo:RATio	659
[SENSe:]BWIDth:VIDeo:TYPE	660
[SENSe:]BWIDth[:RESolution]	657
[SENSe:]BWIDth[:RESolution]:AUTO	658
[SENSe:]BWIDth[:RESolution]:RATio	658
[SENSe:]BWIDth[:RESolution]:TYPE	658
[SENSe:]CORRection:TRANsducer:ADJust:RLEVel[:STATe]	824
[SENSe:]CORRection:TRANsducer:CATalog?	824
[SENSe:]CORRection:TRANsducer:COMMent	825
[SENSe:]CORRection:TRANsducer:DATA	825
[SENSe:]CORRection:TRANsducer:DELete	826
[SENSe:]CORRection:TRANsducer:SCALing	826
[SENSe:]CORRection:TRANsducer:SELect	826
[SENSe:]CORRection:TRANsducer:UNIT	827
[SENSe:]CORRection:TRANsducer[:STATe]	826
[SENSe:]DEMod:SQUelch:LEVel	765
[SENSe:]DEMod:SQUelch[:STATe]	765
[SENSe:]ESPectrum <sb>:BWID</sb>	586
[SENSe:]ESPectrum <sb>:FILTer[:RRC]:ALPHa</sb>	586
[SENSe:]ESPectrum <sb>:FILTer[:RRC][:STATe]</sb>	586
[SENSe:]ESPectrum <sb>:HSPeed</sb>	573
[SENSe:]ESPectrum <sb>:PRESet:RESTore</sb>	570
[SENSe:]ESPectrum <sb>:PRESet:STORe</sb>	570
ISENSe:IESPectrum <sh>:PRESet[:STANdard]</sh>	569

[SENSe:]ESPectrum <sb>:RANGe<range>:BANDwidth:RESolution</range></sb>	573
[SENSe:]ESPectrum <sb>:RANGe<range>:BANDwidth:VIDeo</range></sb>	574
[SENSe:]ESPectrum <sb>:RANGe<range>:COUNt?</range></sb>	574
[SENSe:]ESPectrum <sb>:RANGe<range>:DELete</range></sb>	. 574
[SENSe:]ESPectrum <sb>:RANGe<range>:FILTer:TYPE</range></sb>	575
[SENSe:]ESPectrum <sb>:RANGe<range>:INPut:ATTenuation</range></sb>	. 576
[SENSe:]ESPectrum <sb>:RANGe<range>:INPut:ATTenuation:AUTO</range></sb>	. 576
[SENSe:]ESPectrum <sb>:RANGe<range>:INPut:GAIN:STATe</range></sb>	. 577
[SENSe:]ESPectrum <sb>:RANGe<range>:INSert</range></sb>	577
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:ABSolute:STARt</pclass></range></sb>	
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:ABSolute:STOP</pclass></range></sb>	. 578
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STARt</pclass></range></sb>	579
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STARt:ABS</pclass></range></sb>	579
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STARt:FUNCtion</pclass></range></sb>	
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STOP</pclass></range></sb>	. 580
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STOP:ABS</pclass></range></sb>	. 581
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:RELative:STOP:FUNCtion</pclass></range></sb>	582
[SENSe:]ESPectrum <sb>:RANGe<range>:LIMit<pclass>:STATe</pclass></range></sb>	. 582
[SENSe:]ESPectrum <sb>:RANGe<range>:MLCalc</range></sb>	
[SENSe:]ESPectrum <sb>:RANGe<range>:POINts:MINimum[:VALue]</range></sb>	
[SENSe:]ESPectrum <sb>:RANGe<range>:RLEVel</range></sb>	
[SENSe:]ESPectrum <sb>:RANGe<range>:SWEep:TIME</range></sb>	
[SENSe:]ESPectrum <sb>:RANGe<range>:SWEep:TIME:AUTO</range></sb>	. 585
[SENSe:]ESPectrum <sb>:RANGe<range>:TRANsducer</range></sb>	585
[SENSe:]ESPectrum <sb>:RANGe<range>[:FREQuency]:STARt</range></sb>	
[SENSe:]ESPectrum <sb>:RANGe<range>[:FREQuency]:STOP</range></sb>	
[SENSe:]ESPectrum <sb>:RRANge?</sb>	
[SENSe:]ESPectrum <sb>:RTYPe</sb>	
[SENSe:]ESPectrum <sb>:SBCenter</sb>	
[SENSe:]ESPectrum <sb>:SBCount</sb>	
[SENSe:]ESPectrum <sb>:SCENter</sb>	
[SENSe:]ESPectrum <sb>:SCOunt</sb>	
[SENSe:]FREQuency:CENTer	
[SENSe:]FREQuency:CENTer:STEP	
[SENSe:]FREQuency:CENTer:STEP:AUTO	
[SENSe:]FREQuency:CENTer:STEP:LINK	
[SENSe:]FREQuency:CENTer:STEP:LINK:FACTor	
[SENSe:]FREQuency:OFFSet	
[SENSe:]FREQuency:SPAN	
[SENSe:]FREQuency:SPAN:FULL	. 651
[SENSe:]FREQuency:STARt	
[SENSe:]FREQuency:STOP	
[SENSe:]LIST:POWer:RESult?	
[SENSe:]LIST:POWer:SET	
[SENSe:]LIST:POWer:STATe	
[SENSe:]LIST:POWer[:SEQuence]	
[SENSe:]LIST:RANGe <range>:BANDwidth:RESolution</range>	
[SENSe:]LIST:RANGe <range>:BANDwidth:VIDeo</range>	
[SENSe:]LIST:RANGe <range>:COUNt?</range>	
[SENSe:] IST:RANGe <range>:DELete</range>	500

[SENSe:]LIST:RANGe <range>:DETector</range>	. 600
[SENSe:]LIST:RANGe <range>:FILTer:TYPE</range>	600
[SENSe:]LIST:RANGe <range>:INPut:ATTenuation</range>	601
[SENSe:]LIST:RANGe <range>:INPut:ATTenuation:AUTO</range>	. 602
[SENSe:]LIST:RANGe <range>:INPut:GAIN:STATe</range>	602
[SENSe:]LIST:RANGe <range>:INPut:GAIN[:VALue]</range>	602
[SENSe:]LIST:RANGe <range>:LIMit:STARt</range>	602
[SENSe:]LIST:RANGe <range>:LIMit:STATe</range>	603
[SENSe:]LIST:RANGe <range>:LIMit:STOP</range>	603
[SENSe:]LIST:RANGe <range>:POINts[:VALue]</range>	603
[SENSe:]LIST:RANGe <range>:RLEVel</range>	603
[SENSe:]LIST:RANGe <range>:SWEep:TIME</range>	. 604
[SENSe:]LIST:RANGe <range>:SWEep:TIME:AUTO</range>	. 604
[SENSe:]LIST:RANGe <range>:TRANsducer</range>	604
[SENSe:]LIST:RANGe <range>[:FREQuency]:STARt</range>	. 600
[SENSe:]LIST:RANGe <range>[:FREQuency]:STOP</range>	601
[SENSe:]LIST:XADJust	607
[SENSe:]MPOWer:FTYPe	. 634
[SENSe:]MPOWer:RESult:MIN?	635
[SENSe:]MPOWer:RESult[:LIST]?	634
[SENSe:]MPOWer[:SEQuence]	634
[SENSe:]PMETer:DCYCle:VALue	682
[SENSe:]PMETer:DCYCle[:STATe]	682
[SENSe:]PMETer:FREQuency	683
[SENSe:]PMETer:FREQuency:LINK	683
[SENSe:]PMETer:MTIMe	684
[SENSe:]PMETer:MTIMe:AVERage:COUNt	684
[SENSe:]PMETer:MTIMe:AVERage[:STATe]	684
[SENSe:]PMETer:ROFFset[:STATe]	. 685
[SENSe:]PMETer:UPDate[:STATe]	. 686
[SENSe:]PMETer[:STATe]	685
[SENSe:]POWer:ACHannel:ACPairs	551
[SENSe:]POWer:ACHannel:BANDwidth:ACHannel	551
[SENSe:]POWer:ACHannel:BANDwidth:ALTernate <ch></ch>	. 551
[SENSe:]POWer:ACHannel:BANDwidth[:CHANnel <ch>]</ch>	
[SENSe:]POWer:ACHannel:BWIDth:ACHannel	551
[SENSe:]POWer:ACHannel:BWIDth:ALTernate <ch></ch>	. 551
[SENSe:]POWer:ACHannel:BWIDth[:CHANnel <ch>]</ch>	552
[SENSe:]POWer:ACHannel:FILTer:ALPHa:ACHannel	. 554
[SENSe:]POWer:ACHannel:FILTer:ALPHa:ALTernate <ch></ch>	555
[SENSe:]POWer:ACHannel:FILTer:ALPHa:CHANnel <ch></ch>	555
[SENSe:]POWer:ACHannel:FILTer:ALPHa[:ALL]	. 555
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ACHannel	. 555
[SENSe:]POWer:ACHannel:FILTer[:STATe]:ALTernate <ch></ch>	556
[SENSe:]POWer:ACHannel:FILTer[:STATe]:CHANnel <ch></ch>	556
[SENSe:]POWer:ACHannel:FILTer[:STATe][:ALL]	
[SENSe:]POWer:ACHannel:MODE	. 563
[SENSe:]POWer:ACHannel:NAME:ACHannel	552
[SENSe:]POWer:ACHannel:NAME:ALTernate <ch></ch>	. 552
[SENSe:]POWer;ACHannel:NAME:CHANnel <ch></ch>	553

[SENSe:]POWer:ACHannel:PRESet	
[SENSe:]POWer:ACHannel:PRESet:RLEVel	
[SENSe:]POWer:ACHannel:REFerence:AUTO ONCE	
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO	557
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual	557
[SENSe:]POWer:ACHannel:SPACing:ALTernate <ch></ch>	553
[SENSe:]POWer:ACHannel:SPACing:CHANnel <ch></ch>	553
[SENSe:]POWer:ACHannel:SPACing[:ACHannel]	553
[SENSe:]POWer:ACHannel:TXCHannel:COUNt	554
[SENSe:]POWer:BANDwidth	568
[SENSe:]POWer:BWIDth	568
[SENSe:]POWer:TRACe	548
[SENSe:]ROSCillator:SOURce	821
[SENSe:]SWEep:COUNt	660
[SENSe:]SWEep:COUNt:CURRent?	544
[SENSe:]SWEep:DURation?	661
[SENSe:]SWEep:EGATe	674
[SENSe:]SWEep:EGATe:HOLDoff	674
[SENSe:]SWEep:EGATe:LENGth	674
[SENSe:]SWEep:EGATe:POLarity	675
[SENSe:]SWEep:EGATe:SOURce	675
[SENSe:]SWEep:EGATe:TYPE	675
[SENSe:]SWEep:MODE	571
[SENSe:]SWEep:OPTimize	
[SENSe:]SWEep:POINts	662
[SENSe:]SWEep:TIME	663
[SENSe:]SWEep:TIME:AUTO	663
[SENSe:]SWEep:TYPE:USED	663
*CAL?	529
*CLS	529
*ESE	529
*ESR?	529
*IDN?	530
*IST?	530
*OPC	530
*OPT?	530
*PCB	530
*PRE	530
*PSC	531
*RST	531
*SRE	531
*STB?	531
*TRG	532
*TST?	532
*WAI	532
ABORt	542
CALCulate <n>:DELTamarker<m>:AOFF</m></n>	716
CALCulate <n>:DELTamarker<m>:FUNCtion:BPOWer:MODE</m></n>	
CALCulate <n>:DELTamarker<m>:FUNCtion:BPOWer:RESult?</m></n>	
CALCulate <n>:DELTamarker<m>:FUNCtion:BPOWer:SPAN</m></n>	

CALCulate <n>:DELTamarker<m>:FUNCtion:BPOWer[:STATe]</m></n>	758
CALCulate <n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:MAXimum[:PEAK]</m></n>	745
CALCulate <n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:X</m></n>	745
CALCulate <n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y</m></n>	746
CALCulate <n>:DELTamarker<m>:FUNCtion:FIXed:RPOint:Y:OFFSet</m></n>	746
CALCulate <n>:DELTamarker<m>:FUNCtion:FIXed[:STATe]</m></n>	746
CALCulate <n>:DELTamarker<m>:FUNCtion:PNOise:AUTO</m></n>	752
CALCulate <n>:DELTamarker<m>:FUNCtion:PNOise:RESult?</m></n>	752
CALCulate <n>:DELTamarker<m>:FUNCtion:PNOise[:STATe]</m></n>	753
CALCulate <n>:DELTamarker<m>:LINK</m></n>	716
CALCulate <n>:DELTamarker<m>:LINK:TO:MARKer<m></m></m></n>	717
CALCulate <n>:DELTamarker<m>:MAXimum:LEFT</m></n>	730
CALCulate <n>:DELTamarker<m>:MAXimum:NEXT</m></n>	730
CALCulate <n>:DELTamarker<m>:MAXimum:RIGHt</m></n>	731
CALCulate <n>:DELTamarker<m>:MAXimum[:PEAK]</m></n>	731
CALCulate <n>:DELTamarker<m>:MINimum:LEFT</m></n>	731
CALCulate <n>:DELTamarker<m>:MINimum:NEXT</m></n>	732
CALCulate <n>:DELTamarker<m>:MINimum:RIGHt</m></n>	732
CALCulate <n>:DELTamarker<m>:MINimum[:PEAK]</m></n>	732
CALCulate <n>:DELTamarker<m>:MODE</m></n>	717
CALCulate <n>:DELTamarker<m>:MREF</m></n>	718
CALCulate <n>:DELTamarker<m>:SGRam:FRAMe</m></n>	741
CALCulate <n>:DELTamarker<m>:SGRam:SARea</m></n>	741
CALCulate <n>:DELTamarker<m>:SGRam:XY:MAXimum[:PEAK]</m></n>	742
CALCulate <n>:DELTamarker<m>:SGRam:XY:MINimum[:PEAK]</m></n>	742
CALCulate <n>:DELTamarker<m>:SGRam:Y:MAXimum:ABOVe</m></n>	742
CALCulate <n>:DELTamarker<m>:SGRam:Y:MAXimum:BELow</m></n>	743
CALCulate <n>:DELTamarker<m>:SGRam:Y:MAXimum:NEXT</m></n>	743
CALCulate <n>:DELTamarker<m>:SGRam:Y:MAXimum[:PEAK]</m></n>	743
CALCulate <n>:DELTamarker<m>:SGRam:Y:MINimum:ABOVe</m></n>	744
CALCulate <n>:DELTamarker<m>:SGRam:Y:MINimum:BELow</m></n>	744
CALCulate <n>:DELTamarker<m>:SGRam:Y:MINimum:NEXT</m></n>	744
CALCulate <n>:DELTamarker<m>:SGRam:Y:MINimum[:PEAK]</m></n>	745
CALCulate <n>:DELTamarker<m>:SPECtrogram:FRAMe</m></n>	741
CALCulate <n>:DELTamarker<m>:SPECtrogram:SARea</m></n>	
CALCulate <n>:DELTamarker<m>:SPECtrogram:XY:MAXimum[:PEAK]</m></n>	742
CALCulate <n>:DELTamarker<m>:SPECtrogram:XY:MINimum[:PEAK]</m></n>	742
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:ABOVe</m></n>	742
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:BELow</m></n>	743
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MAXimum:NEXT</m></n>	743
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MAXimum[:PEAK]</m></n>	743
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MINimum:ABOVe</m></n>	744
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MINimum:BELow</m></n>	744
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MINimum:NEXT</m></n>	744
CALCulate <n>:DELTamarker<m>:SPECtrogram:Y:MINimum[:PEAK]</m></n>	
CALCulate <n>:DELTamarker<m>:TRACe</m></n>	718
CALCulate <n>:DELTamarker<m>:X</m></n>	719
CALCulate <n>:DELTamarker<m>:X:RELative?</m></n>	733
CALCulate <n>:DELTamarker<m>:Y?</m></n>	734
CALCulate <n>:DELTamarker<m>[:STATe]</m></n>	718

CALCulate <n>:DLINe<dl></dl></n>	774
CALCulate <n>:DLINe<dl>:STATe</dl></n>	774
CALCulate <n>:ESPectrum:PEAKsearch:AUTO</n>	592
CALCulate <n>:ESPectrum:PEAKsearch:DETails</n>	605
CALCulate <n>:ESPectrum:PEAKsearch:MARGin</n>	593
CALCulate <n>:ESPectrum:PEAKsearch:PSHow</n>	593
CALCulate <n>:ESPectrum:PEAKsearch[:IMMediate]</n>	593
CALCulate <n>:ESPectrum:PSEarch:AUTO</n>	592
CALCulate <n>:ESPectrum:PSEarch:MARGin</n>	593
CALCulate <n>:ESPectrum:PSEarch:PSHow</n>	593
CALCulate <n>:ESPectrum:PSEarch[:IMMediate]</n>	593
CALCulate <n>:FLINe<fl></fl></n>	775
CALCulate <n>:FLINe<fl>:STATe</fl></n>	775
CALCulate <n>:LIMit:ACPower:ACHannel:ABSolute</n>	558
CALCulate <n>:LIMit:ACPower:ACHannel:ABSolute:STATe</n>	558
CALCulate <n>:LIMit:ACPower:ACHannel:RESult?</n>	559
CALCulate <n>:LIMit:ACPower:ACHannel[:RELative]</n>	558
CALCulate <n>:LIMit:ACPower:ACHannel[:RELative]:STATe</n>	559
CALCulate <n>:LIMit:ACPower:ALTernate<ch>:ABSolute</ch></n>	560
CALCulate <n>:LIMit:ACPower:ALTernate<ch>:ABSolute:STATe</ch></n>	560
CALCulate <n>:LIMit:ACPower:ALTernate<ch>:RESult?</ch></n>	561
CALCulate <n>:LIMit:ACPower:ALTernate<ch>[:RELative]</ch></n>	561
CALCulate <n>:LIMit:ACPower:ALTernate<ch>[:RELative]:STATe</ch></n>	562
CALCulate <n>:LIMit:ACPower[:STATe]</n>	562
CALCulate <n>:LIMit:ACTive?</n>	786
CALCulate <n>:LIMit:CLEar[:IMMediate]</n>	788
CALCulate <n>:LIMit:COMMent</n>	777
CALCulate <n>:LIMit:CONTrol:DOMain</n>	778
CALCulate <n>:LIMit:CONTrol:MODE</n>	778
CALCulate <n>:LIMit:CONTrol:OFFSet</n>	778
CALCulate <n>:LIMit:CONTrol:SHIFt</n>	779
CALCulate <n>:LIMit:CONTrol:SPACing</n>	779
CALCulate <n>:LIMit:CONTrol[:DATA]</n>	777
CALCulate <n>:LIMit:COPY</n>	786
CALCulate <n>:LIMit:DELete</n>	787
CALCulate <n>:LIMit:ESPectrum<sb>:LIMits</sb></n>	587
CALCulate <n>:LIMit:ESPectrum<sb>:MODE</sb></n>	588
CALCulate <n>:LIMit:ESPectrum<sb>:PCLass:COUNt</sb></n>	589
CALCulate <n>:LIMit:ESPectrum<sb>:PCLass<pclass>:LIMit[:STATe]</pclass></sb></n>	590
CALCulate <n>:LIMit:ESPectrum<sb>:PCLass<pclass>:MAXimum</pclass></sb></n>	591
CALCulate <n>:LIMit:ESPectrum<sb>:PCLass<pclass>:MINimum</pclass></sb></n>	591
CALCulate <n>:LIMit:ESPectrum<sb>:PCLass<pclass>[:EXCLusive]</pclass></sb></n>	590
CALCulate <n>:LIMit:ESPectrum<sb>:RESTore</sb></n>	569
CALCulate <n>:LIMit:ESPectrum<sb>:VALue</sb></n>	589
CALCulate <n>:LIMit:FAIL?</n>	789
CALCulate <n>:LIMit:LOWer:MARGin</n>	780
CALCulate <n>:LIMit:LOWer:MODE</n>	780
CALCulate <n>:LIMit:LOWer:OFFSet</n>	780
CALCulate <n>:LIMit:LOWer:SHIFt</n>	781
CALCulate <n>:LIMit:LOWer:SPACing</n>	781

CALCulate <n>:LIMit:LOWer:STATe</n>	781
CALCulate <n>:LIMit:LOWer:THReshold</n>	782
CALCulate <n>:LIMit:LOWer[:DATA]</n>	779
CALCulate <n>:LIMit:NAME</n>	782
CALCulate <n>:LIMit:STATe</n>	
CALCulate <n>:LIMit:TRACe</n>	855
CALCulate <n>:LIMit:TRACe<t>:CHECk</t></n>	787
CALCulate <n>:LIMit:UNIT</n>	782
CALCulate <n>:LIMit:UPPer:MARGin</n>	783
CALCulate <n>:LIMit:UPPer:MODE</n>	784
CALCulate <n>:LIMit:UPPer:OFFSet</n>	784
CALCulate <n>:LIMit:UPPer:SHIFt</n>	784
CALCulate <n>:LIMit:UPPer:SPACing</n>	785
CALCulate <n>:LIMit:UPPer:STATe</n>	785
CALCulate <n>:LIMit:UPPer:THReshold</n>	785
CALCulate <n>:LIMit:UPPer[:DATA]</n>	783
CALCulate <n>:MARKer<m>:AOFF</m></n>	719
CALCulate <n>:MARKer<m>:COUNt</m></n>	761
CALCulate <n>:MARKer<m>:COUNt:FREQuency?</m></n>	762
CALCulate <n>:MARKer<m>:COUNt:RESolution</m></n>	762
CALCulate <n>:MARKer<m>:FUNCtion:BPOWer:AOFF</m></n>	754
CALCulate <n>:MARKer<m>:FUNCtion:BPOWer:MODE</m></n>	755
CALCulate <n>:MARKer<m>:FUNCtion:BPOWer:RESult?</m></n>	755
CALCulate <n>:MARKer<m>:FUNCtion:BPOWer:SPAN</m></n>	755
CALCulate <n>:MARKer<m>:FUNCtion:BPOWer[:STATe]</m></n>	756
CALCulate <n>:MARKer<m>:FUNCtion:CENTer</m></n>	648
CALCulate <n>:MARKer<m>:FUNCtion:CSTep</m></n>	649
CALCulate <n>:MARKer<m>:FUNCtion:DEModulation:CONTinuous</m></n>	763
CALCulate <n>:MARKer<m>:FUNCtion:DEModulation:HOLDoff</m></n>	764
CALCulate <n>:MARKer<m>:FUNCtion:DEModulation:SELect</m></n>	764
CALCulate <n>:MARKer<m>:FUNCtion:DEModulation[:STATe]</m></n>	764
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:ANNotation:LABel[:STATe]</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:COUNt?</m></n>	748
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:LIST:SIZE</m></n>	749
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:SORT</m></n>	749
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:STATe</m></n>	749
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:X?</m></n>	750
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks:Y?</m></n>	750
CALCulate <n>:MARKer<m>:FUNCtion:FPEaks[:IMMediate]</m></n>	748
CALCulate <n>:MARKer<m>:FUNCtion:HARMonics:BANDwidth:AUTO</m></n>	620
CALCulate <n>:MARKer<m>:FUNCtion:HARMonics:DISTortion?</m></n>	621
CALCulate <n>:MARKer<m>:FUNCtion:HARMonics:LIST?</m></n>	622
CALCulate <n>:MARKer<m>:FUNCtion:HARMonics:NHARmonics</m></n>	620
CALCulate <n>:MARKer<m>:FUNCtion:HARMonics:PRESet</m></n>	621
CALCulate <n>:MARKer<m>:FUNCtion:HARMonics[:STATe]</m></n>	619
CALCulate <n>:MARKer<m>:FUNCtion:MDEPth:RESult?</m></n>	626
CALCulate <n>:MARKer<m>:FUNCtion:MDEPth:SEARchsignal ONCE</m></n>	626
CALCulate <n>:MARKer<m>:FUNCtion:MDEPth[:STATe]</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:MSUMmary</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:NDBDown</m></n>	

CALCulate <n>:MARKer<m>:FUNCtion:NDBDown:FREQuency?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:NDBDown:QFACtor?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:NDBDown:RESult?</m></n>	759
CALCulate <n>:MARKer<m>:FUNCtion:NDBDown:STATe</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:NDBDown:TIME?</m></n>	760
CALCulate <n>:MARKer<m>:FUNCtion:NOISe:AOFF</m></n>	750
CALCulate <n>:MARKer<m>:FUNCtion:NOISe:RESult?</m></n>	751
CALCulate <n>:MARKer<m>:FUNCtion:NOISe[:STATe]</m></n>	751
CALCulate <n>:MARKer<m>:FUNCtion:PNOise:AOFF</m></n>	752
CALCulate <n>:MARKer<m>:FUNCtion:PNOise:RESult?</m></n>	753
CALCulate <n>:MARKer<m>:FUNCtion:PNOise[:STATe]</m></n>	754
CALCulate <n>:MARKer<m>:FUNCtion:POWer:MODE</m></n>	544
CALCulate <n>:MARKer<m>:FUNCtion:POWer:PRESet</m></n>	549
CALCulate <n>:MARKer<m>:FUNCtion:POWer:RESult:PHZ</m></n>	563
CALCulate <n>:MARKer<m>:FUNCtion:POWer:SELect</m></n>	547
CALCulate <n>:MARKer<m>:FUNCtion:POWer:STANdard:CATalog?</m></n>	550
CALCulate <n>:MARKer<m>:FUNCtion:POWer:STANdard:DELete</m></n>	550
CALCulate <n>:MARKer<m>:FUNCtion:POWer:STANdard:SAVE</m></n>	550
CALCulate <n>:MARKer<m>:FUNCtion:POWer[:STATe]</m></n>	547
CALCulate <n>:MARKer<m>:FUNCtion:POWer<sb>:RESult?</sb></m></n>	545
CALCulate <n>:MARKer<m>:FUNCtion:REFerence</m></n>	664
CALCulate <n>:MARKer<m>:FUNCtion:STRack:BANDwidth</m></n>	656
CALCulate <n>:MARKer<m>:FUNCtion:STRack:THReshold</m></n>	656
CALCulate <n>:MARKer<m>:FUNCtion:STRack:TRACe</m></n>	656
CALCulate <n>:MARKer<m>:FUNCtion:STRack[:STATe]</m></n>	655
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:AOFF</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:AVERage</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:MEAN:AVERage:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:MEAN:PHOLd:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:MEAN:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:MEAN[:STATe]</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:PHOLd</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:PPEak:AVERage:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:PPEak:PHOLd:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:PPEak:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:PPEak[:STATe]</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:RMS:AVERage:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:RMS:PHOLd:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:RMS:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:RMS[:STATe]</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:SDEViation:AVERage:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:SDEViation:PHOLd:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:SDEViation:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary:SDEViation:[:STATe]</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:SUMMary[:STATe]</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:TOI:RESult?</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:TOI:SEARchsignal ONCE</m></n>	
CALCulate <n>:MARKer<m>:FUNCtion:TOI:STATe]</m></n>	
CALCulate <n>:MARKer<m>:LINK:TO:MARKer<m></m></m></n>	
CAL Culaterns: MARKerems: I OFYclude	718 723

CALCulate <n>:MARKer<m>:MAXimum:AUTO</m></n>	
CALCulate <n>:MARKer<m>:MAXimum:LEFT</m></n>	727
CALCulate <n>:MARKer<m>:MAXimum:NEXT</m></n>	727
CALCulate <n>:MARKer<m>:MAXimum:RIGHt</m></n>	728
CALCulate <n>:MARKer<m>:MAXimum[:PEAK]</m></n>	727
CALCulate <n>:MARKer<m>:MINimum:AUTO</m></n>	728
CALCulate <n>:MARKer<m>:MINimum:LEFT</m></n>	728
CALCulate <n>:MARKer<m>:MINimum:NEXT</m></n>	729
CALCulate <n>:MARKer<m>:MINimum:RIGHt</m></n>	729
CALCulate <n>:MARKer<m>:MINimum[:PEAK]</m></n>	729
CALCulate <n>:MARKer<m>:PEXCursion</m></n>	723
CALCulate <n>:MARKer<m>:SGRam:FRAMe</m></n>	736
CALCulate <n>:MARKer<m>:SGRam:SARea</m></n>	737
CALCulate <n>:MARKer<m>:SGRam:XY:MAXimum[:PEAK]</m></n>	737
CALCulate <n>:MARKer<m>:SGRam:XY:MINimum[:PEAK]</m></n>	737
CALCulate <n>:MARKer<m>:SGRam:Y:MAXimum:ABOVe</m></n>	737
CALCulate <n>:MARKer<m>:SGRam:Y:MAXimum:BELow</m></n>	738
CALCulate <n>:MARKer<m>:SGRam:Y:MAXimum:NEXT</m></n>	738
CALCulate <n>:MARKer<m>:SGRam:Y:MAXimum[:PEAK]</m></n>	738
CALCulate <n>:MARKer<m>:SGRam:Y:MINimum:ABOVe</m></n>	739
CALCulate <n>:MARKer<m>:SGRam:Y:MINimum:BELow</m></n>	739
CALCulate <n>:MARKer<m>:SGRam:Y:MINimum:NEXT</m></n>	739
CALCulate <n>:MARKer<m>:SGRam:Y:MINimum[:PEAK]</m></n>	740
CALCulate <n>:MARKer<m>:SPECtrogram:FRAMe</m></n>	736
CALCulate <n>:MARKer<m>:SPECtrogram:SARea</m></n>	737
CALCulate <n>:MARKer<m>:SPECtrogram:XY:MAXimum[:PEAK]</m></n>	737
CALCulate <n>:MARKer<m>:SPECtrogram:XY:MINimum[:PEAK]</m></n>	737
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MAXimum:ABOVe</m></n>	737
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MAXimum:BELow</m></n>	738
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MAXimum:NEXT</m></n>	738
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MAXimum[:PEAK]</m></n>	738
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MINimum:ABOVe</m></n>	739
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MINimum:BELow</m></n>	739
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MINimum:NEXT</m></n>	739
CALCulate <n>:MARKer<m>:SPECtrogram:Y:MINimum[:PEAK]</m></n>	740
CALCulate <n>:MARKer<m>:TRACe</m></n>	720
CALCulate <n>:MARKer<m>:X</m></n>	721
CALCulate <n>:MARKer<m>:X:SLIMits:LEFT</m></n>	724
CALCulate <n>:MARKer<m>:X:SLIMits:RIGHt</m></n>	724
CALCulate <n>:MARKer<m>:X:SLIMits:ZOOM[:STATe]</m></n>	725
CALCulate <n>:MARKer<m>:X:SLIMits[:STATe]</m></n>	724
CALCulate <n>:MARKer<m>:X:SSIZe</m></n>	722
CALCulate <n>:MARKer<m>:Y?</m></n>	734
CALCulate <n>:MARKer<m>[:STATe]</m></n>	720
CALCulate <n>:MATH:MODE</n>	706
CALCulate <n>:MATH:POSition</n>	706
CALCulate <n>:MATH:STATe</n>	707
CALCulate <n>:MATH[:EXPRession][:DEFine]</n>	705
CALCulate <n>:PEAKsearch:AUTO</n>	605
CALCulate <n>:PEAKsearch:MARGin</n>	606

OAL Outstands PEAKs a such POUlses	000
CALCulate <n>:PEAKsearch:PSHow</n>	
CALCulate <n>:PEAKsearch:SUBRanges</n>	
CALCulate <n>:PMETer:RELative:STATe</n>	
CALCulate <n>:PMETer:RELative[:MAGNitude]</n>	
CALCulate <n>:PMETer:RELative[:MAGNitude]:AUTO ONCE</n>	
CALCulate <n>:PSEarch:AUTO</n>	
CALCulate <n>:PSEarch:DETails</n>	
CALCulate <n>:PSEarch:MARGin</n>	
CALCulate <n>:PSEarch:PSHow</n>	
CALCulate <n>:PSEarch:SUBRanges</n>	
CALCulate <n>:SGRam:CLEar[:IMMediate]</n>	
CALCulate <n>:SGRam:CONTinuous</n>	699
CALCulate <n>:SGRam:FRAMe:COUNt</n>	699
CALCulate <n>:SGRam:FRAMe:SELect</n>	
CALCulate <n>:SGRam:HDEPth</n>	
CALCulate <n>:SGRam:LAYout</n>	
CALCulate <n>:SGRam:TSTamp:DATA?</n>	
CALCulate <n>:SGRam:TSTamp[:STATe]</n>	702
CALCulate <n>:SGRam[:STATe]</n>	701
CALCulate <n>:SPECtrogram:CLEar[:IMMediate]</n>	699
CALCulate <n>:SPECtrogram:CONTinuous</n>	699
CALCulate <n>:SPECtrogram:FRAMe:COUNt</n>	699
CALCulate <n>:SPECtrogram:FRAMe:SELect</n>	700
CALCulate <n>:SPECtrogram:HDEPth</n>	700
CALCulate <n>:SPECtrogram:LAYout</n>	701
CALCulate <n>:SPECtrogram:TSTamp:DATA?</n>	701
CALCulate <n>:SPECtrogram:TSTamp[:STATe]</n>	702
CALCulate <n>:SPECtrogram[:STATe]</n>	701
CALCulate <n>:THReshold</n>	725
CALCulate <n>:THReshold:STATe</n>	726
CALCulate <n>:TLINe<tl></tl></n>	775
CALCulate <n>:TLINe<tl>:STATe</tl></n>	776
CALCulate <n>:UNIT:POWer</n>	664
CALibration:PMETer:ZERO:AUTO ONCE	680
CALibration:RESult?	822
CALibration[:ALL]?	821
DIAGnostic:SERVice:BATTery:LEVel?	837
DIAGnostic:SERVice:BIOSinfo?	837
DIAGnostic:SERVice:HWINfo?	837
DIAGnostic:SERVice:INPut:PULSed:CFRequency	822
DIAGnostic:SERVice:INPut:RF[:SPECtrum]	822
DIAGnostic:SERVice:INPut[:SELect]	823
DIAGnostic:SERVice:NSOurce	687
DIAGnostic:SERVice:SFUNction	841
DIAGnostic:SERVice:SFUNction:LASTresult?	842
DIAGnostic:SERVice:SFUNction:RESults:DELete	842
DIAGnostic:SERVice:SFUNction:RESults:SAVE	842
DIAGnostic:SERVice:SINFo?	842
DIAGnostic:SERVice:STESt:RESult?	823
DIACnostic:SERVice:VERSinfo?	838

DISPlay:ANNotation:CBAR	
DISPlay:ANNotation:FREQuency	829
DISPlay:ATAB	534
DISPlay:BLIGhting	829
DISPlay:CMAP <item>:DEFault<colors></colors></item>	831
DISPlay:LOGO	807
DISPlay:MINFo[:STATe]	722
DISPlay:SBAR[:STATe]	829
DISPlay:SKEYs[:STATe]	829
DISPlay:TBAR[:STATe]	830
DISPlay:THEMe:CATalog?	832
DISPlay:THEMe:SELect	832
DISPlay:TOUChscreen[:STATe]	830
DISPlay[:WINDow]:TIME	830
DISPlay[:WINDow]:TIME:FORMat	830
DISPlay[:WINDow <n>]:MTABle</n>	721
DISPlay[:WINDow <n>]:SGRam:COLor:DEFault</n>	703
DISPlay[:WINDow <n>]:SGRam:COLor:LOWer</n>	
DISPlay[:WINDow <n>]:SGRam:COLor:SHAPe</n>	704
DISPlay[:WINDow <n>]:SGRam:COLor:UPPer</n>	704
DISPlay[:WINDow <n>]:SGRam:COLor[:STYLe]</n>	704
DISPlay[:WINDow <n>]:SPECtrogram:COLor:DEFault</n>	703
DISPlay[:WINDow <n>]:SPECtrogram:COLor:LOWer</n>	703
DISPlay[:WINDow <n>]:SPECtrogram:COLor:SHAPe</n>	704
DISPlay[:WINDow <n>]:SPECtrogram:COLor:UPPer</n>	704
DISPlay[:WINDow <n>]:SPECtrogram:COLor[:STYLe]</n>	704
DISPlay[:WINDow <n>]:STATe</n>	856
DISPlay[:WINDow <n>]:TRACe<t>:MODE</t></n>	693
DISPlay[:WINDow <n>]:TRACe<t>:MODE:HCONtinuous</t></n>	694
DISPlay[:WINDow <n>]:TRACe<t>:SMOothing:APERture</t></n>	695
DISPlay[:WINDow <n>]:TRACe<t>:SMOothing[:STATe]</t></n>	695
DISPlay[:WINDow <n>]:TRACe<t>:Y:SPACing</t></n>	
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]</t></n>	
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]:AUTO ONCE</t></n>	668
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]:MODE</t></n>	
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]:RLEVel</t></n>	
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet</t></n>	
DISPlay[:WINDow <n>]:TRACe<t>:Y[:SCALe]:RPOSition</t></n>	668
DISPlay[:WINDow <n>]:TRACe<t>[:STATe]</t></n>	694
DISPlay[:WINDow <n>]:TYPE</n>	
DISPlay[:WINDow <n>]:ZOOM:AREA</n>	
DISPlay[:WINDow <n>]:ZOOM:MULTiple<zoom>:AREA</zoom></n>	691
DISPlay[:WINDow <n>]:ZOOM:MULTiple<zoom>[:STATe]</zoom></n>	
DISPlay[:WINDow <n>]:ZOOM[:STATe]</n>	
FETCh:PMETer?	
FORMat:DEXPort:DSEParator	793
FORMat:DEXPort:FORMat	
FORMat:DEXPort:HEADer	
FORMat:DEXPort:TRACes	
FORMat:DIMPort:TRACes.	

FORMat[:DATA]	707
HCOPy:ABORt	807
HCOPy:CMAP <item>:DEFault<colors></colors></item>	808
HCOPy:CONTent	807
HCOPy:DESTination <device></device>	809
HCOPy:DEVice:COLor	809
HCOPy:DEVice:LANGuage <device></device>	809
HCOPy:ITEM:ALL	856
HCOPy:ITEM:WINDow:TEXT	810
HCOPy:PAGE:COUNt:STATe	811
HCOPy:PAGE:MARGin <device>:BOTTom</device>	811
HCOPy:PAGE:MARGin <device>:LEFT</device>	811
HCOPy:PAGE:MARGin <device>:RIGHt</device>	812
HCOPy:PAGE:MARGin <device>:TOP</device>	812
HCOPy:PAGE:MARGin <device>:UNIT</device>	812
HCOPy:PAGE:ORIentation <device></device>	813
HCOPy:PAGE:WINDow <device>:CHANnel:STATe</device>	813
HCOPy:PAGE:WINDow <device>:COUNt</device>	814
HCOPy:PAGE:WINDow <device>:SCALe</device>	814
HCOPy:PAGE:WINDow <device>:STATe</device>	
HCOPy:TDSTamp:STATe <device></device>	
HCOPy[:IMMediate <device>]</device>	810
HCOPy[:IMMediate <device>]:NEXT</device>	810
INITiate <n>:CONMeas</n>	542
INITiate <n>:CONTinuous</n>	543
INITiate <n>:ESPectrum</n>	571
INITiate <n>:SEQuencer:ABORt</n>	537
INITiate <n>:SEQuencer:IMMediate</n>	537
INITiate <n>:SEQuencer:MODE</n>	538
INITiate <n>:SPURious</n>	598
INITiate <n>[:IMMediate]</n>	543
INPut <ip>:ATTenuation</ip>	666
INPut <ip>:ATTenuation:AUTO</ip>	666
INPut <ip>:ATTenuation:PROTection:RESet</ip>	676
INPut <ip>:EATT:AUTO</ip>	666
INPut <ip>:GAIN:STATe</ip>	666
INPut <ip>:IMPedance</ip>	677
INPut <ip>:SELect</ip>	677
INPut <ip>:UPORt:STATe</ip>	677
INPut <ip>:UPORt[:VALue]</ip>	678
INSTrument:CREate:DUPLicate	534
INSTrument:CREate:REPLace	535
INSTrument:CREate[:NEW]	534
INSTrument:DELete	535
INSTrument:LIST?	535
INSTrument:REName	536
INSTrument[:SELect]	536
LAYout:ADD[:WINDow]?	639
LAYout:CATalog[:WINDow]?	640
LAVout:IDENtify[:\//INDow]?	640

LAYout:MOVE[:WINDow]	641
LAYout:REMove[:WINDow]	641
LAYout:REPLace[:WINDow]	642
LAYout:SPLitter	642
LAYout:WINDow <n>:ADD?</n>	643
LAYout:WINDow <n>:IDENtify?</n>	644
LAYout:WINDow <n>:REMove</n>	644
LAYout:WINDow <n>:REPLace</n>	644
MMEMory:CATalog:LONG?	794
MMEMory:CATalog?	794
MMEMory:CDIRectory	795
MMEMory:CLEar:ALL	803
MMEMory:CLEar:STATe	803
MMEMory:COMMent	795
MMEMory:COPY	795
MMEMory:DATA	796
MMEMory:DELete	796
MMEMory:LOAD:AUTO	803
MMEMory:LOAD:STATe	803
MMEMory:LOAD <n>:LIMit</n>	788
MMEMory:LOAD <n>:TFACtor</n>	827
MMEMory:LOAD <n>:TRACe</n>	712
MMEMory:MDIRectory	796
MMEMory:MOVE	797
MMEMory:MSIS	797
MMEMory:NAME	
MMEMory:NETWork:DISConnect	797
MMEMory:NETWork:MAP	798
MMEMory:NETWork:UNUSeddrives?	
MMEMory:NETWork:USEDdrives?	
MMEMory:RDIRectory	
MMEMory:SELect:CHANnel[:ITEM]:ALL	
MMEMory:SELect:CHANnel[:ITEM]:DEFault	800
MMEMory:SELect:CHANnel[:ITEM]:HWSettings	
MMEMory:SELect:CHANnel[:ITEM]:LINes:ALL	
MMEMory:SELect:CHANnel[:ITEM]:NONE	
MMEMory:SELect:CHANnel[:ITEM]:SGRam	
MMEMory:SELect:CHANnel[:ITEM]:SPECtrogram	
MMEMory:SELect:CHANnel[:ITEM]:TRACe[:ACTive]	
MMEMory:SELect:CHANnel[:ITEM]:TRANsducer:ALL	
MMEMory:SELect[:ITEM]:ALL	
MMEMory:SELect[:ITEM]:DEFault	
MMEMory:SELect[:ITEM]:HWSettings	
MMEMory:SELect[:ITEM]:LINes:ALL	
MMEMory:SELect[:ITEM]:NONE	
MMEMory:SELect[:ITEM]:SGRam.	
MMEMory:SELect[:ITEM]:SPECtrogram	
MMEMory:SELect[:ITEM]:TRACe[:ACTive]	
MMEMory:SELect[:ITEM]:TRANsducer:ALL	
MMEMony: STOPe: I Mit	799

MMEMory:STORe <n>:LIST</n>	017
MMEMory:STORe <n>:PEAK</n>	
MMEMory:STORe <n>:SGRam</n>	
MMEMory:STORe <n>:SPECtrogram</n>	
MMEMory:STORe <n>:SPURious</n>	
·	
MMEMory:STORe <n>:STATe</n>	
MMEMory:STORe <n>:STATe:NEXT</n>	
MMEMory:STORe <n>:TFACtor</n>	
MMEMory:STORe <n>:TRACe</n>	
MMEMory:STORe <n>:TYPE</n>	
OUTPut:IF:IFFRequency	
OUTPut:IF[:SOURce]	
OUTPut:UPORt:STATe	
OUTPut:UPORt:WTRigger:POLarity	
OUTPut:UPORt[:VALue]	
READ:PMETer?	
SOURce:TEMPerature:FRONtend?	
STATus:OPERation:CONDition?	
STATus:OPERation:ENABle	
STATus:OPERation:NTRansition	
STATus:OPERation:PTRansition	
STATus:OPERation[:EVENt]?	
STATus:PRESet.	
STATus:QUEStionable:ACPLimit:CONDition?	
STATus:QUEStionable:ACPLimit:ENABle	
STATus:QUEStionable:ACPLimit:NTRansition	
STATus:QUEStionable:ACPLimit:PTRansition	
STATus:QUEStionable:ACPLimit[:EVENt]?	
STATus:QUEStionable:CONDition?	
STATus:QUEStionable:ENABle	
STATus:QUEStionable:EXTended:CONDition?	
STATus:QUEStionable:EXTended:ENABle	
STATus:QUEStionable:EXTended:INFO:CONDition?	
STATus:QUEStionable:EXTended:INFO:ENABle	
STATus:QUEStionable:EXTended:INFO:NTRansition	
STATus:QUEStionable:EXTended:INFO:PTRansition	
STATus:QUEStionable:EXTended:INFO[:EVENt]?	
STATus:QUEStionable:EXTended:NTRansition	
STATus:QUEStionable:EXTended:PTRansition	
STATus:QUEStionable:EXTended[:EVENt]?	
STATus:QUEStionable:FREQuency:CONDition?	
STATus:QUEStionable:FREQuency:ENABle	
STATus:QUEStionable:FREQuency:NTRansition	
STATus:QUEStionable:FREQuency:PTRansition	
STATus:QUEStionable:FREQuency[:EVENt]?	
STATus:QUEStionable:LIMit <n>:CONDition?</n>	
STATus:QUEStionable:LIMit <n>:ENABle</n>	
STATus:QUEStionable:LIMit <n>:NTRansition</n>	
STATus:QUEStionable:LIMit <n>:PTRansition</n>	
STATus:OLIEStionable:LIMit <n>[:EVENt12]</n>	8/15

STATus:QUEStionable:LMARgin <n>:CONDition?</n>	
STATus:QUEStionable:LMARgin <n>:ENABle</n>	
STATus:QUEStionable:LMARgin <n>:NTRansition</n>	846
STATus:QUEStionable:LMARgin <n>:PTRansition</n>	847
STATus:QUEStionable:LMARgin <n>[:EVENt]?</n>	845
STATus:QUEStionable:NTRansition	846
STATus:QUEStionable:POWer:CONDition?	844
STATus:QUEStionable:POWer:ENABle	845
STATus:QUEStionable:POWer:NTRansition	846
STATus:QUEStionable:POWer:PTRansition	847
STATus:QUEStionable:POWer[:EVENt]?	845
STATus:QUEStionable:PTRansition	846
STATus:QUEStionable:TIME:CONDition?	844
STATus:QUEStionable:TIME:ENABle	845
STATus:QUEStionable:TIME:NTRansition	846
STATus:QUEStionable:TIME:PTRansition	847
STATus:QUEStionable:TIME[:EVENt]?	845
STATus:QUEStionable[:EVENt]?	845
STATus:QUEue[:NEXT]?	844
SYSTem:CLOGging	532
SYSTem:COMMunicate:GPIB[:SELF]:ADDRess	833
SYSTem:COMMunicate:GPIB[:SELF]:RTERminator	833
SYSTem:COMMunicate:PRINter:ENUMerate:FIRSt?	815
SYSTem:COMMunicate:PRINter:ENUMerate[:NEXT]?	816
SYSTem:COMMunicate:PRINter:SELect <device></device>	816
SYSTem:COMMunicate:RDEVice:PMETer:COUNt?	679
SYSTem:COMMunicate:RDEVice:PMETer:CONFigure:AUTO[:STATe]	678
SYSTem:COMMunicate:RDEVice:PMETer:DEFine	679
SYSTem:DISPlay:FPANel[:STATe]	831
SYSTem:DISPlay:LANGuage	832
SYSTem:DISPlay:UPDate	834
SYSTem:ERRor:CLEar:ALL	838
SYSTem:ERRor:CLEar:REMote	838
SYSTem:ERRor:DISPlay	834
SYSTem:ERRor:EXTended?	839
SYSTem:ERRor:LIST?	839
SYSTem:ERRor[:NEXT]?	840
SYSTem:FIRMware:UPDate	840
SYSTem:FORMat:IDENt	840
SYSTem:IDENtify:FACTory	834
SYSTem:IDENtify[:STRing]	835
SYSTem:KLOCk	835
SYSTem:LANGuage	835
SYSTem:LXI:INFO?	835
SYSTem:LXI:LANReset	836
SYSTem:LXI:MDEScription	836
SYSTem:LXI:PASSword	836
SYSTem:PASSword:RESet	843
SYSTem:PASSword[:CENable]	843
SYSTem:PRESet	806

SYSTem:PRESet:CHANnel[:EXEC]	806
SYSTem:PRESet:COMPatible	841
SYSTem:REBoot	533
SYSTem:REVision:FACTory	836
SYSTem:SEQuencer	538
SYSTem:SHUTdown	533
SYSTem:SPEaker:VOLume	689
SYSTem:SPEaker[:STATe]	689
TRACe <n>:COPY</n>	698
TRACe <n>[:DATA]</n>	708
TRACe <n>[:DATA]:MEMory?</n>	709
TRACe <n>[:DATA]:X?</n>	710
TRIGger[:SEQuence]:DTIMe	670
TRIGger[:SEQuence]:HOLDoff[:TIME]	670
TRIGger[:SEQuence]:IFPower:HOLDoff	670
TRIGger[:SEQuence]:IFPower:HYSTeresis	671
TRIGger[:SEQuence]:LEVel:IFPower	671
TRIGger[:SEQuence]:LEVel:IQPower	672
TRIGger[:SEQuence]:LEVel[:EXTernal <port>]</port>	671
TRIGger[:SEQuence]:SLOPe	672
TRIGger[:SEQuence]:SOURce	672
TRIGger[:SEQuence]:TIME:RINTerval	673
UNIT <n>:PMETer:POWer</n>	686
UNIT <n>:PMETer:POWer:RATio</n>	686
UNIT <n>:POWer</n>	664

Index

Symbols		Analog Demodulation	
-		Application	84
*OPC		Annotations	
*OPC?	184	Hiding/restoring	
*RST		AP (trace information)	69
*WAI	184	Application cards	10
% Power Bandwidth		Application notes	10
Softkey	287	Applications	
9.91E37		Analog Demodulation	84
Remote control	182	Available	83
75 Ω (channel bar)	68	I/Q Analyzer	84
		Noise Figure	84
A		Setting	
		Signal and Spectrum Analyzer mode	83
Aborting		Spectrum	
Sweep	402, 403, 481	Arranging	
AC supply fuse	17	Windows	95
ACLR		Arrow keys	
Programming example	564	ASCII trace export	
Results (remote)	545	Att (channel setting)	
see CP/ACLR	257	Attenuation	
ACLR Mode		Auto	388
Softkey	267	Impact	
Active		Manual	
Transducer lines	153	Protective (remote)	
Adjust settings		Audio demodulation	
Softkey (C/N)	282	Volume (remote control)	680
Adjust Settings		Audio output	
Softkey (CP/ACLR)	268	Marker demodulation	15
Softkey (OBW)		Audio Output	
Adjust X-Axis		Programming example	770 770
Softkey	338	Audio signals	112, 113
Alignment		Output (remote)	275 60
Basics	160	. , ,	373, 007
Performing		Auto adjustment Triggered measurement	SE/
Results	·	Auto all	
Settings		Auto frequency	
touchscreen		• •	420
Touchscreen	·	Auto level	40.
All Functions Off		Hysteresis Reference level	
Alpha			,
RRC filter (SEM)	312	Softkey Auto Peak detector	·
Alphanumeric parameters			
AM modulation		Auto scaling	390
Measurement example	246 247	Auto settings Meastime Auto	400
AM modulation depth			
About		Meastime Manual	
Configuring		Automatic login mechanism	
Determining		Activating/Deactivating	22
Markers		Aux. Port	4.
Markers (remote control)		Connector	
Measurement (remote control)		AV (trace information)	
,		Average count	
Programming example Results		Power sensor	
		Average detector	460
Results (remote control)		Average mode	
Search signals (remote control)		Traces	469
Search signals (remote control)	020	Averaging	
Amplitude	205	Continuous sweep	
Configuration		Single sweep	
Optimizing display		Sweep count	
Scaling		Traces	
Settings	385	Traces (algorithm)	
		Traces (remote control)	696

Index

В		Channel bandwidth	200
David a succession and succession an		C/N	
Band power markers	774	CP/ACLR	
Programming example	//1	Channel Bandwidth	20:
Band power measurement	450	OBW	
Activating/Deactivating		Softkey	28
Deactivating		Channel bar	
Power mode		Changing names	
Span		Information	65
Band power measurement (remote control)	/54	Channel power	
Bandwidth		Comparing (CP/ACLR)	
Configuration (Softkey)		Density (CP/ACLR)	
Coupling		SEM results	
CP/ACLR		Settings (SEM)	31
Default settings		Channel settings	
Resolution		Display	65, 6
Video	392, 398	Channel Setup	
Basic Measurement Examples	_	Creating (remote)	
see User Manual		Deleting (remote)	
Block data		Duplicating (remote)	
Boolean parameters		Querying (remote)	
Brackets		Renaming (remote)	
Brochures	10	Replacing (remote)	
Burst signals		Selecting (remote)	53
Measurement example	250	Channel Setup bar	
		Hiding/restoring	132
С		channel setup settings	
0.01 0.010		Presetting	10
C/N, C/N0		Channel Setups	
see Carrier-to-Noise	279	Duplicating	
Calibration		New	
Frequency		Replacing	
Frequency RF		Sequential operation	8
Remote		Channel-defined Sequencer	
Remote control		Softkey	90
Results (remote control)		Channels	
RF		CP/ACLR	269, 27
Settings		CP/ACLR measurements	260
Signal		Names (CP/ACLR)	27
Signal, as RF input	46	Spacings (CP/ACLR)	270
Capture time		Spacings, configuring	27:
see also Measurement time	661	Switching	6
Carrier Noise Config		Trying out	50
Softkey		Weighting filters	27
Carrier-to-Noise		Cleaning	85
Activating		Clear status	
Channel bandwidth		Remote	529
Channel bandwidth (remote control)	566	Closing	
Configuring	281	Channel Setups (remote)	53!
Determining	283	Windows	
Measurement	279	Windows (remote)	
Measurement (remote control)		CLRW (trace information)	
Measurement process	280	CMT `	
Results	280	Display	35
Results (remote control)	566	CNT (marker functions)	
Span	280	Colon	
Case-sensitivity		Color curve	
SCPI	176	Shape	476. 48
Center = Mkr Freq	437	Spectrograms	
Center frequency		Color mapping	
Automatic configuration		Color curve	48:
Setting to marker		Color range	
Softkey		Color scheme	
Step size		Softkey	
Sub blocks (Multi-SEM)		Spectrograms	
Centroid frequency	-	Step by step	
OBW measurement	285	Value range	
	•	value lalige	

Color scheme		Continue single sweep	
Spectrogram	476, 483	Softkey	236, 403
Colors		Continuous Sequencer	
Configuring	136	Softkey	90
Display	134	Continuous sweep	
Editing	134	Softkey	236, 402, 481
Editing (remote)	831	Conventions	
Print	135	SCPI commands	527
Printing	134	Copying	
Comma		Channel Setup (remote)	534
Command sequence		Traces	
Recommendation	201	Coupling	
Remote		Span/RBW	303
Commands		VBW/RBW	
Brackets		Coupling ratio	
			050
Colon		Span/RBW (remote)	058
Comma		Coupling ratios	
Command line structure		Default	
Common		RBW/VBW	
Double dagger		Span/RBW	
GBIP, addressed	173	CP/ACLR	257
GBIP, universal	173	About	257
Instrument control	174	Absolute/relative values	267
Overlapping	183	Adjust Settings	268
Question mark		Channel bandwidths	
Quotation mark		Channel bandwidths (remote control)	
SCPI confirmed		Channel names	
		Channel names (remote control)	
Sequential			
Syntax elements		Channel power density	
Tracking		Channel setup	
Vertical stroke		Channel setup (remote control)	
White space	180	Channel spacing	
Comment		Channel spacing (remote control)	
Limit lines	500	Channel spacings	
Screenshots	116	Clear/Write	268
Softkey	116	Comparing channel powers	274
Transducer lines	155	Configuring	
Common commands		Detector	
Syntax	175	Fixed reference for CP	268
Compatibility		Frequency span	
FSV	207	General Settings	
GPIB		Limit check	
Limit lines		Limit check (remote control)	
	- /		
Mode		Max Hold	
Transducer lines		Measurement (remote control)	
Compatible mode (channel setting)		Measurement examples	
Computer name		Mode	
Changing	32	Number of channels	
CONDition	187	Number of channels (remote control)	
Connector		Optimizing	278
AC power supply	42	Performing	
Aux. Port		Performing measurement	272
Display Port		Power mode	
DVI		Power Unit	
GPIB interface		Predefined Settings	
Headphones		Predefined standards	
•		RBW	
IF/VIDEO/DEMOD			
LAN		Reference channel (remate control)	
Noise source control		Reference channel (remote control)	
Power Sensor		Reference level	
Ref. In		Results	
Ref. Out	43	Setting up channels	
RF Input 50Ω	40	Setting up channels (remote control)	551
Trigger In	43	Standards	
USB		Standards (remote control)	549
Context menus	73	Standards (Softkey)	
		Sweep Time	

Trace averaging	263	Diagram footer	70
Trace Selection	267	Hiding/restoring	
Troubleshooting	278	Diagrams	
User-defined standards		Evaluation method	255
VBW		Dialog boxes	
Weighting filters		Slider	7!
Weighting filters (remote control)		Transparency	
Cumulated Measurement Time (CMT)		Dialogs	
Harmonics	251	Printing	114
Haimonics	331		
D		Suppressing file selection	120
U		Dirty flag	0.0
Data format		see Invalid data icon	60
	710	Display	
ASCII		Colors	
Binary		Config (Softkey)	
Remote		Evaluation bar	95
Data sheets	10	Evaluation methods	
Date		Information	64
Format	130	Settings	129
Hiding/restoring	132	Settings (remote control)	828
Instrument setting	130	SmartGrid	
Setting	34	Theme	
Date and Time		Theme (remote)	
Printing	117	Update (remote)	
DCL		Update rate	
Debugging			
Remote control programs	862	Display lines	
		Defining	
Decimal separator	112 510 520	Remote control	
Trace export		Settings	490
DEF	178	Display Port	
Default		Connector	43
Restoring settings		Displayed items	
Default coupling	400	Touchscreen	130
Default values		DNS server	
Remote	531	IP Address	215
Deleting		LAN configuration	
Limit line values	502	Double dagger	
Settings files	315	DOWN	
Standards	315	Drop-out time	
Transducer factors	156	Trigger	407 412
Delta markers	426	Duplicating	
Defining		Channel Setup (remote)	53/
Fixed reference marker		Duty cycle	
Remote control		Power sensor	270
Demodulation			
Activating (marker)	452	DVI	4.0
, , , , , , , , , , , , , , , , , , ,		Connector	43
Continuous (marker)		Dynamic range	
Marker		Intermodulation-free	
Marker stop time		Measuring	349
Modulation type		_	
Remote control	763	E	
Demodulation markers			
Programming example	772, 773	Edge gate	
Detectors		Slope	
CP/ACLR	263	Electrostatic discharge	12
Overview	460	ENABle	187
Remote control	697	Enable registers	
Spurious Emissions range		Remote	531
Trace		Entering data	
Device-specific commands		EOI	
DHCP		GPIB terminator	206
DHCP server	20, 207, 210	Error log	
LAN configuration	22	_	002
	3∠	Error messages	74 050
Diagram area	^7	Status bar	·
Channel settings		Error queue	189
Status display			
Trace information	60		

Errors		F	
IF OVLD			
INPUT OVLD	72, 197, 859	Fast SEM	29
LOUNL		Consequences	29
Messages, device-specific	860	Example	
NO REF		Multi-SEM	
OVEN	•	Prerequisites	,
Queues, recommendations		SEM	
·		FFT filters	
Remote control programming			40
RF OVLD		Mode	
UNCAL	•	FFT sweep	394
UNLD		File format	
WRONG_FW	72, 142, 160, 860	Export Files	52
ESD	12	SEM export files	32
ESE (event status enable register)	190	SEM settings files	
ESR (event status register)		Spurious Emissions export files	34
Evaluation		Trace export	
	316	File type	
Lists (SEM)			40
Lists (Spurious)		Storage settings	10
Modes		filename	
Modes, adding	95	Data files	
Trying out	48	Settings	
Evaluation bar		Filter types	395, 40
Using	95	SEM range	
Evaluation list		Spurious Emissions range	
Details (Spurious Emissions)	340	Filters	
		Channel	20
Peaks (Spurious Emissions)			
Spurious Emissions	331	Configuration	
Evaluation methods		FFT	
Remote	639	Gaussian (3dB)	
EVENt	187	Overview	
Event status enable register (ESE)	190	RBW	39
Remote	529	VBW	39:
Event status register (ESR)		Weighting (remote)	55
Remote		Firmware	
Exclude LO		Updating	1.4
	*		17
Remote	723	Firmware Update	
Export format		Remote control	84
SEM results	329	Fixed reference	
Spurious Emissions results	342	Configuring	45
Traces	522	Defining	429, 44
Exporting		Delta markers	45
Data	113	Remote control	74
Functions		Format	
I/Q data		Data	71
		Data (remote)	
Measurement settings			
Peak list	/ -	Date and time	
SEM result files	321	see also File format	52
Softkey		Frame count	
Spurious Emissions result files	341	Softkey	40
Trace data	521	Spectrograms	47
Traces	112. 113. 517. 518	Frames	
EXREF (status display)	72. 860	Spectrogram marker	42
EXT REF		Free Run	
Status message	71	Trigger	/11
ů .	/ 1		TI
External monitor		Frequencies	00
Connectors	43	Multi-SEM	30
External reference		Frequency	
Settings (remote control)	821	Configuration (Softkey)	37
Status message		Coupling (power sensor)	
External trigger		IF Out	
Level (remote)		Offset	
		Power sensor	
		Range	
		Range, defining	
		Reference (remote control)	
		Snan	379

Start	379	Harmonic Distortion	348
Step size	377	About	348
Stop	379	Activating (remote control)	619
Frequency lines		Basics	
Remote control	774	Configuring	
Frequency span		Measurement (remote control)	
CP/ACLR	261	Measuring	
Frequency sweep		RBW	
Measurement	235	Results	
Programming example		Results (remote control)	
Front panel		Sweep time	
Hiding/restoring	133	Harmonics	
Frontend	100	Basics	340
	161		
Temperature (remete)		High-sensitivity Measurement example	
Temperature (remote)			
Frq (channel bar)	08	Measurement rules	
Full span	070	Measurement time	
Softkey	379	Number	
Function keys		Origin	
Details - see User Manual		Power	
Overview		Second harmonic intercept	349
Fuse		Headphones	
FXD (marker functions)	70	Connector	
•		Help	
G		Search for topic	80
OAT ()	00	Using	80
GAT (channel bar)	68	Hiding/restoring	
Gate		Display items	130
Delay		HiSLIP	166
Length		Protocol	167
Measurements	415	Resource string	166
Mode	417	History	
Settings	417	Spectrograms	480
Gated trigger		History Depth	
Activating	417	Softkey	480
Delay	417	Hold	
Length	418	Trace setting	468
Mode	417	Horizontal Line 1/2	
Gating		Softkeys	491
Source	411	Hysteresis	
GET	173	Lower (Auto level)	421
Getting started	9	Trigger	
GPIB	165	Upper (Auto level)	
Address	205. 219	Opper (Auto level)	
Characteristics	/	1	
interface messages		•	
Settings		I/O Logging	206
Terminator		I/Q Analyzer	
GPIB bus control	200	Application	84
Remote	530	Trying out	
GPIB interface		I/Q data	
Configuring - see User Manual	42	Exporting	113
Connector		I/Q Power	113
Remote control			670
		Trigger level (remote)	072
Graphical zoom	/ 0	Identification	E20
Group delay	400	Remote	
Smoothing		String, R&S FPL1000	
GTL	1/3	String, resetting (R&S FPL1000)	205
11		IEC/IEEE bus	
Н		see GPIB	165
Hardoony		IECWIN	
Hardcopy	00	Accessing	25
see Screenshots	63	IF frequency	
Hardware	440	Output	
Check		Output (remote)	687
Information		IF Out Frequency	375
Supported	142		

IF output	375	Power	37
Remote	687	RIGHT	40
IF OVLD		UP	40
Error	72, 859	Keyboard	
IF OVLD (status display)	72, 859	On-screen	74
IF Power	•	Keypad	
Trigger	411	Overview	39
Trigger level (remote)		Keys	
IF/VIDEO/DEMOD		MKR	121
	4.5		
Connector		MKR ->	
IFC	1/3	MKR FUNCT	
Impedance		PRESET	
Setting	368, 388	RUN CONT	236, 402, 481
Importing		RUN SINGLE	236, 402, 403, 481
Functions	105	Keywords	, , , , , ,
Softkey		see Mnemonics	175
INF		See Willemonies	173
	176	L	
Information	400	L	
Hardware		1 4 5 1	
Options	139	LAN	
Version	139	Configuration	
Input		Configuring	216
Overload (remote)	676	Connector	43
RF		Interface	166
		IP address	
Signal, parameters		Remote control interface	
INPUT OVLD			
Error		Reset	
INPUT OVLD (status display)	72, 859	VISA	
Inserting		VXI protocol	167
Limit line values	502	Language	
Transducer factors		Selecting	33
Installing		User interface	
	111	Last span	
Options		Softkey	390
Instrument messages	174		300
Instrument name		LFEOI	
Changing	216	GPIB terminator	206
Instrument security procedures	10	Limit check	
Interface messages		Activating/Deactivating	503
Interfaces		CP/ACLR	270
GPIB	171	Remote control	
		Results	
LAN		SEM range	
Intermodulation products		Scivitariye	
Interrupt	198	Spurious Emissions	
Invalid data		Spurious Emissions range	
Icon	66	Limit lines	492, 496
Invalid results		Activating/Deactivating	498
Remote control	182	Calculation (Multi-SEM)	301, 302, 309
IP address		Comment	
		Compatibility	
Assigning			
Changing		Compatible	
Network	204	Copying	
IP Address		Creating	
DNS server	215	Data points	501
IP configuration		Deactivating	499
LXI	218	Defining	503
IST		Deleting	
		Deleting values	
IST flag		=	
Remote	530	Details	
Items		Editing	
Saving	104	Inserting values	
Settings		Managing	496
······································		Margin	
K		Margins	
••		Name	
Key		OBW	
	40		
DOWN		Offsets	
LEFT	40	Peak search	288, 432, 435

Recalling			M	
Remote control				
Saving	102, 104,	502	Maintenance	857
Selecting		498	Margins	
SEM	296,	503	Limit lines493	3, 501
Shifting			Peaks (SEM)	
Spurious		503	Peaks (Spurious Emissions)	
Spurious Emissions		333	Violation	494
Storing			Marker	
Threshold			Information	69
Time Domain Power measurement			Search area (softkey)	
Traces			Search type (softkey)	
View filter			Marker functions	
Violation			Deactivating	457
Visibility			Measurement example	
X-axis			Marker peak list	400
X-Offset			see Peak list	156
Y-axis			Marker Peak List	430
			Programming example	760
Y-Offset		499		/ 08
Limits		000	Marker search	70-
Absolute (SEM range)			Spectrograms, programming example	/6/
Absolute (Spurious Emissions range)			Marker search area	
Relative (SEM range)		308	Remote control	723
ines			Marker table	
Configuration		496	Evaluation method	256
Display	490,	491	Information	69
Horizontal		491	Marker to Trace	427
Limit, see Limit lines		496	Markers	423
Vertical		491	AM Modulation Depth measurement	365
_inking			Analyzing in detail	457
Markers		427	Assigned trace	
_ist evaluation		628	Band power (remote control)	
Evaluations			Basic settings	
Saving (SEM)	,		Configuration425	
Saving (Spurious Emissions)			Configuration (remote control)	
SEM			Deactivating	
Softkey			Delta markers	
Spurious Emissions			Demodulation	
State (SEM)			Demodulation (remote control)	
State (Spurious Emissions)			Fixed reference (remote control)	
` .				
LO		173	Function configurationLinking	
Loading		10E	· · · · · · · · · · · · · · · · · · ·	
Functions			Minimum	
Instrument settings			Minimum (remote control)723	
Settings			n dB down	
Settings files			n dB down (remote control)	
Trying out		62	Next minimum	431
_ogin			Next minimum (remote control)	
Network			Next peak	
Operating system		22	Next peak (remote control)	3, 726
_ogo			Noise measurement	440
Printing		116	Noise measurement (remote control)	750
LOUNL			Peak	436
Error		860	Peak (remote control)723	3, 726
_OUNL (status display)		860	Peak list (remote control)	747
_ower Level Hysteresis		421	Phase noise measurement	442
_XI			Phase noise measurement (remote control)	
Browser interface		216	Position	
Configuration			Positioning	
LAN configuration			Positioning (remote control)	
Manufacturer Description			Programming example	
Password			Querying position (remote)	
			Remote control	
Ping				
Remote control	-		Search (remote control)	
Reset (LCI)			Setting center frequency	
Settings		∠∪δ	Setting reference level	
			Signal count	438

Signal count (remote control)		Mini front panel	
Softkeys (AM Modulation Depth)	365	Hiding/restoring	133
Softkeys (TOI)	360	Key combination	134
Spectrograms		Using	
Spectrograms (remote control)		Minimum	
State		Marker positioning	
Step size		Next	
		MKR	
Step size (remote control)			40.
Table		Key	424
Table (evaluation method)		MKR ->	
Table (remote control)	721	Key	430, 436
Tips	421	MKR FUNCT	
TOI measurement	360	Key	437
Trying out	55	Mnemonics	
Туре		Optional	
X-value	· ·	MOD (marker functions)	
	420		
Mask monitoring	004	Mode (channel setting)	
SEM		Modulation	
MAX		Marker Demodulation	453
MAXH (trace information)	69	Monitor	
Measurement examples		External	136
AF of AM-modulated signal	247	Settings	136
AM modulation		MSR ACLR	
CP/ACLR		Results (remote)	545
Harmonics		Multi-SEM	
		Basics	200
Intermodulation			
Level and frequency		Center frequencies	
Marker functions	458	Fast SEM	
OBW	289	Frequency definition	
Power of burst signals	250	Limit line calculation	301, 302, 309
Separating signals	243	Number of sub blocks	310
Signal frequency using signal counter		Results	293
Signal-to-noise ratio		Settings	
Time Domain Power		Standard files	
TOI			
	30 1	Multiple signals	0.44
Measurement results		Measurement example	
SEM		Multiple zoom	508, 510
Spurious Emissions	338	MultiView	
Measurement time		Status display	
Auto settings	420	Tab	84, 87
Power sensor	372	Trying out	53
Remote	661. 663	, ,	
Measurement zoom	,	N	
Measurements			
All Functions off	226	n dB down	
		Delta value	447
Carrier-to-Noise		Marker	
CP/ACLR			
Evaluation methods		Remote control	
Frequency sweep	235	n dB down markers	
Harmonic Distortion	348	Programming example	771
OBW	283	Name	
SEM	290	CP/ACLR channels	27 <i>′</i>
Spurious Emissions		Limit lines	500
Time Domain Power		Transducer lines	
		NAN	
TOI		NAN (not a number)	
Zero span	235		400
Menus		Remote control	182
Context-sensitive	73	Navigation	
Messages		Controls	40
Commands	174	in tables	40
Instrument		Navigation keys	40
Instrument responses		NCor (enhancement label)	
· •		Negative Peak detector	
Interface		Network	
MI (trace information)			004
MIN		Automatic login	
MINH (trace information)	69	Changing user passwords	
		Configuration (dialog box)	204

Configuring	164, 212	OCXO	128
Connecting the instrument	213	Offset	
Creating users	220	Frequency	381
DNS server		Limit lines	
Login	219	Reference level	387
Operating the instrument		Offset (channel setting)	
Setting up		On-screen keyboard	
Settings		Online help	,
Settings (remote)		Working with	70
Sharing directories		Operating mode	
Next Minimum		Presetting	14/
Marker positioning		Operating system	
Next Mode X		Login	
	122		
Softkey Next Mode Y	400	service packs Operating temperature	
	122		102
Softkey		Operation complete Remote	E2(
Next Peak			530
Marker positioning		Optimizing	4-
NINF	1/8	Calibration signal display	47
NO REF		Options	
Error		Identification (remote)	
NOI (marker functions)	70	Information	
Noise		Installing	139, 141
Floor (RF attenuation)	384	Preamplifier	388
Saving settings	104	Orientation	
Source	376	Screenshot	121
Noise Figure		Output	
Application	84	Audio	687
Noise markers		Buffer	186
Programming example	769	Configuration (remote)	687
Noise measurement		IF frequency (remote)	
Activating/Deactivating	442	IF Out Frequency	
Deactivating		IF source (remote)	
Marker		Noise source	
Remote control		Parameters	
Noise source control		Video	
Connector	45	OVEN	
NTRansition		Error	73
Number of Readings		OVEN (status display)	
Power sensor	373	Overlapping commands	
Numeric parameters		Preventing	
Numeric values		Overload	10-
Special	178	RF input (remote)	676
Opecial	170	Overview (configuration)	
0		Overview (configuration)	202
•		Р	
OBW	283	1	
% Power (remote control)		Pa (channel bar)	68
% Power Bandwidth		Paint	
Adjust Settings		Accessing	21
Channel Bandwidth			
		Parallel poll register enable	E2(
Channel bandwidth (remote control)		Remote	530
Configuring		Parameters	400
Deactivating limits		Block data	
Determining		Boolean	
Limits		Entering	·
Measurement		Input signal	
Measurement (remote control)		Numeric values	
Measurement example	289	Output	
Multicarrier signal	284, 287, 289	Passing between applications	86
Prerequisites		SCPI	
Results	285	Special numeric values	178
Search limits	. 284, 287, 289	String	179
OBW measurement		Text	179
Centroid frequency	285	partial spans	394, 395
Occupied Bandwidth			
see OBW	283		

Passwords			Standard deviation (time domain)	343
Changing	2	220	Time domain	343
Service functions			Power classes	
Peak excursion			Adding/Removing (SEM)	314
Peak list			Ranges (SEM)	
Configuring			SEM	
0 0			SEM results	,
Displaying				
Evaluation method			Softkey	
Exporting	·		Used (SEM)	313
Marker numbers	4	56	Power mode	
Maximum number of peaks	4	56	Band power measurement	451
Peak excursion	431, 435, 4	56	CP/ACLR	
Remote control			Softkey	268
Sort mode			Power sensors	
State			Activating/Deactivating	370
Trying out		5/	Applications	
Peak search			Average count	
Area (spectrograms)	4	34	Configuration (softkey)	
Automatic	431, 4	35	Configuring - see User Manual	
Deactivating limits	288, 432, 4	36	Connector	44
Excursion	4	54	Continuous Value Update	371
Limits			Duty cycle	
List	, , ,		Frequency	
			Frequency Coupling	
Mode				
Mode (spectrograms)			Measurement time	
Reference marker			Number of readings	
Threshold	,		R&S Power Viewer	
Type (spectrograms)	4	34	Reference level	372
Zoom limits	432, 4	36	Reference level offset	372
Peaks			Results	369
Displaying (SEM)	3	317	Selecting	371
Displaying (Spurious Emissions)			Setting up	
Margin (SEM)			Settings	
Margin (Spurious Emissions)			Unit/Scale	
Marker positioning			Using	
Next			Using - see User Manual	44
per range (Spurious Emissions)	3	340	Zeroing	371, 374
SEM results	2	92	Power supply	
Spurious Emissions		31	Connector	42
Persistence spectrum			Power Unit	
Spectrogram	Δ	76	Softkey	267
Phase noise markers		70	•	
	-	70	PPC	
Programming example		70	PPE register	
Phase noise measurement			PPU	1/3
Activating/Deactivating	4	44	Preamplifier	
Deactivating	4	45	SEM range	
Marker	4	42	Setting	388
Reference point	4	45	Spurious Emissions range	
Remote control			Predefined standards	
PHN (marker functions)			CP/ACLR	265 270
			_	205, 278
Ping			Preset	404
PK (trace information)		69	channel setup settings	
Ports			Key	
User	6	888	Recalling settings	110
Position			Presetting	
Limit line values	5	01	Channels	233
Transducer factors			Pretrigger	
Positive Peak detector			Preview	712
	4	-00		440
Power	_		Trigger/Gate settings	410
Channel, see Channel power			Print Screen	
Harmonics	3	352	Softkey	118
Key		37	Printer	
Mean (time domain)	3	343	Selecting	120
Peak (time domain)			Printers	
Percent (OBW)			Installing	120
RMS (time domain)				120
(doi:10)				

Printing		SEM	294
Colors	134, 135, 136	Symmetrical (SEM)	296
Colors (remote)	831	RBW	
Medium		see Resolution Bandwidth	393
Screenshots		RBW (channel setting)	
	,		07
Trying out	63	Ready for trigger	
Programming examples		Status register	191
ACLR	564	Rear panel	
AM Modulatation Depth	627	Overview	4^
Band power markers		Rebooting	
Carrier-to-Noise ratio		Remote control	531
Demodulation markers	,	Recalling	
Frequency sweep	636	Settings	100, 102, 105, 108
Marker Peak List	769	Settings for preset	110
Marker search (spectrograms)	767	Softkey	105
Markers		Recommendations	
n dB down markers		Remote control programming	20.
Noise markers		Ref Level (channel setting)	
Phase noise markers		Ref LvI = Mkr LvI	437
Reference Marker	768	Ref. In	
SEM	594	Connector	43
Sequencer	539	Ref. Out	
Service request		Connector	4'
·			
Signal count markers		Reference	400 44
Spectrogram		Fixed	,
Spurious Emissions measurement	608	Fixed (channel power)	
Statistics	768, 789, 791	Fixed (Delta marker)	457
TOI	625	Frequency (remote control)	
Protection		Marker	
RF input (remote)	676	Phase noise measurement	·
	076		
Protocol		Power (SEM)	
VXI	167	Range (SEM)	295, 311
PTRansition	187	Reference channel	
		CP/ACLR	
Q		Reference level	383 386
7		Adjusting to transducer factors	
Queries	174 182		
	,	Auto level	,
Status		CP/ACLR	262
Question mark	180, 182	Offset	
Quick Config		Offset (Power sensor)	372
Traces	470	Position	389
Quick recall		Power sensor	
Settings	102		
Quick save		SEM range	
	100	Setting to marker	
Settings		Spurious Emissions range	
Quotation mark	180	Unit	386, 387
		Value	386
R		Reference marker	
		Reference Marker	720
R&S FSV			704
Emulating	207	Programming example	/68
		Reference range	
R&S Power Viewer Plus		Softkey	31⁴
R&S Support	146	Registers	186
Rackmounting	15	Release notes	
Range	389		
Scaling		Remote commands	0.51
Ranges		Deprecated	
S .	005	Remote control	82
Definition (SEM)		Blocked	86´
Deleting (SEM)		Errors	86′
Deleting (Spurious Emissions)	338	Ignored commands	
Inserting (SEM)	309	Interfaces	
Inserting (Spurious Emissions)			
Reference (SEM)		LXI settings	
		Protocols	165
Remote control (Spurious Emissions)		Sequential commands	86
Rules (SEM)		Remote Desktop	
Rules (Spurious Emissions)	332	Client	
•			
		Ending session	ZZ

Setting up a connection	228	RF OVLD	
Setting up controller		Error	72, 860
Setting up instrument	224	RF OVLD (status display)	72, 860
Remote display		RM (trace information)	
Update	206	RMS	
Remote operation		VBW	462
Configuring	164	RMS detector	460
Deactivating the instrument		VBW	393
GPIB address		Rotary knob	
GPIB settings		RRC filter	
see also Remote control		SEM	312
Setting up		RUN CONT	
Settings		Key	236 402 481
Starting		RUN SINGLE	230, 402, 401
•		Key	226 402 402 404
Stopping		Ney	230, 402, 403, 401
Repetition interval	+12	S	
Reset values	-0.4	3	
Remote	031	S/N ratio	
Resetting			240 252
RF input protection	5/6	Measurement example	· ·
Resolution bandwidth		SA (trace information)	
Auto (Softkey)	398	Safety instructions	
CP/ACLR2	262	Sample detector	460
Harmonics	353	Save/Recall Mode	
Impact	392	Settings	107
Manual (Softkey)	398	Savesets	
SEM range		Settings	103
Spurious Emissions range		Saving	
Restoring		Data types	104
Channel settings	233	Functions	105
Standard files		Instrument settings	109
Result displays	710	Limit lines	502
Diagram	255	Screenshots	123
Marker table		SEM result files	
Peak list		Settings	
Programming example		Softkey	
		Spurious Emissions result files	
Result Summary		Transducer lines	
Spectrogram	257	Trying out	
Result Summary	240		01, 03
Configuration (SEM)		Scaling Amplitude range, automatically	200
Evaluation method			
Result display		Configuration	
Saving (SEM)	317	Y-axis	
Results		Y-axis (remote control)	
CP/ACLR measurements		SCPI	477
Data format (remote)707, 711, 8	317	Parameters	
Exporting	517	Syntax	
Managing	99	version	
OBW2	285	SCPI confirmed commands	174
SEM2	291	Screenshots	
SEM (remote)	294	Printing	118, 123
Storing (remote)	316	Saving	118, 123
Revision string		Trying out	63
RF attenuation		SDC	173
Auto	388	Search limits	
Impact		Deactivating	288, 432, 436
Manual		OBW	
Mode (SEM range)		Search Limits	, -
Mode (Spurious Emissions range)		Activating	288 432 435
		Search Mode	
Noise floor		Spectrogram markers	432
SEM range		Search range	
Spurious Emissions range	oo <i>1</i>	•	E10
RF input	270	Zoom area	
Overload protection (remote)		Search settings	F-7
Remote6	5/6	Trying out	57
RF Input		Search Signals	204 200
Connector	40	Softkey	

Index

Searching		RF attenuation mode	307
Configuration	430	RRC filter	312
Configuration (softkey)	432	Saving result summary	317
In help	80	Settings files	314, 320
Second harmonic intercept	349	Standard files	314
Security procedures	10	Standards (remote control)	569
Select Frame		Sweep List	
Softkey	403 480	Sweep list (remote control)	
Select Marker	·	Sweep Points	
Self-alignment		Sweep Time	
Aborting		Sweep Time Mode	
Starting	162	Transducer	
Self-test		Tx Bandwidth	312
Performing	146, 163	Used power classes	313
Remote	532	VBW	306
Results	146. 823	Sensitivity	
Settings	*	RBW	392
Temperature		Sequencer	
Selftest		Aborted	
	044		
Remote		Aborting (remote)	
SEM		Activating (remote)	
About		Channel Setups	
Adding power classes	314	Example	89
Alpha value (RRC filter)	312	Mode	88, 90
Applications		Mode (remote)	538
Channel power settings		Programming example	
Configuring		Remote control	
0 0	-	RUN SINGLE	
Deleting ranges			
Displaying peaks		Setting up	
Exporting results		Single Sweep	
Fast mode	298, 306	Softkey	90
Filter type	306	State	90
Format description of export files	329	Trying out	54
Format description of settings files		Sequential commands	
Inserting ranges		Errors	
Limit absolute		Service functions	
Limit check		Passwords	
Limit lines		Results	
Limit relative		Service manual	
List evaluation	316	Service packs	22
List evaluation (remote control)	592	Service request (SRQ)	165, 186, 189, 198
List evaluation state	317	Service request enable register (SRE)	186, 189
Measurement (remote control)	569	Remote	
Measurement result list		Set CP Reference	
Multiple sub blocks (Multi-SEM)		Softkey	268
Peak margins		Setting commands	
_		Settings	17-
Performing			400 400 045
Power class ranges		filename	
Power classes		Format description (SEM)	
Power classes (remote control)	587	Loading	
Preamplifier	307	Managing	
Programming example	594	Provided files (SEM)	323
Provided settings files	323	Recalling	
Range start/stop		Recalling; restrictions	
Ranges		Restoring files	
		Saving	
RBW			
Reference level		Storage location	
Reference power		Storing	100, 102
Reference range		Settings files	
Reference range (remote control)	585	Deleting	315
Restoring standard files	316	Deleting (SEM)	
Result files		Loading	
Results		Loading (SEM)	
Results (Multi-SEM)		Managing (SEM)	
Results (remote control)		Restoring (SEM)	
Results (remote)		Saving	
RF attenuation	307	Saving (SEM)	320

Sgi (channel bar)	68	Carrier Noise Config	
Shift x		Center	
Limit lines	502	Center = Mkr Freq	
Transducer lines	156	Channel Bandwidth	282, 287
Shift y		Channel-defined Sequencer	90
Limit lines	502	Clear Spectrogram	404, 482
Transducer lines		Color Mapping	
Shifting		Comment	
Limit lines	494	Continue Single Sweep	
Shutdown		Continuous Sequencer	
Automatic	162		
		Continuous Sweep	
Remote control	533	CP/ACLR Settings	
Signal capturing		CP/ACLR Standard	
Duration (remote)	661	Display Config	92
Signal count		Export	
Marker	439	Export config	113
Remote control	761	External	411
Resolution	439	Frame count	404
Signal count markers		Free Run	
Programming example	773	Frequency Config	
Signal counter		Full Span	
	220	Harmonic RBW Auto	
Measurement example			
Signal tracking		Harmonic Sweep Time	
Bandwidth		History Depth	
Softkey	381	Horizontal Line 1/2	
State	381	I/Q Export	113
Threshold	381	Import	111
Trace	381	Install Printer	
Single Sequencer		Last Span	
Softkey	90	List evaluation	
Single sweep		Marker 1/2/3	
Softkey236,	402 404	Marker 1/2/3	
•			
Single zoom	506, 510	Marker Config	
Sinusoidal signals		Marker Search Area	
Measurement example	237	Marker Search Type	
Slope		Next Mode X	433
Edge gate	413	Next Mode Y	433
Trigger	413, 672	Next Peak	436
SmartGrid		No. of Harmonics	353
Activating	94	Power classes	312
Arranging windows		Power Mode	268
Display		Power Sensor Config	
Evaluation bar		Power Unit	
Features		Print Screen	
Mode		R&S Support	
Programming example		Recall	
Trying out	48	Recall File	,
Smoothing		Ref Level	
Traces	465	Reference range	
Traces (group delay)	469	Res BW Auto	398
Soft front panels		Res BW Auto (remote)	658
Using		, ,	000
USITIU	137	Res BW Manual	
	137	Res BW Manual Save	
softkey		Save	105
softkey Trace Mode (remote control)		SaveSave File	105 107
softkey Trace Mode (remote control)Softkey bar	610, 611	Save Save File Search Config	105 107 430, 432
softkey Trace Mode (remote control)Softkey bar Hiding/restoring	610, 611	Save Save File Search Config Search Signals	105 107 430, 432 361, 366
softkey Trace Mode (remote control) Softkey bar Hiding/restoring Softkeys	610, 611	Save Save File Search Config Search Signals Select Frame	
softkey Trace Mode (remote control) Softkey bar Hiding/restoring Softkeys % Power Bandwidth	610, 611 132 287	Save	
softkey Trace Mode (remote control) Softkey bar Hiding/restoring Softkeys % Power Bandwidth ACLR Mode	610, 611 132 287 267	Save	
softkey Trace Mode (remote control) Softkey bar Hiding/restoring Softkeys % Power Bandwidth	610, 611 132 287 267	Save	
softkey Trace Mode (remote control) Softkey bar Hiding/restoring Softkeys % Power Bandwidth ACLR Mode	610, 611 132 287 267 287, 353	Save	
softkey Trace Mode (remote control)	610, 611 132 287 267 287, 353 338	Save	
softkey Trace Mode (remote control)	610, 611 132 287 267 287, 353 338 457	Save	
softkey Trace Mode (remote control) Softkey bar Hiding/restoring Softkeys % Power Bandwidth ACLR Mode Adjust Settings Adjust X-Axis All Functions Off Amplitude Config	610, 611 132 287 267 287, 353 338 457 385	Save	
softkey Trace Mode (remote control) Softkey bar Hiding/restoring Softkeys % Power Bandwidth ACLR Mode Adjust Settings Adjust X-Axis All Functions Off Amplitude Config Auto Level	610, 611 132 287 267 287, 353 338 457 385 387, 420	Save	
softkey Trace Mode (remote control) Softkey bar Hiding/restoring Softkeys % Power Bandwidth ACLR Mode Adjust Settings Adjust X-Axis All Functions Off Amplitude Config Auto Level Bandwidth Config	610, 611 132 287 267 287, 353 338 457 385 387, 420 396	Save Save File Search Config Search Signals Select Frame Select Marker Sequencer Set CP Reference Signal Track Single Sequencer Single Sweep Span Manual Standard files	
softkey Trace Mode (remote control) Softkey bar Hiding/restoring Softkeys % Power Bandwidth ACLR Mode Adjust Settings Adjust X-Axis All Functions Off Amplitude Config Auto Level	610, 611132287267 287, 353338457385 387, 420396396	Save	

Startup Recall (On/Off)	108	Spurious Emissions	330
Status	73	About	330
Stop	379	Configuring	334
Sweep Config	396	Deleting ranges	338
Sweep List	304	Detector	
Sweep Time		Displaying peaks	
Sweep Time Auto		Evaluation list	331
Sweep Time Manual		Exporting results	
Time		Filter type	
Timestamp		Format description of export files	
Trace 1/2/3/4		Inserting ranges	
Trace Config	· · · · · · · · · · · · · · · · · · ·	Limit absolute	
Transducer		Limit check	
Trigger/Gate Config	409	Limit lines	
Vertical Line 1/2	491	List details	340
Video BW Auto	398	List evaluation	338
Video BW Manual	398	List evaluation state	339
Zero Span	380	Measurement (remote control)	597
Sort mode		Measurement result list	
Peak list	456	Peak margins	
Spacings		Peaks	
CP/ACLR	270	Peaks per range	
Span		Performing	
Band power measurement		Preamplifier	
Carrier-to-Noise		Programming example	
CP/ACLR	261	Range start/stop	
Manual		Ranges	
Span/RBW coupling	393	RBW	336
SPD	173	Reference level	337
SPE	173	Result files	341
Speaker		Results	331
Remote control	689	RF attenuation	337
Spectrograms		RF attenuation mode	
Clearing	404 482	Saving list evaluation	
Color curve	· · · · · · · · · · · · · · · · · · ·	Sweep list	
		•	·
Color mapping		Sweep points	
Color mapping (remote control)		Sweep time	
Color scheme	The state of the s	Sweep time mode	
Configuring		Transducer	
Configuring (remote control)		VBW	336
Continue frame	474	Squelch	
Display		Remote control	763
Displaying	484	SRE (service request enable register)	189
Evaluation method	257	SRQ (service request)	189, 198
Frame count	474	Standard deviation	
Frames (remote control)		Power (time domain)	343
History depth		Standard files	
Markers		Multi-SEM	215
	· · · · · · · · · · · · · · · · · · ·		
Markers (remote control)		Softkey	314
Programming example		Standards	
Removing	484	CP/ACLR measurements	
Scaling	474	Format description (SEM)	323
Selecting frames	403, 480	Provided files (SEM)	323
Settings	479	Restoring files (SEM)	316
Sweep count	474	Settings files (SEM)	314
Time frames		Star (yellow)	
Timestamps		see Invalid data icon	66
Trying out		Start frequency	
Value range		Softkey	370
<u> </u>	770, 400	Startup recall	
Spectrum	0.4		001
Application	04	Remote	603
Spectrum Emission Mask		Startup Recall	
see SEM	290	Softkey	108
Splitters		Statistics	
Window size	96	Programming example	768, 789, 791
		Status	
		Queries	199

Status bar			Points (Spurious Emissions range)	 . 33
Color coding	71,	859	Settings (Spectrogram)	 40
Error messages	71,	859	Single	
Hiding/restoring			Time (remote)	
Status byte			Type	
Remote	520	531	Sweep Count	
Status byte (STB)			Sweep list	 . 70
				22
Status byte register (STB)			Deleting ranges	
Status display			Detector	
Status registers			Filter type	
CONDition			Inserting ranges	
ENABle		187	Limit absolute	
EVENt		187	Limit check	 33
model		187	Preamplifier	 .33
NTRansition		187	Range start/stop (Spurious Emissions)	 33
parts		187	RBW	
PTRansition			Reference level	
STAT:QUES:POW			RF attenuation	
STATus:OPERation			RF attenuation mode	
STATus:QUEStionable				
			Spurious Emissions	
STATus:QUEStionable:ACPLimit			Sweep points	
STATus:QUEStionable:EXTended			Sweep time	
STATus:QUEStionable:EXTended:INFO			Sweep time mode	
STATus:QUEStionable:FREQuency			Transducer	
STATus:QUEStionable:LIMit		195	VBW	 . 336
STATus:QUEStionable:LMARgin		196	Sweep List	
STATus:QUEStionable:POWer			Deleting ranges	 .30
STATUs:QUEStionable:TEMPerature			Fast SEM	
STATus:QUEStionable:TIMe			Filter type	
Status reporting system			Inserting ranges	
, , ,			Limit absolute	
Application				
Common commands		.528	Limit check	
Step size			Limit relative	
Markers			Preamplifier	
Markers (remote control)		721	Range start/stop (SEM)	
Stop frequency			RBW	
Softkey		. 379	Reference level	 30
Storage location			RF attenuation	 30
Data files		105	RF attenuation mode	 30
Settings106			SEM	
Storage settings	, ,		Softkey	
File type		107	Sweep Points (SEM)	
Storing		107	Sweep Time	
•	100	100		
Settings			Sweep Time Mode	
String in remote commands		179	Symmetrical	
Sub blocks			Transducer	
Number (Multi-SEM)		310	VBW	 . 30
Standard files		315	Sweep Points	 40
Subnet Mask		204	Sweep status	
Suffixes		.176	Status register	 . 19
Common		528	Sweep time	
Support			Harmonics	35:
Information			Spurious Emissions range	
Information (remote)			Sweep Time	
		041		
Suppressing		400	Auto (Softkey)	
File name dialog		120	CP/ACLR	
Sweep			Manual (Softkey)	
Aborting 402	2, 403,	481	SEM range	 30
Configuration (Softkey)		396	Softkey	 26
Continuous			Values	 399
Count		396	Sweep time mode	
Count (Spectrograms)			Spurious Emissions range	 330
Default settings			Sweep Time Mode	 501
Mode			SEM range	3U.
	,			
Performing			SWT (channel setting)	 0
Points				
Points (SEM range)		309		

Symmetric setup		Timestamps	
SEM	310	Softkey (Spectrogram)	48
SEM ranges	296	Spectrograms	475, 48
Syntax elements		TOI	35
SCPI	180	About the measurement	35
System		Basics	
Configuration	139	Calculation method	
Configuration (remote)		Configuring	
,		Determining	
Keys		<u> </u>	
Messages		Markers	
Preset operating mode	144	Programming example	
_		Results	
T		Search signals	36
		TOI (marker functions)	7
Tabs		Toolbar	
Channel Setups	83	Hiding/restoring	13
MultiView	66, 84	Overview	
Switching	65	Total Harmonic Distortion	
Task bar		Measurement	35
Accessing	25	touchscreen	
Tdf (channel bar)			101 10
		Alignment	101, 10
Temperature	161	Touchscreen	
Check		Alignment	161, 16
Check (remote)		Colors	13
Frontend		De-/Activating	12
Frontend (remote)	823	Displayed items	13
Frontend, status bit	161	Overview	3
Self-alignment	161	Settings	
Self-alignment (remote)	823	Theme	
Text paramters in remote commands		Trace information	
Theme			
Display	13/ 135	Detector type	
		Trace number	
Display (remote)	631	Window title bar	6
Third order intercept point		Trace math	
see TOI	354	Functions	48
Threshold		Settings	48
Limit lines	493, 500	Trace smoothing	46
Peak search	432, 435	Traces	
Signal tracking	381	Average mode	
Time		Averaging	
Format	130	Averaging (algorithm)	
Hiding/restoring			
Instrument setting		Averaging (remote control)	
=		Configuration	
Setting		Configuration (Softkey)	
Time Domain Power		Configuring	
About		Configuring (remote control)	69
Configuring	345	Copying	47
Limit lines	344, 346	Copying (remote control)	
Measurement (remote control)	609	Detector	
Measurement example	347	Detector (remote control)	
Measuring		Export format	
Restricting range			
0 0		Exporting	
Results	343, 345	Hold	
Time frames		Mode	46
Configuring		Mode (CP/ACLR)	26
Continuing	403	Mode (remote)	69
Navigating	403, 475	Saving	10
per sweep	404	Settings	
Selecting	403, 480	Settings (remote control)	
Spectrograms	· ·	Settings, predefined	
Time lines		Traces to be Checked	47
Remote control	77/		40
	114	Limit lines	
Time trigger	440	Tracking bandwidth	
Repetition interval		Tracking threshold	38
Softkey	412	Transducers	
		Activating/Deactivating	15
		Adjusting reference level	

Checking	158	Trying out	
Comment	155	Prerequisites	
Compatibility	153	Tx Bandwidth	
Compatible	158	SEM	3 ⁻
Configuration	150		
Configuration (remote control)		U	
Configuring			
Copying		UNCAL	
Creating		Error	72 86
		UNCAL (status display)	·
Data points		Units	
Deleting		Power sensor	2.
Deleting values			
Editing	154, 158	Reference level	,
Factors	149	Transducer factors	
Inserting values	155	UP	17
Managing	151	Update Path	
Name		Remote control	84
Recalling		Update rate	
Saving		Display	
SEM range		Updating	
		Firmware	1/
Settings		Upper Level Hysteresis	
Shifting		USB	
Softkey			
Spurious Emissions range	337	Connector	
Storing	151	Connectors	(
Unit	155	User ports	
Validity	150	Remote control	68
View filter		User standards	
X-axis		CP/ACLR	20
Y-axis unit		Loading (CP/ACLR)	
		Managing	
RG (channel bar)	68	Storing (CP/ACLR)	
rigger		,	Z
Configuration preview	410	Users	0:
Drop-out time		Network	
Drop-Out Time	407	Password	22
Event (remote)	532		
External (remote)	672	V	
External, errors			
Holdoff		VBW	
		CP/ACLR	20
Hysteresis		RMS detector	40
Measurements		see Video bandwidth	
Offset	,	SEM range	
Slope		Spurious Emissions range	
Status register	191		
rigger In		VBW (channel setting)	
Connector	43	VBW/RBW coupling	
rigger level	412	Version information	
External trigger (remote)		Vertical Line 1/2	
I/Q Power (remote)		Softkeys	49
		Vertical stroke	18
IF Power (remote)		Video	
rigger source		Trigger source	4
External		Video bandwidth	
Free Run		Auto (Softkey)	
IF Power	411		
Time	412	Impact	
Video	411	Manual (Softkey)	
rigger/Gate		RMS detector	
Configuration (Softkey)	409	Video output	375, 68
TRK (marker functions)		View filter	
,		Limit lines	49
roubleshooting	070	Transducer lines	
CP/ACLR		Virus protection	
File name error		VISA	
Input overload	676		
Low frequencies	862	Libraries	
Remote control programs		Resource string	166, 17
Timeout for data capture		Visible	
Trace display		Limit lines	49

Volume Remote control68	89
VXI protocol	67
W	
Wait	
Remote53	32
Waiting for trigger Status register19	04
Warmup time	
Web browser	-
Configuration interface2	16
Weighting filters CP/ACLR	7.1
Remote 55	
White papers	
White space	
Window title bar	
Windows	
Access	
Adding (remote)	
Arranging	
Closing	
Closing (remote)	
Layout (remote) 64	
Querying (remote)64	
Replacing (remote)64	
Size	
WordPad	39
Accessing	
Accessing	25
WRONG_FW	
•	
WRONG_FW	
WRONG_FW	
WRONG_FW	60
WRONG_FW	60 38
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15	38 01
WRONG_FW 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset	38 01 55
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset 45 Limit lines 45	38 01 55
WRONG_FW 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset	38 01 55
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset 45 Limit lines 45 X-value	38 01 55
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset 45 Limit lines 45 X-value	38 01 55
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset 45 Limit lines 45 X-value	38 01 55
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset 15 Limit lines 45 X-value Marker 42 Y Y-axis Limit lines 50 Limit lines 50	38 01 55 98 26
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset Limit lines 48 X-value Marker 42 Y Y-axis Limit lines 50 Optimizing display 38	38 01 55 98 26
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset 15 Limit lines 45 X-value 42 Y Y-axis Limit lines 50 Optimizing display 35 Scaling 385, 38	38 01 55 98 26
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset Limit lines 48 X-value Marker 42 Y Y-axis Limit lines 50 Optimizing display 38	38 01 55 98 26
WRONG_FW 27, 142, 160, 86 X X X-axis Adjusting (Spurious Emissions) 33 Limit lines 55 Transducer lines 15 X-Offset 49 Limit lines 42 Y Y Y-axis 10 Limit lines 56 Optimizing display 38 Scaling 385, 39 Settings 38 Y-Offset 1 Limit lines 45	38 01 55 98 26
WRONG_FW 27, 142, 160, 86 X 72, 142, 160, 86 X 33 Limit lines 50 Transducer lines 15 X-Offset 15 Limit lines 49 X-value 42 Marker 42 Y 42 Y-axis 50 Limit lines 50 Optimizing display 38 Scaling 385, 38 Settings 38 Y-Offset Limit lines 49 Yellow star 49	38 01 55 98 26 01 90 88
WRONG_FW 27, 142, 160, 86 X X X-axis Adjusting (Spurious Emissions) 33 Limit lines 55 Transducer lines 15 X-Offset 49 Limit lines 42 Y Y Y-axis 10 Limit lines 56 Optimizing display 38 Scaling 385, 39 Settings 38 Y-Offset 1 Limit lines 45	38 01 55 98 26 01 90 88
WRONG_FW 27, 142, 160, 86 X 72, 142, 160, 86 X 33 Limit lines 50 Transducer lines 15 X-Offset 15 Limit lines 49 X-value 42 Marker 42 Y 42 Y-axis 50 Limit lines 50 Optimizing display 38 Scaling 385, 38 Settings 38 Y-Offset Limit lines 49 Yellow star 49	38 01 55 98 26 01 90 88
WRONG_FW 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset 45 Limit lines 45 X-value 42 Y Y-axis Limit lines 50 Optimizing display 38 Settings 385, 39 Settings 38 Y-Offset Limit lines 49 Yellow star 49 Yellow star 50 60 Z 20	38 01 55 98 26 01 90 88
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset 45 Limit lines 45 X-value 47 Marker 42 Y 47 Y-axis 50 Limit lines 50 Optimizing display 38 Settings 38 Y-Offset 1 Limit lines 45 Yellow star 45 See Invalid data icon 6 Z Zero span Measurement 25	38 31 55 98 26 01 90 88 99 66
WRONG_FW Error 72, 142, 160, 86 X X-axis Adjusting (Spurious Emissions) 33 Limit lines 50 Transducer lines 15 X-Offset Limit lines 45 X-value Marker 42 Y Y-axis Limit lines 50 Optimizing display 38 38 Settings 385, 36 38 Y-Offset Limit lines 45 Yellow star 3ee Invalid data icon 6 Z Zero span	38 31 55 98 26 01 90 88 99 66

Zeroing	
Power sensor	371
Zoom	
Graphical	78
Measurement	
Zoom limits	
Search range	510
Using for searches	432, 436
Zooming	508, 512
Activating (remote)	691
Area (Multiple mode, remote)	691
Area (remote)	690
Multiple mode	508, 510
Multiple mode (remote)	691, 692
Remote	690
Restoring original display	511
Single mode	
Single mode (remote)	
Trying out	58