STAR DELTA RELAY ERV-YU ENG

General

Star Delta Relay is designed to controll three phase motors in the first run.

Usage of Device and Working Principle

Make connections according to the diagram. You can set working time between 1sec-30sec. When power is on, star relay pulls and star relay switches on. Device waits for adjusted star working time and waits for adjusted waiting time. (0,1msec-500msec). In this position, there is no output contact and star relay led switches off. After waiting time delta relay pulls and delta relay switches on. Till power is off, device keeps same.

Maintenance

Switch off the device and release from connections. clean the trunk of device with a swab. Don't use any conductor or chemical might damage the device. make sure device works after cleaning.

Delta Contact	
Waiting(off)	toff
Star Contact	ton
Un	

Warnings

Please use the device according to the manual. Don't use the device in wet.

Include a switch and circuit breaker in the assembly. Put the switch and circuit breaker nearby the device, operator can reach easily.

Mark the switch and circuit breaker as releasing connection for device.

Connection diagram C1=Main Contactor C2=Star Contactor C3=Delta Contactor C3=Delta Contactor C3=Delta Contactor C3=Delta Contactor C1=Main Contactor C3=Delta Contactor C3=Delta Contactor C3=Delta Contactor C1=Main Contactor C1=Main Contactor C3=Delta Contactor C1=Main C1=Mai

Tecnical Specifications:

Operating Voltage(Un).: 150V - 260V AC

Operating Frequency...: 50/60 Hz.

Operating Power.....<6VA

Display.....: On led, star led and delta led.

Connection Type.....: Terminal connection

Weight......Max. 110gr.

Contact...... 5A/250V AC (Resistive Load)

Mounting.....Assembled on the din rail

Operating Altitude.....: <2000meter

Cable Diameter.....2,5mm²

Contacts: www.tense.com.tr info@tense.com.tr

