



TVORK

Phase and feeder on line controller





COMPLETE RANGE OF PRODUCTS AND NEWS ON www.made-sa.com

ELECTRIC

OPERATING

MADE S.A. 167, Impasse de la Garrigue · 83210 La Farlède - France Tél. : +33 (0) 494 083 198 · Fax : +33 (0) 494 082 879 contact@made-sa.com

In order to improve their equipments, MADE is reserving its rights to modify the products described in that documentation, at any time and without prior notification.

 $\ensuremath{\mathbb{C}}$ No part of this work may be reproduced and distributed without MADE's prior written permission.



• m.PAD _____

Phase and feeder on line controller







C FUNCTIONS

m.PAD is a phase and feeder indicator specifying on which phase and on which feeder a customer is connected on a live low voltage network, downstream of a transformer substation. It is a robust, reliable, and user friendly system.

USE PRINCIPLE

m-PAD is composed of a transmitter and a receiver. The transmitter is connected at the transformer substation :

• On the low voltage side to the three phases and neutral.

• On each feeder with a Made-Flex current coil (around the three phases and excluding the neutral in STAR configuration, around each phase in DELTA configuration).

The receiver can then be connected between phase and neutral (Y) or phase and phase (D) anywhere on the network to indicate the phase and feeder of the customer.

CITECHNICAL CHARACTERISTICS



