

## Leather Softness Tester TX-522



### Detailed Description

It's used for testing the cracks index of various vamps and thin leathers. Grip the outer rim of the specimen then jack it upward from inner side with a steel ball in 12mm/min speed till the surface of specimen appears cracks. The rising height of above action is so-called cracking vale.

### Specifications:

Specimen diameter: Ø48mm

Specimen diameter after grip: Ø25mm

Steel ball diameter: Ø6mm or specified

Scale range: 0.05~25mm