


NEW KIMCHI ACIDITY METER (MODEL : GMK-885N)

DESCRIPTION OF THE INSTRUMENT

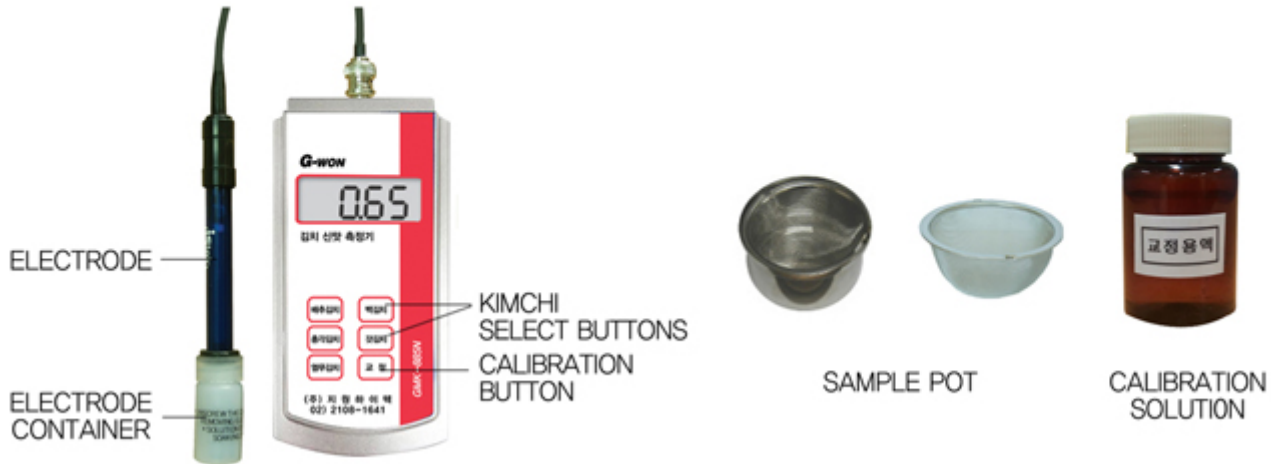

BEFORE MEASUREMENT

- 1) OPEN BATTERY COMPARTMENT (BACK SIDE) AND PLACE 9V BATTERY 1 EA IN IT.
- 2) WHEN '885' SIGN APPEARS ON LCD AND DISAPPEARS SOON, THE UNIT IS READY TO MEASURE IN NORMAL CONDITION.
(# WHEN THE TEST RESULT SEEMS WRONG, PLACE SENSOR INTO CALIBRATION SOLUTION AND PRESS 'CAL' BUTTON).

MEASUREMENT

- 1) PREPARE SOME TEST SAMPLE (KIMCHI SOLUTION ONLY) IN 'SAMPLE POT' .
- 2) OPEN CAP OF 'ELECTRODE CONTAINER' AND PLACE 'ELECTRODE' INTO 'SAMPLE POT'.
- 3) PRESS SELECTED KIMCHI BUTTON AND THE TEST RESULT APPEARS ON LCD FOR ABOUT 1MIN..
- 4) WHEN THE TEST SAMPLE IS OUT OF MEASURING RANGE, 'ErH' (TOO HIGH) OR 'ErL' (TOO LOW) SIGN APPEARS.
- 5) IF THERE IS NO OTHER OPERATION FOR ABOUT 3 MIN., THE POWER IS AUTOMATICALLY OFF.

IMPORTANT

- 1) AFTER MEASUREMENTS, CLEAN THE 'ELECTRODE' WELL WITH DISTILLED WATER & TISSUE AND KEEP IT IN 'ELECTRODE CONTAINER' (KCL SOLUTION).
- 2) WHEN 'LOW BATTERY' SIGN APPEARS ON LCD, REPLACE THE BATTERY SHORTLY.
- 3) DO NOT STORE THE INSTRUMENT AT DAMP PLACE.
- 4) IN CASE OF NO USE FOR A WHILE, MAKE SURE TO REMOVE THE BATTERY.
- 5) WARRANTY PERIOD IS 12 MONTHS AFTER THE DATE OF PURCHASE.
- 6) IN CASE OF WRONG USE, ABUSE OR MISUSE, WARRANTY IS NOT AVAILABLE.

G-WON HITECH CO., LTD.

WOOLIM E-BIZ. CENTER 310,
#170-5, GURO-DONG, GURO-GU,
SEOUL, KOREA(152-769)
Tel : 82-2-2108-1646(DIR.)
Fax : 82-2-2108-1649
E-Mail : g-won@g-won.co.kr

Other Instruments

- | | |
|--------------------------|------------------------|
| ▪ Digital Refractometer | ▪ Grain Moisture Meter |
| ▪ Wood Moisture Meter | ▪ Digital Salt Meter |
| ▪ Coffee Moisture Meter | ▪ Digital Thermometer |
| ▪ Tea Moisture Meter | ▪ Fruit Acidity Meter |
| ▪ Tobacco Moisture Meter | |

